


SYSTEM OPERATION

The states of the theft deterrent system are as follows:

State	Description	Theft Detection
Disarmed State	The theft deterrent system has not been set by the user.	—
Armed Preparation State	The standby state before the theft deterrent system activates when the system has already been set.	—
Armed State	The theft deterrent system is being activated. (Theft can be detected.)	○
Alarm State	Theft has been detected and the warning operation activates.	—

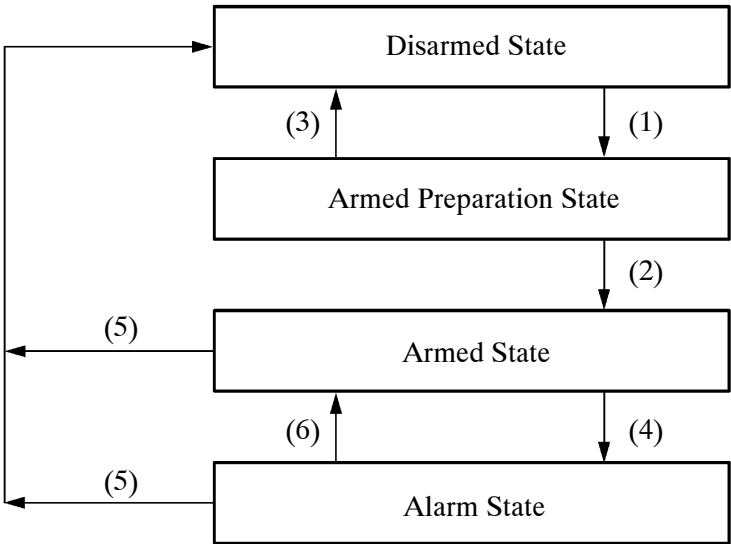

187BE40

- The theft deterrent system activates as described in the diagram below when one of items in the chart occurs in order to cause the system to enter the respective state.

Condition	Item
(1)	In the disarmed state, when the engine switch is OFF, the system state is switched if all of the following conditions are met. - All doors, engine hood and back door are closed. - All doors are locked using the key (electronic key) lock button, the entry and start system *1 or key (mechanical key) *1.
(2)	The system state is switched when the doors, engine hood, and back door are all closed and locked, and approximately 30 seconds have elapsed.
(3)	The system state is switched when one of the following conditions is met. - Any door, engine hood, or back door is opened. - Any door is unlocked. - The engine switch is pushed. - A terminal is disconnected from the battery and reconnected.

(Continued)

Condition	Item
(4)	The system state is switched when one of the following conditions is met. • With all doors closed, any door is opened. • With all doors locked, any door is unlocked by a method other than key (electronic key), the entry and start system or the key (mechanical key). • With the back door closed, the back door is opened by a method other than the entry and start system or the key (mechanical key). • With the engine hood closed, the engine hood is opened. • A terminal is disconnected from the battery and reconnected.*2 • A terminal is disconnected from the battery.*3 • The engine switch has been changed to IG-ON by hot wiring and not by operating the engine switch. • The intrusion sensor*4 detects movement in the vehicle interior. • The tilt sensor*5 detects a change in vehicle inclination. • The certification ECU detects on open circuit in the print pattern or rear window defogger*6.
(5)	The system state is switched when one of the following conditions is met. • Any door is unlocked with the key (mechanical key)*1 or key (electronic key). • The engine switch has been changed to IG-ON by operating the engine switch.*1
(6)	The system state is switched after the alarm time elapses.

*1: Except European models.

*2: With a security horn.

*3: With a self-power siren.

*4: With a intrusion sensor

*5: With a tilt sensor

*6: With a print pattern type glass breakage sensor