


■ AIRBAG MANUAL ON-OFF SWITCH

- An airbag manual ON-OFF switch is provided as standard equipment on European models and Russian package models to disable the deployment of the front passenger airbag, front passenger side knee airbag, and front passenger side airbag (front seat side airbag RH). This switch can be used if the deployment of those airbags is inconvenient.
- This switch is located on the side surface of the instrument panel on the front passenger side. It can be turned to ON or OFF by using the key (mechanical key), which is supplied with the key (electronic key). Once the airbag manual ON-OFF switch is turned to OFF, the front passenger airbag, front passenger side knee airbag and front passenger side airbag will be disabled, regardless of the collision conditions.
- If the deployment of the passenger airbag has been disabled, the front passenger airbag OFF indicator light in the clock assembly illuminates to inform the occupant.

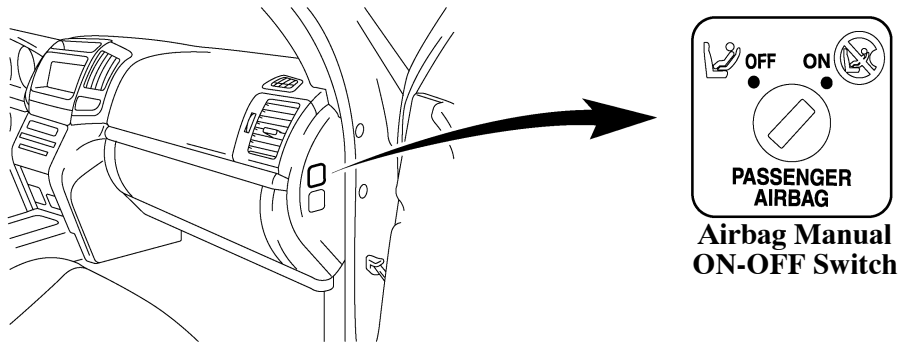

081BE122TE