


SLIDING ROOF SYSTEM

DESCRIPTION

- The settings of the sliding roof system vary depending on the destinations and grades. For details, see the equipment list in Model Outline (see page MO-33).
- This system uses a single glass panel to perform tilt up-and-down and open-and-close operations.
- The sliding roof ECU uses 2 Hall ICs to detect the position of the sliding roof. The sliding roof ECU and the 2 Hall ICs are integrated into the sliding roof drive gear sub-assembly.

System Diagram ◀

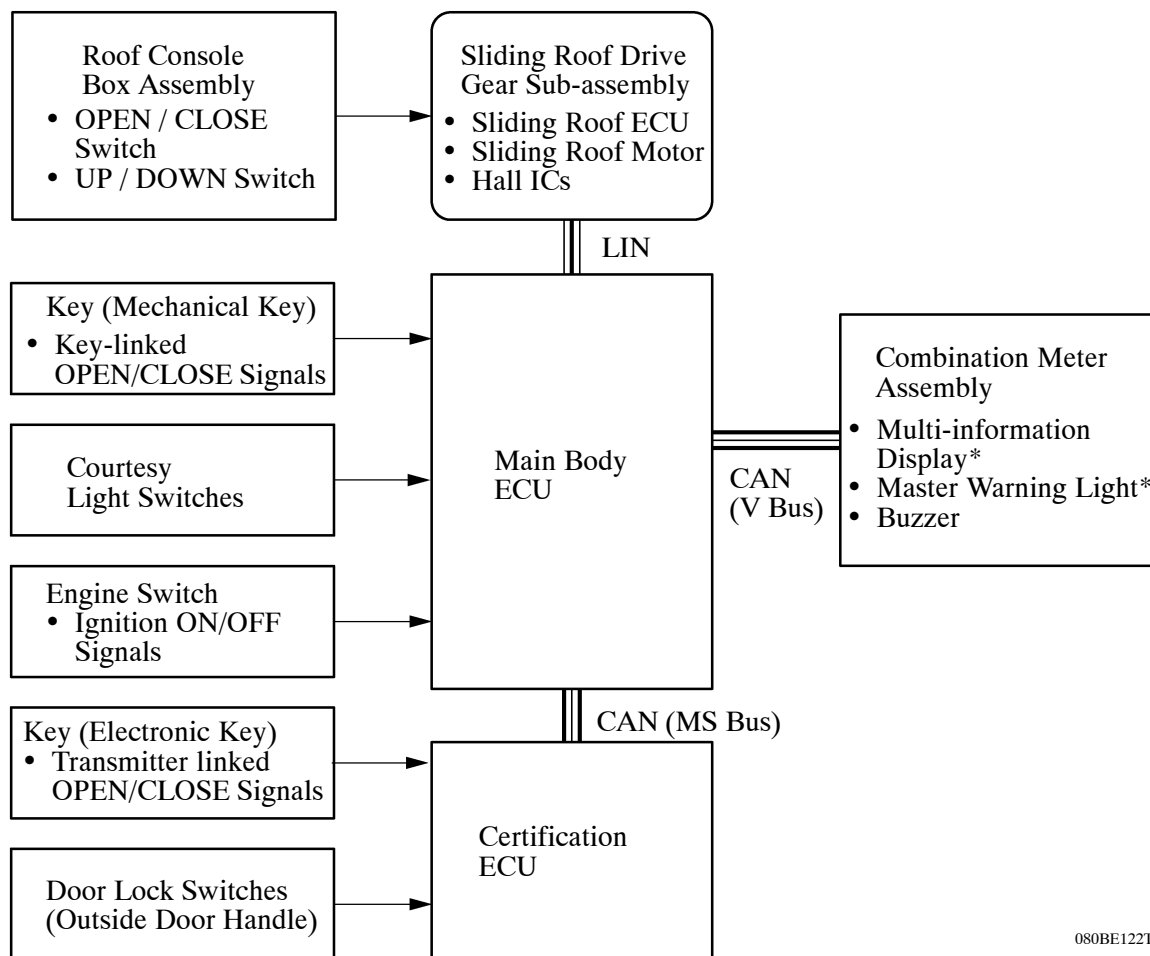

080BE122TE

*: Models with optitron display type combination meter

Service Tip

The memory is not cleared if battery terminals are disconnected. However, initialization is necessary after the sliding roof drive gear sub-assembly is replaced. Perform the initialization as follows:

- 1) Keep pressing the UP or CLOSE switch until the roof tilts up completely. This will enable the sliding roof ECU to start initializing and perform the tilt up, tilt down, open, and close operations of the sliding roof in sequence.
- 2) Keep the switch pressed for 1 second after the tilt up operation is completed.
- 3) The sliding roof ECU performs the tilt down, open, and close operations.
- 4) The initialization process ends when the close operation is completed.

Keep the UP or CLOSE switch pressed during initialization. If the UP or CLOSE switch is released during initialization, the system will not be able to complete the initialization. If this occurs, the aforementioned steps must be performed again.

For details, see the Land Cruiser (Station Wagon) Repair Manual (Pub. No. RM0810E).