

■ SEAT BELT

1. General

The following types of seat belts are provided. (See MO-33 for the settings)

Seat Position	Seat Belt Type	Remarks
Driver & Front Passenger	3-point ELR* ¹	Electrical Sensing Type Pretensioner, Force Limiter and Tension Reducer
		Electrical Sensing Type Pretensioner, Force Limiter
		Pre-collision Seat Belt (Option)
Rear No.1 Passenger	3-point ELR* ¹ & ALR* ²	Electrical Sensing Type Pretensioner* ³
	3-point ELR* ¹ & ALR* ² , * ³	Electrical Sensing Type Pretensioner* ³
	3-point ELR	—
Rear No.2 Passenger	3-point ELR* ¹ & ALR* ²	—
	3-point ELR	—

*¹: Emergency Locking Retractor

*²: Automatic Locking Retractor


*³: Seats other than rear center seat

2. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag center sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.

In the beginning of the collision if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

► Front Airbag Operation ◀

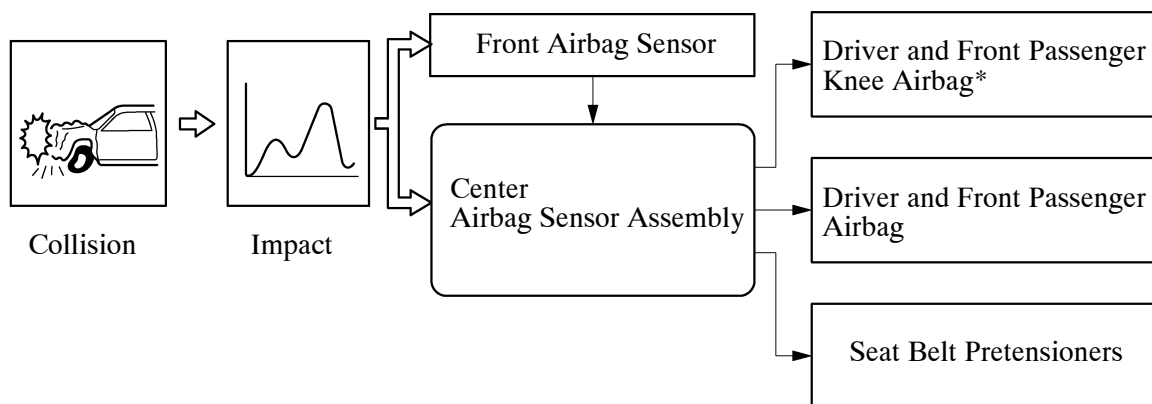


037B004Y

*: Standard on European and Australian VX grade models, and optional on VX grade models for other countries

3. Adjustable shoulder belt Anchor

A pillar-built-in adjustable shoulder anchor has been provided on the front seat belts and rear No. 1 outside seat belt to enhance safety and improve appearances.

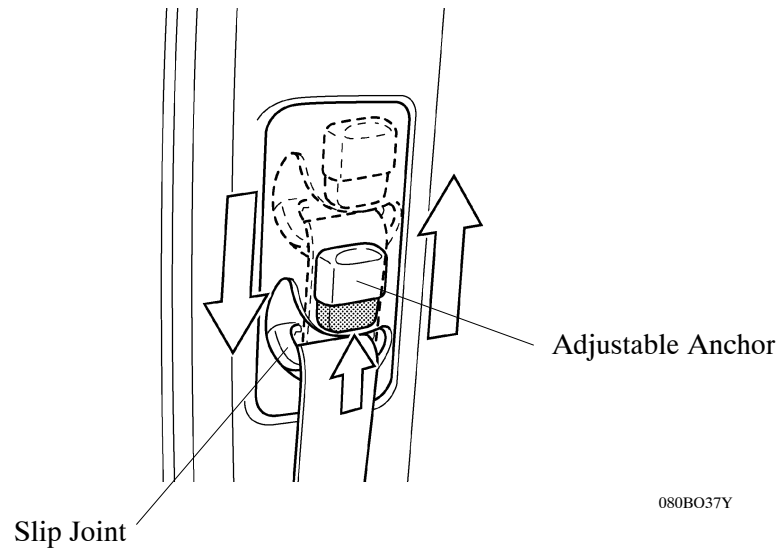

BO

4. Rear No.2 Seat Belt

A 3-point seat belt is provided for the rear No.2 center seat, with the slip joint and belt retraction box located in the roof, thus realizing an excellent appearance and the usability of the seat when the seat belt is not used.

