


FRONT BODY PILLAR (CUT)

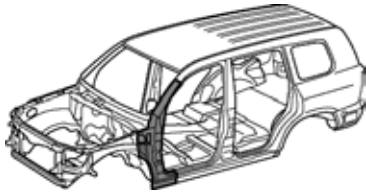

F29208A

With the cowl top side panel removed.


Symbol meaning

△ △ : Remove Weld Points S : Cut and Join Location

⚡ : Cut Location for Supply Parts

F29208B

REMOVAL



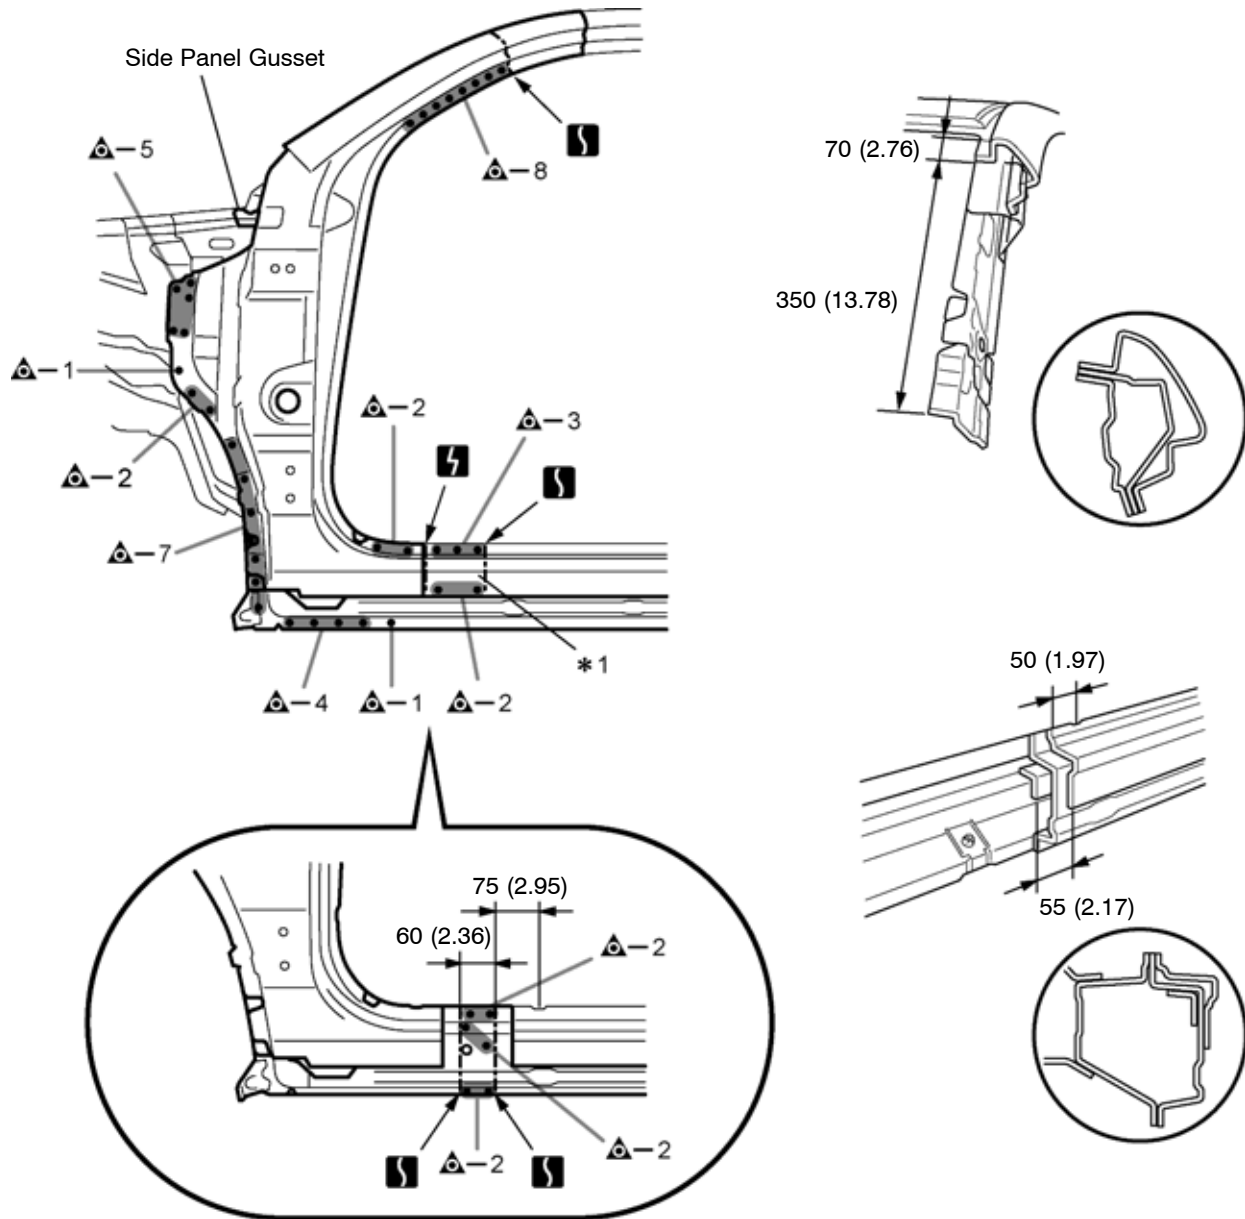


mm (in.)

F29208

REMOVAL POINT

- 1 Reuse *1, as the area of the outer panel that is cut and joined is to the rear of the supplied part cut position.
- 2 Remove the side panel gusset at the same time.

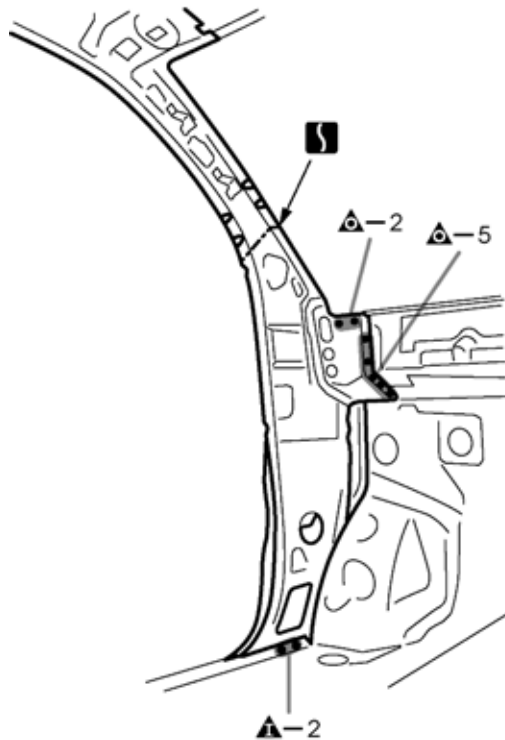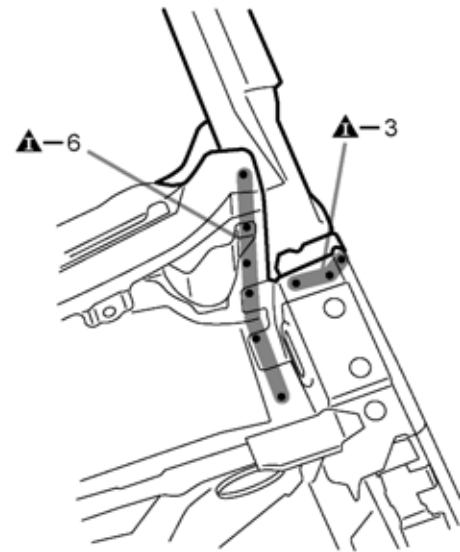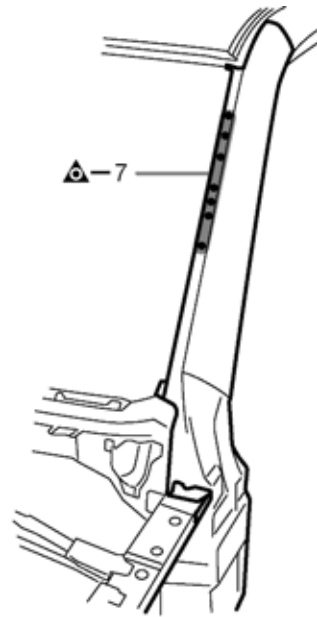




Symbol meaning

△ : Remove Weld Points ○ : Spot Weld □ I : Plug Weld S : Cut and Join Location

⏏ : Butt Weld ⊞ : Body Sealer


F29210B

INSTALLATION

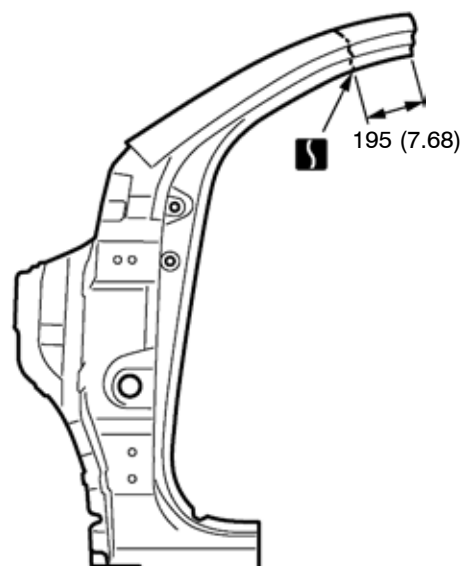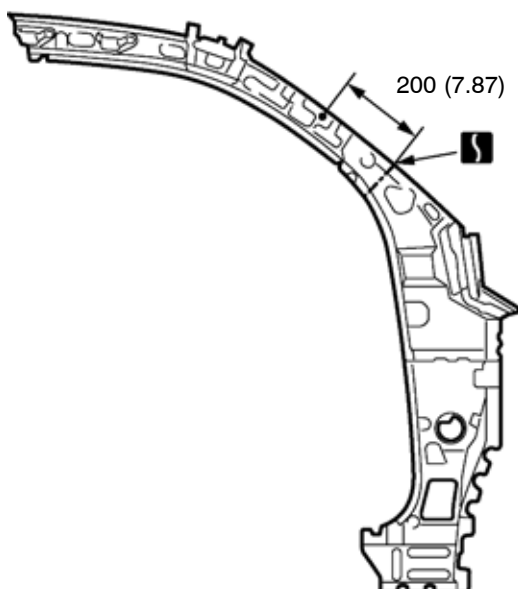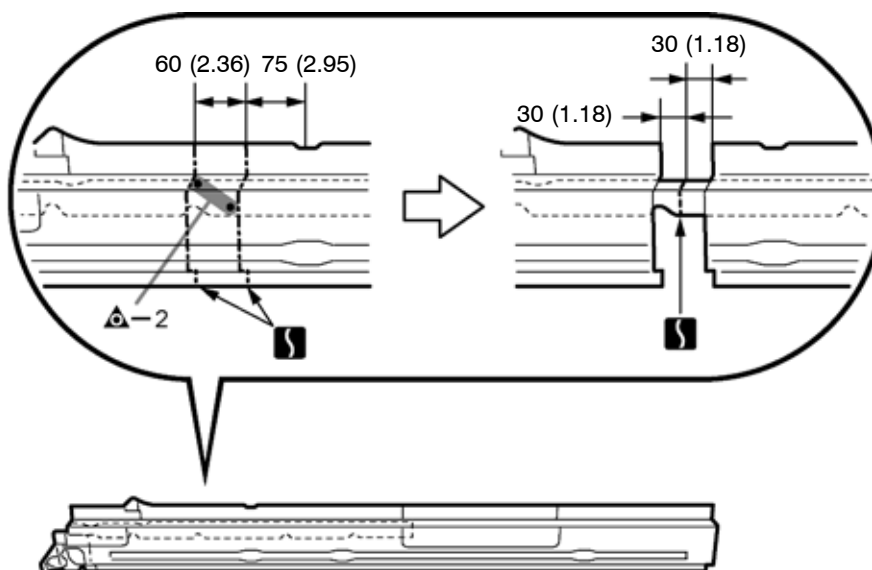

mm (in.)

F29210

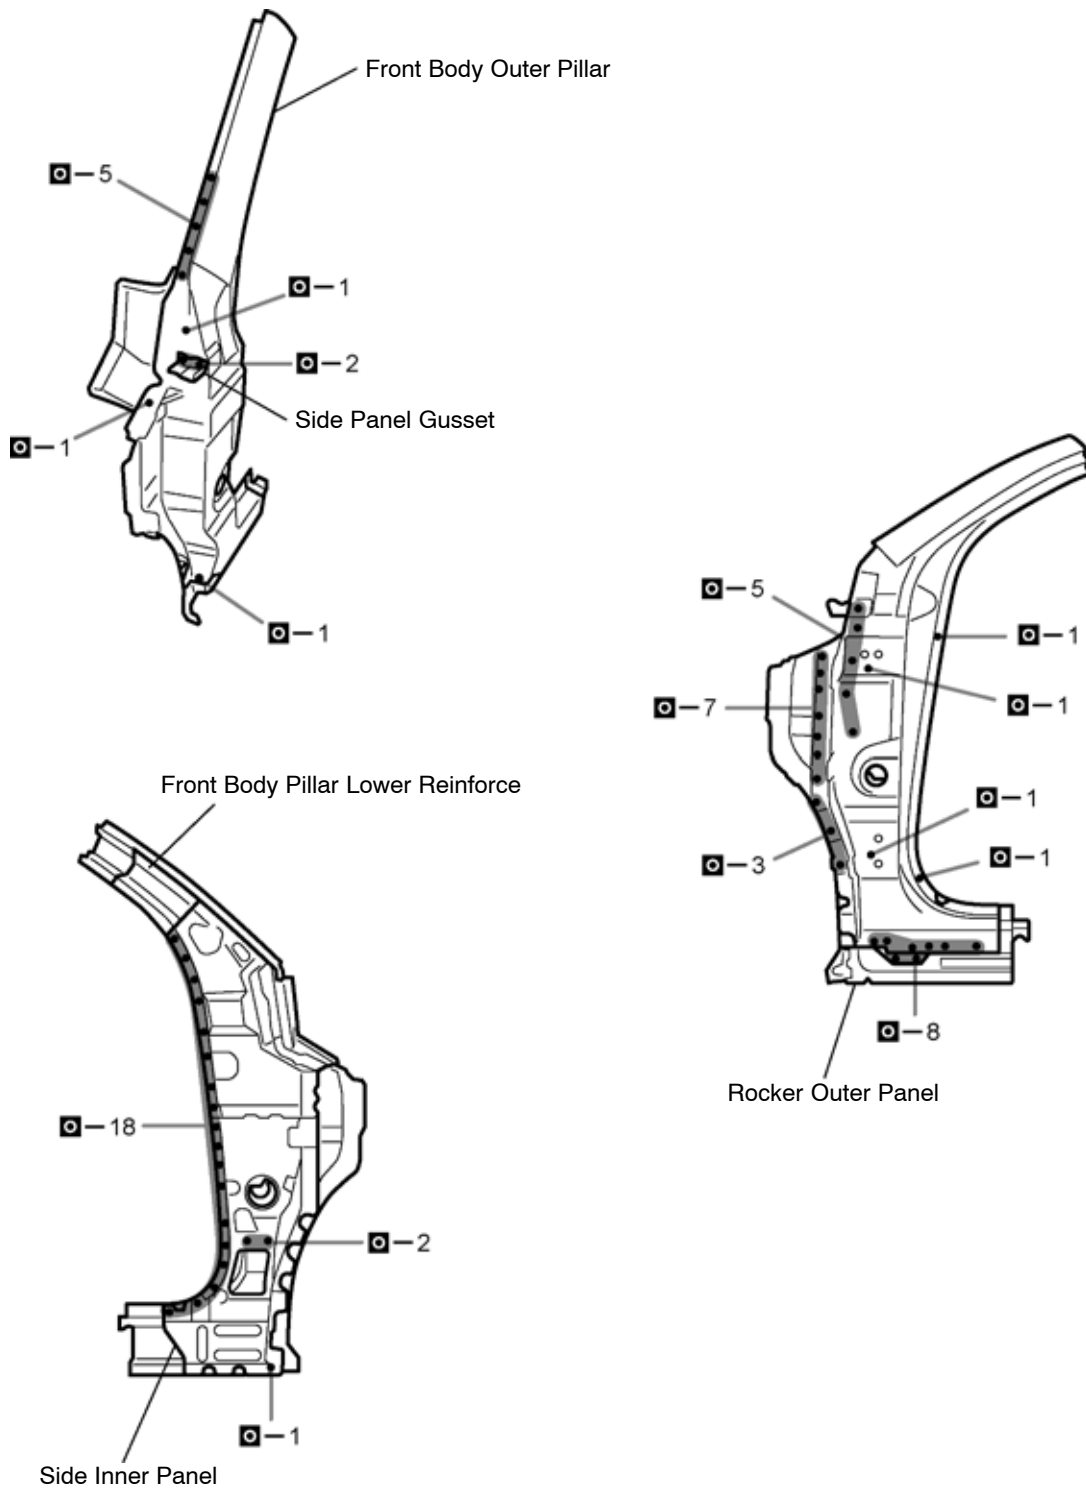**INSTALLATION POINT**


- 1 Before temporarily installing the new parts, weld the rocker outer panel, front body pillar lower reinforce, side inner panel, front body outer pillar and side panel gusset with the standard number of welding points.

Symbol meaning

△ : Remove Weld Points ○ : Spot Weld □ T : Plug Weld S : Cut and Join Location

⊕ : Butt Weld ⊞ : Body Sealer


F29210B

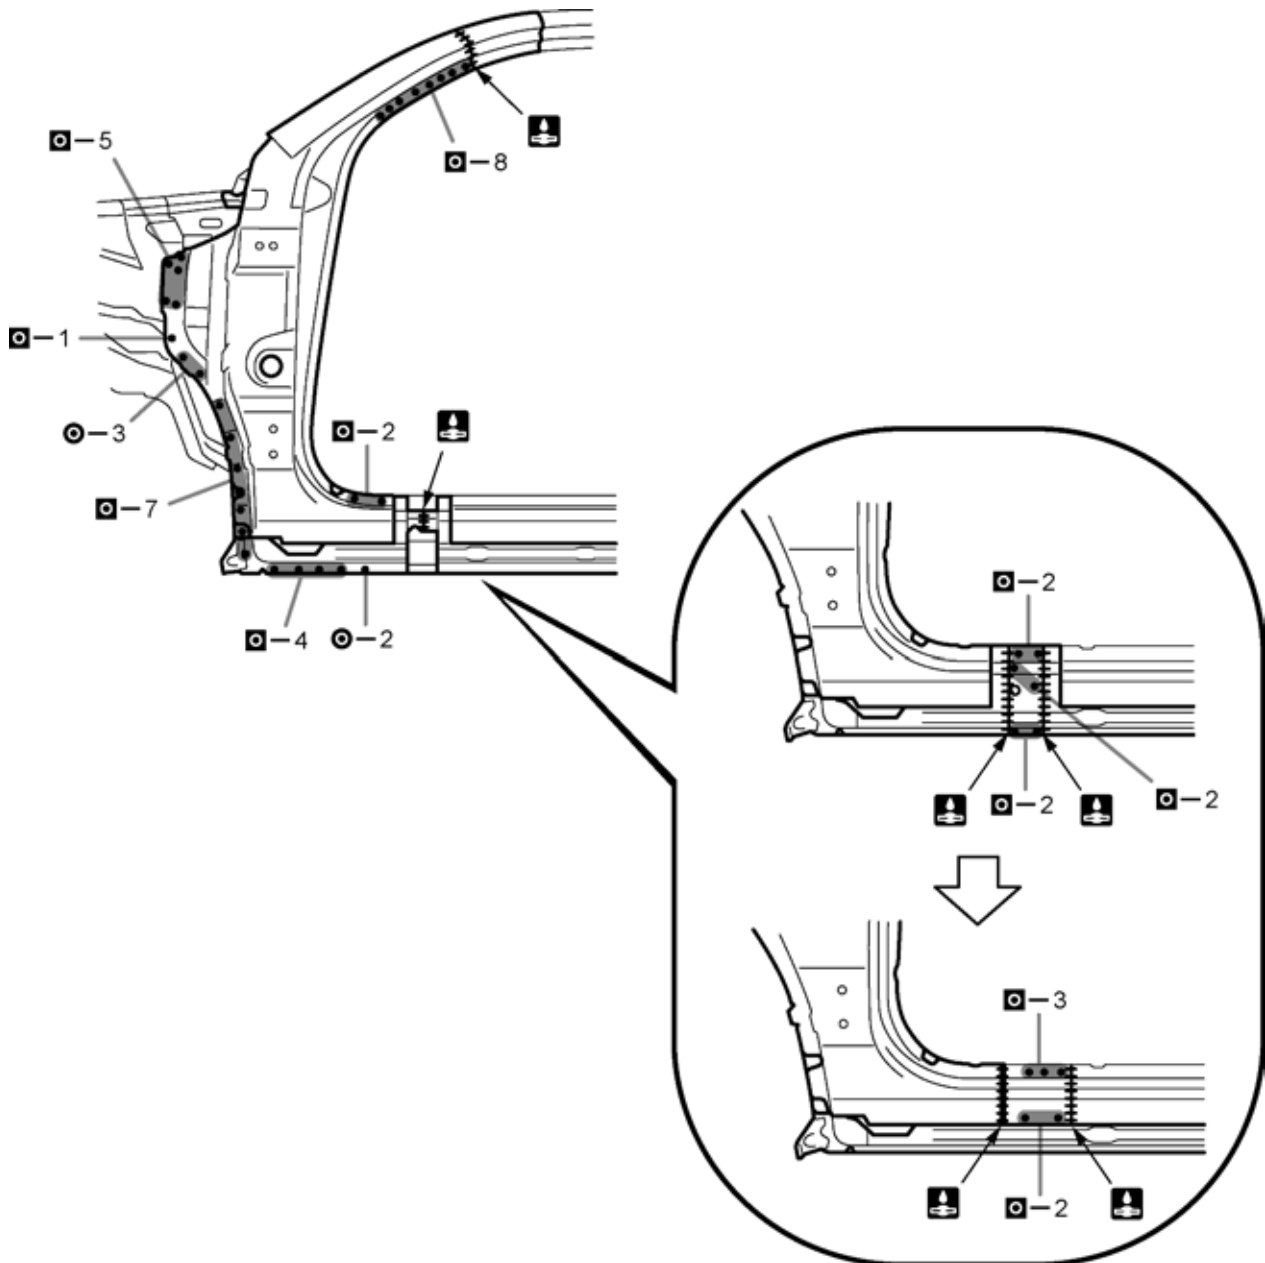

F29212

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

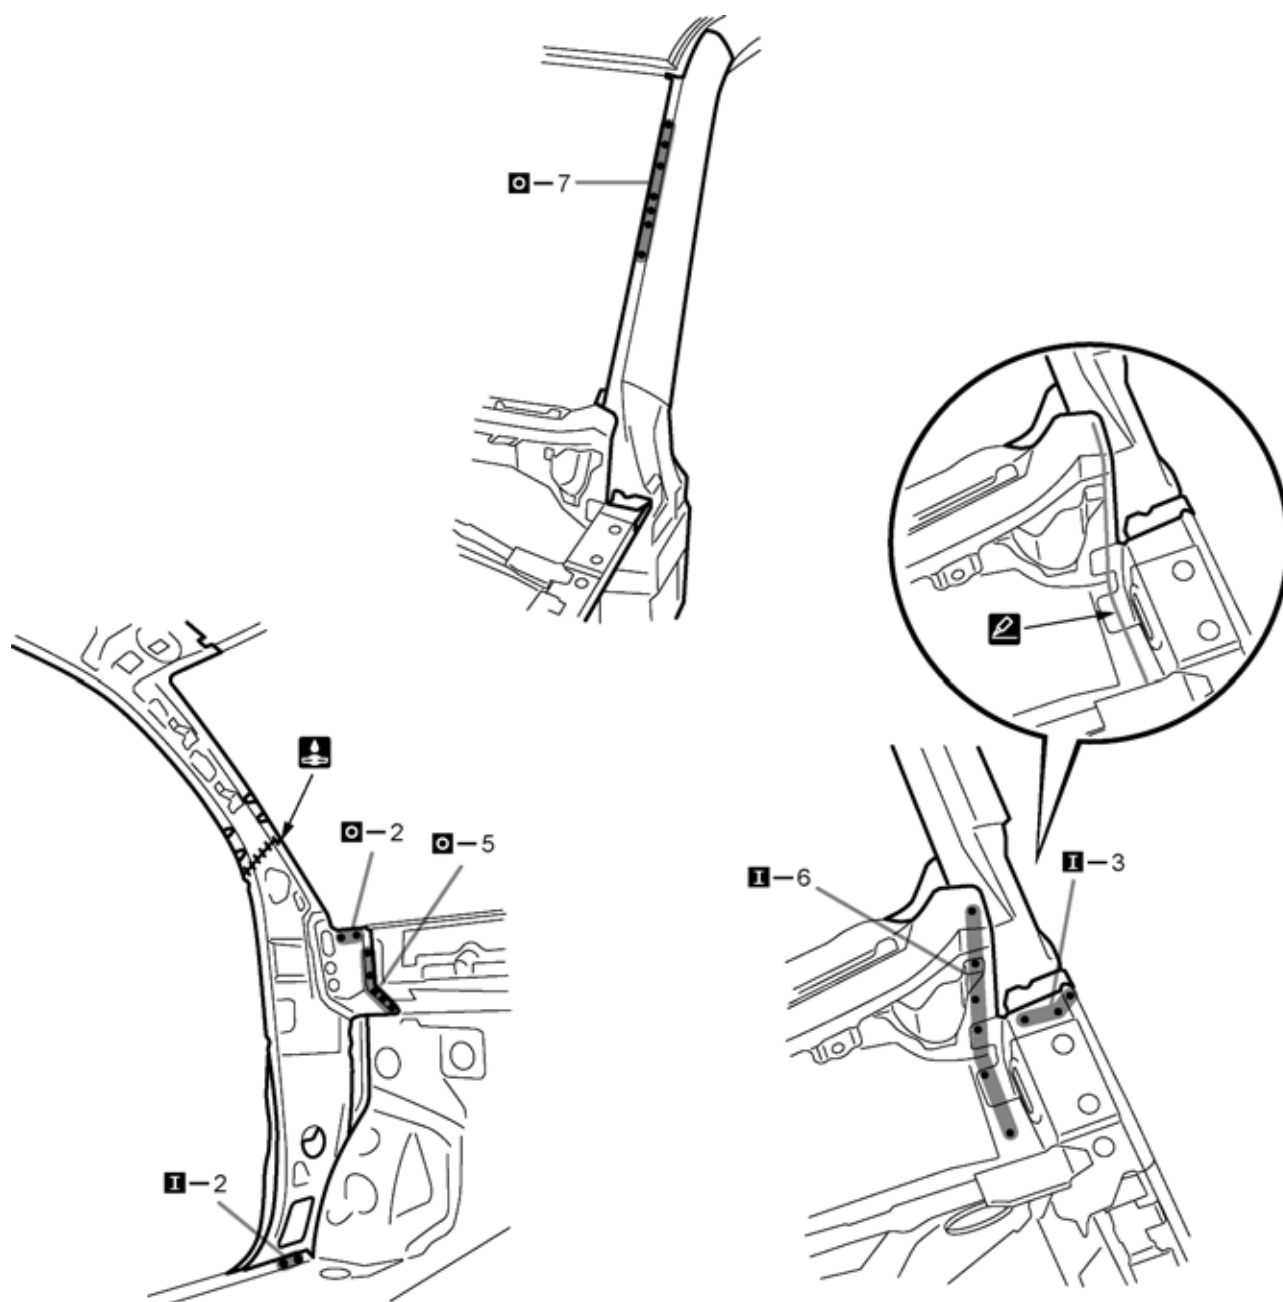

F29213

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 Before installing a new part, apply body sealer.
HINT:
Apply sealer in an even, continuous bead.
- 4 After welding, apply the foamed sealing material to the corresponding parts. (See the paint-coating)
- 5 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.