


CENTER BODY PILLAR (CUT)

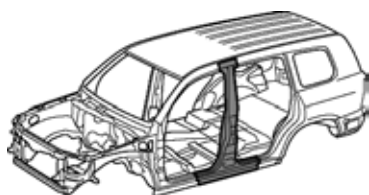

F29214A




Symbol meaning

△△ : Remove Weld Points S : Cut and Join Location

⚡ : Cut Location for Supply Parts

F29214B

REMOVAL

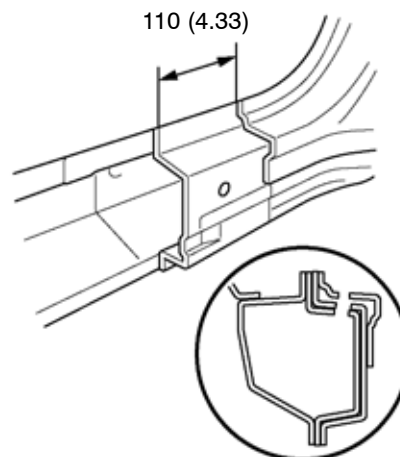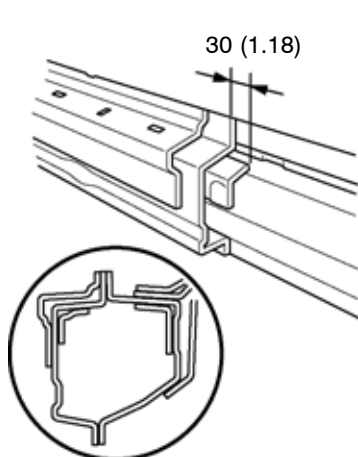
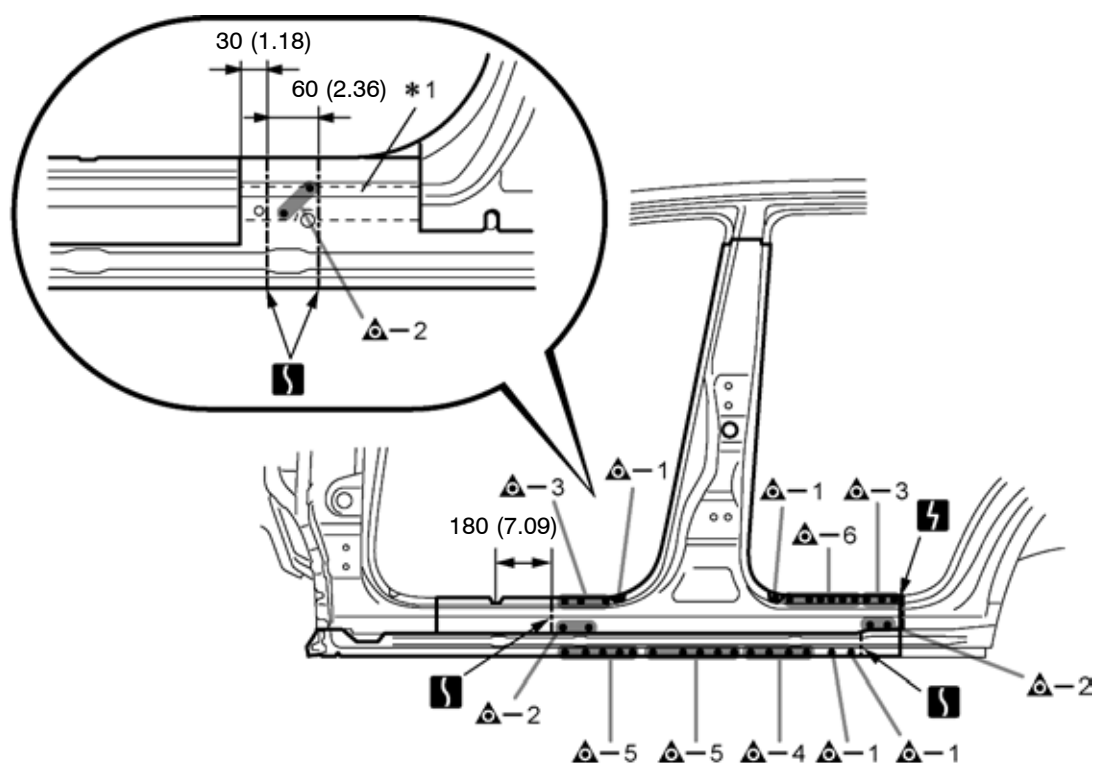


mm (in.)

F29214

REMOVAL POINT

- 1 Carefully cut the rocker outer panel so not to damage *1.

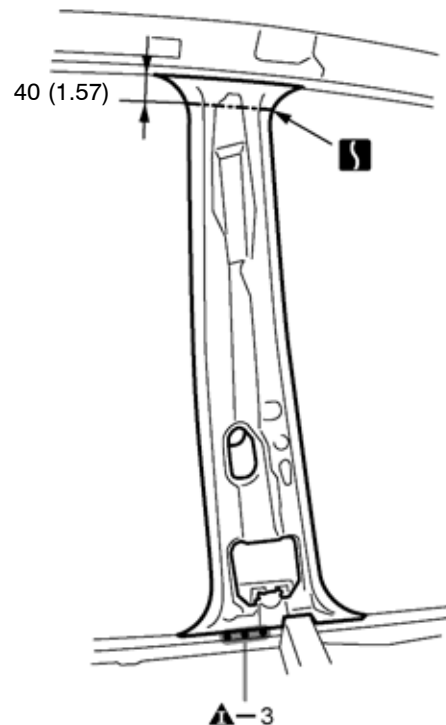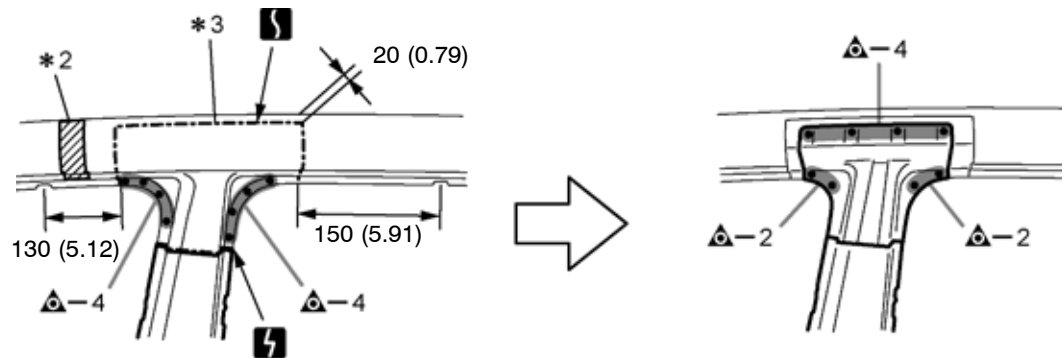

mm (in.)

F29215

REMOVAL POINT

- 1 *2 indicates the location of the foamed sealing material. Be careful when cutting as the foamed sealing material is located near the cutting position.
- 2 *3 is reused.



Symbol meaning

△ : Remove Weld Points ○ : Spot Weld □ 1 : Plug Weld S : Cut and Join Location


⏏ : Butt Weld

F29216B

INSTALLATION

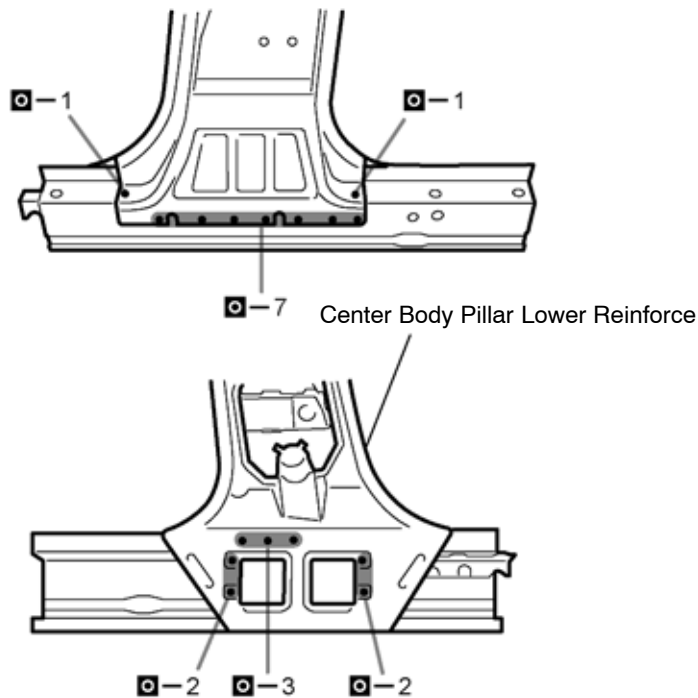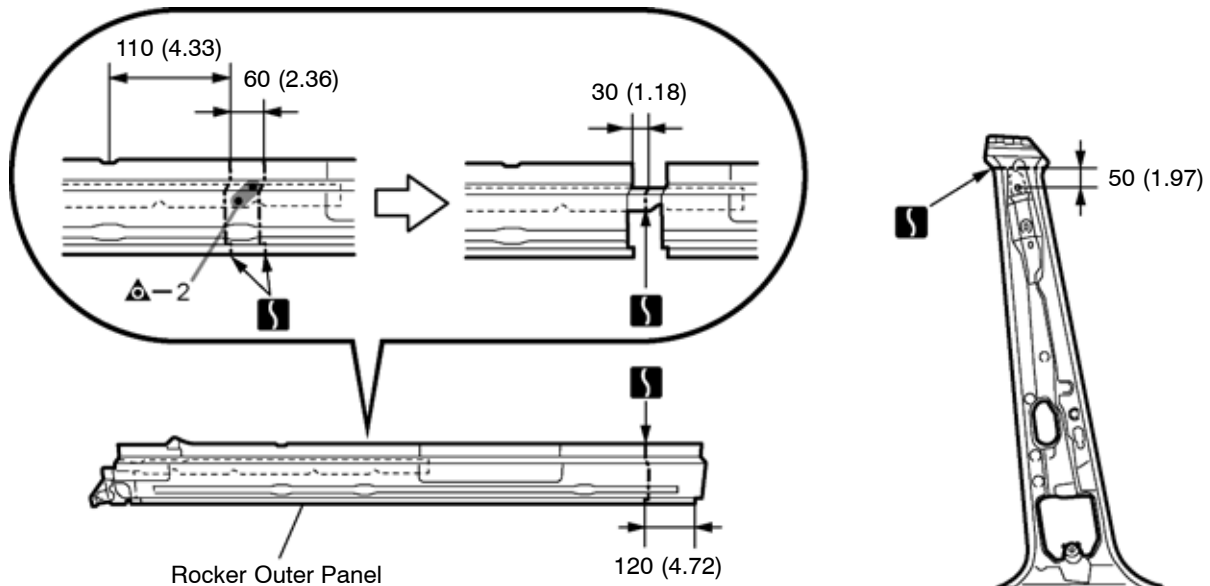

Center Body Pillar Upper Reinforce

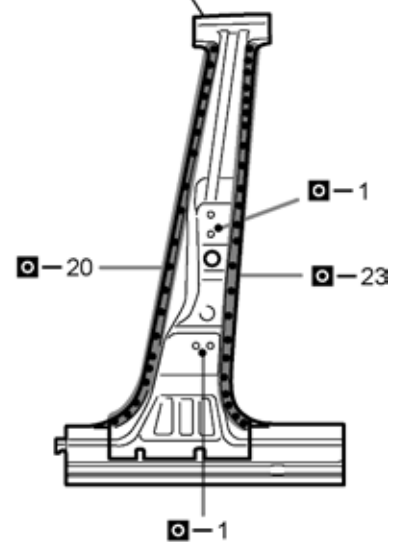


mm (in.)

F29216

INSTALLATION POINT

- Before temporarily installing the new parts, weld the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce with the standard number of welding points.

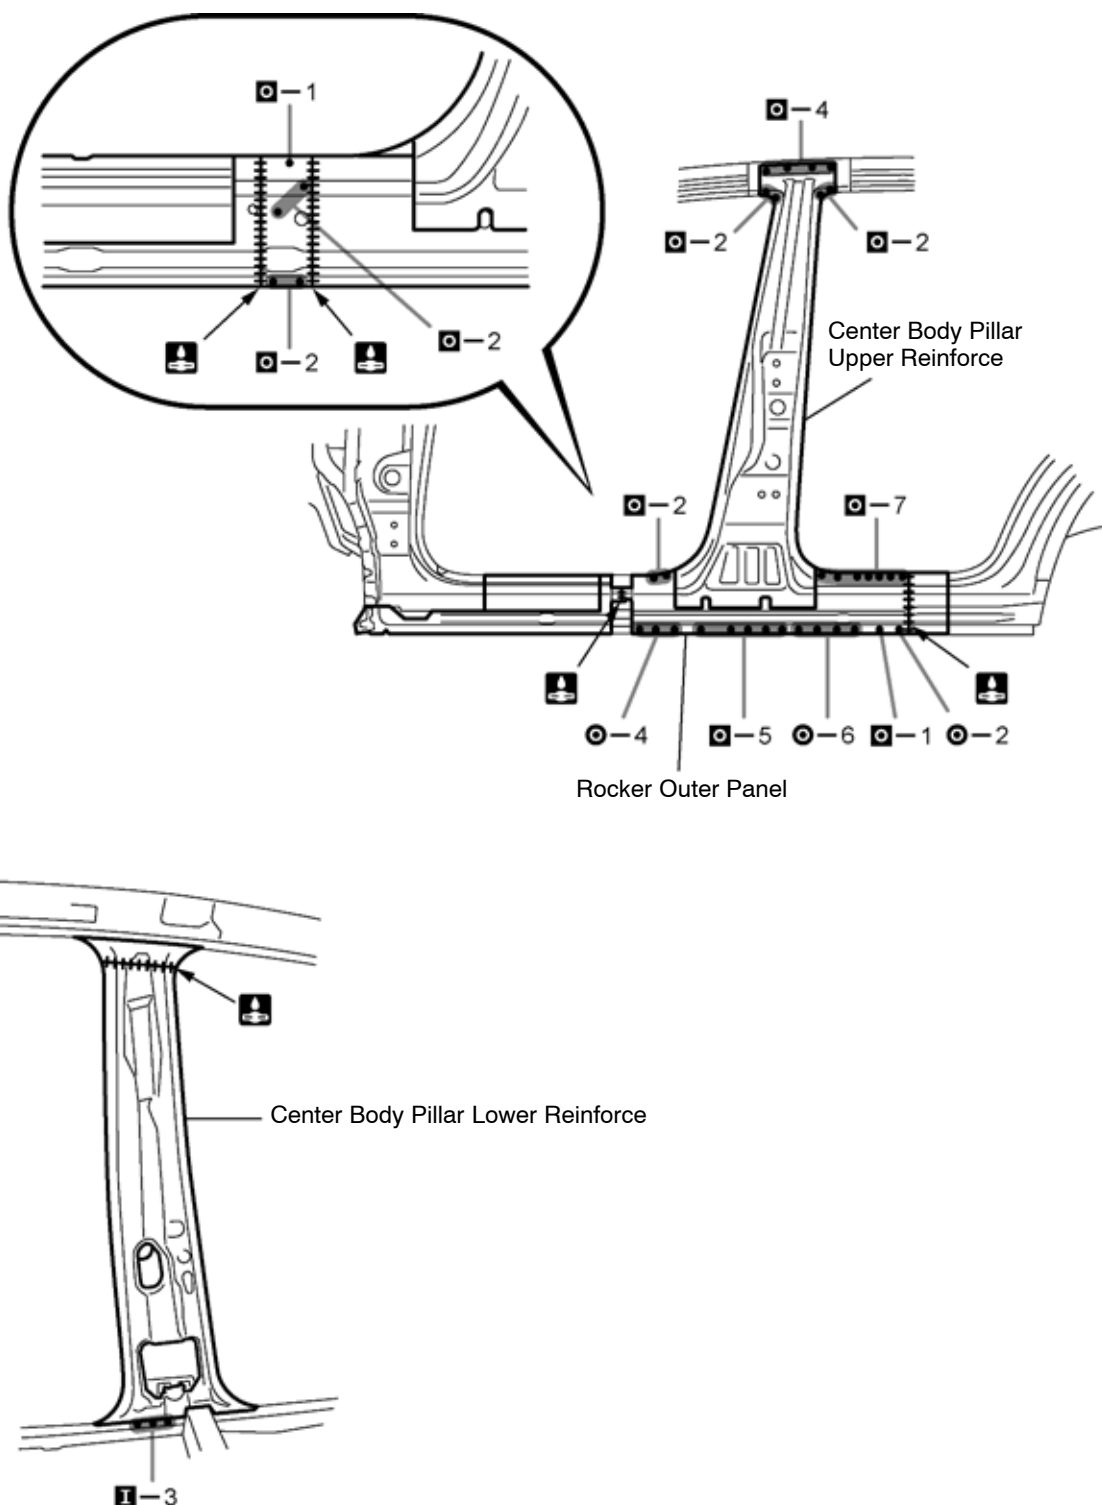

F29217

INSTALLATION POINT



- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce to the vehicle side, install the center body outer pillar.

Symbol meaning

△ : Remove Weld Points ○ : Spot Weld □ 1 : Plug Weld S : Cut and Join Location

⊕ : Butt Weld

F29216B

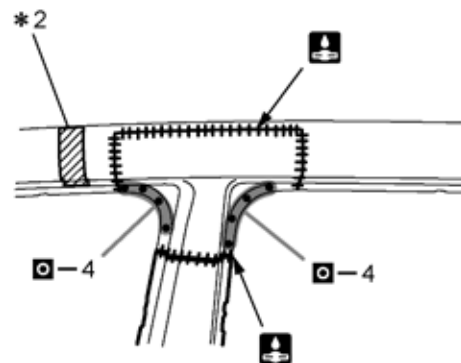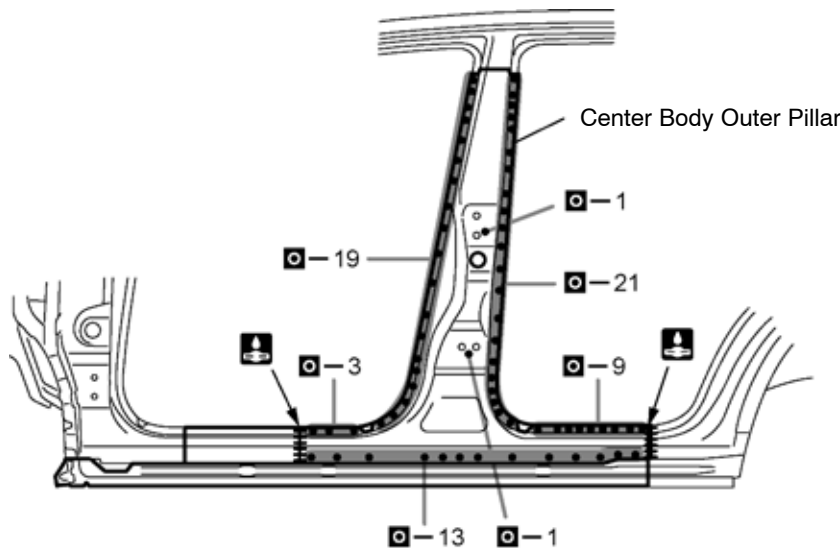

F29218

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce to the vehicle side, install the center body outer pillar.
- 4 *2 indicates the location of the foamed sealing material. Be careful when welding as the foamed sealing material is located near the area that is cut and joined together.
- 5 After welding, apply the foamed sealing material to the corresponding parts. (See the paint coating)
- 6 After welding, apply body sealer to the corresponding parts. (See the paint coating)
- 7 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.