


ROCKER OUTER PANEL (CUT-P)

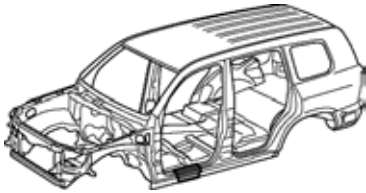

F29223A


Symbol meaning

△ : Remove Weld Points S : Cut and Join Location

⚡ : Cut Location for Supply Parts

F29223B

REMOVAL

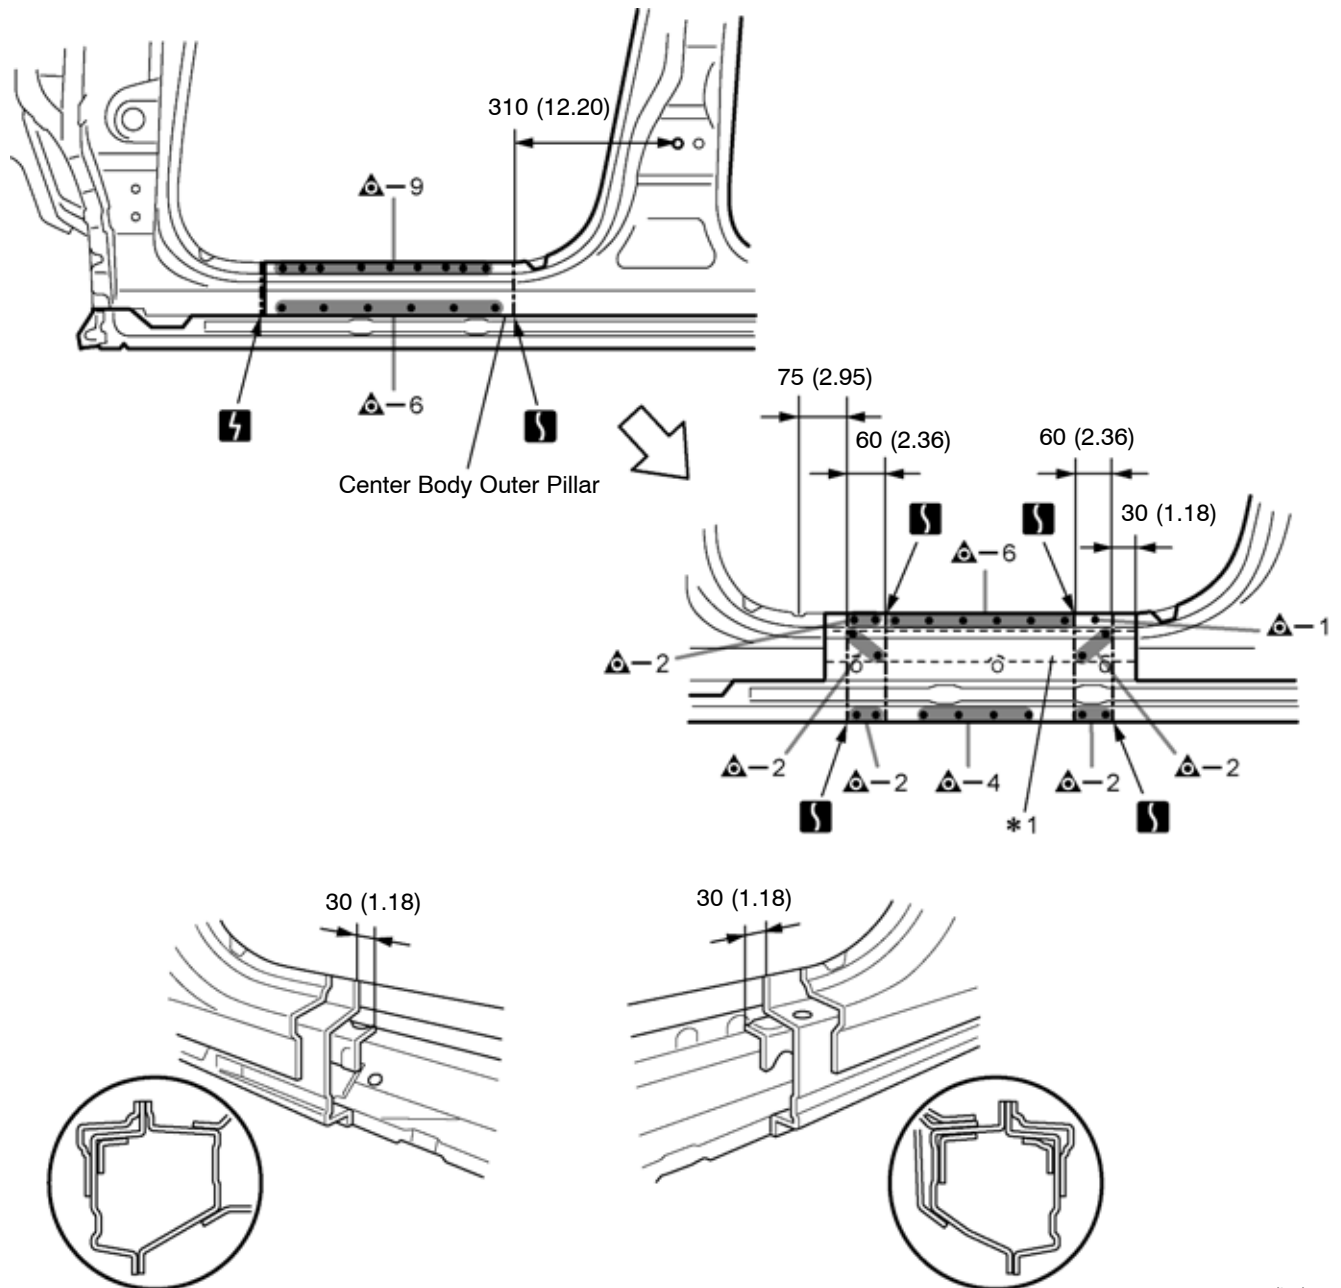

mm (in.)

REMOVAL POINT

- 1 After removing the center body outer pillar, remove the rocker outer panel.
- 2 Carefully cut the rocker outer panel so not to damage *1


F29223

Symbol meaning

⊙ : Spot Weld ◻ : Plug Weld ☐ : Butt Weld

F29224B

INSTALLATION

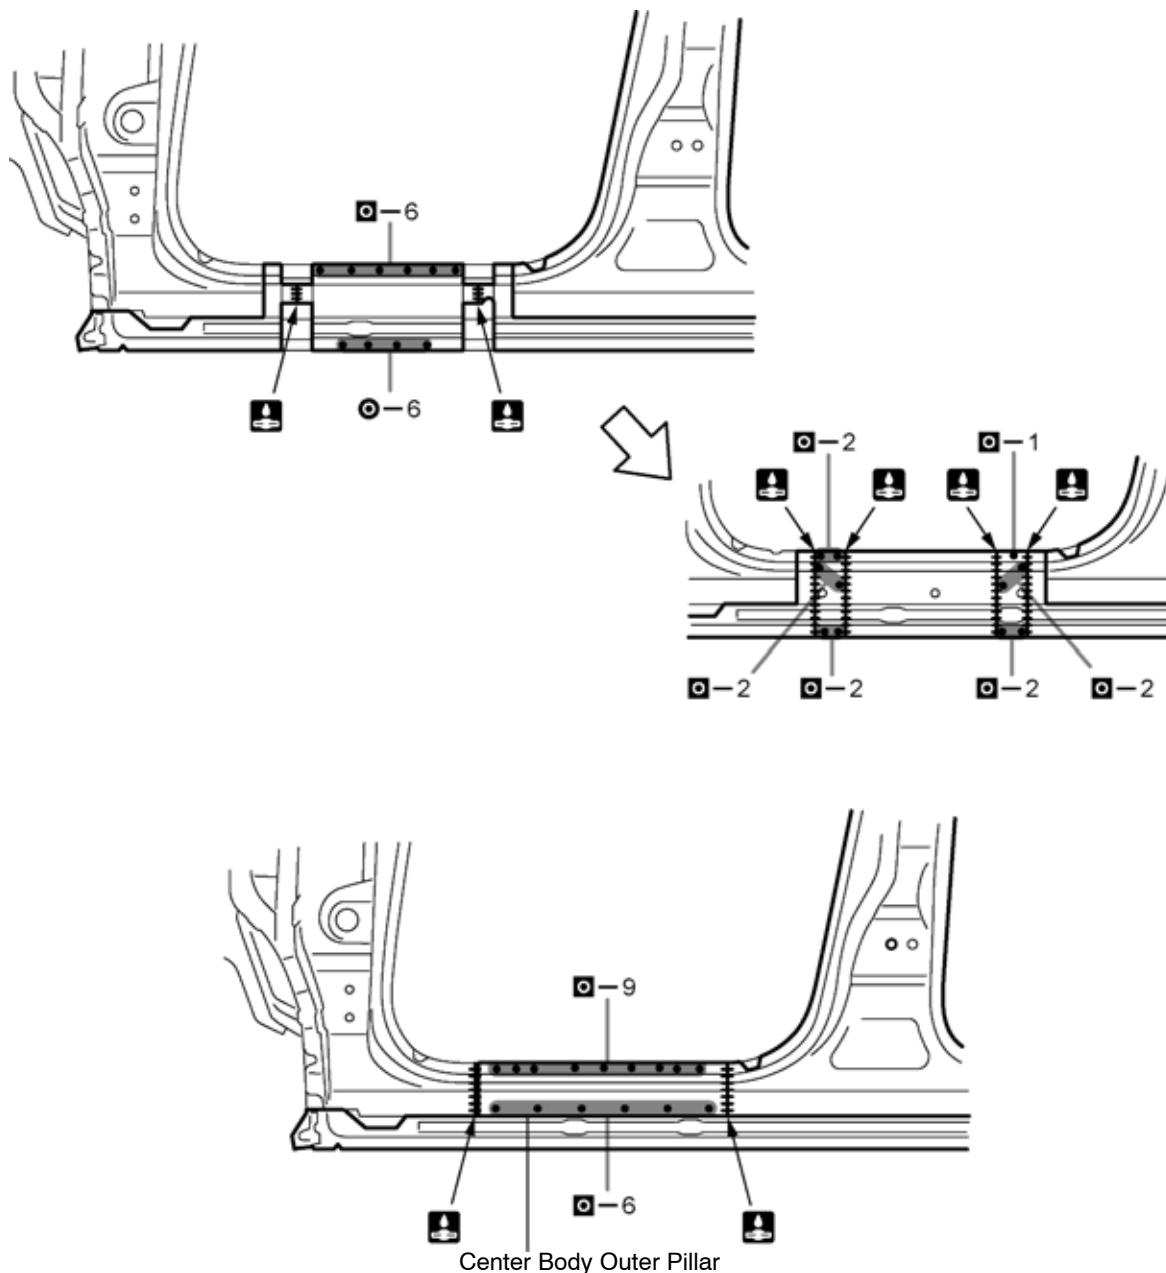

F29224

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 After welding the rocker outer panel to the vehicle side, install the center body outer pillar.
- 3 After welding, apply body sealer to the corresponding parts. (See the paint coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.