

QUARTER WHEEL HOUSING OUTER PANEL (ASSY)



F29234A

With the rocker panel No. 3 reinforcement and quarter panel removed.

Symbol meaning

REMOVAL

INSTALLATION

 : Remove Weld Points



⦿ : Spot Weld ◐ : Plug Weld

 : Plug Weld


F29234B

REMOVAL-INSTALLATION

[LH]

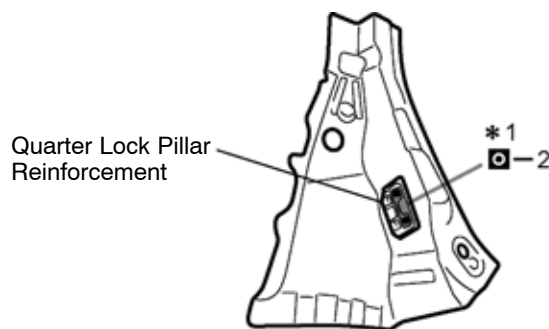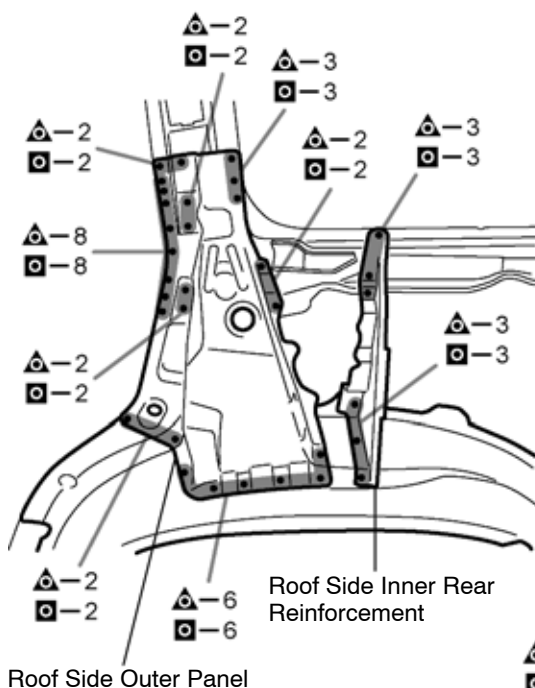

Seat Belt Anchorage To Quarter Wheel Housing Reinforce

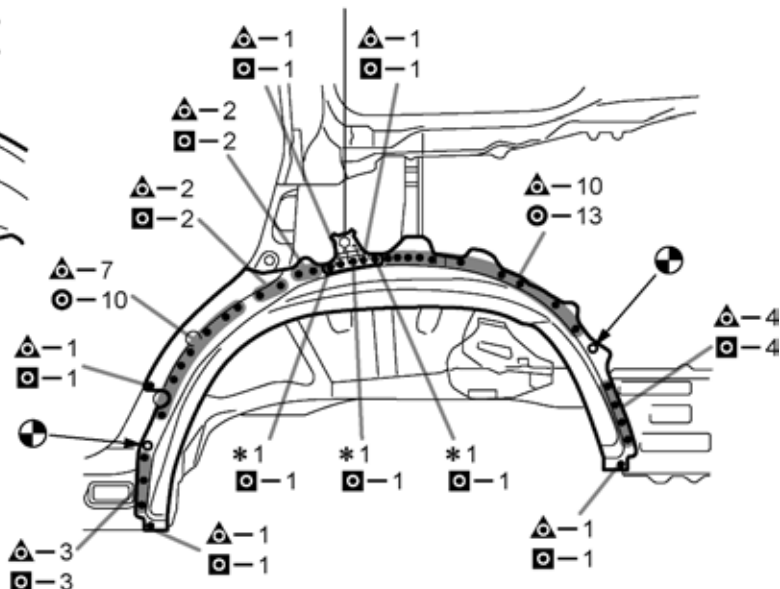

F29234


REMOVAL POINT

- 1 After removing the roof side outer panel and roof side inner rear reinforcement, remove the quarter wheel housing outer panel.
- 2 Remove the seat belt anchorage to quarter wheel housing reinforce at the same time.

INSTALLATION POINT

- 1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
- 2 *1 is only for installation.
- 3 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel and roof side inner rear reinforcement.
- 4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

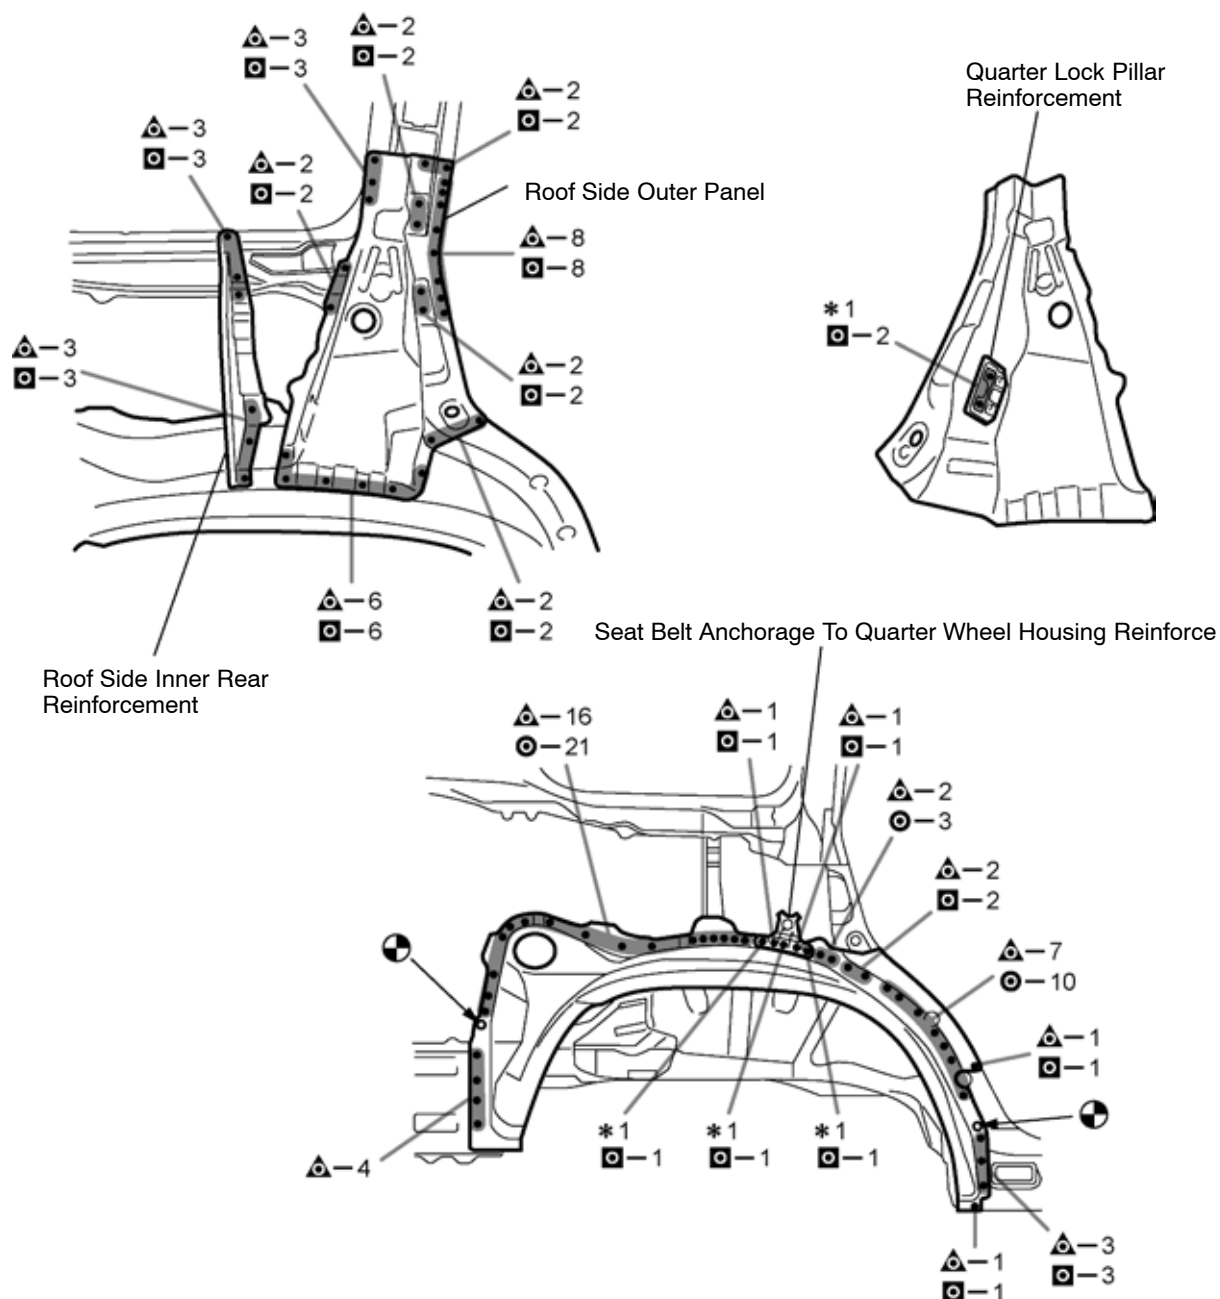

F29235

REMOVAL POINT

- 1 After removing the roof side outer panel and roof side inner rear reinforcement, remove the quarter wheel housing outer panel.
- 2 Remove the seat belt anchorage to quarter wheel housing reinforce at the same time.

INSTALLATION POINT

- 1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
- 2 *1 is only for installation.
- 3 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel and roof side inner rear reinforcement.
- 4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.