

## BACK DOOR OPENING UPPER REINFORCEMENT (CUT)



F29238A

With the quarter panel front extension removed.

### Symbol meaning

REMOVAL

▲ : Remove Weld Points

S : Cut and Join Location


INSTALLATION

⊙ I : Plug Weld

⊕ : Butt Weld

F29238B

### REMOVAL-INSTALLATION

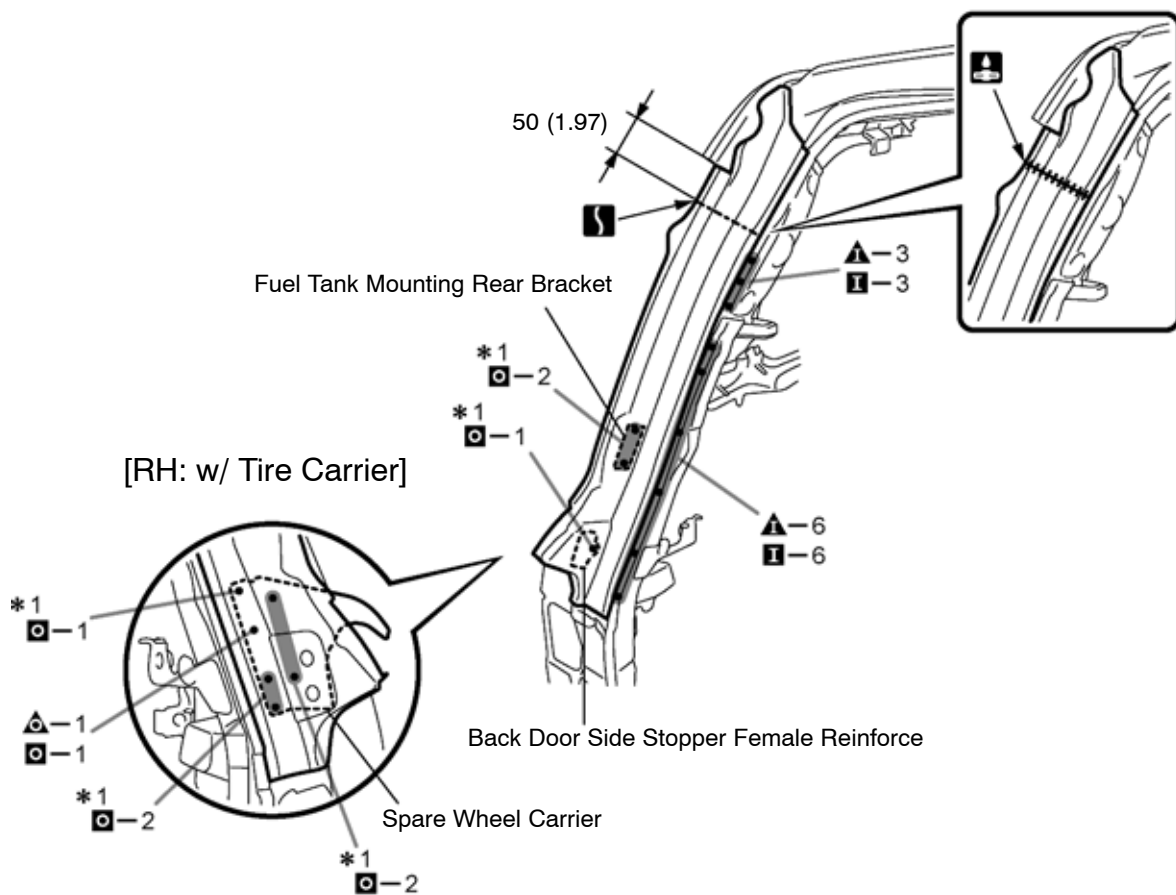

mm (in.)

F29238

#### REMOVAL POINT

- 1 Remove the spare wheel carrier at the same time.

#### INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 \*1 is only for installation.
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.