


ROOF PANEL (ASSY): Normal Roof

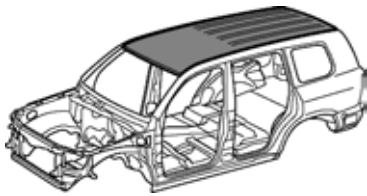


F29253A

Symbol meaning

△ : Remove Weld Points

F29253B

REMOVAL

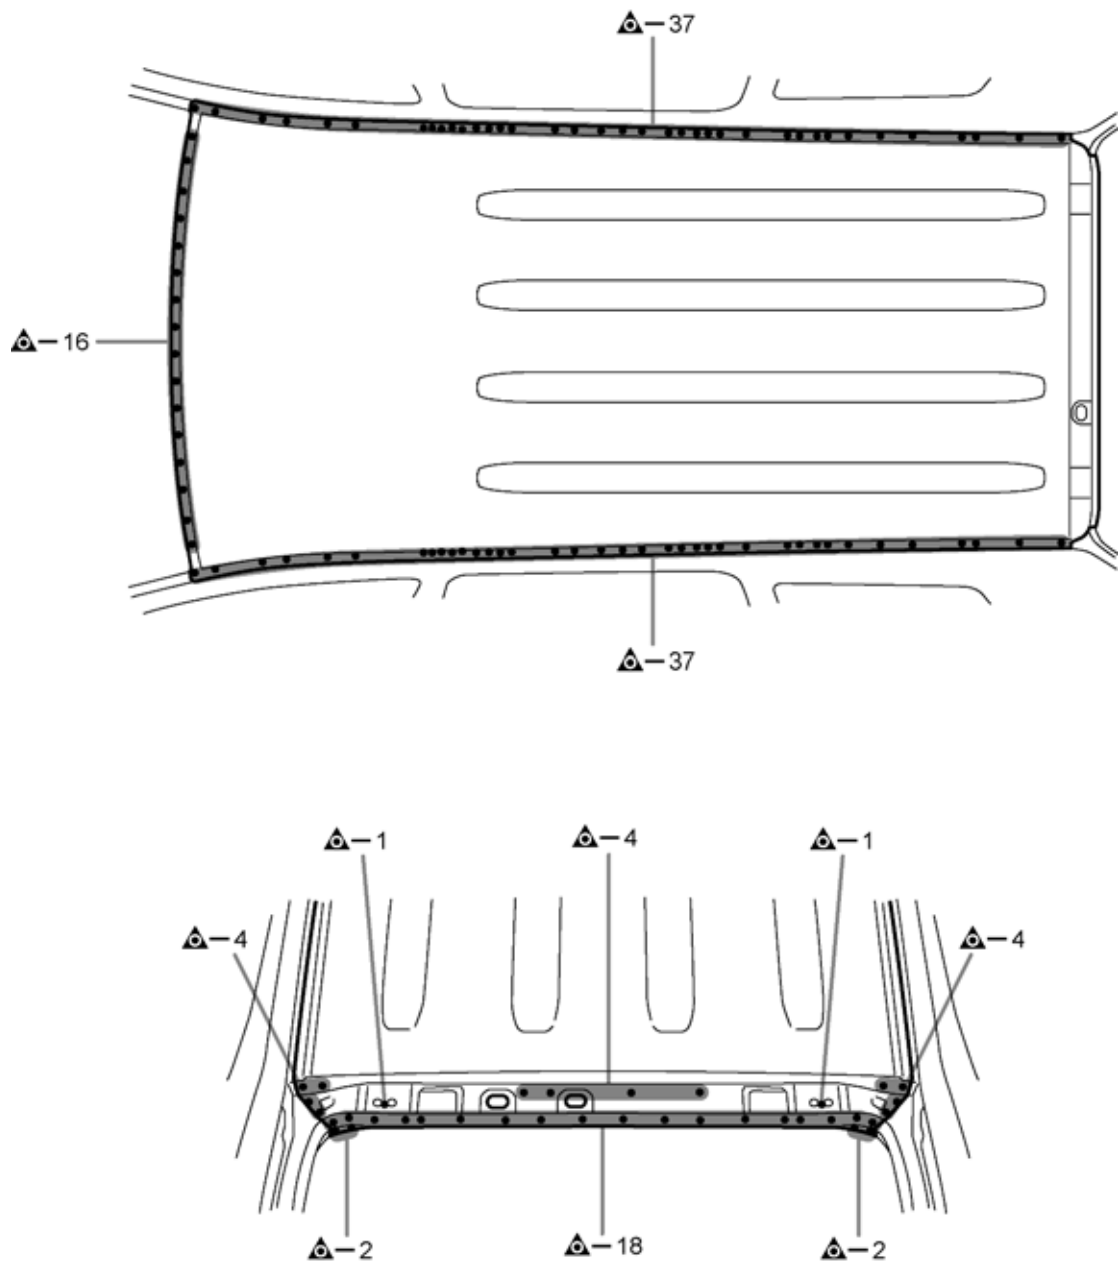


F29253

Symbol meaning

◻ : Plug Weld ◻ : Body Sealer

F29254B

INSTALLATION

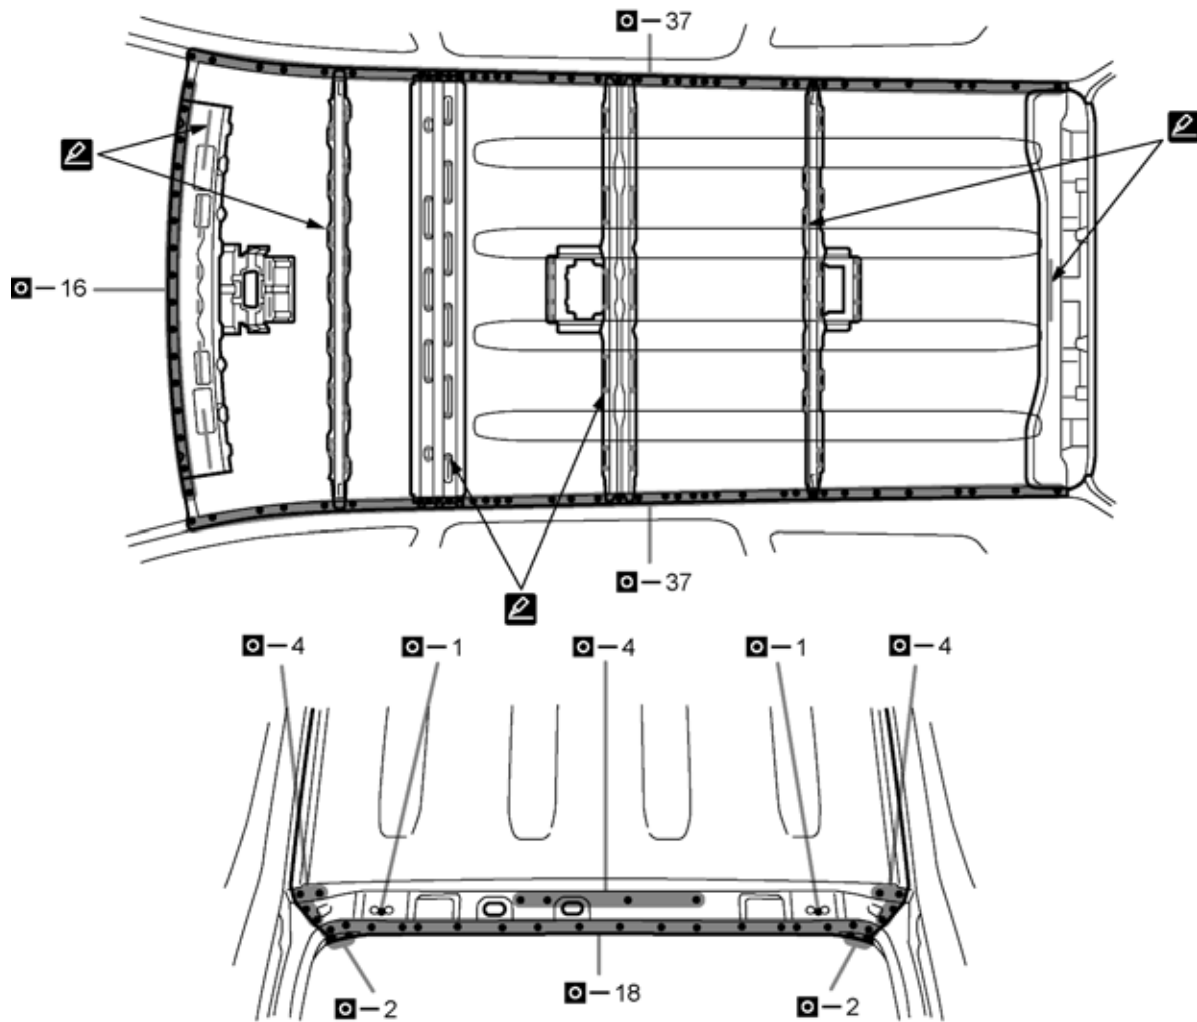

F29254

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After the roof panel reinforcement is welded to the new parts, install the roof panel to the vehicle side.
- 4 Before temporarily installing the new parts, apply body sealer to the windshield header panel, roof panel reinforcement and back door opening frame.
HINT:
Apply just enough sealer for the new parts to make contact.
- 5 After welding, apply the foamed sealing material to the corresponding parts. (See the paint-coating)
- 6 After welding, apply body sealer to the corresponding parts. (See the paint-coating)
- 7 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.