


2. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

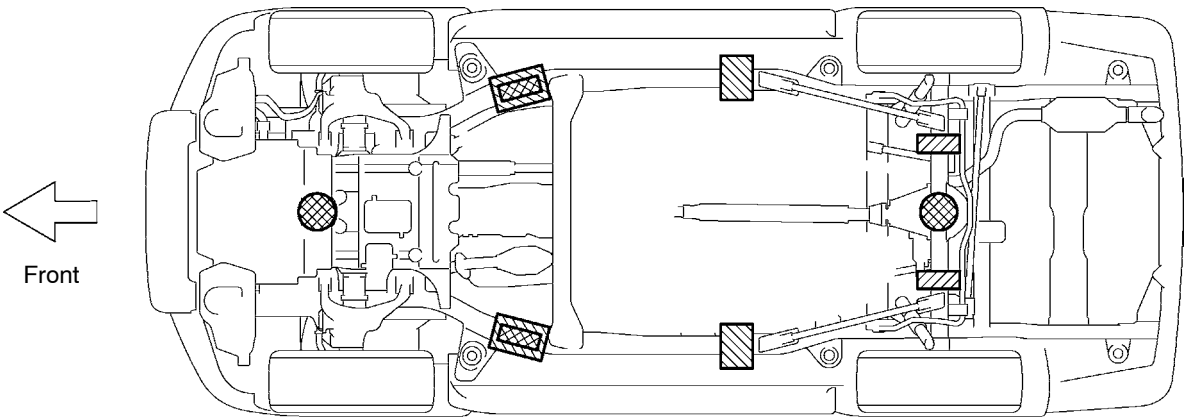

 : JACK POSITION

Front: Center of crossmember
Rear: Center of rear axle housing

 : SUPPORT POSITION

Safety stand

 : SUPPORT POSITION

Swing arm type lift