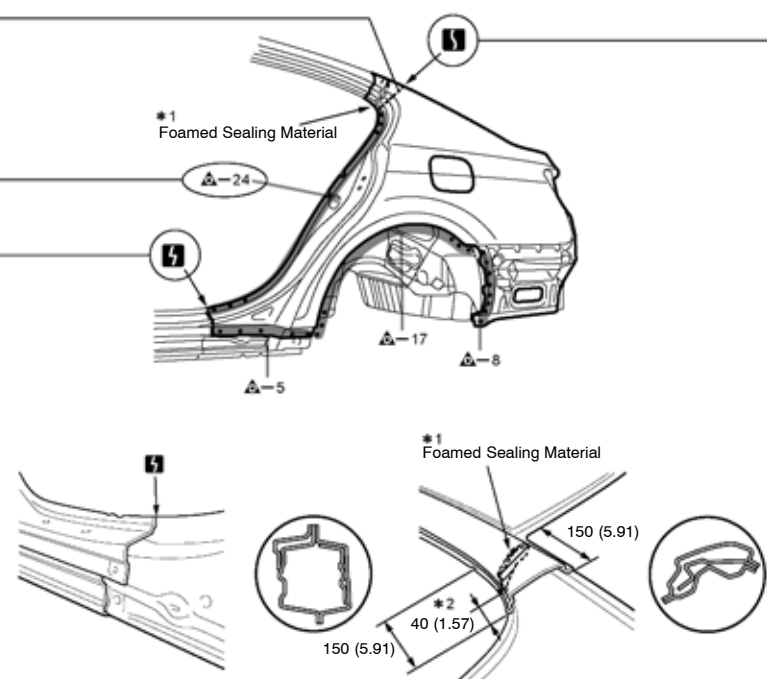


HOW TO USE THIS MANUAL

1. BODY PANEL REPLACEMENT IN THIS MANUAL

BODY PANEL REPLACEMENT		BP-34
(A) QUARTER PANEL (CUT) (B)  • With the body lower back panel removed. Symbol meaning : Remove Weld Points : Cut and Join Location : Cut Location for Supply Parts (C) (D)	REMOVAL (H) (H)  mm (in.) REMOVAL POINT 1 Remove the fuel filler opening Lid at the same time. (F) (G) WELDING EXPLANATION [See page IN-72] (H) SYMBOLS [See page IN-74]	
(A) REPLACEMENT PARTS QUARTER PANEL (CUT) Replacement method (ASSY)...Assembly replacement (CUT)...Major cutting (less than 1/2 of part used) (CUT-H)...Half cutting (about 1/2 of part used) (CUT-P)...Partial cutting (most of part used) Replacement part (B) PART LOCATION (C) REMOVAL AND INSTALLATION CONDITIONS (D) SYMBOL MEANING (E) REMOVAL DIAGRAM (F) REMOVAL GUIDE		


BP-36

BODY PANEL REPLACEMENT

Symbol meaning

: Spot Weld
 : Plug Weld
 : Butt Weld
 : Body Sealer

INSTALLATION

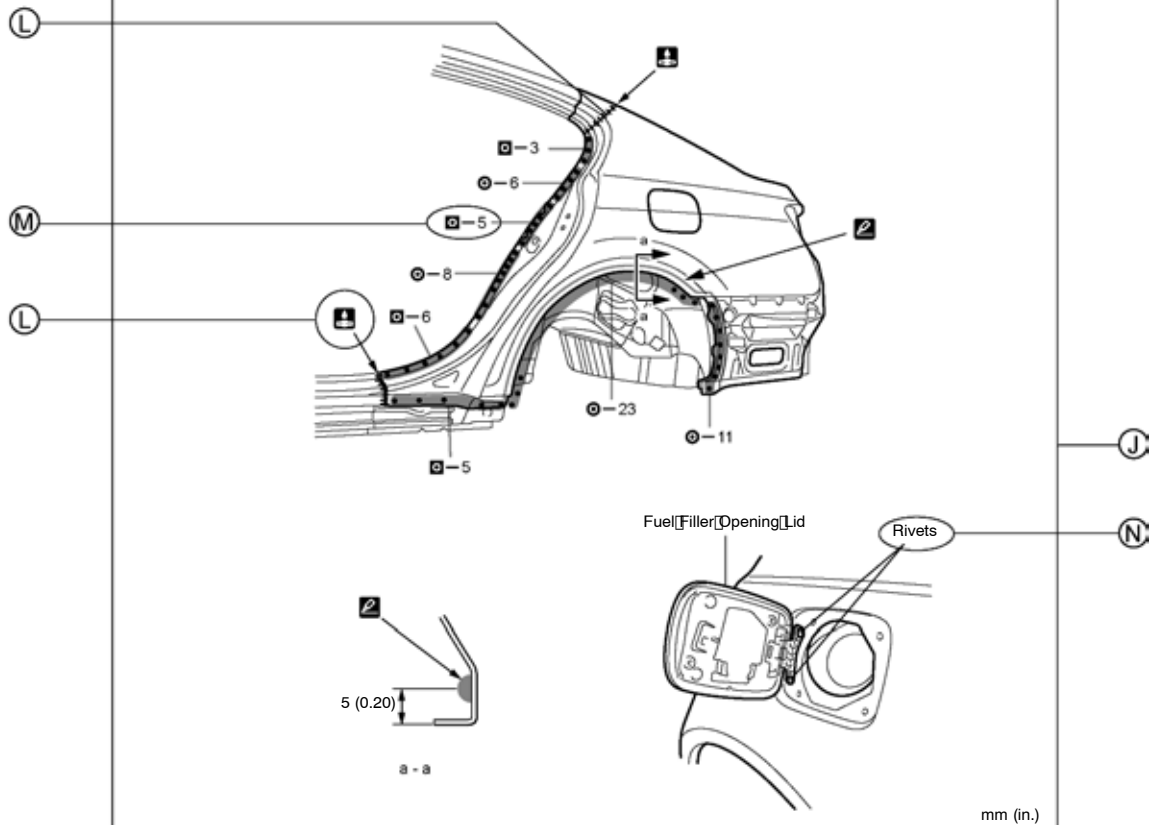

INSTALLATION POINT

- 1) Inspect the fitting of the treated around the new parts before welding. This affects the appearance of the finish.
 - 2) Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
 - 3) Before temporarily installing the new parts, apply body sealer to the wheel arch.
- HINT:**
- 1) Apply body sealer evenly (about 5 mm (0.20 in.) from the flange, avoiding any cozing.
 - 2) Apply body sealer evenly, about 3 – 4 mm (0.12 – 0.16 in.) in diameter.

① SYMBOL MEANING

② INSTALLATION DIAGRAM

③ INSTALLATION GUIDE

④ SYMBOLS (See page IN-72)

⑤ WELDING EXPLANATION (See page IN-74)

⑥ PART NAME