


## ■ ILLUMINATED ENTRY SYSTEM


### 1. General

- The illuminated entry system of the new Land Cruiser (Station Wagon) controls interior light illumination.
- The interior light is operated when the light switch is in the DOOR position.

#### ► System Diagram ◀

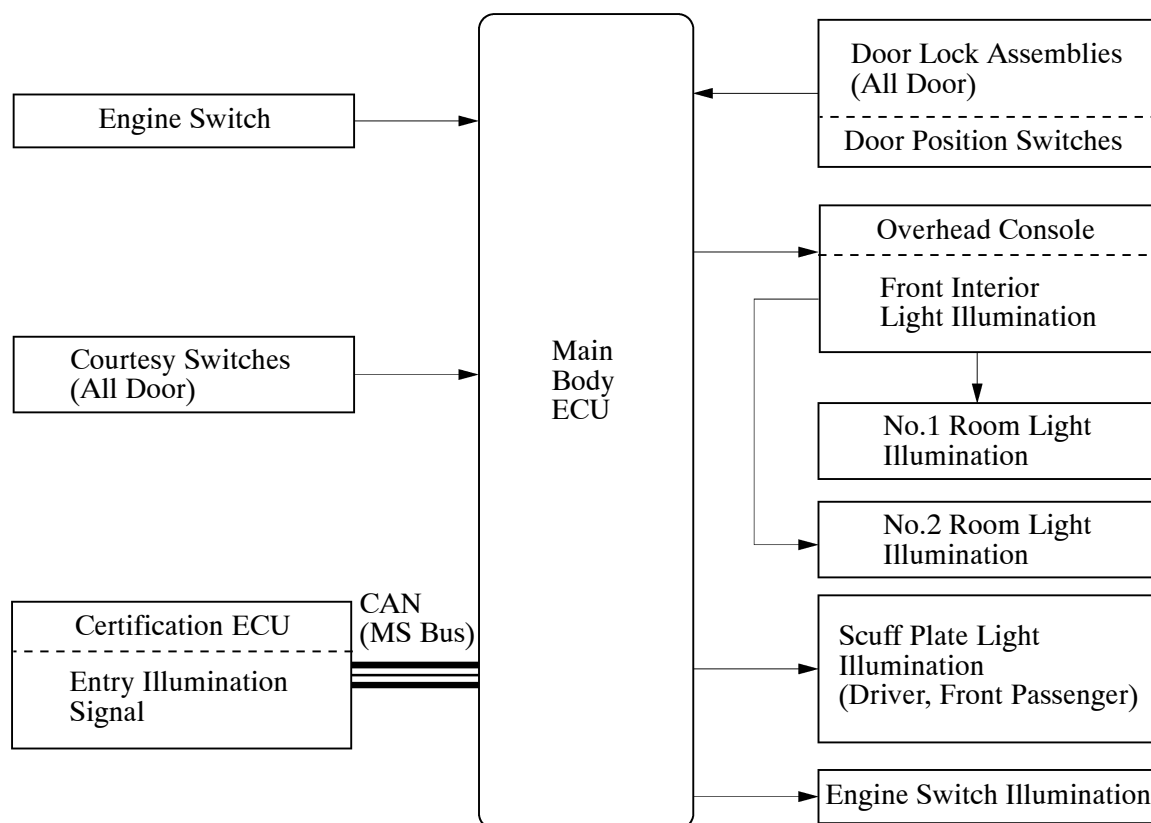


## 2. Layout of Main Components

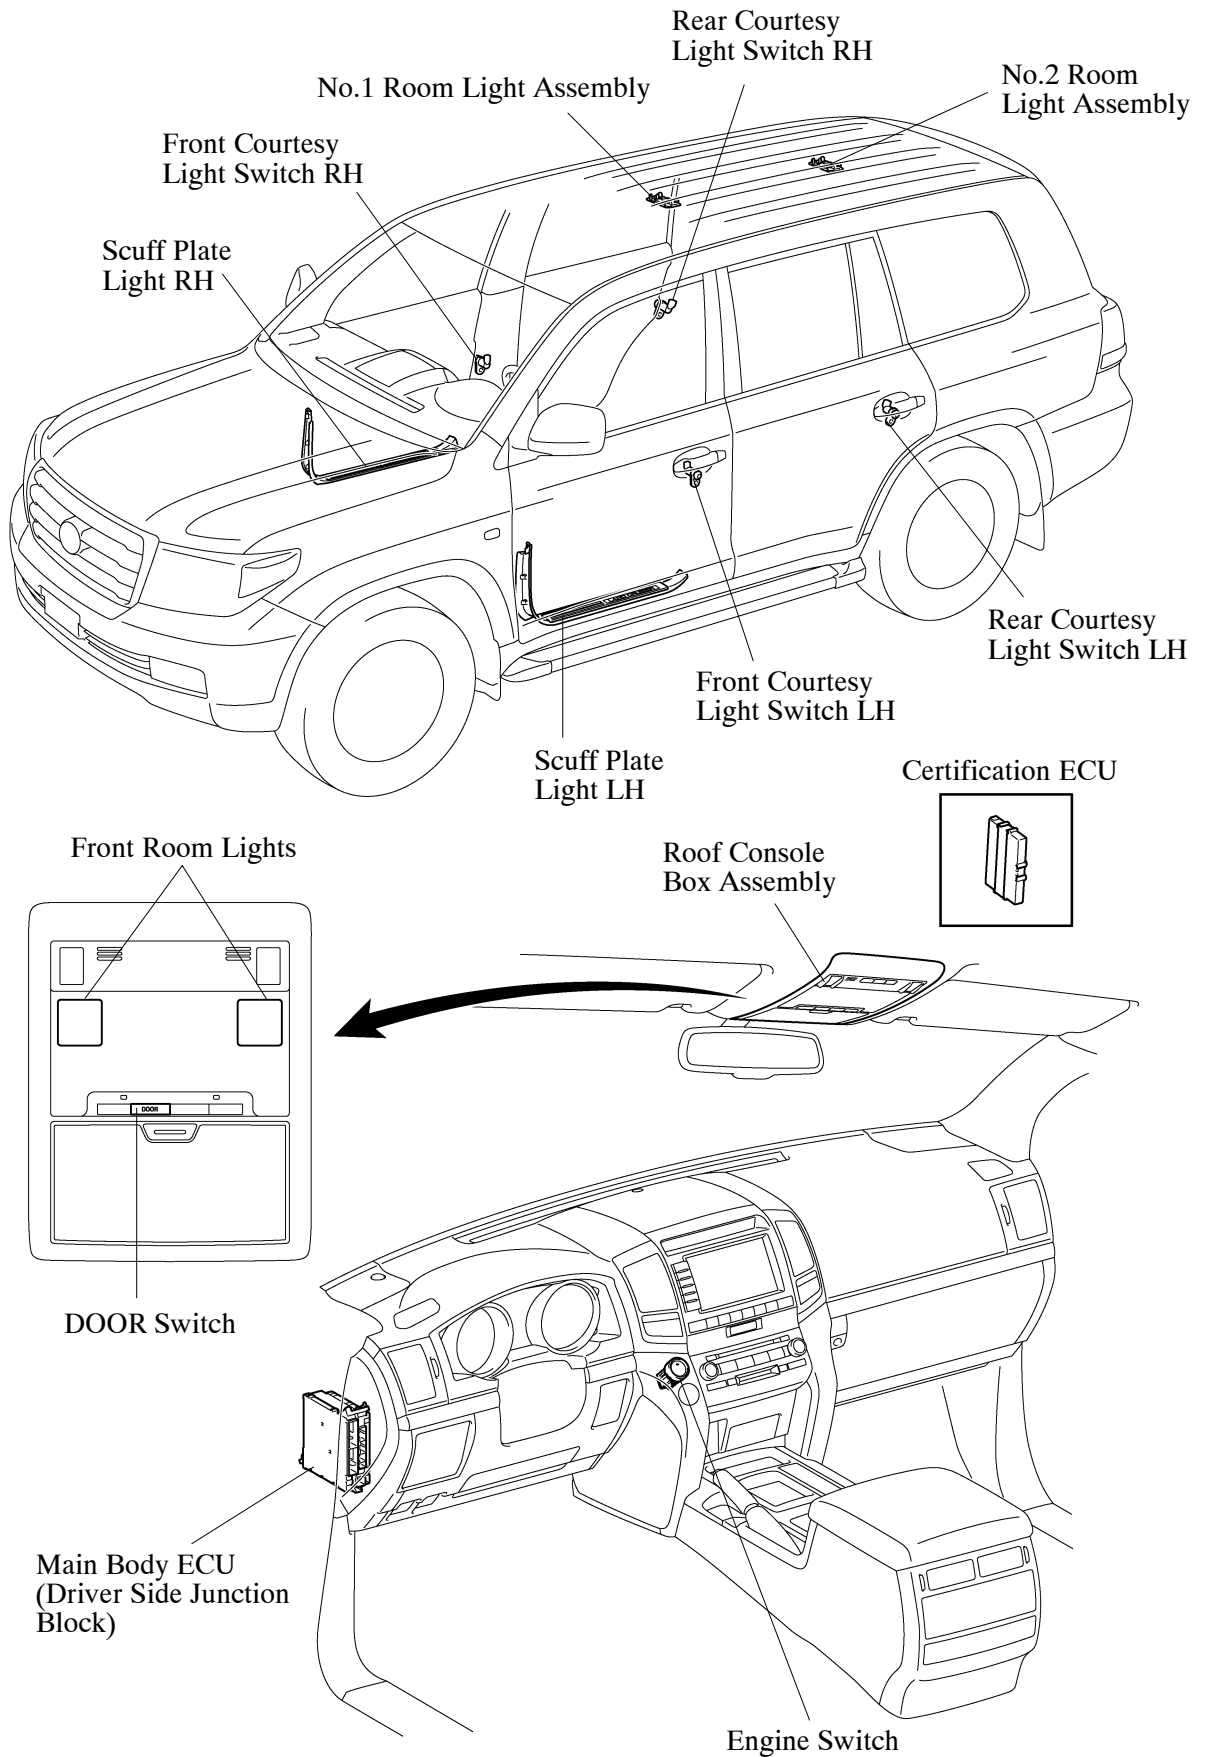

### 3. Interior Light Control

- The interior light control (front/ rear room lights and engine switch illumination) consists primarily of the fade-in/fade-out function and timer illumination function.
- The interior light control activates as described in the diagram below when one of items is in the respective state.

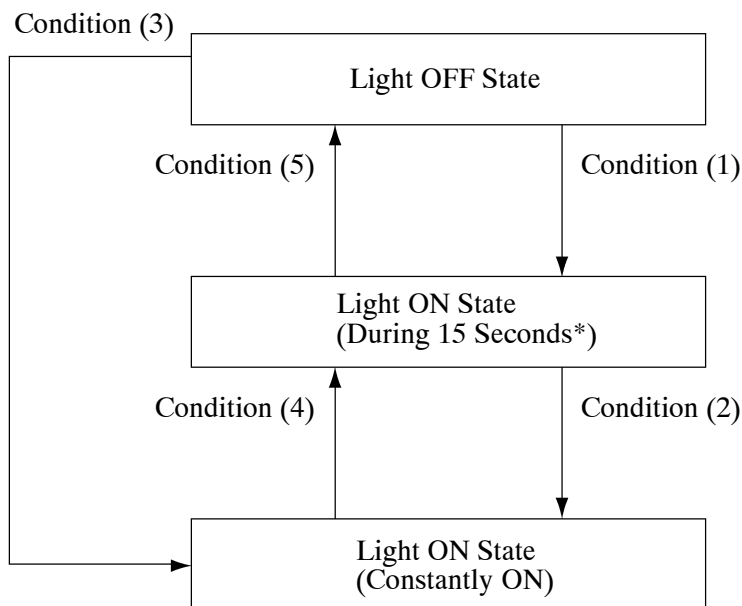

080BE202S

| Condition     | Item                                                                                                                                                                                                                                                                                                                               |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Condition (1) | <ul style="list-style-type: none"> <li>• With engine switch OFF and all doors closed, key enters any actuation area around the doors.</li> <li>• Engine switch OFF and all doors closed, any door is unlocked.</li> <li>• Engine switch is turned from ACC, IG-ON to OFF.</li> </ul>                                               |
| Condition (2) | <ul style="list-style-type: none"> <li>• Driver door or front passenger door is opened.</li> <li>• Rear passenger door is opened.</li> </ul>                                                                                                                                                                                       |
| Condition (3) | <ul style="list-style-type: none"> <li>• Driver door or front passenger door is opened.</li> <li>• Rear passenger door is opened.</li> </ul>                                                                                                                                                                                       |
| Condition (4) | <ul style="list-style-type: none"> <li>• Driver door or front passenger door is closed.</li> <li>• Rear passenger door is closed.</li> </ul>                                                                                                                                                                                       |
| Condition (5) | <ul style="list-style-type: none"> <li>• More than approximately 15 seconds have elapsed since the light ON state (15 seconds duration)*.</li> <li>• All doors are closed, and are locked.</li> <li>• Engine switch is turned from OFF to ACC, IG-ON.</li> <li>• Key is outside of all actuation area around the doors.</li> </ul> |

\*: The function setting can be changed using the customized body electronics system. For details, refer to Customized Body Electronics System section on page BE-17.

### 4. Battery Saving Control

Under the following condition, battery saving control turns off the lights illuminated by the illuminated entry control.

- When any door is open, no door is opened or closed for approximately 20 minutes.
- Engine switch is turned from ACC, IG-ON to OFF.