

■ FAIL-SAFE FUNCTION

The table below indicates the conditions of detecting malfunctions in the sensors and ECU in this system.

Malfunction Parts	Detection Item	Assist	
		Manual Assist	Parallel Parking Assist
Steering Sensor	• Transmission of sensor malfunction signal • Open circuit in sensor signal	Displays “Guidance Unavailable”*	Displays “Guidance Unavailable”
	Transmission of signal to indicate that neutral steering point correction is incomplete	Displays “System initializing.”*	
	Communication malfunction between the steering sensor and parking assist ECU	Displays “Guidance Unavailable”*	
Television Camera Assembly	Transmission of television camera malfunction signal	Stop signal reception and displays a dark screen	
Parking Assist ECU	Malfunction of parking assist ECU.	Stops system operation	
Navigation ECU	• No response from navigation ECU • Transmission of navigation ECU malfunction signal	—	Displays “Guidance Unavailable”

*: Only during estimated guide line mode


■ DIAGNOSIS

BE

The parking assist monitor system is equipped with a self-diagnosis system and can display the diagnosis menus shown on the below.

The diagnosis menu that pertains to this system contains the following three items:

- Service Check
- Display Check
- Camera Check

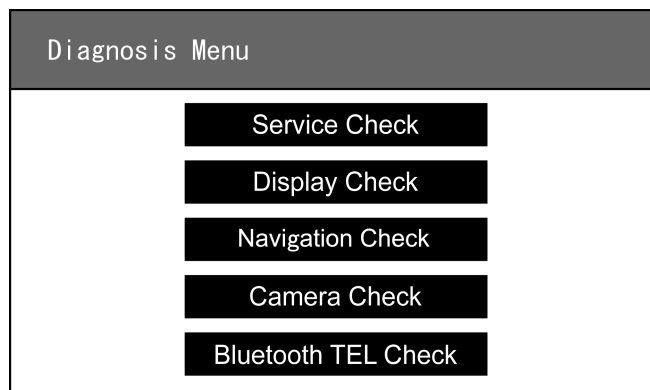

0150BE91C

- The method for displaying the diagnosis menu screen is the same as for the multi-display.
- For details, see the Land Cruiser (Station Wagon) Repair Manual (Pub. No. RM0810E).