


■ VARIABLE SPEED CONTROL

1. Opening Power Window

- In order to minimize the noise when the power window open function starts operating, the power window ECU accelerates the window opening speed within approximately 80 mm (3.2 in.) of the window fully closed position.
- In order to minimize the noise when the power window is opened fully, the power window ECU decelerates the window opening speed within approximately 140 mm (5.5 in.) of the window fully open position.

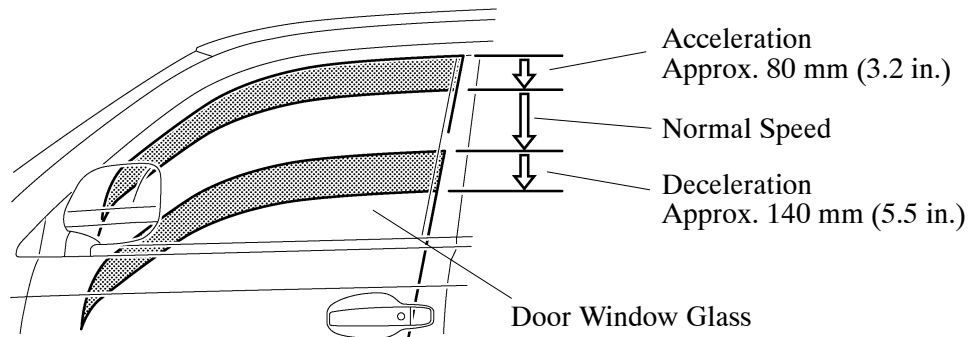


080BE132TE

BE

2. Closing Power Window

- In order to minimize the noise when the power window close function starts operating, the power window ECU accelerates the window closing speed within approximately 25 mm (1.0 in.) of the window fully open position.
- In order to minimize the noise when the power window is closed fully, the power window ECU decelerates the window closing speed within approximately 100 mm (3.9 in.) of the window fully closed position.

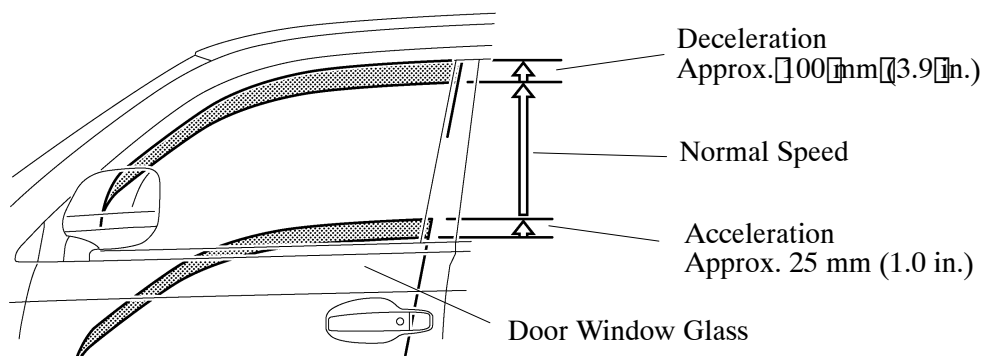

080BE133TE