


CRUISE CONTROL SYSTEM

DESCRIPTION

When the cruise control system is set to a desired vehicle speed, the throttle valve position or injection volume is adjusted automatically to maintain the vehicle speed without the driver having to depress the accelerator pedal.

- On the 1GR-FE and 2UZ-FE engine models, this system effects control through the ETCS-i.
- On the 1VD-FTV engine models, this system effects control through the diesel EFI system.
- The cruise control system is integrated in the ECM.
- Cruise control system settings vary depending on the destinations and grades. For details, see the equipment list in Model Outline (see page MO-33).

► System Diagram ◀

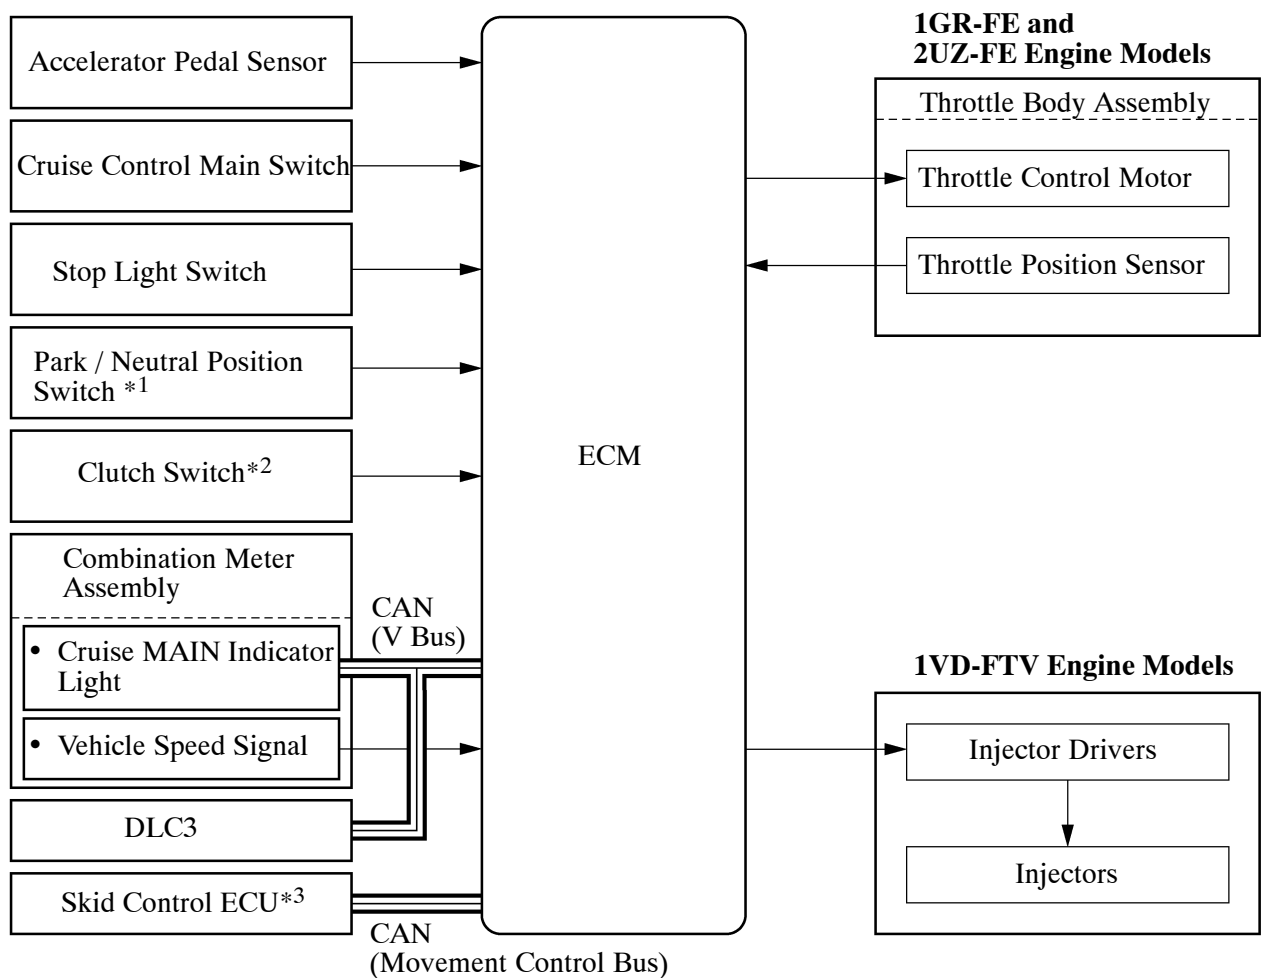

BE

*1: Only for automatic transmission models

*2: Only for manual transmission models

*3: Only for models with VSC system

081BE102TE