


■ CLUTCH START SYSTEM


1. General

This system prevents the starter from cranking unless the clutch pedal is depressed. This prevents the engine from being started in gear, and ensures safety by preventing the vehicle from moving unintentionally.

2. Wiring Diagram

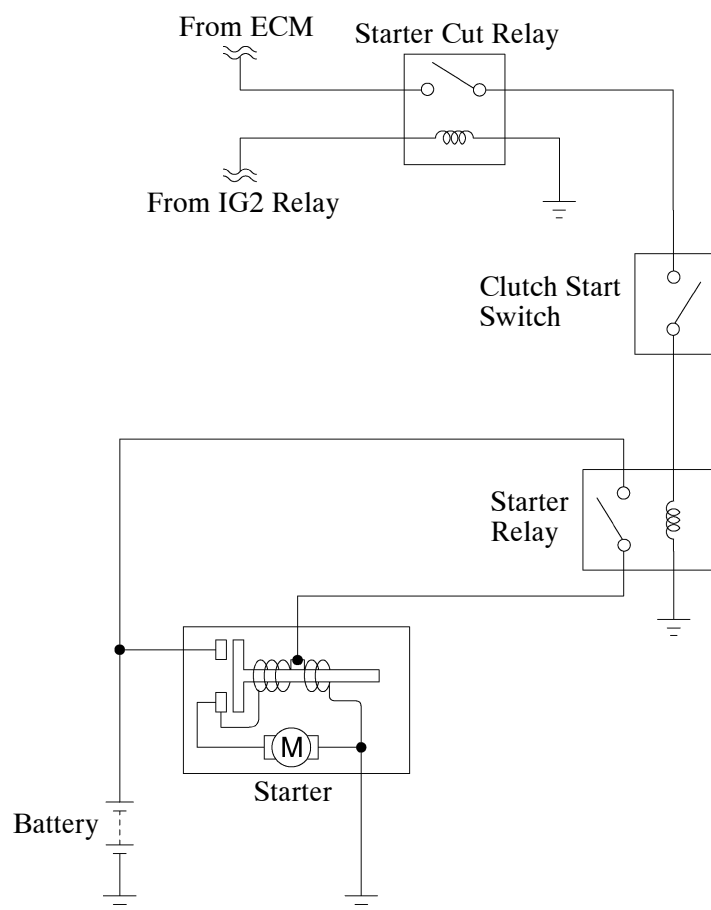

3. Layout of Main Components

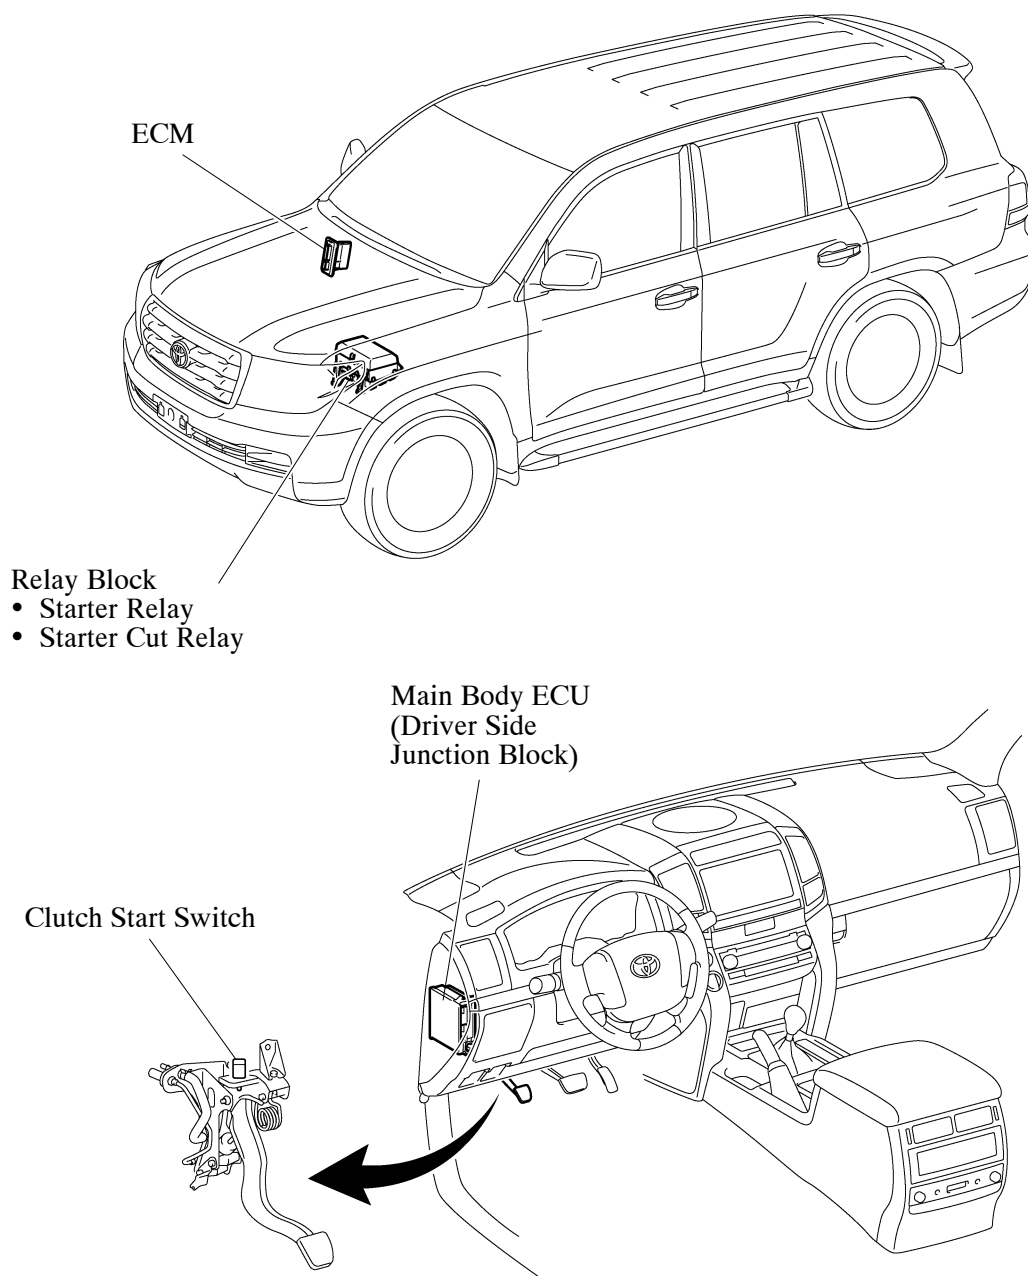

CH

LHD Models

081CH03TE