


■ FUEL SYSTEM

1. General

- A fuel cut control is used to stop the fuel pump when SRS airbags deploy in a frontal or side collision. For details, see page EG-68.
- Compact 12-hole type fuel injectors are used to improve the atomization of fuel.
- Quick connectors are used to connect the fuel lines for ease of serviceability.
- The dual fuel tank is comprised of a fuel tank and fuel sub tank and is provided as standard on Chinese and G.C.C. country models and as an option on general country models*.
- A multi-layer plastic fuel tank is used for the fuel tank. (The fuel sub tank however is made of steel.)

*: Provided as standard on package models for South Africa

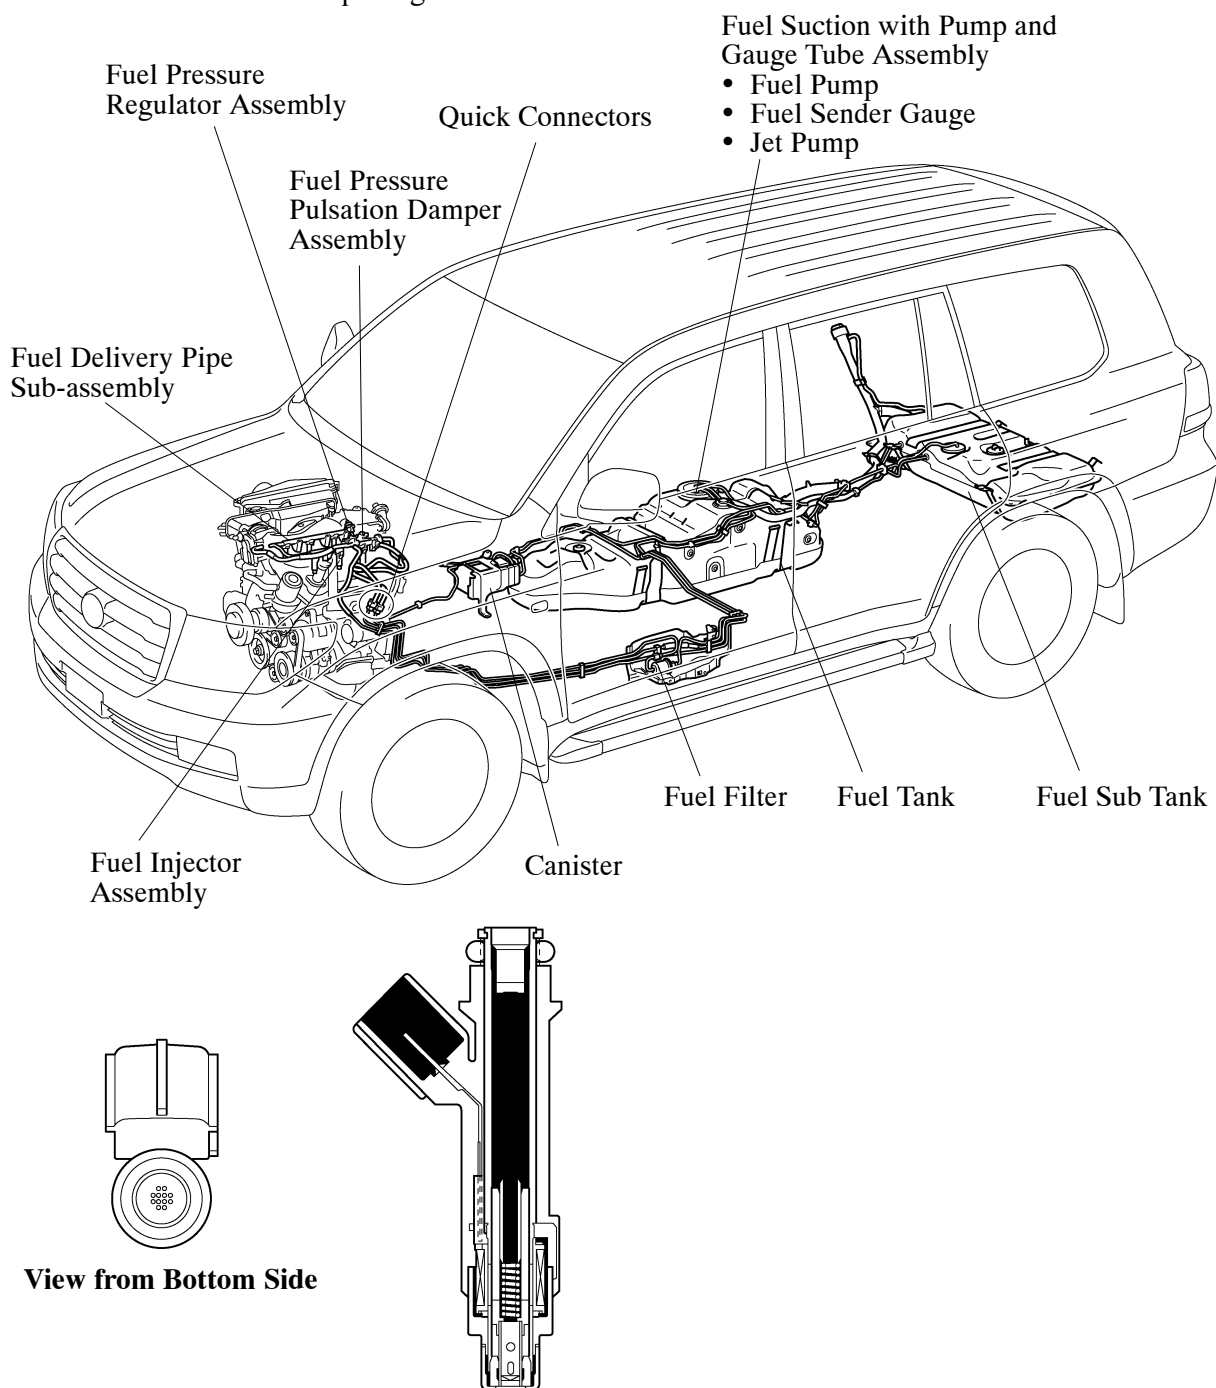


View from Bottom Side

Injector Cross Section

Models with Dual Fuel Tank

2. Fuel Delivery Pipe

- The fuel delivery pipe is made of plastic to reduce weight.
- The right and left fuel delivery pipes are connected by a nylon tube.
- The pulsation damper is sealed with an O-ring and secured with a holder.

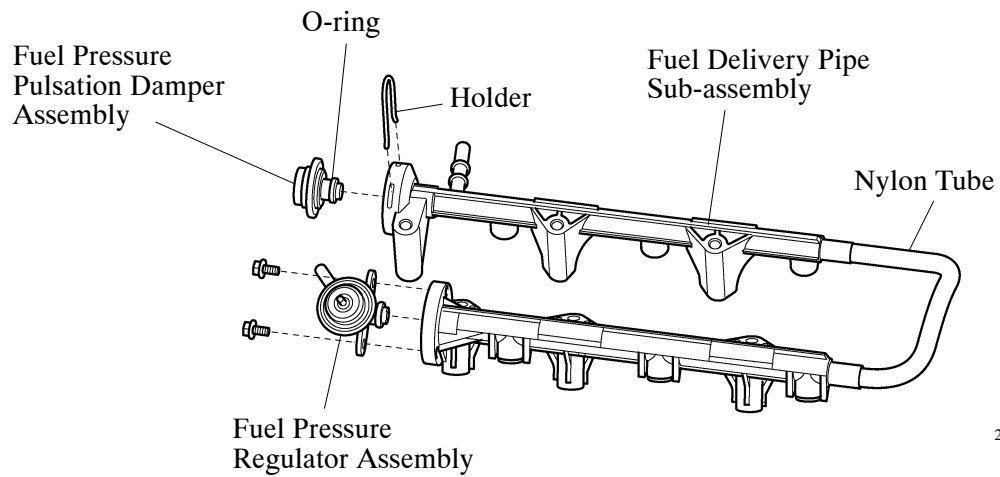

238EG43


3. Fuel Tank

General

- A jet pump, which automatically transfers fuel from the fuel sub tank to the fuel tank, is provided in the fuel tank on models equipped with a dual fuel tank.
- The multi-layer plastic fuel tank consists of six layers of four types of materials, and one of those is a recyclable material to address environmental concerns.

► Fuel Tank Capacity ◀

	Liters (US qts, Imp qts)
Models with Dual Fuel Tank	138 (145.8, 121.4)
Models with Single Fuel Tank	93 (98.3, 81.8)

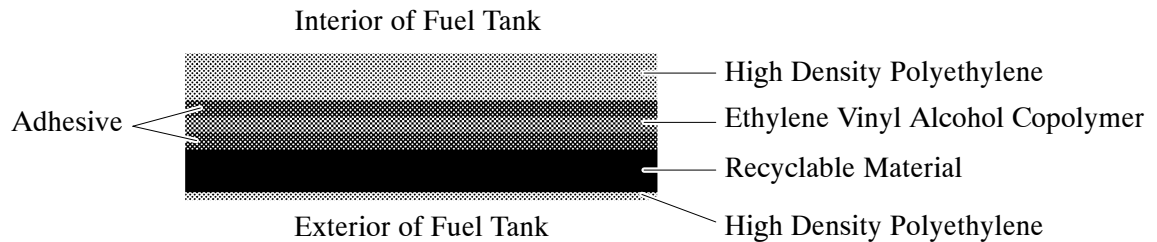


Cross Section of Fuel Tank

D13N27

Service Tip

Drain mark has been provided at the lowest position of the fuel tank. When dismantling (scraping) the vehicle, drain fuel by drilling holes at the drain mark.

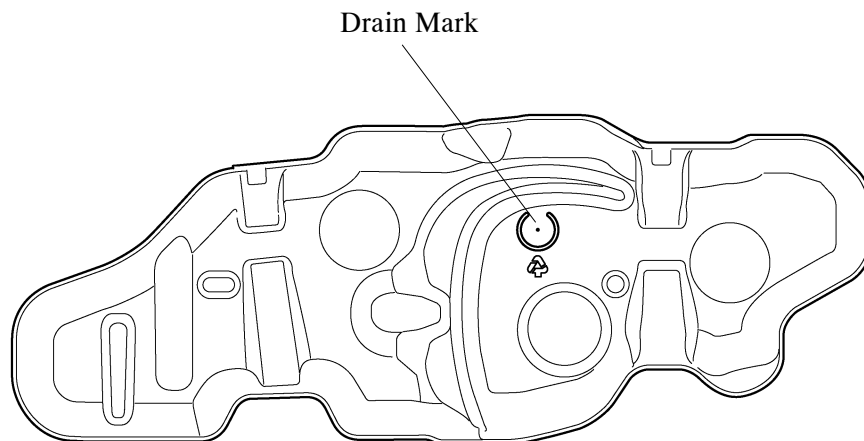

View from Bottom Side


080EG14TE

Construction of Dual Fuel Tank

1) General


- On the previous model, either the fuel tank or fuel sub tank, from which fuel is supplied, is selected by operating the sub fuel tank switch. On the new model however, a jet pump is provided in the fuel tank in order to automatically transfer fuel from the fuel sub tank to the fuel tank.
- For the fuel filler pipe, the structure that is united right under the fuel inlet and forked into two in the middle has been adopted in its configuration. Therefore, the driver can refuel without the need to distinguish the fuel tank from the fuel sub tank.

► System Diagram ◀

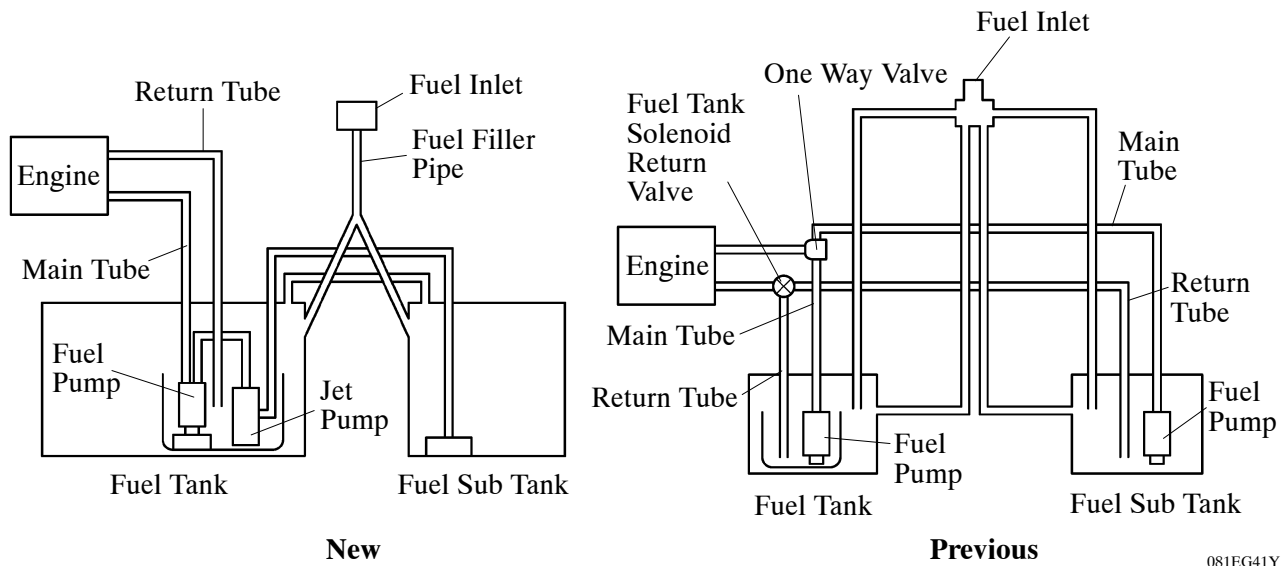


2) Fuel Inlet

- On the previous model, the fuel filler pipe has branched into two pipes directly below the fuel inlet. Therefore, the driver had to select whether to fill the main fuel tank or the sub fuel tank during refueling.
- On the new model, there is only one fuel filler pipe directly below the fuel inlet, which branches into two pipes at a midway point.

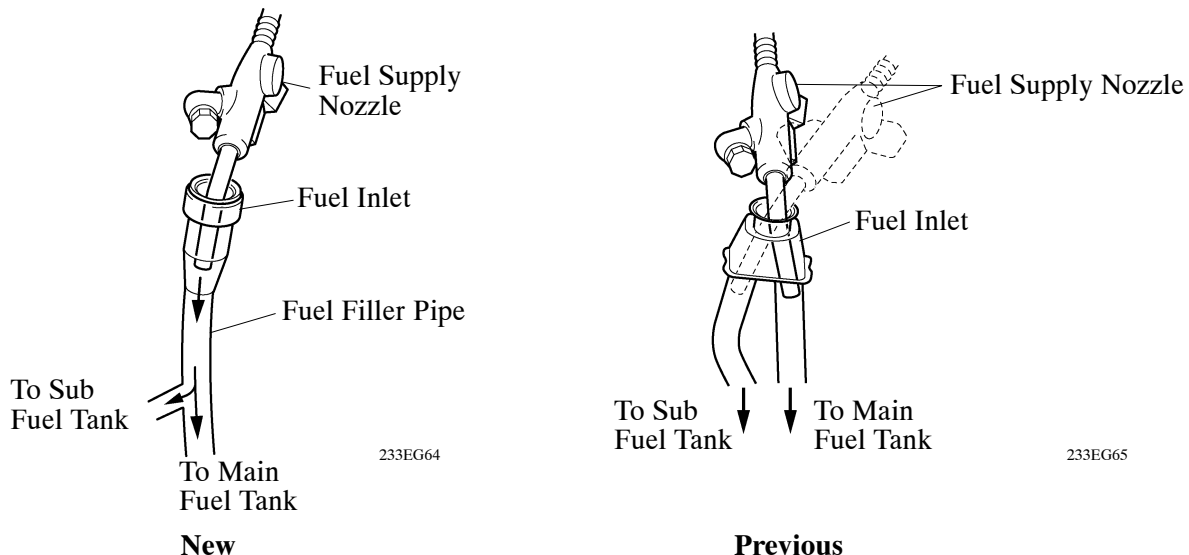


3) Operation

- The fuel from the fuel pump actuates the jet pump in the fuel tank, in order to draw fuel from the fuel sub tank to the fuel tank.

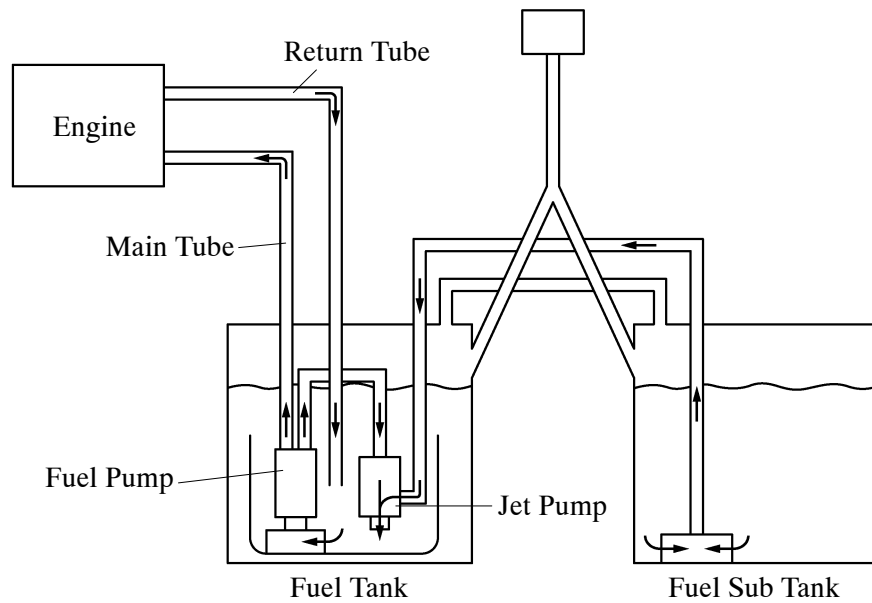

081EG42Y

- The fuel from the fuel pump passes through the orifice in the jet pump and returns to the fuel tank. Because the flow speed of the fuel from the fuel pump increases as it passes through the orifice, a vacuum is created near the exit of the orifice. This vacuum causes the fuel to be drawn from the fuel sub tank to the fuel tank.

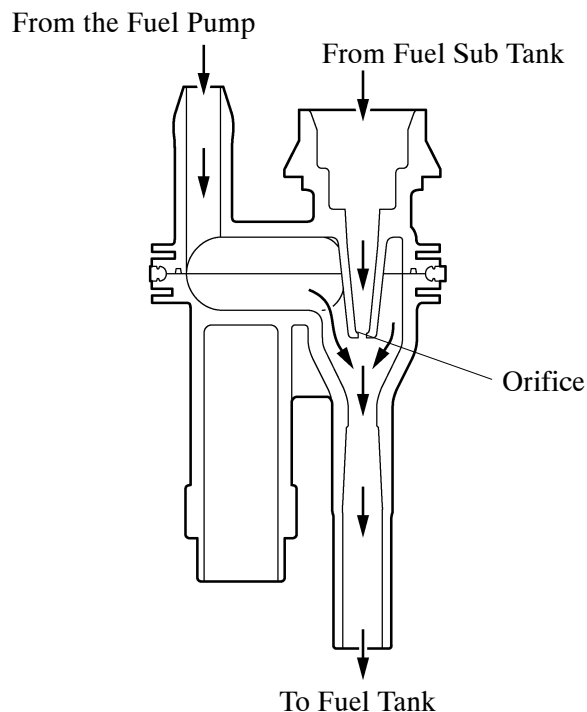

081EG14Y

Jet Pump