


ENGINE MOUNTING


1. General

- Two front engine mountings on each side of the engine and one rear engine mounting at the back of the transmission are provided.
- Electrical hydraulic type engine mountings are used for the front engine mounting. These mountings are operated by the vacuum which is generated by the vacuum pump that is used to control engine mountings. For details on engine mounting control, see page EG-207.

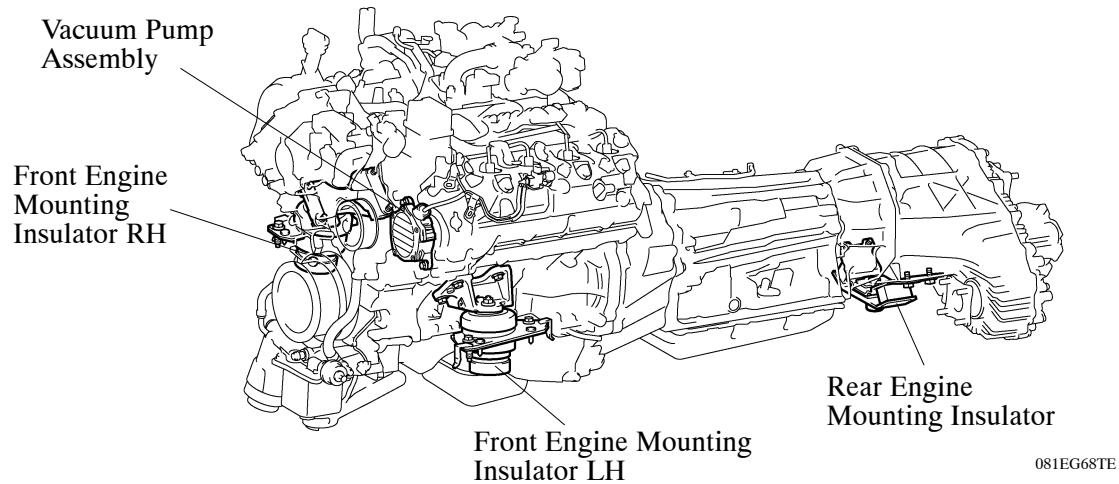

2. Vacuum Pump

A compact and lightweight vane type vacuum pump with 1 blade is used.

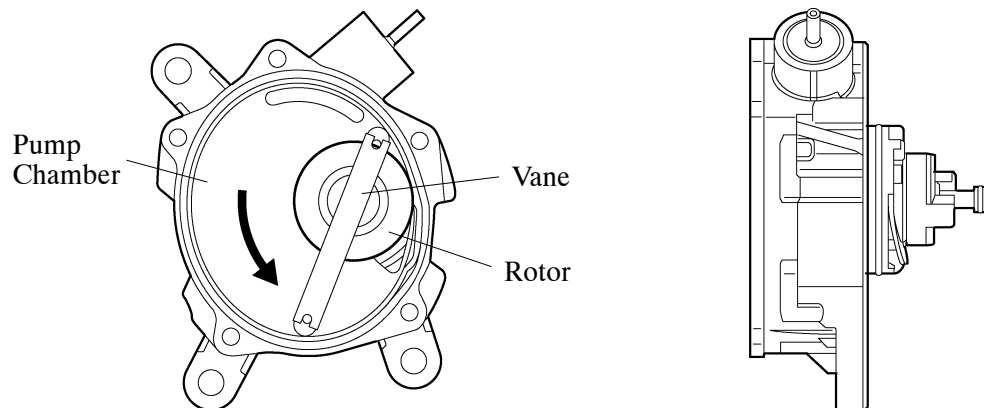

Cross Section

081EG69TE

Service Tip

The maintenance interval (replacement) of the vacuum pump is every 200000 km. For details, refer to the Land Cruiser (Station Wagon) Repair Manual (Pub. No. RM0810E).