


LBWB Visualizer Userguide - Points_float

Quickstart

This section gives a brief introduction to how to start using the LBWB visualization tool.

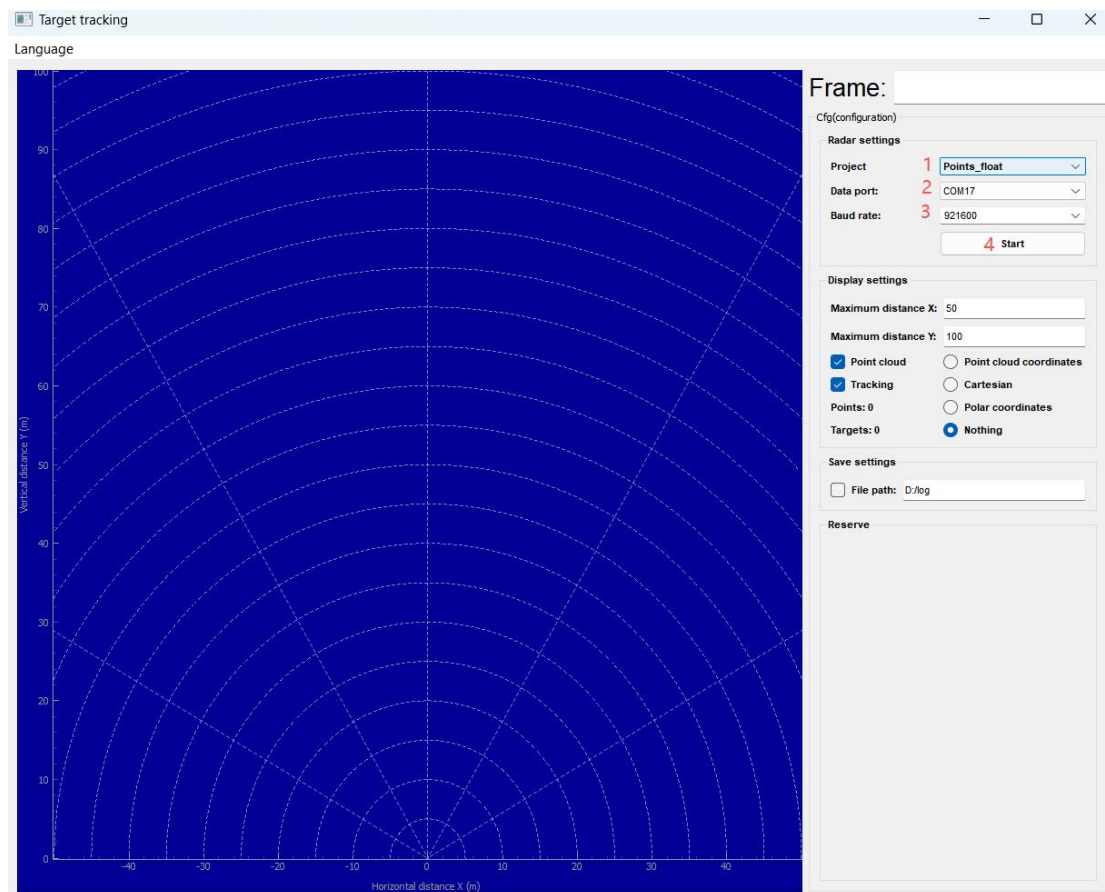

According to the serial number in the figure above corresponds to the following description:

1. Select the corresponding engineering project

Select the upper computer project according to the protocol, and the current protocol you should choose the Points_float project.

2. Select the device COM port

After accessing the device, try to automatically update the latest connected device port number (COM), or manually select the device COM port that you confirm.

3. Choose the Porter rate

Confirm the port rate option based on the current port rate output of the radar.

4. Start with the visual display

Click Start to start the visualization tool.

Display settings panel


This area is used to set the display range and display type of the visualization area.

Maximum distance X fill in 50 represents X current range is ± 50 m.

The maximum distance Y of 100 represents Y the current range is [0,100] unit: m.

The two check boxes in this area are used to select the display type. **Select Point cloud according to the current radar engineering firmware.** Point cloud coordinates are turned on by default (x, y, z, v, azimuth angle, pitch angle) (unit: m) (speed unit: m per second). Click Point cloud coordinates again to close the point cloud coordinate display after receiving a new frame of data, as shown in the figure below.

Tips : $\text{Pitch} = \text{np.arctan2}(z, \text{math.sqrt}(x * x + y * y)) * (180.0 / \text{np.pi})$

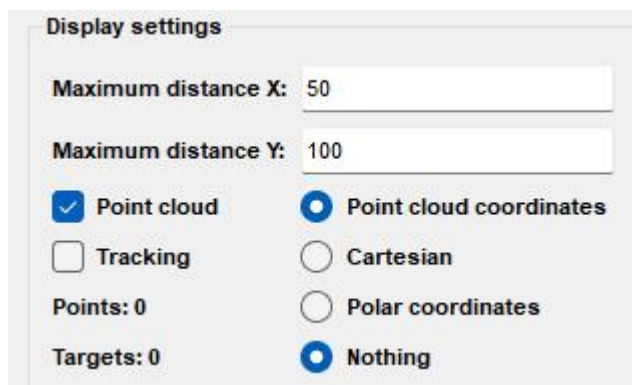

Display settings

Maximum distance X: 50


Maximum distance Y: 100

☒ Point cloud ☒ Point cloud coordinates

☐ Tracking ☐ Cartesian

Points: 0 ☐ Polar coordinates

Targets: 0 ☒ Nothing

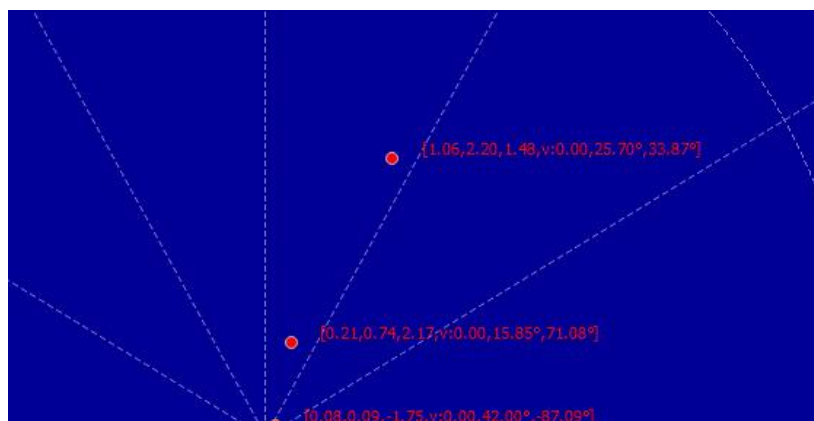


Save settings panel

This area is used to record the raw binary data. To save the data, click the check box in the area before starting.




Language Menu

You can modify the host language and select Chinese / English.

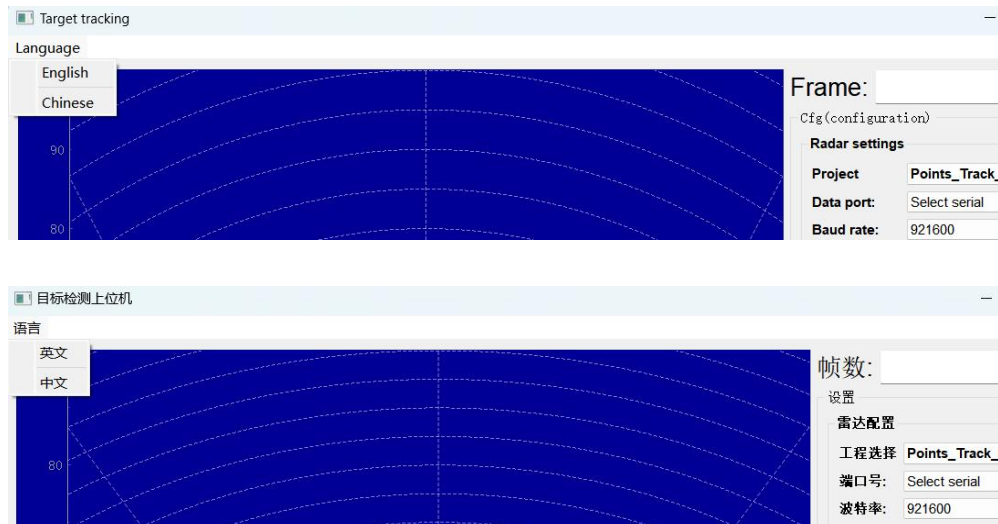

Error reminder


- The current serial port is being occupied by another application, or the serial port does not exist.

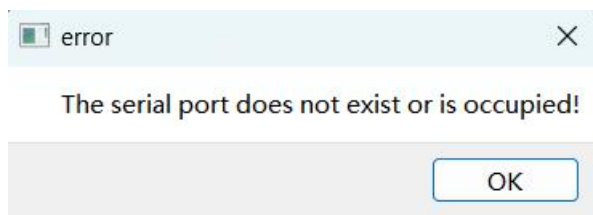

- Frame number is no longer changed, check the serial connection.



- The serial port can be opened normally, but the Frame does not change, and there is no point display, maybe the engineering port rate does not match the upper machine wave rate or the radar has no output.

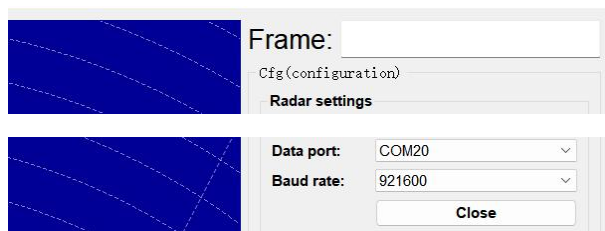

- If the data protocol error, parsing error and. are prompted, the project representing the radar equipment does not match the Project selected in the current upper computer.