



AlphaServer DS25

Field Upgrade to DS25 Model B

Order Number: EK-H7911-UP. A01

This manual is for persons upgrading an *AlphaServer DS25* system to DS25 Model B.

March 2003

© 2003 Hewlett-Packard Company.

HP shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided “as is” without warranty of any kind and is subject to change without notice. The warranties for HP products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

FCC Notice

This equipment generates, uses, and may emit radio frequency energy. The equipment has been type tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC rules, which are designed to provide reasonable protection against such radio frequency interference.

Operation of this equipment in a residential area may cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Any modifications to this device—unless expressly approved by the manufacturer—can void the user’s authority to operate this equipment under part 15 of the FCC rules.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Taiwanese Notice

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Japanese Notice

この装置は、情報処理等電波障害自主規制協議会（VCCI）基準に基づくクラス A 情報装置です。この装置を家庭環境で使用すると電波障害を引き起こすことがあります。この場合には、使用者が適切な対策を講じるよう要求されることがあります。

Canadian Notice

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis Canadien

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union Notice

Products with the CE Marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms (in brackets are the equivalent international standards):

EN55022 (CISPR 22) - Electromagnetic Interference

EN50082-1 (IEC801-2, IEC801-3, IEC801-4) - Electromagnetic Immunity

EN60950 (IEC950) - Product Safety

Warning!

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Achtung!

Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention!

Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

Contents

Preface vii

Chapter 1 Upgrade

1.1 Overview 1-1

1.2 Disassembly Procedure 1-2

1.3 Installation Procedure..... 1-6

Preface

Intended Audience

This manual is for persons upgrading an *AlphaServer* DS25 to DS25 Model B.

Document Structure

This manual has one chapter.

- **Chapter 1, Upgrade**, Provides an overview of the upgrade procedure and step by step instructions to convert and AlphaServer DS25 system to DS25 Model B.

Documentation Titles

Table 1 HP AlphaServer DS25 Documentation

Title	Order Number
User Documentation Kit	QA-6WEAA-G8
Owner's Guide	EK-DS250-UG
Documentation CD (6 languages)	AG- RT2DA -TS
Maintenance Kit	QA-6WEAB-G8
Service Guide	EK-DS250-SV
Loose Piece Items	
Basic Installation Card	EK-DS250-PD
Rackmount Installation Guide	EK-DS250-RG
Rackmount Installation Template	EK-DS250-TP
AlphaServer DS25 in a 9000 Series Cabinet Installation Information	EK-BA57R-IN
AlphaServer DS25 Field Upgrade to DS25 Model B (this document)	EK-H7911-UP

Information on the Internet

Visit the *AlphaServer* Web site at www.compaq.com/alphaserver/ for service tools and more information about the AlphaServer DS25 system.

Chapter 1

Upgrade

1.1 Overview

This procedure is to be used to install the 500-watt power supply upgrade to the AlphaServer DS25 system. The old 375-watt power supplies are NOT mechanically interchangeable with the new 500-watt units so therefore, they will not fit into the system after this upgrade is complete. The upgrade kit part number is 3X-H7911-UP and contains the following items:

- Three 30-10047-01 500-watt power supplies
- One 70-41154-01 500-watt PS backplane assembly
- Four 74-62829-01 tubular spacers

This procedure assumes that the system has been powered down and removed from the rack or pedestal mounting, and that the system enclosure is laying on its right side.


HINT. A 10-inch long #1 Phillips screwdriver is the recommended tool for removing and installing the power supply backplanes. It is quite helpful if the tip of the screwdriver is magnetized!

First the old power supplies and power supply backplane are removed and then the new power supply backplane and 3, 500 watt power supplies are installed.

1.2 Disassembly Procedure


Follow these steps to disassemble the AlphaServer DS25 in preparation for installing the upgrade. If needed, detailed information on the first four steps may be found in the AlphaServer DS25 Owner's Guide, EK-DS250-UG, or the AlphaServer DS25 Service Guide, EK-DS250-SV.

1. Remove the top cover ❶.
2. Remove the hard disks in the storage cage.
3. Loosen the thumbscrews on the front access door in front of the power supplies and remove the door.
4. Remove the 375-watt power supplies and PS filler, if present.

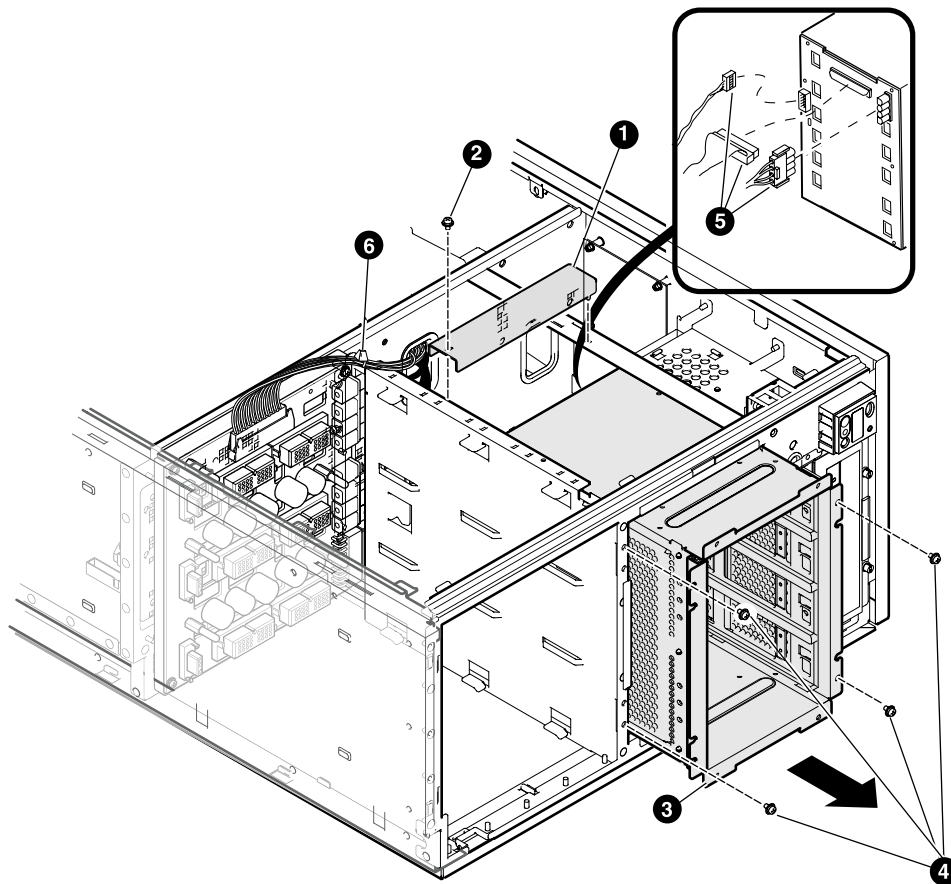

MR0490

5. Remove the brace **1** on top of the storage cage by removing one M3x6mm screw **2**.
6. Remove the storage cage **3** by removing the four M3x10mm screws **4** in the front and disconnect the three cables **5** that are plugged into the rear of the storage cage.
7. Cut the tie wrap **6** on the cable harness, just to the top right of the power supply backplane.

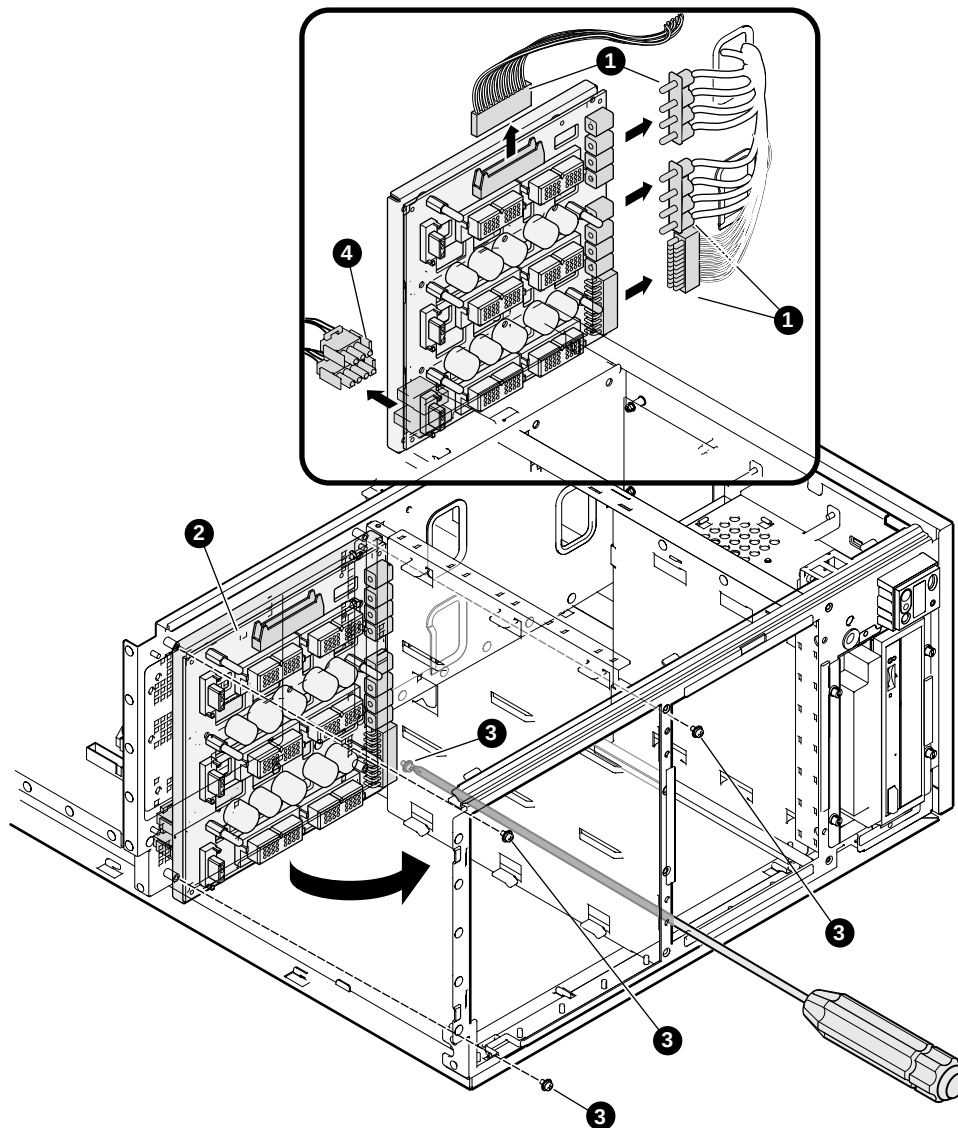


MR0491

8. Disconnect the four cables **1** that are plugged into the power supply backplane **2**.
9. Remove the power supply backplane by removing the four M3x12mm screws **3** in the four corners of the power supply backplane.

10. Swing out the left side of the backplane to allow hand access to the bottom left corner of the power supply backplane.
11. Disconnect the 3-pin and 4-pin Mate-N-Lok connectors ④ on the backside of the power supply backplane.
12. Remove the old power supply backplane assembly.


1.3 Installation Procedure

Follow these steps to install and re-assemble the AlphaServer DS25 Model B system.

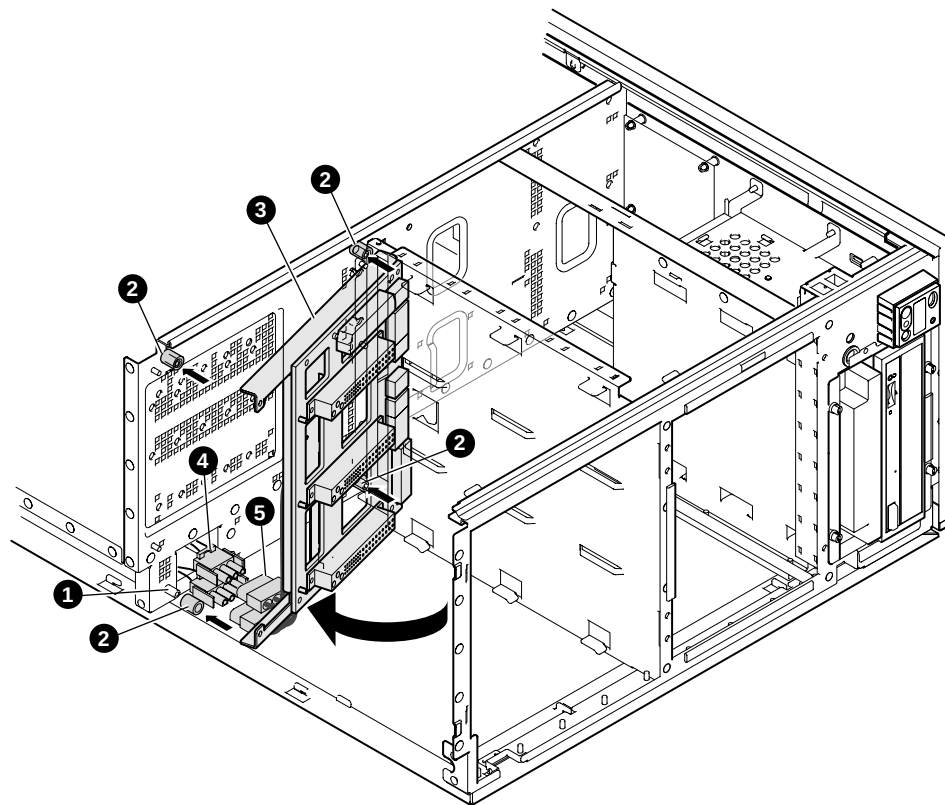

MR0492

1. Find the four threaded standoffs **1** that were used to mount the old power supply backplane. Slip four tubular spacers **2** over these four standoffs.
2. Position the new 500-watt power supply backplane **3** over and on top of the spacers on the right side while holding the left side out away from the center wall of the enclosure. Connect the 3-pin and 4-pin Mate-N-Lok connectors **4** to the mating connectors **5** that are part of the new backplane assembly.

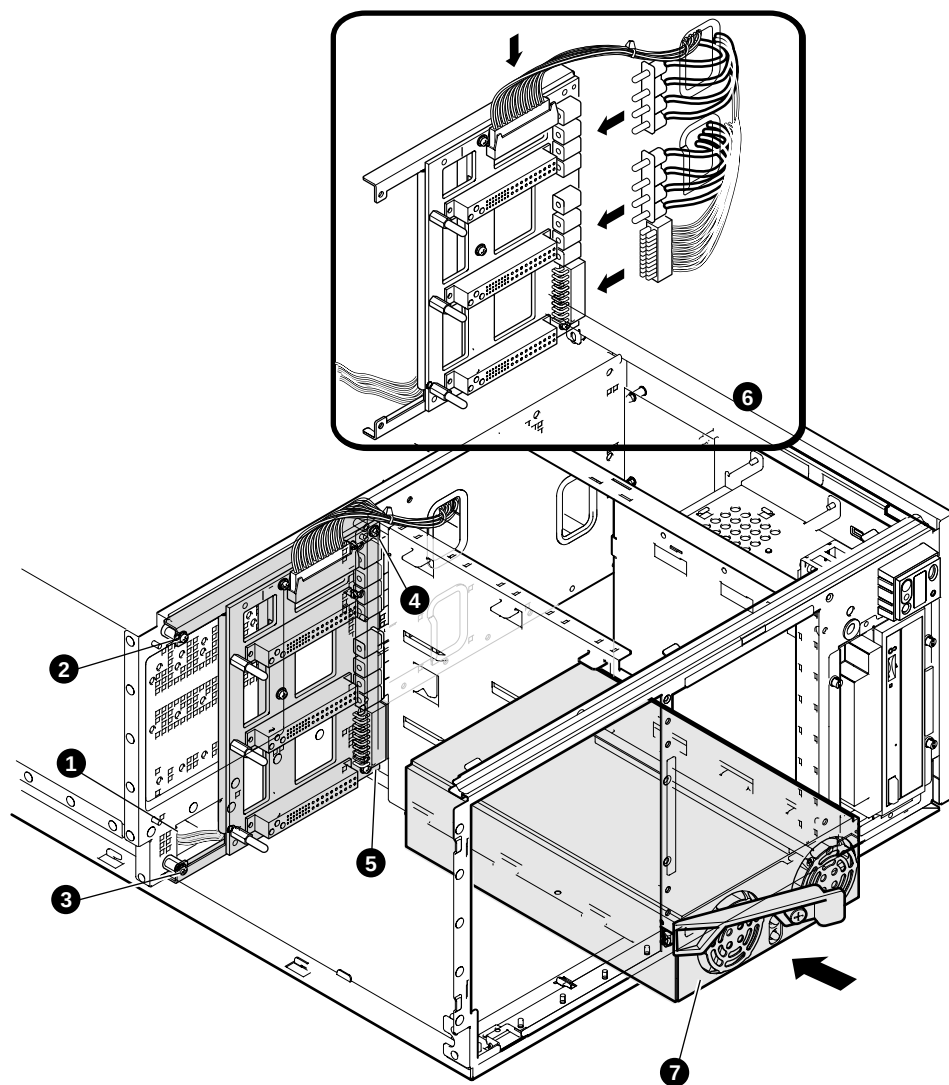

MR0493

3. Push these two connectors and harnesses back into the opening at the bottom left corner of the center wall **1** where the original AC harnesses emerged.
4. Making sure that wiring is not pinched between the backplane and the center wall, push the left side of the new backplane into place.

5. Holding the backplane in place, start one of the M3x12mm screws ❷ in the top left spacer/standoff, but do not tighten it yet.
6. Start the bottom left M3x12mm screw ❸ into the spacer/standoff.
7. Moving to the top right, start an M3x12mm screw here ❹. Again, do not tighten it yet.
8. Start an M3x12mm screw ❺ at the bottom right of the backplane.
9. With all four screws now in position, push against the backplane to seat it properly against the center wall and tighten all 4 screws holding the backplane in place.
10. Install the four cables ❻ that plug into the power supply backplane.
11. Install the three 500-watt power supplies ❼.
12. Reinstall the storage cage into the enclosure opening loosely. Reattach the three cables to the rear of the storage cage.
13. Slide the storage cage into place and secure it with the four M3X10mm screws.
14. Reinstall the storage cage brace and M3x6mm screw on top of the storage cage.
15. Reinstall the access door in front of the power supplies. Tighten the thumbscrews finger tight.
16. Reinstall the hard disks into the storage cage.
17. Replace the top cover.
18. If possible, perform simple power up checks before mounting the system back into the rack or pedestal.