



EK-EGRIS-UP. A01

ALPHASERVER ES47/ES80/GS1280
I/O MODULE
INSTALLATION CARD

Use this card as a quick reference to install an I/O module (also called an I/O riser) in an AlphaServer ES47, ES80, or GS1280 system. Information on I/O riser removal and replacement can be found in the *AlphaServer ES47/ES80/GS1280 Service Information*.

Overview

- Open the computer system cabinet.
- Install the I/O cable.
- Install the I/O module.
- Verify the installation.

Before you Begin

Keep these points in mind when installing an I/O module:



WARNING: To prevent injury, access is limited to persons who have appropriate technical training and experience. Such persons are expected to understand the hazards of working within this equipment and take measures to minimize danger to themselves or others.



WARNING: CPU modules, memory modules, and I/O modules have parts that operate at high temperatures. Wait 2 minutes after power is removed before touching any module.



CAUTION: Wear an antistatic wrist strap when working on this system.




CAUTION: To reduce the risk of electrical shock or damage to the equipment: Do not disable the power cord grounding plug. The grounding plug is an important safety feature. Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.

Open the Cabinet


1. Back up all important data, systematically shut down your applications, and perform an orderly shut down of the operating system.
2. Once the operating system is shut down, you may either:
 - a. Power off the system using the switch on the cabinet door, or
 - b. Execute the **p off** MBM console command. For a system with partitioned CPUs, you can power down the CPU partition associated with the I/O module you are going to install by typing in the following MBM console command:
p off -hp <partition_name>
or
 - c. Execute the **power off** command using the OCP pushbuttons on the drawer that contains the target CPU.
3. Wait for the orderly shutdown to complete.
4. Unlock and open the front and rear doors.

Install the I/O Cable

1. Identify the physical location of the I/O drawer into which the I/O module is to be installed.

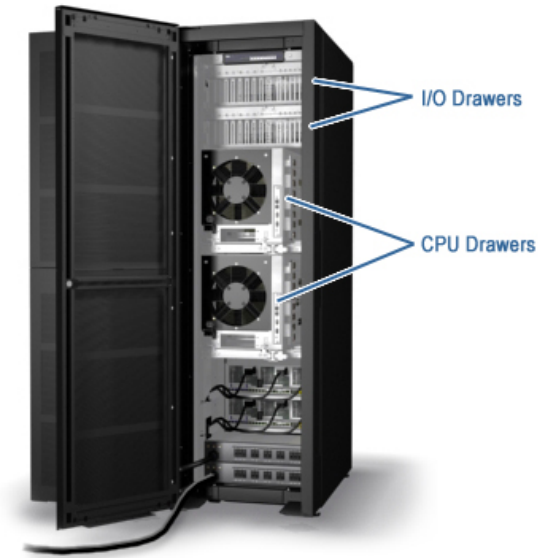

2. Identify the physical location of the CPU drawer associated with the I/O module to be installed.
3. From the front of the cabinet, pull the CPU drawer out as far as necessary to access its I/O connectors.
4. Connect the I/O cable to the appropriate connector on the CPU drawer as shown in the following illustration and tables:

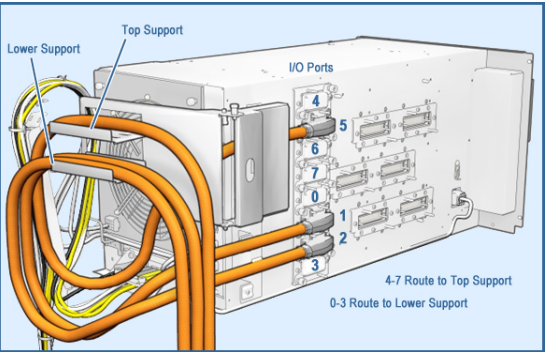

GS1280 8P System

		IO7s							
		1	2	3	4	5	6	7	8
EVs	8	0	5	1	4	2	3	6	7
	6	0	5	1	4	2	3		
	4	0	5	1	4				
	2	0	1						

I/O Slot Assignment

GS1280 16P System

		IO7s													
		1	2	3	4	5	6	7	8	9	10	11	12	13	14
EVs	16	0,0	1,0	0,5	1,5	0,1	1,1	0,4	1,4	0,2	1,2	0,3	1,3	0,6	1,6
	12	0,0	1,0	0,5	1,5	0,1	1,1	0,4	1,4	0,2	1,2	0,3	1,3		
	8	0,0	1,0	0,5	1,5	0,1	1,1	0,4	1,4						
	4	0,0	1,0	0,1	1,1										

I/O Slot Assignments (Drawer, Slot)

GS1280 32P System

		IO7s													
		1	2	3	4	5	6	7	8	9	10	11	12	13	14
EVs	32	0,0	1,0	2,0	3,0	0,5	1,5	2,5	3,5	0,1	1,1	2,1	3,1	0,4	1,4
	28	0,0	1,0	2,0	3,0	0,5	1,5	2,5	3,5	0,1	1,1	2,1	3,1	0,4	1,4
	24	0,0	1,0	2,0	3,0	0,5	1,5	2,5	3,5	0,1	1,1	2,1	3,1	0,4	1,4
	20	0,0	1,0	2,0	3,0	0,5	1,5	2,5	3,5	0,1	1,1	2,1	3,1	0,4	1,4

I/O Slot Assignments (Drawer, Slot)

GS1280 64P System

		IO7s													
		1	2	3	4	5	6	7	8	9	10	11	12	13	14
EVs	32	0,0	1,0	0,3	1,3	0,1	1,1	0,2	1,2	0,5	1,5	0,3	1,3	0,1	1,1
	16	0,0	1,0	0,1	1,1	0,0	1,1	0,1	1,1	0,5	1,5	0,1	1,1	0,4	1,4
	8	0,0	1,0	0,1	1,1	0,0	1,1	0,1	1,1						
	6	0,0	1,0	0,1	1,1	0,1	1,1								

I/O Slot Assignments (Cabinet, Drawer, Slot)


		17	18	19	20	21	22	23	24	25	26	27	28	29	30
EVs	32	0,0	1,0	0,3	1,3	0,1	1,1	0,2	1,2	0,4	1,4	0,3	1,3	0,1	1,1
	16														
	8														

		33	34	35	36	37	38	39	40	41	42	43	44	45	46
EVs	64	0,0	1,0	2,1	1,2	0,3	1,3	0,1	1,1	0,2	1,2	0,3	1,3	0,2	1,2
	56	0,0	1,0	2,1	1,2	0,3	1,3	0,1	1,1	0,2	1,2	0,3	1,3	0,2	1,2
	48	0,0	1,0	2,1	1,2	0,3	1,3	0,1	1,1	0,2	1,2	0,3	1,3	0,2	1,2

		49	50	51	52	53	54	55	56	57	58	59	60	61	62
EVs	64	0,0	1,0	6,1	1,6	0,7	1,7	0,1	1,1	0,2	1,2	0,3	1,3	0,2	1,2
	56	0,0	1,0	6,1	1,6	0,7	1,7	0,1	1,1						
	48														


I/O Slot Assignments (Cabinet, Drawer, Slot)

5. Route the cable from the CPU drawer to the I/O drawer, making sure to drape the cables properly using the cable guides and supports.

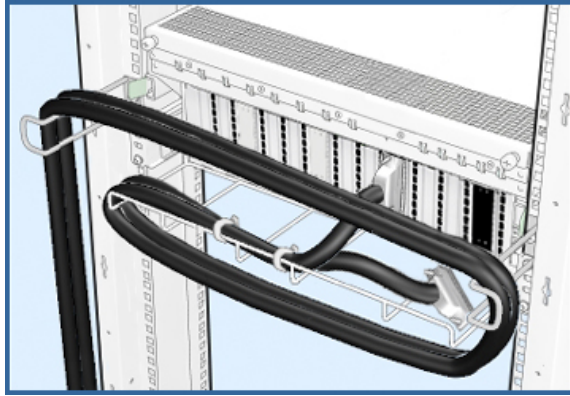


Install the I/O Module

1. From the rear of the cabinet, release the rail latches and pull the target I/O drawer out as far as necessary to remove its cover.

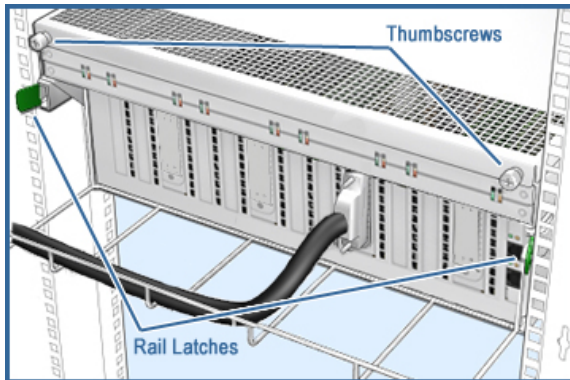


2. Loosen the cover thumbscrews and remove the entire drawer cover.

3. Loosen the thumbscrew holding the I/O filler panel in the drawer and remove the I/O filler panel from the drawer.

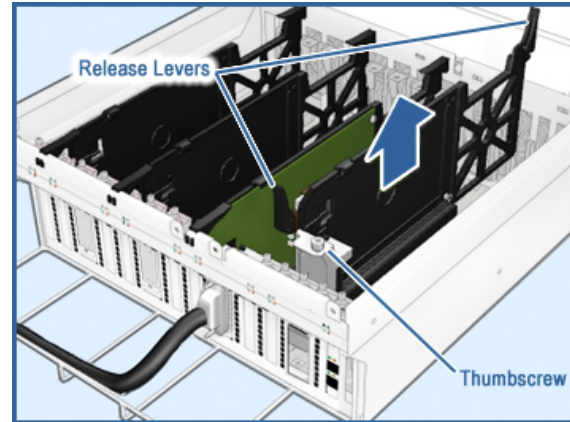

4. Slide in the new I/O riser module. **Be sure the module is properly seated in the backplane.**

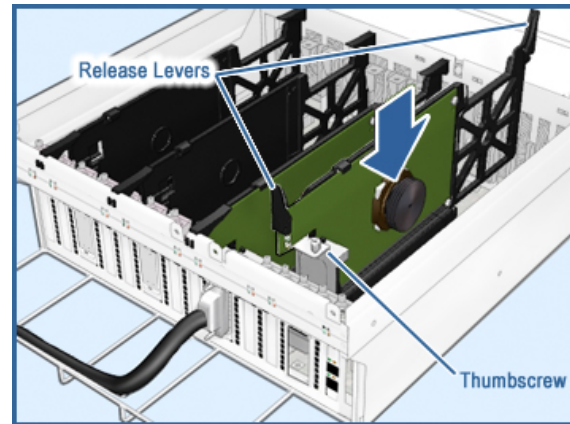

5. **Close both release levers at the same time.**



CAUTION: Damage may result if the levers are closed when the module is not properly seated.

6. Loosely tighten the module thumbscrew.
7. Connect the I/O cable to the module.
8. Fully tighten the module thumbscrew.

9. Replace the I/O drawer cover and tighten the cover thumbscrews.
10. Push the I/O drawer back into the cabinet, making sure the rail latches engage the chassis frame.
11. Close the cabinet rear door.

Verify the Installation

1. Power up the system. Server management runs its power-up self-tests and displays information indicating that the I/O module has been added. Then, the MBM management console command prompt appears.
2. To verify that the I/O module appears in the System Building Block Table, type in the following command:

show sys

3. If you have a system with partitioned CPUs, power up the partition associated with the I/O module you just installed by typing in the following command from the MBM console:
- p on -hp <partition_name>**
4. If you are using a serial connection to perform management, you can connect to the SRM console by typing in the following command:
- connect -hp <partition_name>**
5. At the SRM command prompt, you can type in the **show config** command and observe the resulting display to confirm that server management has properly recognized the addition of your new I/O module to the system.

Part numbers for the add-in I/O module and its associated I/O cables can be found in the appropriate Quick Specs, found through the use of the following URL:
<http://h18002.www1.hp.com/alphaserver/technology/index.html>