wisewell



Nano

User Guide

EXTERNAL WATER TANK

Your Nano draws water from a two-part external tank.
Follow these steps to keep the water fresh and the purifier working correctly.

1. Tank structure

The external tank has two sections:


1. **Water Inlet (large)** — fill this section with fresh drinking water. The purifier draws from it.
2. **Water Outlet (small)** — **keep this section empty.** It collects the wastewater the purifier returns.

2. First use

Fill **only the Inlet** to the MAX line with room-temperature drinking water. Leave the Outlet empty, then fit the tank back into place. Your Nano automatically draws water from the Inlet, filters it, and returns wastewater to the Outlet.

3. Refilling

By the time you need to refill, the Outlet will hold wastewater and the Inlet will be low. Empty both sections — discard the Outlet water, it is not for drinking. Refill **only the Inlet** with fresh drinking water up to the MAX line, leave the Outlet empty, and reattach the tank.

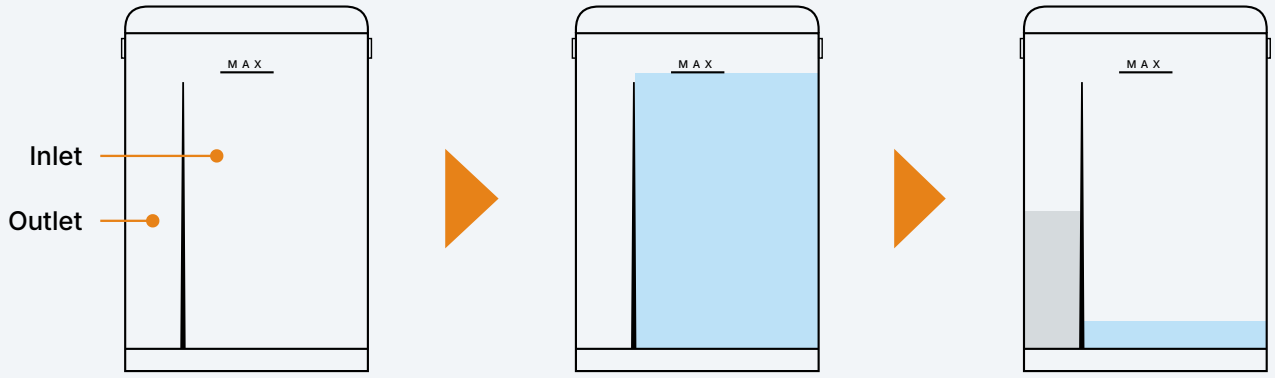

Empty tank

Fill the Inlet only
(Outlet stays empty)

Time to refill
(wastewater in Outlet)


Fill the Inlet only — never the Outlet
Fresh water in the Outlet section impedes the filtration process. The Outlet must always start empty; it only holds the wastewater the purifier returns.

Always refill the tank when the purifier stops drawing it
If your device stops drawing water, the Inlet level has dropped below the minimum. Fully empty both sections before you refill the Inlet with fresh drinking water.

Never top up without emptying first — starting fresh keeps water quality and hygiene at their best.

CONTROLS

Get acquainted with the touch panel.

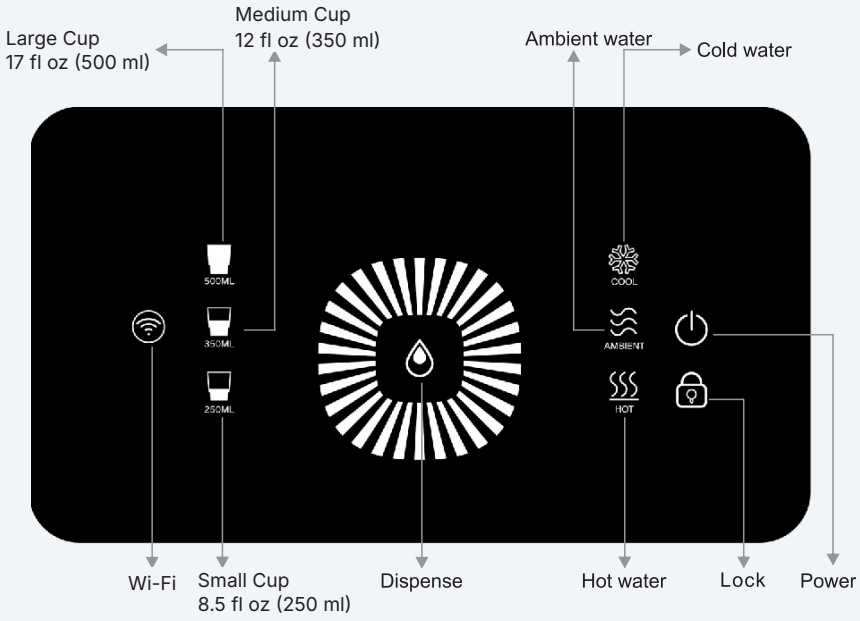

Power	WiFi	Dispense	Quality
250ML 8.5 fl oz (250 ml)	350ML 12 fl oz (350 ml)	500ML 17 fl oz (500 ml)	Child Lock
COOL Cool (Cold)	AMBIENT Ambient	HOT Hot	

Pour a glass

1

250ML 350ML 500ML

Select cup size — 8.5, 12, or 17 fl oz.

2

COOL AMBIENT HOT

Select temperature — Cold, Ambient, or Hot.

3

Press Dispense. Your water is ready.

HOT WATER

After dispensing hot water, immediately dispense cold water to cool the nozzle.

SAFETY & CARE

1. Do not move the unit while it is running. Before moving the unit, ensure the water tank is empty. More details are provided in the user manual.
2. Do not rinse or spray the unit with water.
3. Plug the unit directly into its own grounded (3-prong) wall outlet on a 20A circuit. Do not use an extension cord or power adapter.
4. Place the unit and the tray on a stable, flat surface.
5. Hot water can splash and cause burns. When dispensing hot water, leave the cup on the tray under the nozzle — do not lift it up to the nozzle — and keep hands away from the stream.
6. The nozzle stays hot after dispensing hot water. Do not touch it. Dispense a little cold water afterward to cool it down.
7. For safety, ensure any children or anyone with disabilities is supervised while operating the unit.
8. If the power cord is damaged, stop using the unit and contact Wisewell support. Only the manufacturer or a qualified technician should replace it.
9. Only use the unit when the room and water temperature are between 41°F and 100°F (5°C–38°C).
10. Use only drinking-quality tap water. Poor-quality water will shorten the life of the filter.
11. Fill only the **Inlet** section of the tank, up to the MAX line. Never fill the Outlet, and do not overfill.
12. Keep at least 8 inches (20 cm) of open space around the fan. Blocking the fan can cause the unit to overheat.
13. Every unit is water-tested at the factory, so you may find a few drops of water inside a new unit. This is normal.

CONTACT US

For help with your device, reach our customer support team by scanning the QR code.

Or call +1 (646) 413-5416

Or email us at support@wisewell.com



wisewell.com

support@wisewell.com