Update Firmware


Purpose: Update firmware version if necessary


Note: Please not often change the firmware

Run the software "Update firmware".

1. Connect the terminal with the computer by RS232 port through DB9 cable.

2. Click "Update firmware" to run it.

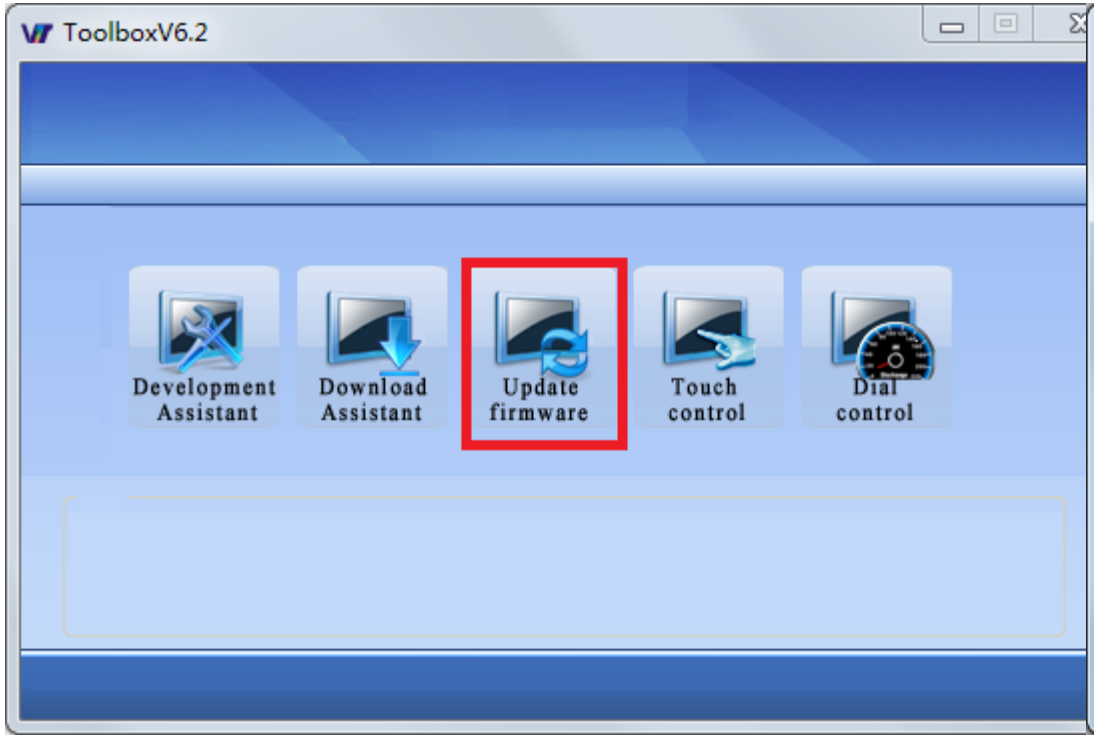

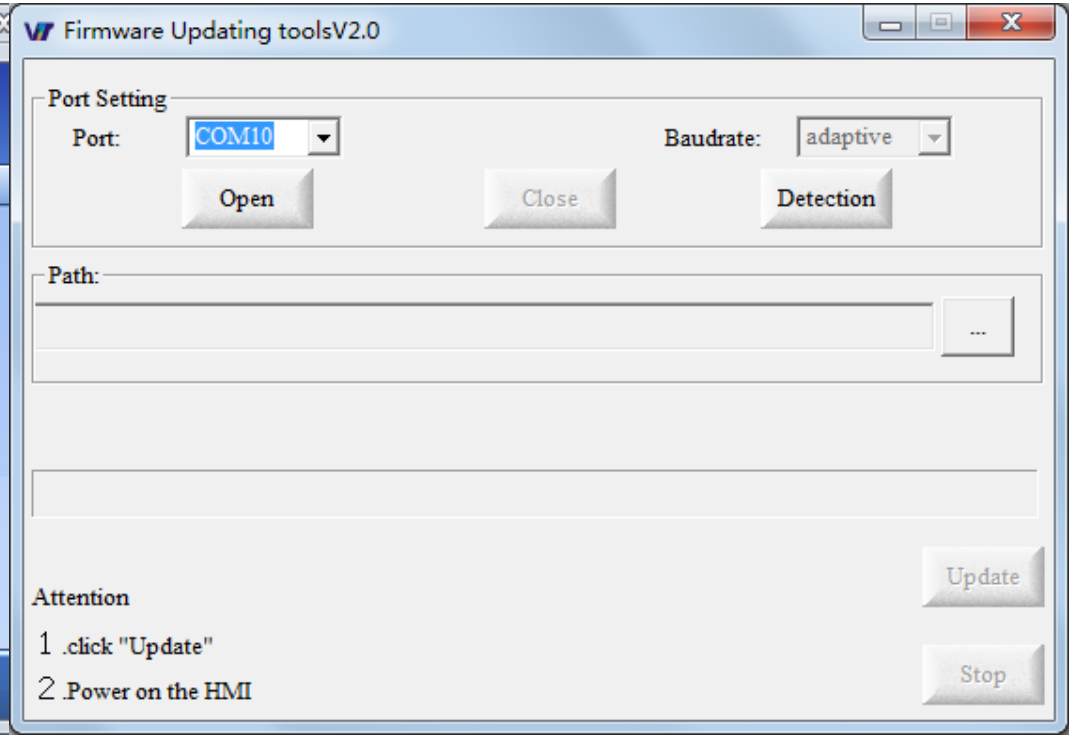

3. Update firmware (see picture-01 as below)

(1) Choose the right COM port and click "Open" button.

Note: Don't plug the power supply.


(2) Select firmware file .

Note: Adopt the "SINGLE" firmware file as resolutions below 640*480, and Adopt the "DOUBLE" firmware file as resolutions above or equal to 640*480


(3) Click "Update" button

(4) Plug the power supply

4. Finished firmware update (See Picture-02 below)

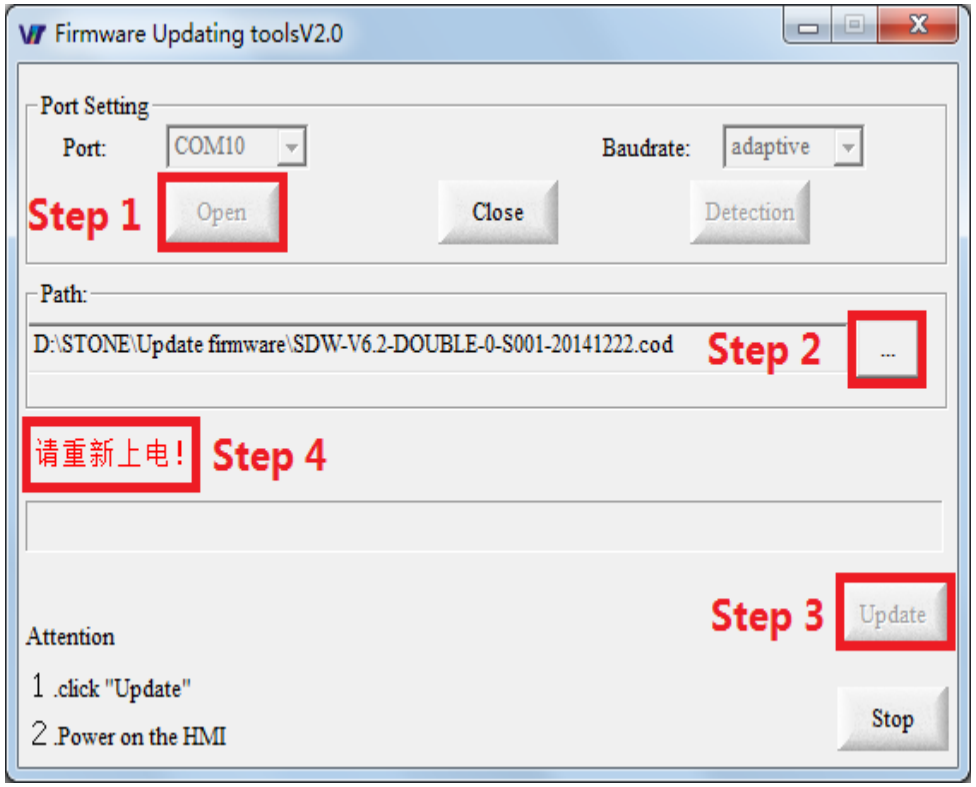

Picture-01

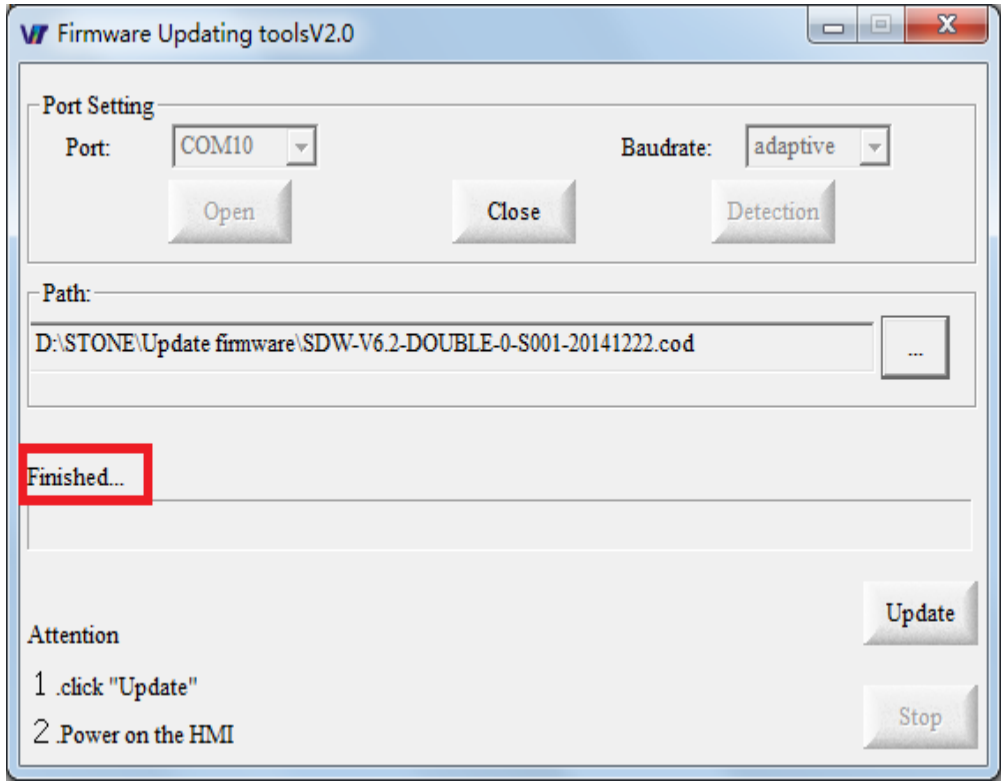

Picture-02