



Australian
Made



User
Friendly



Low Cost
Ownership




Vandal
Resistant



Weather
Resistant

MS-Teams Setup

VoIP phone setup guide

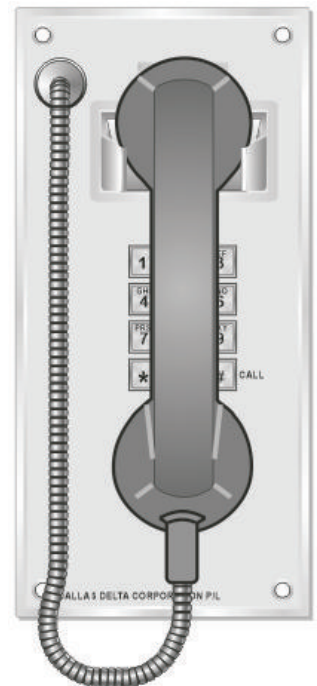

Teams Set up for Dallas Delta VoIP phones

Your teams system must be enabled with a SIP Gateway.

See Microsoft reference for how to configure your Teams SIP Gateway and your SIP phones.

<https://learn.microsoft.com/en-us/microsoftteams/sip-gateway-configure>

By using Teams admin center

To enable SIP Gateway in the Teams admin center, follow these steps:

1. Go to the [Teams admin center](#)
2. At the left, under **Voice**, select **Calling policies**.
3. At the right under **Manage policies**, select the appropriate calling policy assigned to users or, if necessary, create a new calling policy and assign it to the required users.
4. Select **Manage policies**, select a policy, and then select **Edit**.
5. Turn on the setting for **SIP devices can be used for calls**, and then select **Save**.

Set the SIP Gateway provisioning server URL

You can set the SIP Gateway provisioning server's URL in your Dynamic Host Configuration Protocol (DHCP) server. Users who work remotely must configure it manually.

Using DHCP

For each SIP device, the following SIP Gateway provisioning server URLs:

- **PAC:** <http://apac.ipp.sdg.teams.microsoft.com>

Add SIP devices to your Teams organization by configuring the above SIP Gateway provisioning server URL in your DHCP server.

Users who work remotely must manually configure the provisioning server URL into their SIP device by using the following steps:

1. Open **Settings** in the device and get the device's IP address.
2. Open a browser window, enter the device's IP address, log in (if necessary) and configure the provisioning server's URL in the device's web utility.
3. Under **Settings or Advanced settings** on the web utility, enter the provisioning server URL shown above.

Example Configuration

A connection made using the “Ringcentral” (example shown) server as a SBC/ Gateway, to connect a 3rd party SIP device to the “MS-Teams server”. Please consult with other cloud base SIP providers if a connect can be made to the Teams sever via there system.

IE: <https://expertittelco.com.au>
<https://www.aussiebroadband.com.au>

DDC VoIP-S11 setup

SIP Proxy Settings

Network

Voice

SIP Proxy

Call Functions

System

Configuration

Codes

Phone Numbers

Contact Us

Upgrade F/W

SIP Server 1:	sip60.ringcentral.com	(IP or URI)
SIP Domain 1:	sip.ringcentral.com:5060	
SIP Server 2:		
SIP Domain 2:		
SIP Server Port:	5090	(Typically 5060)
SIP Registration:	☒	
Use the SIP Server As Outbound Proxy:	☒	
Get SIP details from the DNS SRV:	☐	
Support PRACK:	☐	(100rel, RFC3262 protocol)
SIP User ID_Name:	618638	
SIP Authentication ID:	3848	
SIP Authentication PIN:		(Digest Key)
Displayed Name:	DDC FrontGate	(optional, e.g., Gate #1)
Local SIP Port:	5060	(Typically 5060)
Local RTP Port:	6000 min 9000 max (65534)	
Register Expiration:	120	(In seconds, Typically 3600s)
Keep Alive Interval:	20	(In seconds, Typically 20s)
Registration Attempts:	5	(before phone restarts, Typically 5)

Dallas Delta Corp

102 Albert St, E.Brunswick 3057

613 9387 7388

www.dallasdelta.com

DDC VoIP
TELEPHONE

Network

Voice

SIP Proxy

Call Functions

System

Configuration

KeyLess Codes

Contact Us

SIP Proxy Settings

SIP Registration:

☐ No

☒ Yes

SIP Server 1:

sip60.ringcentral.com

(IP or URI)

SIP Domain 1:

sip.ringcentral.com:5060

SIP Server 2:

SIP Domain 2:

SIP Server Port:

5090

(Default 5060)

SIP Server As Outbound Proxy:

☐ No

☒ Yes

Use DNS SRV:

☒ No

☐ Yes

SIP User ID_Name:

618638

SIP Authentication ID:

3848

SIP Authentication PIN:

●●●●●●●●

Displayed Name:

DDC FrontGate

(Optional, e.g., Gate #1)

Local SIP Port:

5060

(Default 5060)

Local RTP Port (min):

6000

(Between 6000 and 65534, default 6000)

Register Expiration:

60

(In seconds, default 60s)

Keep Alive Interval:

20

(In seconds, default 20s)

Support PRACK(100rel, RFC3262):

☒ No

☐ Yes

Proxy Require:

NAT Traversal:

Disabled

▼