



Australian
Made



User
Friendly



Low Cost
Ownership



Vandal
Resistant



Weather
Resistant

VoIPCam^{Mk2}

DoorStation User's Manual



DallasDelta

Corporation Pty. Ltd.

Custom Communication Solutions

Dallas Delta Corporation Pty. Ltd. is an established and respected provider of specialist communications equipment.

We design and manufacture our products in Melbourne and have many thousands of satisfied customers within Australia and internationally.

Our aim is to supply customers with a quality product and great service for the life of their product. We believe in a good customer relationship which gives our clients the support they need in order to establish and build their business.



www.dallasdelta.com



sales@dallasdelta.com



**sales | services | spares
+61 3 9387 7388**



dallasdelta



**head office | repairs
Dallas Delta Corporation Pty. Ltd.
53 Barry road, Campbellfield
VIC Australia 3061**



Copyright Notice

All rights reserved. No part of this publication may be reproduced, transmitted or stored in a retrieval system in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Dallas Delta Corporation Pty. Ltd.

Dallas Delta Corporation Pty. Ltd. reserves the right to make changes to features and specifications at any time without prior notification in the interest of ongoing product development and improvement.

© 2017 Dallas Delta Corporation ABN 11 005 617 532

Contents

1.0	Introduction	5
2.0	How to Use This Manual	5
3.0	Quick Start Guide	6
3.1	Getting Started - Basic Procedures	6
3.2	Logging On to the Home Page	6
3.3	Button Call Number Assignment	8
3.4	Settings	9
3.4.1	Network Settings	9
3.4.2	SIP Proxy Settings	10
3.4.3	System Settings	11
3.4.4	Voice & Video	12
3.4.5	Reset Static IP Address	13
3.4.6	Reset DHCP IP Address Range	13
3.4.7	Retrieving the IP Address	13
3.4.8	Factory Reset	13

Contents

4.0 Operator User Guide	14
5.0 Programming Instructions	16
Logging in	16
Settings	17
NetWork setup	17
Voice &Video	18
SIP Proxy Settings	19
Calling Functions	20
System Settings	21
Configurations	23
Keyless Codes	24
Phone Numbers	25
6.0 Specifications	26
Warning	
7.0 PCB Layout	26



1.0 Introduction

Thanks you for choosing Dallas Delta products. We hope that our product will meet the demands of your application needs and it will give you many years of trouble free use.

The **VoIP Doorstation** is an ethernet connected telephone that provides voice over internet Protocol (VoIP) communication technology. Giving you the power of our PSTN base units in a IP format. Using a SIP protocol standard, it provides an easy connection to most VoIP based equipment. The DoorStation is a loud speaker, hands-free unit. It is well suited for homes, hotels, hospitals and universities as well as many business and commercial settings and providing remote gate access guarding you against unwanted entry onto your property. This document outlines the units Features, Operation, Programming instructions and Installation procedures.



2.0 How to Use this Manual

This manual is set out with the intended use of both installers and end users in mind. It will give you the ease and quick turn-around time of installation required to get the job done efficiently and will also give you a very detailed understanding of the unit you are installing and putting into real-world use.

It is very important that installation of this unit is carried out by a qualified personnel to avoid damage of the unit and correct functionality of the product. It will also ensure that safely requirements are met for everyday use of this electrical product.

When installing this product for the first time, it is critical to follow the quick start guide to begin with. This will ensure that your new product is up and running in a very simple and easy manner with as minimal time as possible.

It is then recommended that the manual be read from cover to cover to allow you to fully understand the capabilities of your product and be able to obtain the most of this unit.



3.0 Quick Start Guide

3.1 Getting Started - Basic Procedures

There are a few basic procedures that will need to be completed in order to get your VoIP Doorstation working immediately. Please follow these simple procedures in order before attempting to use your phone:

- > Log on to your VoIP Doorstation
- > Enter 'SIP Proxy' parameters
- > Enter 'Systems' parameters
- > Enter 'Network' parameters
- > Program your call numbers for auto dialling

Below are the step-by-step procedures to getting your VoIP Doorstation up and running:
The necessary details needed to get register are covered in pages 7 to 10.

3.2 Logging On to the Home Page

In order to begin setting up your VoIP Doorstation you must first log into the unit via a web browser (such as Chrome, Firefox, Edge, etc.). log into your VoIP doorstation by typing in the IP address of the phone in the address bar.



DDC VoIP Login

192.168.1.100

DallasDelta

VoIP TELEPHONE
Corporation Pty. Ltd.

Dallas Delta VoIP Login


Password

Enter

VoIP Doorstation Home Page




3.0 Quick Start Guide

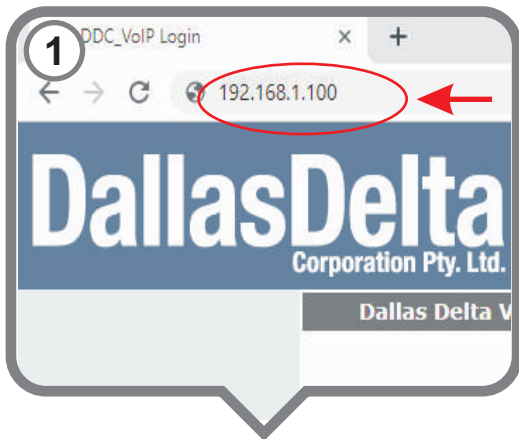

In the web browser's address bar, enter the IP address of the phone you wish to program.

The default address is **192.168.1.100** or obtain the address from step 2 if the phone is set to DHCP.

Note: No password is programmed when dispatched from factory.

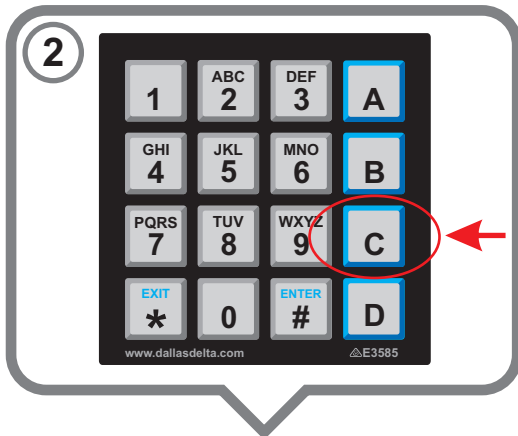

If you do not know the IP address of the phone, press the 'C' button on the programming keypad on the rear panel of the phone and it will play back a voice message with the current IP address.

If your network does not have DHCP then configure the phone for a static IP address by entering ***##7*1**. Please refer to page 13 for more details.



Once you have successfully logged on to the phone's settings page, program numbers for the call buttons installed.

Select 'Phone Numbers' and see the next page



3.0 Quick Start Guide

3.3 Button Phone Numbers

Here is where phone numbers are allocated to the Call Buttons on the front panel of the VoIP Doorstation. The 'Index' column is the allocated call button,

001 = button 1 The only location needed if the unit has one button.

002 = button 2

003 = button 3

004 = button 4 (etc.)

Button input	Name	Phone Number
001 Button 1 →	Button1	702
002 Button 2 →	Button2	500
003 Button 3 →		
004 Button 4 →		
005		
006		
007		

Speed Dial Group		
Index	Name	Phone Number
008	SPD-8	900
009	SPD-9	601
010	SPD-10	901
011		
012		
013		
014		
015		
016		

OK Cancel Restart Phone

VoIPCam Button & Speed Dial Call Number Assignment

Index	Name	Phone Number
	Reception	900
	Dispatch	901
	Loading Dock	905

Enter a description in the 'Name' field of where the call will be directed.

Enter the phone number you wish the button to call.

Press 'OK' to store your new entries.




3.0 Quick Start Guide

3.4 Settings

3.4.1 Network Settings

Note changing the network settings at this stage will required you to re-log back into the phone if the IP is changed. If so, follow the steps outlined in 3.2 *Logging on to the Home Page*.

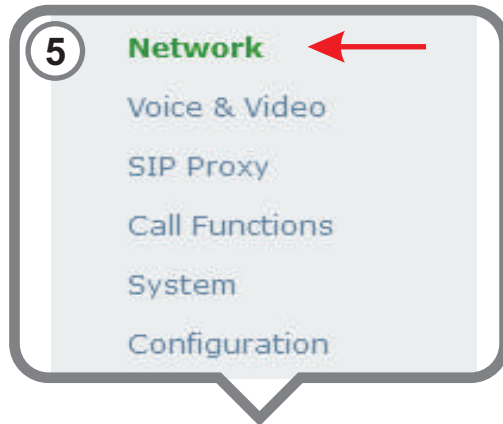

This page will show the current status of the registration, MAC ID, and version number of the F/W.

If the phone does require a static IP location, then verify the network details with the IP department, else leave the phone in DHCP mode to obtain an IP automatically.

If DHCP is selected, then most cases set the DNS to AUTO. Care should be taken when setting the VLAN data, refer to the IP department for these settings.

Phone Status

Phone Model: DDC_VoipCam

MAC Address: 60:64:05:ff:22:0b

Version No: 2208.10

SIP Status : Registered

Network Settings

Connection Type:	DHCP
IP Address:	192.168.1.120
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.0.1
DNS Server IP:	Auto DNS
Primary DNS:	192.168.0.1
Secondary DNS:	
Layer 3 QoS:	46 DSCP Diff-Serv, RTP-ToS (EF=46)
Layer 2 QoS:	0 802.1Q VLAN Tag
	0 802.1p Priority Value



3.0 Quick Start Guide

6 Network

Voice & Video

SIP Proxy ←

Call Functions

System

3.4.2 SIP Proxy Settings

Select 'SIP Proxy' on the side menu to open up the SIP extension details required for the phone.

To setup a SIP Registration you will need details settings from the SIP PBX or cloud Server. The PBX needs to be configured for a 3rd party SIP profile. Fill in the minimum required fields to complete the registration as follows: The arrows below point to the critical data required

SIP Server:

SIP Server Port:
(generally this is 5060)

SIP User ID_Name:

SIP Authentication ID:

SIP Authentication PIN:
(This PIN is sometimes refer to as Digest KEY).

All other settings are not critical at this point in time and can be set up at a later stage.


SIP Proxy Settings	
SIP Server:	dallasdelta.com (Domain, IP or URI) ←
SIP Server Port:	5060 (Typically 5060) ←
OutBound Proxy:	(URI)
Outbound Port:	(Typically 5060)
Use Outbound Proxy:	☐
Transport:	UDP ▾
SIP Registration:	☒ ←
SIP User ID_Name:	700 ←
SIP Authentication ID:	700 ←
SIP Authentication PIN:	••••• (Digest Key) ←
Displayed Name:	gate1 (optional, e.g., Gate #1)
Local SIP Port:	5060 (Typically 5060)
Local RTP Port:	6000 min 9000 max (65534)
Register Expiration:	3600 (In seconds, Typically 3600s)
Registration Attempts:	45 (before phone restarts, Typically 5)

VoIP Doorstation SIP Proxy Settings Page

Press 'OK' to save your settings.



3.0 Quick Start Guide

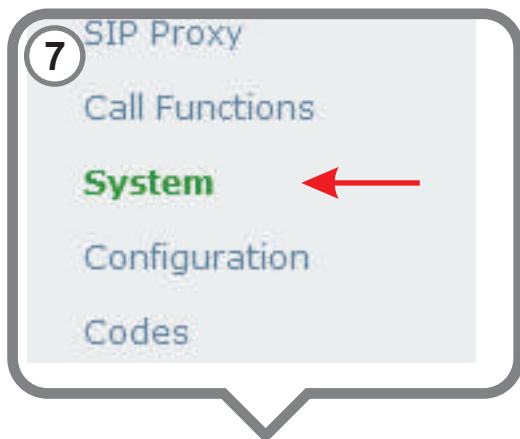

3.4.3 System Settings

Access the System Settings page to set handset and speaker levels, relay access codes etc

Adjust these settings to suit the site conditions.

Note Un-click the 'Handset Installed' option if the handset is not installed.

Relay Codes

These are the codes used to trigger the onboard relay to open the door, gate, etc. Activated by the remote end by entering the digits from a DTMF type phone.

Note: The relay codes are cleared in factory default and the relay contact is Normally Open (N/O).

WARNING:

For the relays to operate in gate release mode, the 'Relay Inuse' option must be set to 'None'. This can be found in the 'Phone Configuration' page.

All other settings are not critical at this point in time and can be set up at a later stage.

Press 'OK' to save your settings.

System Settings	
Handset Installed:	☐
Handset input (0-31):	20 ACA level = 5 to 24
Handset Output (0-31):	20 ACA level = 22 to 28
Microphone input (0-31):	20
Speaker Output (0-31):	12
Ring Volume (10-31):	15
Dial tone Vol (0-31):	15
Conversation Timer (0-99):	5 (In minutes)
Relay 1 Code:	123
Relay 2 Code:	456
Relay On Timer (0-30):	5 (In seconds, Typically 5s)
Syslog IP:	255.255.255.255
Enable Debug output:	☒
SNTP Server:	0.au.pool.ntp.org (IP or URI) eg, 0.au.pool.ntp.org
Time Zone:	(GMT+10:00)ACT,VIC,NSW,TAS,QLD ▾
Adjust Clock for Daylight Saving:	☒

eg. code to open the door/gate.

VoIP Doorstation System Settings Page



3.0 Quick Start Guide

8 Network

Voice & Video

SIP Proxy

Call Functions

System

3.4.4 Voice & Video

Voice Codec:

Most PBX phone systems today will work with the codec set to G711 (or PCMA/U).

This product does have other options, select preference and the order as required.

Note: The PBX can over-ride this settings to match the other party as part of the SIP protocol. If a match can not be made the call will NOT be established.

The real time protocol (RTP) is used to move the voice and video signal via the ethernet. Generally the voice frame is in 20mS segments. The PBX may override the preferred audio codec order.

Audio signal at the speaker will control the voice switching. This level can be set to soft, normal or loud.

Video Parameters:

The camera used MAY have two video modules. (Note, the firmware will allow the options for LD or HD video to be selectable).

The receiving telephone will determine what can be set for video definition, frame rate and bit rate. Not all options will work when interfacing the remote telephone.

Voice Codec Settings

Preferred Voice Codec:	Codec 1:	PCMU	▼
(In listed order)	Codec 2:	PCMU	▼
	Codec 3:	G.726-32	▼
Voice Switching Sensitivity:	Loud	▼	Handsfree Speaker level
Send DTMF:	RFC2833	▼	

Video Settings

Camera 1	LD h264	☒	320x240	▼
Camera 2	HD h264	☐	1280x720	▼ Models with HD camera only
Frame Rate f/s	20	▼		
Bit Rate Kb/s	2048	▼		

VoIP Doorstation Settings Menu - Voice & Video Settings Page



3.0 Quick Start Guide

9



3.4.5 Static IP Address

The address will be set to **192.168.1.100**

To set the phone to a Static IP address, use the programming keypad on the back of the unit and enter the following key sequence:

*** # * # 7 * 1**

Note: Enter all digits in a continuous motion without pausing in between digit entries.

This function will clear the admin pin and the SIP Auth-PIN

10



3.4.6 DHCP IP Address

To set the phone's IP address to the DHCP, use the programming keypad on the back of the unit and enter the following key sequence:

*** # * # 7 * 2**

Note: In this mode the phone will acquire the IP address from the network gateway server. Enter all digits in a continuous motion without pausing in between digit entries.

This function will clear the admin pin and the SIP Auth-PIN

11



3.4.7 Retrieving the IP Address

To check the IP address of the phone, press the 'C' button on the programming keypad during standby mode and it will play back a voice message with the current IP address.

10



3.4.8 Reset the phone back to factory defaults

To reset the phone's parameter back to a clean start (factory reset). Enter the following key sequence:

*** # * # 7 * 9**

Note: *This will reset the IP address to DHCP mode. Clear the Admin PIN. and Erase the SIP Authentication Details.*



4.0 Operational User Guide

The DDC VoIP telephone functionality operating in hands free mode.

When the call button is pressed, the unit will establish a call to a preset number.

Repressing the call button during a conversation period will terminate the call.

A call duration period may be set, if a limit is required.

The unit can be configured to auto-answer call as set by a auto-answer timer.

Or during ring, the unit can be answered by pressing any for the buttons.

Handset models can be supplied with or without a keypad, and it can be setup to hotline (automatically call a number when the handset is pickup).

Remote relay control:

Two on-board relays may be fitted to the door station, each may be activated during conversation by the remote operator or either one can be configured to switch on when the call is initiated.

The DDC_VoIP phone is currently ship fitted with one relay as standard (the second relay on request).

The remote operator may activate the on board relay/s by entering the code set for that relay.

For example, if relay 1 code is set to 95, then remotely typing 95 will activate it, (refer to page 21).

A response beep will indicate that the code was correct and the relay has activated. No response tone indicates an error in the code and the process should be repeated after a minium of 3 second delay.

(NB, as relay 2 is optionally fitted, the response will be the same whether the relay is installed or not.)

DTMF remote control uses RFC2833 or INFO protocol.

Call initiated relay control:

Relay 1 may be configured to switch on from when the call button is pressed or from when it starts ringing.

This function may be used to control an external camera, light or to initiate an alarm, etc.

The relay will stay on for the duration of the call.

(refer to **Relay Inuse** in the Configuration Section).

WARNING

This telephone can not be used for emergency purposes during power failure unless fitted with a backup 12 volt battery AND network connection guaranteed.

To be installed and maintained by authorised service personnel only.



4.0 Operational User Guide

Keypad Functions

The keypad on the rear of the unit provides the installer access to listen to the current IP address or reset the phone back to default or change the IP address mode. As well as making a test call.

First, connect the power (via the power jack or Ethernet PoE lead) and wait for 20 seconds,

Get current IP address;

During standby, press '**C**' on the rear keypad to retrieve the current IP address.

Resetting the IP address

To reset the address, enter ***# *# 7*1**, this will reset it to a *Static* IP address of **192.168.1.100**, set the subnet mask to 255.255.255.0 and clear the Administration AND SIP Password.

OR enter ***# *# 7*2**, this will set the address mode to Dynamic IP (DHCP) and also clear the admin and SIP password.

Making a test call.

To test if the unit has been successfully registered, press '**D**' to loop the line, then dial the number required plus #. If all is well, a connection will be made.

Press **D** again to go off line.

If the line is engaged or the other party hangs up the unit will automatically disconnect.

Calling a phone by its IP address can be done by entering a * between each group of digits and the port number if it's not the standard 5060.

IE, if a phone you wish to call is on IP 192.168.1.117:5080, type

D 192*168*1*117*5080 #. (note not all phones can be called using this technique).

The port number is not required if the default port is 5060 for the remote phone.



5.0 Programming Instructions

PROGRAMMING


Login page

The DDC_VoIP door station is programmed by logging into the phones web page.

Use a standard web browser (Firefox or Chrome for example), enter the phones IP address into the “URL Location Bar” at the top of the screen.

If you don't know the IP of the phone, then refer to page 15 on '**Get / Resetting the IP address**'.

At the login page, type in the password and click the Enter key, (All units are delivered with no password).

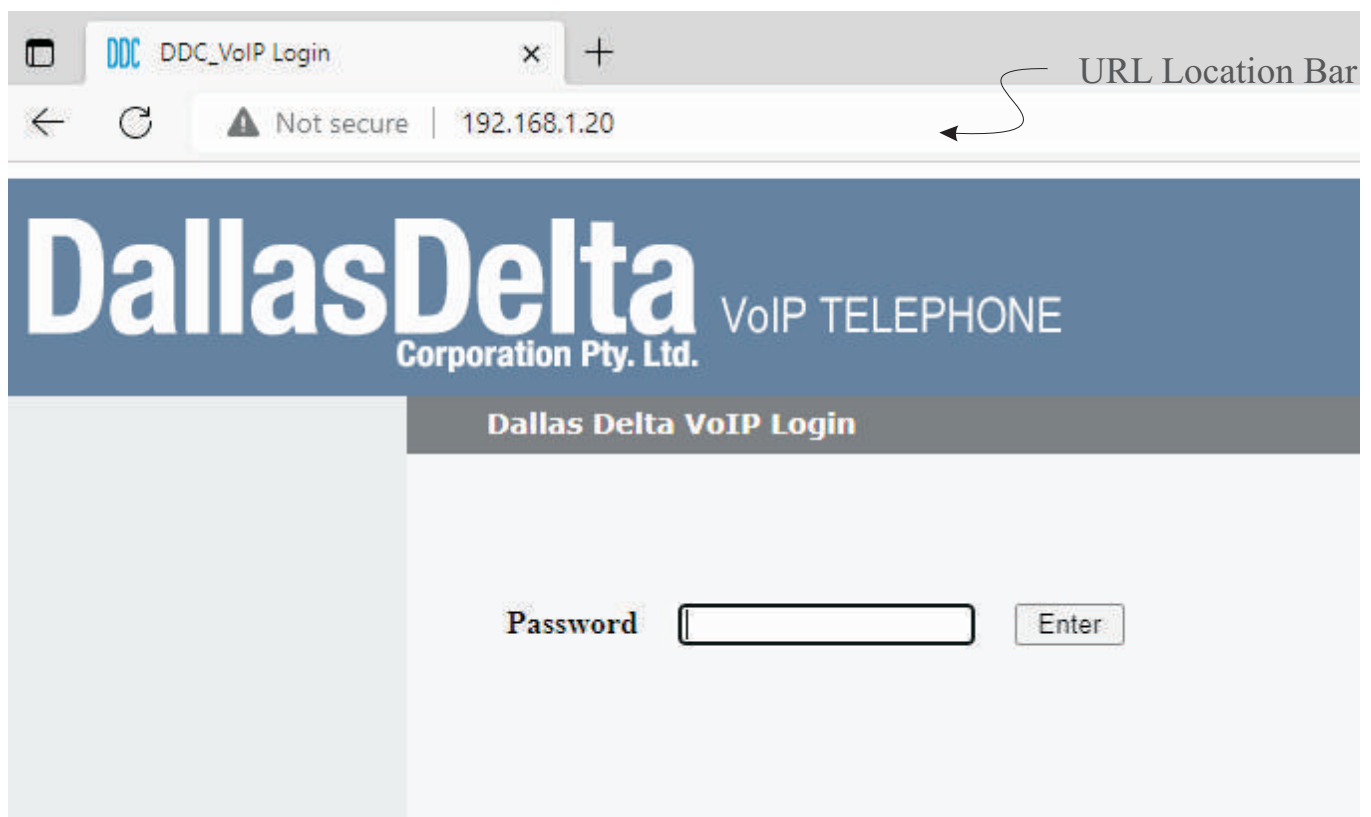



5.0 Programming Instructions

SETTING MENU

On entering this section, the current status of the telephone will be displayed.

The SIP Register is updated every 8seconds.

Submenu's are shown on the left of the WEB page, the first section is for 'Network settings' and will enable you to change IP address, subnet mask and gateway and option to set DNS server setting. The other sections are describe in the following pages of this manual.

Network

Voice & Video

SIP Proxy

Call Functions

System

Configuration

Codes

Phone Numbers

Upgrade F/W

Call (+613) 9387 7388
www.dallasdelta.com

Phone Status

Phone Model: DDC_VoipCam
MAC Address: 60:64:05:ff:22:0b
Version No: 2208.26
SIP Status : Not Enabled

Network Settings

Connection Type:

IP Address:

Subnet Mask:

Default Gateway:

DNS Server IP:

Primary DNS:

Secondary DNS:

Layer 3 QoS: DSCP Diff-Serv, RTP-ToS (EF=46)

Layer 2 QoS: 802.1Q VLAN Tag

802.1p Priority Value

NAT Settings

NAT Proxy:

NAT traversal:

NAT IP:

STUN Server: (IP or URI)

STUN Server Port: (Typically 3478)

OK Cancel RestartPhone

Network Settings

The **Connection Type** enables the unit to be connected via a *STATIC IP* or *DHCP* address mode.

If the connection is DHCP then the IP address, Mask and Gateway are automatically assigned by the server.

When set to a Static IP, a suitable IP address, Subnet Mask and Gateway address will be required to suit the local area network (LAN).

If you change the IP address, then click 'OK' followed by 'RestartPhone'.

Restart by logging in using the new IP address.

In most cases the DNS Server IP can remain set to **Auto DNS**, when the connection type is DHCP.

If however, it is required, enable **Manual DNS** and set the Primary and Secondary DNS address.

QoS traffic control is set by the **Layer 2 & 3 QoS** values.

Set the VLAN tag option for networks that require it. Take care here as once this is set then the PC/Laptop you are using may not have the VLAN option enabled and you will not be able to communicate with the phone.

NAT/STUN configuration if required are also set on this page.



5.0 Programming Instructions

Voice & Video

In this section, select the order and preferred for the audio codecs, configure the DTMF transport protocol to use and set a the video parameters that would best suit the display on the remote telephone.

Voice Codec Settings

Preferred Voice Codec:
(In listed order)

Codec 1: PCMU

Codec 2: PCMA

Codec 3: G.726-32

Voice Switching Sensitivity:

Normal

Handsfree Speaker level

Send DTMF:

RFC2833

Video Settings

Camera 1

LD h264

☒

320x240

Camera 2

HD h264

☐

1280x720

Models with HD camera only

Frame Rate f/s

20

Bit Rate Kb/s

2048

Audio codecs control the data rate and quality. As a guide the list here show the data bit rate required for each codec.

Table 1. Codec comparison

Codec	bit rate (kbit/s)
G.711(PCMu /a)	64
G726-32	32
G.729	8
G.722	32

Voice switching is controlled by the level received from the remote operator. The selected level is determined by the background noise at the operator end.

The **Send DTMF** selects how the unit will send *DTMF* digits over the network. Two protocols available, RFC2833 and INFO.

Video Settings:

The unit is supplied with a low definition (LD) camera as standard. (HD camera on request). Match these setting to suit the display at the remote video phone. Generally, most phones will function at 320*240, 15f/s @ ~1000 Kb/s.



5.0 Programming Instructions

SIP Proxy

The SIP authentication details on this page are required by the SIP server, your ISP or network administrator will provide the necessary information to be used here.

Network

Voice & Video

SIP Proxy

Call Functions

System

Configuration

Codes

Phone Numbers

Upgrade F/W

SIP Proxy Settings

SIP Server:

(Domain, IP or URI)

SIP Server Port:

5060

(Typically 5060)

OutBound Proxy:

(URI)

Outbound Port:

(Typically 5060)

Use Outbound Proxy:

☐

Transport:

UDP

▼

SIP Registration:

☐

SIP User ID_Name:

SIP Authentication ID:

SIP Authentication PIN:

(Digest Key)

Displayed Name:

(optional, e.g., Gate #1)

Local SIP Port:

5060

(Typically 5060)

Local RTP Port:

6000

min

9000

max (65534)

Register Expiration:

3600

(In seconds, Typically 3600s)

Registration Attempts:

15

(before phone restarts, Typically 5)

OK

Cancel

RestartPhone

Call (+613) 9387 7388

www.dallasdelta.com

SIP Server IP address or URI that the unit will connect to via the 'SIP Server Port'.

If there is an 'Out Bound Proxy' used for SIP authentication, then enable the 'OutBound Proxy' switch and set the IP/URI and port for that proxy server.

Set the transport used by the server either 'UDP, TCP or TLS'

Click 'SIP Registration' on.

If the phone is used to do IP dialling without the use of a SIP server then leave this option unclicked.

Set the details for the phone in the next 3 fields for User ID, Auth ID and Auth PIN. (all are case sensitive).

The user ID's, and PIN are supplied by the ISP/Network administrator.

Some server will relay the 'Displayed Name' but it is only for identification and not used by the SIP server.

RTP port numbers min & max are both required, do not leave blank.

The **Register Expiration** timers should occur prior to the SIP server registration time-out.

Check with the ISP/Network administrator, generally 1000 to 3000 seconds is suitable.

The **Registration Attempts** sets how many failed attempts before restarting the phone. This may be required to re-obtain a new IP from the DHCP server and start from fresh.

Click "OK" then "RestartPhone" when changes are made to this page.



5.0 Programming Instructions

Calling Functions

This section controls the way the unit makes and receives calls.

[Network](#)
[Voice & Video](#)
[SIP Proxy](#)
[Call Functions](#)
[System](#)
[Configuration](#)
[Codes](#)
[Phone Numbers](#)
[Upgrade F/W](#)

Calling Functions

Outgoing, No Answer Period:	0	(Divert timeout, in seconds)
Divert Number 1:		
Divert Number 2:		
Incoming, No Answer Period:	10	(In seconds, Typically 20s)
Auto Answer:	☒	
Hot Line Number:		(Auto-dialed number on handset pickup)
Dialling Timeout:	5	(In seconds, Typically 5s)
Use "#" To Call:	☒	

Calls made from the phone maybe configure to try an alternative number if the main number is busy or if the outgoing **No Answer Period** expires.

There are 2 global alternative numbers. Enter a timeout period and fill in the fields in the **Divert Numbers 1 & 2**.

The **Incoming, No Answer Timeout** period is used the in conjunction with the **Auto Answer** switch if this option is enabled to auto-answer the phone on in-coming calls.

Hot Line Number for DDC_VoIP phones that have a handset, This will dialled this number when the handset is pickup.

For units with a keypad, the **Dialling Timeout** period sets how long to wait after the last digit pressed before dialling the number or if the option **Use # to Call** is enabled, used the # key to initiate dialling.



5.0 Programming Instructions

System Settings

Set the DDC_VoIP phone audio levels, relay options, Syslog details and time of day functions in this section. Audio levels for the phone should be re-check on site.

The on board relay/s may be use for gate access control, back ground lighting etc. They can be remotely activated or enable when the DDC_VoIP phone is in use.

	System Settings	
Network Voice & Video SIP Proxy Call Functions System Configuration Codes Phone Numbers Upgrade F/W Call (+613) 9387 7388 www.dallasdelta.com	Handset Installed:	☐
	Handset input (0-31):	20 ACA level = 5 to 24
	Handset Output (0-31):	20 ACA level = 22 to 28
	Microphone input (0-31):	20
	Speaker Output (0-31):	12
	Ring Volume (10-31):	15
	Dial tone Vol (0-31):	15
	Conversation Timer (0-99):	5 (In minutes)
	Relay 1 Code:	123
	Relay 2 Code:	
	Relay On Timer (0-30):	5 (In seconds, Typically 5s)
	Syslog IP:	255.255.255.255
	Enable Debug output:	☒
	SNTP Server:	0.au.pool.ntp.org (IP or URI) eg, 0.au.pool.ntp.org
	Time Zone:	(GMT+10:00)ACT,VIC,NSW,TAS,QLD ▾
Adjust Clock for Daylight Saving:	☒	

The microphone and the speaker levels for the handset (if fitted) and in the hands-free circuit, is adjusted to suit site background noise, when possible keep these level low, as un-necessary noise will be transmitted back to the remote operator.

If the phone does have a handset installed, then enable the option and set the audio levels as required for the handset.

Set the **Ringer Volume**, **Dial Tone** levels to suit site conditions.

Conversation period may be limited, to set this, enter a period in minutes into the **Conversation Timer** field. If no timer is required then enter a 0 to disable this function.

The onboard relay may be activated remotely when the remote operator dials the digits that matches the fields for **Relay 1 & Relay 2 code**. Note that relay 2 is optionally fitted.

Use the **Relay on timer** field for the duration required. Or set it to 0, to remain on for the duration of the call.

Debugging can be enabled for a Syslog server and/or UDP logging. If this is not required then disable these options. Refer to the next page for more details on these option

NOTE: ACA maximum levels:

Do not exceed the handset maximum levels, for conformity and comfort keep handset levels to a minimum.



5.0 Programming Instructions

System Settings continue.

Debug Options:

For some installation, it may be required to record events that occur at the phone. These events may include;

- which button is pressed
- when a relay is activated remotely
- when the handset is on or off hook
- on ringing (incoming call)
- system reboot
- start of call and at auto answer
- at the end of a call

This information is stored at an allocated server and the protocol used is *SYSLOG on port 514*. Although generally on a Linux systems, *SYSLOG* programmes can be sought for the Windows system as well.

Each event is timed stamp with the phone ID and IP address. To enable this function set the IP of the *SYSLOG* server.

The DDC_VoIP phone outputs general debugging information on a continuous basis on port 8225. If high traffic is a concern then un-click **Enable Debug output** option.

The 'time of day' used within the phone and for Syslog is set either from the SNTP server or the SIP server. If the LAN does not have access to a SNTP server then set this field to 0.0.0.0

The **SNTP Server** (simple network time protocol) provides 'time of day' for syslog events. SNTP is on port '123'. If the phone is connected to the internet then a site like 'time.windows.com' or '0.au.pool.ntp.org' may be used.

Select the State/ Country in the **Time Zone** option and whether to use '**DayLight saving**' time.



5.0 Programming Instructions

Configuration

The **Administration Password** is used to gain access to the web page. For added security set and document this password. The phone is supplied with no password set.

This configuration section control some of the hardware and functions of the phone.

The first option '**Key # function**' is only used for units that have a front user keypad installed. The '#' key can be used as the on/off key. When set to 'on/off' then pressing the # key will toggle the phone on-off hook. When set to 'off only', then it is used in conjunction with the '**Keypad Speed-dial**' option (see below).

The '**Relay inuse**' will allow relay1 to switch on whenever the phone is being used. It will set the relay on when making and receiving a calls and stay on for the duration of the call.

'**Keypad Speed-Dial**' works as a memory dial command to dial the number as per the list in the '**Phone Number**' section. If this is set to '**After 1 digit**' then any key from 1-9 will dial memory location 1-9. If set to '**After 2 digits**' the location 01-16 can be called.

Phone Configuration

Administration Password: (Password to enter this web)

Key '#' Function: Phone On/Off ▾

Relay Inuse: None ▾

KeyPad Speed-Dial: Disabled ▾ Memory Dial on first or second key-press:

Disconnect After Gate open: ☐

Hardware Settings

Relay1 Default State: Relay N/O ▾ Note, When power is off, Relay N/C state =open

OK Cancel RestartPhone

Set the option '**Disconnect after gate open**' if needed.

Generally, after the relay has been activate remotely there is no further reason to continue in conversation, the phone can be set to terminate the call automatically by enabling this option.

On some gate controllers the gate switch may need to be set to 'Normally Closed', therefore to activate the gate the switch will need to open.

This could also be required for safely reasons to open the gate if the site power was to fail.

Select the option for **Relay1 Default State** that best suit the site controller.

If the site does require the normal state of the relay to be normally closed, then there is a link on the PCB to select the state. See page 26 for the location of the "NO/NC" link for both relays.



5.0 Programming Instructions

Keyless Codes

Network

Voice & Video

SIP Proxy

Call Functions

System

Configuration

Codes

Phone Numbers

Upgrade F/W

Keyless Codes

Keyless Entry Codes:

"To access Keyless entry at the gate, user will type * plus one of the above codes"

OK

Cancel

RestartPhone

For DDC_VoIP phone supplied with a front panel keypad, the option of allowing gate access by entering a code maybe set here.

This will only activate relay1 of the phone. The period that the relay stays on for is the same as that set in the relay option section. (refer to page 21).

The user is required to enter * and the code to open the gate.

For sites that require an Emergency Services access, then it maybe advisable to use a code that is 8 to 10 digits long. As it may not be changed that easily once the code is supplied to the Emergency services personal.

DallasDelta
Corporation Pty. Ltd.

24



5.0 Programming Instructions

Phone Numbers

The DDC_VoIP phone can be configured with up to 15 buttons. All 16 locations may be used as “speed dialling” numbers

Each Button, (if fitted) may be set to dial a different phone number. The Name field giving to each input is for internal reference only and is not required.

The phone number may be an IP address/port number, ie 192.168.1.123:5060. If the unit is not registered to a SIP server.

These locations are also used if the Speed-dial option is used when configured with a front panel keypad. see page 23 “Keypad Speed Dial”


Button input	Name	Phone Number
001	Button1	
002	Button2	
003		
004		
005		
006		
007		
Speed Dial Group		
008		
009		
010		
011		
012		
013		
014		
015		
016		

Call (+613) 9387 7388
www.dallasdelta.com



6.0 Specifications

power:	input voltage	9 Volts (<i>minimum</i>) - 50 Volts (<i>maximum</i>)
PoE supply:	Class requirements	Class 0. (0.44 Watts to 12 Watts)
current consumption:	-idle mode -on call	180mA @ 12Vdc (2.2 Watts) <400mA @ 12Vdc (4.8 Watts) <1000mA @ 12Vdc (12 Watts) <i>max volume into a 8ohms speaker</i>
relay contacts:	switching maximum	1A @ 60Vdc / 40Vac SELV or TNV (non inductive load) voltage free outputs
temperature:	operating range	0°C to +50°C
SPL:	ringer output level	>80dBa @ 1 metre
communication:	Ethernet Connection protocol CODECs	100 BASE-T SIP G711 (uLaw, aLaw), G726-32, G722, G729
physical:	panel dimensions (mm) wall cut-out (mm) weight (kg)	<u>Sentry</u> 270 x 130 225 x 115 x 40 approx. 1

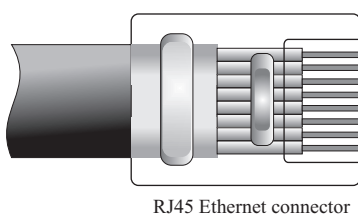

RJ45 Ethernet connector

pins

pins

1,2 = TX

3,6 = RX

4,5 = Spare


7,8 = Spare

mode A

PoE

mode B

PoE

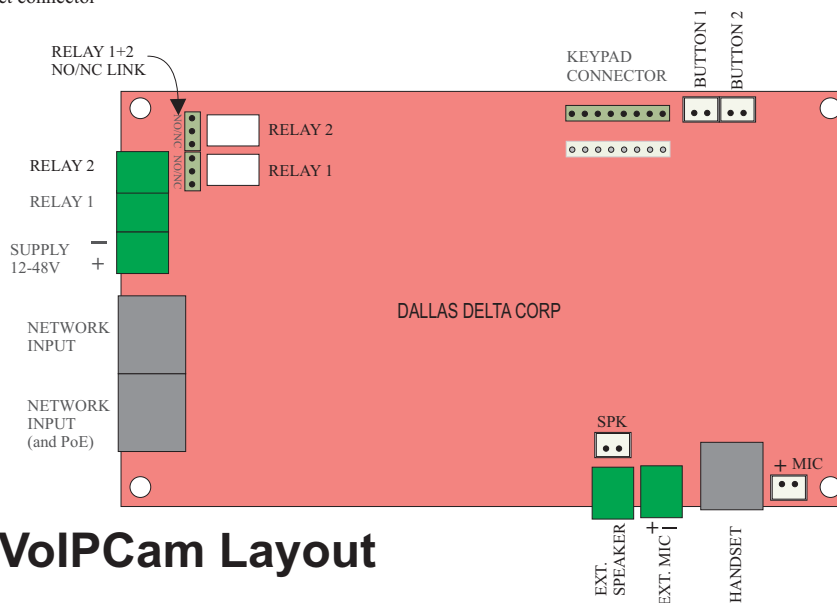

DDC_VolPCam Layout

WARNING

This telephone can not be used for emergency purposes during power failure unless fitted with a backup 12 volt battery AND network connection guaranteed.

To be installed and maintained by authorised service personnel only.



9.0 Release Notes

DATE:	VERSION:	REVISION NOTES:

WARNING

This telephone can not be used for emergency purposes during power failure unless fitted with a backup 12 volt battery AND network connection guaranteed.

To be installed and maintained by authorised service personnel only.



Manufacturing Communication Products
Analogue | VoIP | GSM | Fibre
Designing Customised Communication Systems



DallasDelta
Corporation Pty. Ltd.

53 Barry road
Campbellfield
VIC Australia
3061

T: +613 9387 7388
E: sales@dallasdelta.com
www.dallasdelta.com