

CRJ200



Model CL-600-2B19

Series 100/200/440

AIRCRAFT MAINTENANCE MANUAL

CSP A-001

MASTER

CRJ SERIES TECHNICAL PUBLICATIONS

12655 Henri-Fabre Boulevard
Mirabel, Québec, J7N 1E1
Canada

Copyright © 1992 – 2022 by MHI RJ Aviation ULC and its affiliates

All rights reserved. No part of this work may be reproduced or copied
in any form or by any means without written permission
of MHI RJ Aviation ULC and its affiliates

MHIRJ is a trademark of
MHI RJ Aviation ULC and its affiliates

Initial Issue: Mar 31/1992
Revision 66: Oct 10/2022

CRJ200

"The information, technical data and the designs disclosed herein are the exclusive property of MHI RJ Aviation ULC and its affiliates or contain proprietary rights of others and are not to be used or disclosed to others without the written consent of MHI RJ Aviation ULC and its affiliates. The recipient of this document, by its retention and use, agrees to hold in confidence the technical data and designs contained herein. The foregoing shall not apply to persons having proprietary rights to such information, technical data or such designs to the extent that such rights exist."

AIRCRAFT MAINTENANCE MANUAL

LIST OF CHAPTERS

The following is a list of the chapters contained in this manual.

<u>Chapter</u>	<u>Title</u>	<u>Revision</u>	<u>Revision Date</u>
05	TIME LIMITS/MAINTENANCE CHECKS	66	Oct 10/2022
06	DIMENSIONS AND AREAS	62	Dec 10/2020
07	LIFTING AND SHORING	65	May 10/2022
08	LEVELING AND WEIGHING	45	May 10/2012
09	TOWING AND TAXIING	64	Sep 10/2021
10	PARKING AND MOORING	66	Oct 10/2022
11	PLACARDS AND MARKINGS	64	Sep 10/2021
12	SERVICING	66	Oct 10/2022
20	AIRFRAME STANDARD PRACTICES	66	Oct 10/2022
21	AIR CONDITIONING	66	Oct 10/2022
22	AUTO FLIGHT	66	Oct 10/2022
23	COMMUNICATIONS	65	May 10/2022
24	ELECTRICAL POWER	66	Oct 10/2022
25	EQUIPMENT/FURNISHINGS	66	Oct 10/2022
26	FIRE PROTECTION	66	Oct 10/2022
27	FLIGHT CONTROLS	66	Oct 10/2022
28	FUEL	66	Oct 10/2022
29	HYDRAULIC POWER	66	Oct 10/2022
30	ICE AND RAIN PROTECTION	66	Oct 10/2022
31	INDICATING/RECORDING SYSTEMS	65	May 10/2022
32	LANDING GEAR	66	Oct 10/2022
33	LIGHTS	66	Oct 10/2022
34	NAVIGATION	66	Oct 10/2022
35	OXYGEN	66	Oct 10/2022
36	PNEUMATIC	66	Oct 10/2022
38	WATER/WASTE	66	Oct 10/2022
45	CENTRAL MAINTENANCE SYSTEM	60	Nov 10/2019
49	AIRBORNE AUXILIARY POWER	66	Oct 10/2022
51	STANDARD PRACTICES AND STRUCTURES	66	Oct 10/2022
52	DOORS	66	Oct 10/2022
53	FUSELAGE	66	Oct 10/2022
54	NACELLES/PYLONS	54	Oct 10/2016
55	STABILIZERS	66	Oct 10/2022
56	WINDOWS	66	Oct 10/2022
57	WINGS	66	Oct 10/2022
71	POWER PLANT	66	Oct 10/2022
72	ENGINE	66	Oct 10/2022
73	ENGINE FUEL AND CONTROL	65	May 10/2022
74	IGNITION	66	Oct 10/2022
75	AIR	66	Oct 10/2022
76	ENGINE CONTROLS	64	Sep 10/2021
77	ENGINE INDICATING	63	May 10/2021



CRJ200

AIRCRAFT MAINTENANCE MANUAL

<u>Chapter</u>	<u>Title</u>	<u>Revision</u>	<u>Revision Date</u>
78	EXHAUST	66	Oct 10/2022
79	OIL	66	Oct 10/2022
80	STARTING	63	May 10/2021
91	CHARTS	63	May 10/2021

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

FLIGHT CONTROLS LIST OF EFFECTIVE PAGES

Chapter Section <u>Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>	Chapter Section <u>Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>
27 – Effective Pages		1	* Oct 10/2022			10	May 10/2022
						11	May 10/2022
		2	* Oct 10/2022			12	May 10/2022
		3	May 10/2022			13	May 10/2022
		4	* Oct 10/2022			14	May 10/2022
		5	* Oct 10/2022			15	May 10/2022
		6	May 10/2022			16	May 10/2022
		7	May 10/2022			17	May 10/2022
		8	May 10/2022			18	May 10/2022
		9	* Oct 10/2022			19	May 10/2022
		10	* Oct 10/2022			20	May 10/2022
		11	May 10/2022			21	May 10/2022
		12	May 10/2022			22	May 10/2022
		13	* Oct 10/2022			23	May 10/2022
		14	* Oct 10/2022			24	May 10/2022
		15	May 10/2022			25	May 10/2022
		16	* Oct 10/2022			26	May 10/2022
		17	* Oct 10/2022			27	May 10/2022
		18	* Oct 10/2022			28	May 10/2022
		19	* Oct 10/2022			29	May 10/2022
		20	May 10/2022			30	May 10/2022
		21	* Oct 10/2022			31	May 10/2022
		22	May 10/2022			32	May 10/2022
		23	May 10/2022			33	May 10/2022
		24	* Oct 10/2022			34	May 10/2022
		25	May 10/2022			35	May 10/2022
		26	May 10/2022			36	May 10/2022
		27	May 10/2022			37	May 10/2022
		28	May 10/2022			38	May 10/2022
		29	May 10/2022			39	May 10/2022
		30	May 10/2022			40	May 10/2022
		31	May 10/2022			41	May 10/2022
		32	May 10/2022			42	May 10/2022
		33	May 10/2022			43	May 10/2022
						44	May 10/2022
27 – Contents		1	May 10/2022			45	May 10/2022
		2	May 10/2022			46	May 10/2022
		3	May 10/2022			47	May 10/2022
		4	May 10/2022			48	May 10/2022
		5	May 10/2022			49	May 10/2022
		6	May 10/2022			50	May 10/2022
		7	May 10/2022			51	May 10/2022
		8	May 10/2022			52	May 10/2022
		9	May 10/2022			53	May 10/2022
						54	May 10/2022

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		55	May 10/2022			222	May 10/2014
		56	May 10/2022			223	May 10/2014
		57	May 10/2022			224	May 10/2014
		58	May 10/2022			225	May 10/2014
		59	May 10/2022			226	May 10/2014
						227	May 10/2014
						228	May 10/2014
27-00-00	1		Apr 20/2004			229	May 10/2014
	2		May 10/2011			230	May 10/2014
	3		May 10/2009			231	May 10/2014
	4		Oct 10/2016			232	Dec 10/2020
	5		Oct 10/2016				
	6		Apr 20/2004				
	7		Apr 20/2004	27-00-00		401	May 10/2022
	8		Apr 20/2004			402	May 10/2022
	9		Apr 20/2004			403	May 10/2022
	10		Apr 20/2004			404	May 10/2022
	11		Apr 20/2004			405	May 10/2022
	12		Apr 20/2004				
	13		Apr 20/2004				
	14		Apr 20/2004	27-00-10		401	Oct 10/2016
	15		Apr 20/2004			402	Apr 20/2004
	16		Apr 20/2004			403	Apr 20/2004
						404	Apr 20/2004
						405	Apr 20/2004
27-00-00	201		Aug 10/2007				
	202		Apr 20/2004				
	203		Oct 10/2006	27-00-10		501	Oct 10/2016
	204		Oct 10/2006			502	Apr 20/2004
	205		Oct 10/2006			503	Apr 20/2004
	206		Oct 10/2006			504	Dec 15/2004
	207		Oct 10/2006			505	Dec 15/2004
	208		Aug 10/2007			506	Dec 15/2004
	209		Oct 10/2006			507	Dec 15/2004
	210		Aug 10/2005			508	Dec 15/2004
	211		Oct 10/2006			509	Dec 15/2004
	212		Apr 20/2004			510	Dec 15/2004
	213		Apr 20/2004				
	214		Apr 20/2004	27-10-00		1	Apr 20/2004
	215		Apr 20/2004			2	Apr 20/2004
	216		Apr 20/2004			3	Apr 20/2004
	217		May 10/2012			4	Apr 20/2004
	218		May 10/2012			5	Apr 20/2004
	219		May 10/2014				
	220		May 10/2014				
	221		May 10/2014				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-11-00		1	Apr 20/2004			538	May 10/2014
		2	Apr 20/2004			539	May 10/2014
		3	Apr 20/2004			540	May 10/2014
		4	Apr 20/2004			541	May 10/2014
		5	Apr 20/2004			542	May 10/2014
		6	Apr 20/2004			543	May 10/2014
27-11-00						544	May 10/2014
		501	May 10/2019			545	May 10/2014
		502	May 10/2019			546	May 10/2014
		503	May 10/2019			547	May 10/2014
		504	May 10/2019			548	May 10/2014
		505	May 10/2019			549	May 10/2014
		506	May 10/2019			550	May 10/2014
		507	May 10/2019			551	May 10/2014
		508	May 10/2019			552	May 10/2020
		509	May 10/2019			553	May 10/2020
		510	May 10/2019			554	May 10/2014
		511	May 10/2019			555	May 10/2014
		512	May 10/2019			556	May 10/2020
		513	May 10/2019			557	May 10/2020
		514	May 10/2019			558	May 10/2020
		515	May 10/2019			559	May 10/2020
		516	May 10/2019			560	May 10/2020
		517	May 10/2019			561	May 10/2020
		518	May 10/2019			562	May 10/2020
		519	May 10/2019			563	May 10/2020
		520	May 10/2019			564	May 10/2020
		521	May 10/2019			565	May 10/2020
		522	May 10/2019			566	May 10/2020
		523	May 10/2019			567	May 10/2020
		524	May 10/2019			568	May 10/2020
		525	May 10/2019			569	Dec 10/2020
		526	May 10/2014	27-11-00		601	Apr 10/2017
		527	May 10/2014			602	Apr 10/2017
		528	May 10/2014			603	Apr 10/2017
		529	May 10/2014			604	Apr 10/2017
		530	May 10/2014			605	Apr 10/2017
		531	May 10/2014			606	Apr 20/2004
		532	May 10/2014			607	Apr 20/2004
		533	May 10/2014			608	Apr 20/2004
		534	May 10/2019			609	Apr 20/2004
		535	May 10/2019			610	Apr 20/2004
		536	May 10/2014			611	Apr 20/2004
		537	May 10/2014				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

<u>Chapter Section Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>	<u>Chapter Section Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>
		612	Apr 20/2004			657	Dec 10/2020
		613	Apr 20/2004			658	Dec 10/2020
		614	Apr 20/2004			659	Dec 10/2020
		615	Apr 20/2004				
		616	May 10/2019	27-11-01		401	May 10/2021
		617	May 10/2019			402	May 10/2021
		618	May 10/2020			403	May 10/2021
		619	May 10/2020			404	Apr 20/2004
		620	May 10/2020			405	May 10/2020
		621	May 10/2020			406	May 10/2021
		622	May 10/2020			407	May 10/2021
		623	May 10/2020			408	May 10/2021
		624	May 10/2020			409	May 10/2020
		625	May 10/2020			410	May 10/2020
		626	May 10/2020			411	May 10/2020
		627	Dec 10/2020			412	May 10/2020
		628	Dec 10/2020			413	May 10/2020
		629	Dec 10/2020			414	May 10/2020
		630	Dec 10/2020			415	May 10/2020
		631	Dec 10/2020			416	May 10/2020
		632	May 10/2020			417	May 10/2020
		633	May 10/2020			418	May 10/2020
		634	Dec 10/2020			419	May 10/2020
		635	Dec 10/2020			420	May 10/2020
		636	Dec 10/2020				
		637	Dec 10/2020	27-11-05		401	Oct 10/2016
		638	Dec 10/2020			402	May 10/2019
		639	Dec 10/2020			403	May 10/2019
		640	Dec 10/2020			404	May 10/2019
		641	Dec 10/2020			405	May 10/2019
		642	Dec 10/2020			406	May 10/2014
		643	Dec 10/2020			407	May 10/2011
		644	Dec 10/2020			408	May 10/2011
		645	Dec 10/2020			409	Oct 10/2016
		646	Dec 10/2020			410	Oct 10/2016
		647	Dec 10/2020			411	Oct 10/2016
		648	Dec 10/2020			412	Oct 10/2016
		649	Dec 10/2020			413	May 10/2019
		650	* Oct 10/2022			414	May 10/2019
		651	Dec 10/2020				
		652	Dec 10/2020	27-11-06		401	Oct 10/2016
		653	Dec 10/2020			402	Oct 10/2016
		654	Dec 10/2020			403	Oct 10/2016
		655	Dec 10/2020				
		656	Dec 10/2020				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		404	Oct 10/2016			707	May 10/2022
		405	Oct 10/2016			708	May 10/2022
		406	Oct 10/2016			709	May 10/2022
		407	Oct 10/2016			710	May 10/2022
		408	Oct 10/2016			711	May 10/2022
		409	Oct 10/2016			712	May 10/2022
		410	Oct 10/2016				
		411	Oct 10/2016	27-11-13		401	May 10/2020
27-11-06		501	May 10/2020			402	May 10/2020
		502	May 10/2020			403	May 10/2020
		503	May 10/2020			404	May 10/2020
		504	May 10/2020			405	May 10/2014
		505	May 10/2020			406	May 10/2020
		506	May 10/2020			407	May 10/2020
		507	May 10/2020			408	May 10/2020
		508	May 10/2020			409	May 10/2020
		509	May 10/2020			410	May 10/2020
						411	May 10/2020
						412	May 10/2020
27-11-10		401	Apr 10/2016	27-11-15		401	May 10/2013
		402	Apr 20/2004			402	Apr 10/2016
		403	Apr 10/2017			403	Apr 10/2016
		404	Oct 10/2012			404	May 10/2013
		405	Oct 10/2012			405	May 10/2013
		406	Apr 10/2017			406	Apr 20/2004
		407	Oct 10/2012			407	Apr 20/2004
		408	May 10/2014			408	Apr 20/2004
		409	May 10/2014			409	May 10/2013
		410	May 10/2014			410	May 10/2014
		411	May 10/2014			411	May 10/2014
		412	Apr 10/2016			412	May 10/2014
		413	Apr 10/2016			413	May 10/2014
		414	Apr 10/2016			414	May 10/2014
		415	Apr 10/2016				
		416	Apr 10/2016				
		417	Sep 10/2021	27-11-15		501	Apr 20/2004
27-11-10		701	Sep 10/2021			502	Apr 20/2004
		702	Sep 10/2021			503	Apr 20/2004
		703	Sep 10/2021			504	Apr 20/2004
		704	Sep 10/2021			505	Apr 20/2004
		705	Sep 10/2021			506	Apr 20/2004
		706	Sep 10/2021				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-11-20		401	Apr 20/2004	27-13-00	1		Apr 20/2004
		402	Aug 10/2007		2		Apr 20/2004
		403	May 10/2009		3		Apr 20/2004
		404	May 10/2009	27-13-00	501		Aug 10/2007
		405	May 10/2009		502		Jun 22/2004
		406	May 10/2009		503		Aug 10/2007
27-12-00	1		Apr 20/2004		504		Apr 20/2004
	2		Apr 20/2004		505		Apr 20/2004
	3		Apr 20/2004		506		Apr 20/2004
	4		Apr 20/2004		507		Aug 10/2007
27-12-01				27-13-01	508		Aug 10/2007
	401		May 10/2020		401		Apr 10/2016
	402		May 10/2020		402		Apr 10/2016
	403		Apr 20/2004		403		Apr 10/2016
	404		May 10/2020		404		Apr 10/2016
	405		May 10/2020		405		Apr 10/2016
	406		May 10/2020		406		Apr 10/2016
27-12-02	407		Dec 10/2020		407		Apr 10/2016
				27-13-01			
	401		May 10/2019		501		Apr 20/2004
	402		May 10/2019	27-13-05			
	403		May 10/2019		401		Apr 20/2004
	404		May 10/2019		402		May 10/2014
	405		May 10/2019		403		May 10/2014
	406		May 10/2019		404		May 10/2014
	407		May 10/2019		405		Apr 20/2004
	408		May 10/2019		406		Sep 10/2008
	409		May 10/2019		407		Sep 10/2008
27-12-10					408		May 10/2014
	301		Oct 10/2012	27-13-10			
	302		Oct 10/2012		401		May 10/2021
	303		Oct 10/2012		402		May 10/2021
27-12-10	304		Oct 10/2012		403		May 10/2013
	401		Apr 20/2004		404		May 10/2013
	402		Apr 20/2004	27-14-00	405		May 10/2013
	403		Apr 10/2017		406		May 10/2013
	404		Apr 10/2017				
	405		Apr 10/2017		1		Apr 20/2004
					2		Apr 20/2004

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		3	Apr 20/2004	27-14-15		401	Apr 20/2004
		4	Apr 20/2004			402	Apr 20/2004
						403	Apr 20/2004
27-14-01		401	May 10/2011			404	May 10/2012
		402	Apr 20/2004			405	May 10/2012
		403	Apr 20/2004			406	May 10/2012
		404	May 10/2013			407	May 10/2013
		405	May 10/2010			408	May 10/2012
		406	May 10/2010				
		407	May 10/2013	27-15-00		1	Oct 10/2011
		408	May 10/2012			2	Oct 10/2011
		409	May 10/2013			3	Apr 20/2004
		410	May 10/2012			4	Apr 20/2004
		411	May 10/2011				
				27-15-01		401	Sep 10/2014
27-14-01		501	May 10/2012			402	Sep 10/2014
		502	May 10/2009			403	Sep 10/2014
		503	May 10/2009			404	Sep 10/2014
		504	Sep 10/2021			405	Sep 10/2014
		505	Sep 10/2021			406	Sep 10/2014
		506	Sep 10/2021			407	Sep 10/2014
		507	May 10/2012			408	Sep 10/2014
		508	Sep 10/2021			409	Apr 10/2017
		509	May 10/2012			410	Sep 10/2014
		510	May 10/2012			411	Sep 10/2014
		511	May 10/2009			412	May 10/2021
		512	May 10/2012			413	Sep 10/2014
		513	May 10/2012			414	Sep 10/2014
		514	May 10/2012			415	May 10/2021
		515	May 10/2012			416	Sep 10/2014
		516	May 10/2009			417	Sep 10/2014
		517	May 10/2009			418	May 10/2021
		518	May 10/2009			419	May 10/2019
						420	May 10/2019
27-14-10		401	Apr 20/2004			421	Sep 10/2014
		402	Apr 20/2004			422	Sep 10/2014
		403	Aug 10/2007			423	Sep 10/2014
		404	May 10/2009			424	Oct 10/2016
		405	May 10/2009			425	May 10/2021
		406	May 10/2009			426	May 10/2021
		407	May 10/2009			427	May 10/2021
						428	May 10/2021
						429	May 10/2021
						430	May 10/2021

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		431	May 10/2021	27-15-15		401	Apr 20/2004
		432	May 10/2021			402	Apr 20/2004
		433	May 10/2021			403	Apr 20/2004
		434	Oct 10/2016			404	Apr 20/2004
						405	Apr 20/2004
						406	Apr 20/2004
27-15-01		601	Dec 15/2004				
		602	Oct 10/2016				
		603	Oct 10/2016	27-15-15		501	May 10/2020
		604	Oct 10/2016			502	Aug 10/2007
						503	May 10/2020
						504	May 10/2020
27-15-05		401	Apr 20/2004			505	May 10/2020
		402	Apr 20/2004			506	May 10/2020
		403	Apr 20/2004			507	May 10/2020
		404	Apr 20/2004			508	May 10/2020
		405	May 10/2012			509	May 10/2020
		406	May 10/2012			510	May 10/2020
		407	May 10/2012			511	May 10/2020
		408	Sep 10/2008			512	May 10/2020
		409	Aug 10/2005			513	May 10/2020
		410	Apr 20/2004			514	May 10/2020
		411	Apr 20/2004				
		412	Oct 10/2016				
		413	Oct 10/2016	27-20-00		1	Apr 20/2004
		414	Oct 10/2016			2	Apr 20/2004
		415	Oct 10/2016			3	Apr 20/2004
		416	Apr 20/2004			4	Apr 20/2004
		417	Sep 10/2008				
		418	Sep 10/2008	27-21-00		1	Apr 20/2004
		419	May 10/2009			2	Apr 20/2004
		420	May 10/2009			3	Apr 20/2004
		421	Sep 10/2004			4	Apr 20/2004
						5	Apr 20/2004
27-15-05		501	May 10/2019			6	Apr 20/2004
		502	May 10/2019			7	Apr 20/2004
		503	May 10/2019			8	Apr 20/2004
		504	Apr 20/2004			9	Apr 20/2004
		505	Apr 20/2004			10	Apr 20/2004
27-15-05		601	May 10/2015	27-21-00		501	Sep 10/2008
		602	Apr 20/2004			502	Oct 10/2016
						503	May 10/2019
						504	May 10/2019
						505	Apr 20/2004

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		506	May 10/2015			551	Sep 10/2014
		507	May 10/2015			552	Sep 10/2014
		508	May 10/2015			553	Sep 10/2014
		509	Apr 20/2004			554	May 10/2022
		510	May 10/2015			555	May 10/2022
		511	May 10/2015			556	Oct 10/2011
		512	Apr 20/2004			557	Oct 10/2011
		513	Apr 20/2004			558	Oct 10/2011
		514	Sep 10/2008			559	Oct 10/2011
		515	May 10/2015			560	Oct 10/2011
		516	Sep 10/2008			561	Oct 10/2011
		517	Apr 20/2004			562	Oct 10/2011
		518	Sep 10/2008			563	Oct 10/2011
		519	Sep 10/2008			564	Oct 10/2011
		520	May 10/2015			565	Oct 10/2011
		521	Oct 10/2011			566	Oct 10/2011
		522	Oct 10/2011			567	Oct 10/2011
		523	Oct 10/2011			568	Oct 10/2011
		524	Oct 10/2011			569	May 10/2019
		525	Oct 10/2011			570	May 10/2019
		526	Oct 10/2011			571	May 10/2019
		527	Oct 10/2011			572	May 10/2019
		528	May 10/2015			573	May 10/2019
		529	May 10/2015			574	May 10/2019
		530	May 10/2015			575	May 10/2019
		531	May 10/2015			576	May 10/2019
		532	May 10/2015			577	May 10/2019
		533	Oct 10/2011			578	May 10/2019
		534	May 10/2014			579	May 10/2019
		535	May 10/2019			580	May 10/2019
		536	May 10/2019			581	May 10/2019
		537	May 10/2019			582	May 10/2019
		538	Oct 10/2011				
		539	May 10/2019	27-21-00		601	Mar 15/2005
		540	May 10/2019			602	Mar 15/2005
		541	May 10/2019			603	Mar 15/2005
		542	Oct 10/2011			604	Apr 20/2004
		543	Oct 10/2011			605	Sep 10/2008
		544	Oct 10/2011			606	Mar 15/2005
		545	May 10/2022			607	Apr 20/2004
		546	May 10/2022			608	Apr 20/2004
		547	Sep 10/2014			609	Sep 10/2008
		548	Sep 10/2014			610	May 10/2019
		549	Sep 10/2014			611	May 10/2019
		550	Sep 10/2014				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		612	May 10/2019			409	May 10/2019
		613	May 10/2019			410	May 10/2019
		614	May 10/2019			411	May 10/2019
		615	May 10/2019			412	May 10/2019
		616	May 10/2019			413	May 10/2019
		617	May 10/2019			414	May 10/2019
		618	May 10/2019			415	May 10/2019
		619	May 10/2019			416	May 10/2019
		620	May 10/2019			417	May 10/2019
		621	May 10/2019			418	May 10/2019
		622	May 10/2019			419	May 10/2019
		623	May 10/2019			420	May 10/2019
		624	May 10/2019			421	May 10/2019
		625	Dec 10/2020			422	May 10/2019
		626	May 10/2019			423	May 10/2019
		627	May 10/2019				
		628	May 10/2019	27-21-01		501	May 10/2015
		629	May 10/2019			502	May 10/2015
		630	May 10/2019			503	Sep 10/2008
		631	May 10/2019				
		632	May 10/2019				
		633	May 10/2019	27-21-05		401	May 10/2019
		634	May 10/2019			402	May 10/2019
		635	May 10/2019			403	May 10/2021
		636	May 10/2019			404	May 10/2022
		637	May 10/2019			405	Oct 10/2016
		638	May 10/2019			406	May 10/2021
		639	May 10/2019			407	May 10/2022
		640	May 10/2019			408	May 10/2021
		641	May 10/2019			409	May 10/2021
		642	May 10/2019			410	May 10/2022
		643	May 10/2019			411	May 10/2021
		644	May 10/2019			412	May 10/2021
		645	May 10/2019			413	May 10/2021
		646	May 10/2019			414	May 10/2021
						415	May 10/2021
						416	May 10/2019
27-21-01		401	May 10/2019				
		402	May 10/2019				
		403	May 10/2019	27-21-06		401	Oct 10/2016
		404	May 10/2019			402	Apr 20/2004
		405	May 10/2019			403	Apr 20/2004
		406	May 10/2019			404	Apr 20/2004
		407	May 10/2019			405	Sep 10/2008
		408	May 10/2019				

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		406	Oct 10/2017	27-21-30		401	Apr 20/2004
		407	Oct 10/2017			402	Apr 20/2004
						403	Apr 20/2004
27-21-06		501	May 10/2020			404	Sep 10/2008
		502	May 10/2020			405	Sep 10/2008
		503	May 10/2020	27-21-35		401	Apr 20/2004
		504	May 10/2020			402	Apr 20/2004
		505	May 10/2020			403	Apr 20/2004
		506	May 10/2020			404	Sep 10/2008
		507	May 10/2020			405	Sep 10/2008
		508	May 10/2020				
		509	May 10/2020	27-21-40		401	Apr 20/2004
		510	May 10/2020			402	Apr 20/2004
27-21-10		401	Apr 20/2004			403	Apr 20/2004
		402	Aug 10/2007			404	Apr 20/2004
		403	Aug 10/2007			405	Apr 20/2004
		404	Sep 10/2004			406	Apr 20/2004
		405	Sep 10/2004	27-21-45		401	Apr 20/2004
		406	Sep 10/2008			402	Apr 20/2004
		407	Sep 10/2008			403	May 10/2010
		408	Sep 10/2008			404	Apr 20/2004
		409	Sep 10/2008			405	Sep 10/2008
27-21-15		401	Apr 20/2004			406	May 10/2010
		402	Apr 20/2004	27-21-55		401	Apr 20/2004
		403	Apr 20/2004			402	Apr 20/2004
		404	Apr 20/2004			403	May 10/2010
		405	Apr 20/2004			404	Apr 20/2004
		406	May 10/2014			405	Sep 10/2008
		407	May 10/2014			406	May 10/2010
		408	May 10/2014			407	May 10/2010
27-21-25		401	Apr 20/2004	27-22-00		1	Apr 20/2004
		402	Apr 20/2004			2	Apr 20/2004
		403	Apr 20/2004	27-22-01		401	Nov 10/2019
		404	Oct 10/2018			402	Apr 20/2004
		405	Oct 10/2018			403	May 10/2010
		406	Oct 10/2018			404	Apr 20/2004
						405	Sep 10/2008

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

<u>Chapter Section Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>	<u>Chapter Section Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>
		406	May 10/2019	27-23-01		501	Apr 20/2004
		407	May 10/2019			502	Apr 20/2004
		408	Nov 10/2019			503	Apr 20/2004
		409	Nov 10/2019				
		410	Nov 10/2019	27-23-01		601	Apr 10/2017
		411	Nov 10/2019			602	Apr 10/2017
		412	Nov 10/2019			603	Apr 10/2017
		413	Nov 10/2019			604	Apr 10/2017
		414	Nov 10/2019			605	Apr 10/2017
		415	Nov 10/2019			606	Apr 10/2017
		416	Nov 10/2019			607	Apr 10/2017
		417	Nov 10/2019			608	Apr 10/2017
		418	Nov 10/2019			609	Apr 10/2017
		419	Nov 10/2019			610	Oct 10/2017
		420	Nov 10/2019			611	Apr 10/2017
						612	Apr 10/2017
27-23-00	1		Apr 20/2004				
	2		Apr 20/2004	27-24-00	1		Apr 20/2004
	3		Apr 20/2004		2		Apr 20/2004
	4		Apr 20/2004				
27-23-01	401	Sep 10/2015		27-24-01	401	Nov 10/2019	
	402	Apr 20/2004			402	Nov 10/2019	
	403	May 10/2010			403	Nov 10/2019	
	404	Sep 10/2015			404	Nov 10/2019	
	405	Apr 20/2004			405	Nov 10/2019	
	406	Apr 20/2004			406	Nov 10/2019	
	407	May 10/2012			407	Nov 10/2019	
	408	May 10/2012			408	Nov 10/2019	
	409	May 10/2012			409	Nov 10/2019	
	410	May 10/2012			410	Nov 10/2019	
	411	May 10/2012			411	Nov 10/2019	
	412	Apr 10/2016			412	Nov 10/2019	
	413	Apr 10/2016			413	Nov 10/2019	
	414	Apr 10/2016			414	Nov 10/2019	
	415	Apr 10/2016					
	416	Apr 10/2016		27-24-01	601	Apr 20/2004	
	417	Apr 10/2016			602	Apr 20/2004	
	418	Apr 10/2016			603	Apr 20/2004	
	419	Apr 10/2016					
	420	Apr 10/2016		27-24-05	401	Apr 20/2004	
					402	May 10/2010	
					403	May 10/2010	

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		404	Apr 20/2004			4	May 10/2013
		405	May 10/2010			5	May 10/2013
		406	May 10/2010			6	May 10/2013
		407	Apr 10/2016			7	May 10/2013
		408	Apr 10/2016				
		409	Apr 10/2016	27-31-00		501	Oct 10/2006
		410	May 10/2010			502	Oct 10/2016
		411	May 10/2010			503	Oct 10/2016
27-24-05		501	Apr 20/2004			504	Oct 10/2016
		502	May 10/2011			505	Oct 10/2016
		503	May 10/2009			506	Oct 10/2016
		504	May 10/2009			507	Oct 10/2016
		505	Jun 22/2004			508	Oct 10/2016
		506	Apr 10/2017			509	Oct 10/2016
		507	Apr 20/2004			510	Oct 10/2016
		508	Apr 20/2004			511	Oct 10/2016
		509	May 10/2022			512	Oct 10/2016
		510	May 10/2022			513	May 10/2022
		511	May 10/2022			514	Oct 10/2016
		512	May 10/2022			515	Oct 10/2016
		513	May 10/2022			516	Oct 10/2016
		514	May 10/2022			517	Oct 10/2016
		515	May 10/2022			518	Oct 10/2016
		516	May 10/2022			519	Oct 10/2016
		517	May 10/2022			520	Oct 10/2016
		518	May 10/2022			521	Oct 10/2016
		519	May 10/2022			522	Oct 10/2016
		520	May 10/2019			523	Oct 10/2016
		521	May 10/2019			524	Oct 10/2016
		522	May 10/2019			525	Oct 10/2016
		523	May 10/2015			526	Oct 10/2016
		524	May 10/2015			527	Oct 10/2016
		525	May 10/2015			528	Oct 10/2016
		526	May 10/2015			529	Oct 10/2016
						530	Oct 10/2016
27-30-00		1	Apr 20/2004			531	Oct 10/2016
		2	Apr 20/2004			532	Oct 10/2016
		3	Apr 20/2004			533	Oct 10/2016
						534	Oct 10/2016
						535	Oct 10/2016
27-31-00		1	May 10/2013			536	Oct 10/2016
		2	May 10/2013			537	Oct 10/2016
		3	May 10/2013			538	Oct 10/2016
						539	May 10/2022

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		540	May 10/2022			584	May 10/2022
		541	May 10/2022			585	May 10/2022
		542	May 10/2022				
		543	May 10/2022	27-31-00		601	May 10/2019
		544	May 10/2022			602	Aug 10/2007
		545	May 10/2022			603	Aug 10/2007
		546	May 10/2022			604	Mar 15/2005
		547	May 10/2022			605	Apr 20/2004
		548	May 10/2022			606	May 10/2009
		549	May 10/2022			607	May 10/2009
		550	May 10/2022			608	May 10/2009
		551	May 10/2022			609	May 10/2019
		552	May 10/2022			610	May 10/2019
		553	May 10/2022			611	May 10/2019
		554	May 10/2022			612	May 10/2019
		555	May 10/2022			613	May 10/2019
		556	May 10/2022			614	May 10/2019
		557	May 10/2022			615	May 10/2015
		558	May 10/2022			616	May 10/2019
		559	May 10/2022			617	May 10/2019
		560	May 10/2022			618	May 10/2019
		561	May 10/2022			619	May 10/2019
		562	May 10/2022			620	May 10/2019
		563	May 10/2022			621	May 10/2019
		564	May 10/2022			622	May 10/2019
		565	May 10/2022			623	May 10/2019
		566	May 10/2022			624	May 10/2019
		567	May 10/2022			625	May 10/2019
		568	May 10/2022			626	May 10/2019
		569	May 10/2022			627	May 10/2019
		570	May 10/2022			628	May 10/2019
		571	May 10/2022			629	May 10/2019
		572	May 10/2022			630	May 10/2019
		573	May 10/2022			631	May 10/2019
		574	May 10/2022			632	May 10/2019
		575	May 10/2022			633	May 10/2019
		576	May 10/2022			634	May 10/2019
		577	May 10/2022			635	May 10/2019
		578	May 10/2022			636	May 10/2019
		579	May 10/2022			637	May 10/2019
		580	May 10/2022			638	May 10/2019
		581	May 10/2022			639	May 10/2019
		582	May 10/2022			640	May 10/2019
		583	May 10/2022			641	Dec 10/2020

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		642	Dec 10/2020	27-31-02		501	May 10/2020
		643	Dec 10/2020			502	May 10/2020
		644	Dec 10/2020			503	May 10/2020
		645	Dec 10/2020			504	May 10/2020
		646	Dec 10/2020			505	May 10/2020
		647	Dec 10/2020			506	May 10/2020
		648	Dec 10/2020			507	May 10/2020
		649	Dec 10/2020			508	May 10/2020
		650	Dec 10/2020			509	May 10/2020
		651	Dec 10/2020			510	May 10/2020
		652	Dec 10/2020				
		653	Dec 10/2020	27-31-10		401	Oct 10/2006
		654	Dec 10/2020			402	Apr 20/2004
		655	Dec 10/2020			403	Apr 20/2004
		656	Dec 10/2020			404	Apr 20/2004
		657	Dec 10/2020			405	Oct 10/2016
		658	Dec 10/2020			406	Oct 10/2016
		659	Dec 10/2020			407	Oct 10/2016
		660	Dec 10/2020				
		661	Dec 10/2020	27-31-15		401	Oct 10/2013
		662	Dec 10/2020			402	May 10/2012
		663	Dec 10/2020			403	Oct 10/2013
		664	Dec 10/2020			404	May 10/2012
		665	Dec 10/2020			405	May 10/2012
		666	Dec 10/2020			406	May 10/2012
		667	Dec 10/2020			407	May 10/2012
		668	Dec 10/2020			408	May 10/2014
		669	Dec 10/2020			409	May 10/2014
27-31-01		401	May 10/2014			410	May 10/2014
		402	May 10/2014			411	May 10/2014
		403	May 10/2014			412	May 10/2014
		404	May 10/2014			413	May 10/2014
		405	May 10/2012			414	May 10/2014
		406	May 10/2014			415	Sep 10/2014
		407	May 10/2014			416	Sep 10/2014
						417	Sep 10/2014
						418	Sep 10/2014
27-31-02		401	Oct 10/2016			419	Sep 10/2014
		402	Apr 20/2004			420	Sep 10/2014
		403	Apr 20/2004				
		404	Apr 20/2004	27-31-20		401	Oct 10/2006
		405	Sep 10/2008			402	Apr 20/2004
		406	Sep 10/2008			403	Apr 20/2004
		407	Sep 10/2008				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		404	Apr 20/2004			404	Sep 10/2008
		405	Sep 10/2008			405	May 10/2015
		406	Sep 10/2008				
		407	Sep 10/2008	27-31-30		401	Apr 20/2004
27-31-20		501	* Oct 10/2022			402	Apr 20/2004
		502	Apr 20/2004			403	Apr 20/2004
		503	Aug 10/2005			404	Sep 10/2008
		504	May 10/2011			405	Sep 10/2008
27-31-21		401	Apr 20/2004	27-31-35		401	Sep 10/2021
		402	Apr 20/2004			402	May 10/2019
		403	Apr 20/2004			403	May 10/2019
		404	Sep 10/2008			404	Sep 10/2021
		405	Sep 10/2008			405	Sep 10/2021
27-31-21		501	Apr 20/2004			406	Sep 10/2021
		502	Apr 20/2004			407	Sep 10/2021
		503	May 10/2019			408	Sep 10/2021
		504	May 10/2019			409	Sep 10/2021
		505	May 10/2019			410	Sep 10/2021
		506	May 10/2019	27-32-00		411	Sep 10/2021
		507	May 10/2019			1	Apr 20/2004
		508	Apr 10/2016			2	Apr 20/2004
		509	Apr 10/2016	27-32-00		501	Apr 20/2004
		510	Apr 10/2016			502	Apr 20/2004
		511	Apr 10/2016			503	Aug 10/2007
		512	May 10/2019			504	Aug 10/2007
		513	May 10/2019			505	Aug 10/2007
		514	Apr 10/2016			506	* Oct 10/2022
27-31-23		401	Apr 20/2004			507	May 10/2019
		402	Apr 20/2004			508	May 10/2019
		403	Apr 20/2004			509	May 10/2019
		404	May 10/2012			510	Aug 10/2007
		405	May 10/2012			511	Aug 10/2007
		406	May 10/2012			512	Aug 10/2007
27-31-25		401	Apr 20/2004			513	Aug 10/2007
		402	Apr 20/2004	27-32-01		514	Aug 10/2007
		403	Apr 20/2004			401	Oct 10/2006
						402	Apr 20/2004
						403	Apr 20/2004

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		404	Sep 10/2008	27-33-01		601	Apr 10/2017
		405	Sep 10/2008			602	Apr 10/2017
						603	Apr 10/2017
27-32-05		401	Apr 10/2016			604	May 10/2022
		402	Apr 10/2016			605	Sep 10/2015
		403	Apr 10/2016			606	May 10/2022
		404	Apr 10/2016			607	May 10/2022
		405	Apr 10/2016			608	May 10/2022
		406	Apr 10/2016			609	May 10/2022
		407	Apr 10/2016			610	May 10/2022
27-33-00		1	May 10/2018	27-34-00		1	Apr 20/2004
		2	Apr 20/2004			2	May 10/2011
		3	Apr 20/2004			3	Apr 20/2004
		4	Apr 20/2004				
		5	Apr 20/2004	27-34-01		401	Apr 20/2004
27-33-01		401	Oct 10/2016			402	Apr 20/2004
		402	Apr 20/2004			403	Apr 10/2017
		403	Sep 10/2015			404	Apr 10/2017
		404	Sep 10/2015			405	Apr 10/2017
		405	Mar 15/2005			406	Oct 10/2012
		406	May 10/2012			407	Apr 10/2016
		407	May 10/2012			408	Apr 10/2016
		408	May 10/2012			409	Oct 10/2012
		409	May 10/2012			410	Apr 10/2016
		410	Apr 10/2016			411	Apr 10/2017
		411	Apr 10/2016			412	Apr 10/2017
		412	Apr 10/2016			413	Apr 10/2016
		413	Apr 10/2016			414	Apr 10/2016
		414	Apr 10/2016	27-34-05		401	Oct 10/2016
		415	Apr 10/2016			402	Apr 20/2004
		416	Oct 10/2016			403	Apr 20/2004
		417	Oct 10/2016			404	Apr 20/2004
		418	Oct 10/2016			405	May 10/2012
		419	Oct 10/2016			406	May 10/2012
		420	Oct 10/2016			407	May 10/2012
27-33-01		501	Apr 20/2004			408	Apr 20/2004
		502	Apr 20/2004			409	Dec 10/2020
		503	Apr 20/2004			410	Apr 20/2004
		504	Apr 20/2004			411	Dec 10/2020
						412	Sep 10/2008
						413	Oct 10/2016

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

<u>Chapter Section Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>	<u>Chapter Section Subject</u>	<u>Config</u>	<u>Page</u>	<u>Date</u>
		414	Oct 10/2016	27-35-00		601	May 10/2009
		415	Oct 10/2016			602	May 10/2022
		416	Oct 10/2016				
		417	Oct 10/2016	27-35-01		201	Apr 20/2004
		418	Oct 10/2016			202	Apr 20/2004
27-34-05		501	Apr 20/2004	27-35-01		401	Apr 20/2004
		502	May 10/2011			402	Apr 20/2004
		503	May 10/2011			403	Apr 20/2004
27-34-05		601	Apr 20/2004			404	Apr 20/2004
		602	Apr 20/2004			405	Apr 20/2004
27-34-10		401	Apr 20/2004	27-35-01		501	May 10/2010
		402	Apr 10/2016			502	May 10/2010
		403	Apr 20/2004			503	May 10/2022
		404	Apr 20/2004			504	May 10/2022
		405	May 10/2015			505	May 10/2022
		406	Apr 10/2016			506	May 10/2010
		407	Apr 10/2016			507	May 10/2010
		408	May 10/2015			508	May 10/2010
		409	Sep 10/2008			509	May 10/2015
27-34-10		501	Apr 20/2004			510	May 10/2022
		502	May 10/2011			511	May 10/2022
		503	May 10/2009			512	May 10/2022
		504	May 10/2015			513	May 10/2022
		505	May 10/2015			514	May 10/2022
		506	Sep 10/2008			515	May 10/2022
		507	Sep 10/2008			516	May 10/2022
		508	Sep 10/2008			517	May 10/2022
27-35-00		1	Apr 20/2004			518	May 10/2022
		2	Sep 10/2021			519	May 10/2022
		3	Aug 10/2007			520	May 10/2022
		4	Mar 15/2005			521	May 10/2022
		5	Mar 15/2005			522	May 10/2022
		6	Mar 15/2005			523	May 10/2022
		7	Mar 15/2005			524	May 10/2022
		8	Mar 15/2005			525	May 10/2022
						526	May 10/2022
						527	May 10/2022
						528	May 10/2022
						529	May 10/2022
						530	May 10/2022
						531	* Oct 10/2022

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		532	* Oct 10/2022	27-35-20		501	May 10/2012
		533	* Oct 10/2022			502	May 10/2012
		534	* Oct 10/2022			503	May 10/2012
		535	* Oct 10/2022			504	May 10/2012
		536	May 10/2022			505	May 10/2014
		537	May 10/2022			506	May 10/2014
						507	May 10/2014
						508	May 10/2014
						509	May 10/2014
						510	May 10/2014
						511	May 10/2014
						512	May 10/2014
27-35-05		401	Apr 10/2016				
		402	Apr 10/2016				
		403	Apr 10/2016				
		404	Oct 10/2006				
		405	Oct 10/2006				
		406	Oct 10/2006				
		407	Oct 10/2006	27-35-25		401	Sep 10/2021
		408	Sep 10/2008			402	Sep 10/2021
		409	Sep 10/2008			403	Apr 20/2004
		410	Sep 10/2008			404	Sep 10/2021
						405	Sep 10/2021
27-35-05		501	* Oct 10/2022				
		502	May 10/2015	27-35-25		501	Oct 10/2016
		503	May 10/2015			502	Apr 20/2004
						503	May 10/2014
						504	May 10/2014
27-35-10		401	Apr 20/2004			505	Oct 10/2016
		402	May 10/2009			506	Oct 10/2016
		403	Aug 10/2005				
		404	Sep 10/2008				
		405	May 10/2009	27-35-35		401	Apr 20/2004
						402	Apr 20/2004
						403	Apr 20/2004
27-35-15		401	Apr 20/2004			404	Apr 20/2004
		402	Apr 20/2004			405	Sep 10/2008
		403	Apr 20/2004			406	Apr 20/2004
		404	Sep 10/2008				
		405	Apr 20/2004				
				27-35-40		401	Apr 20/2004
						402	Apr 20/2004
27-35-20		401	Apr 20/2004			403	Sep 10/2008
		402	May 10/2010			404	Apr 20/2004
		403	May 10/2010				
		404	May 10/2010				
		405	May 10/2010	27-40-00		1	Apr 20/2004
						2	Apr 20/2004
						3	Apr 20/2004
						4	Apr 20/2004

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-40-00		501	Oct 10/2016		4		Apr 20/2004
		502	Apr 20/2004		5		Apr 20/2004
		503	Apr 20/2004		6		Apr 20/2004
		504	Apr 20/2004		7		Apr 20/2004
		505	Apr 20/2004				
		506	Apr 20/2004	27-41-00	501		Oct 10/2012
		507	Aug 10/2007		502		Apr 20/2004
		508	Aug 10/2007		503		Oct 10/2013
		509	Aug 10/2007		504		Oct 10/2013
		510	Aug 10/2007		505		Apr 20/2004
		511	Aug 10/2007		506		Oct 10/2012
		512	Aug 10/2007		507		Oct 10/2012
		513	Oct 10/2016		508		Oct 10/2012
		514	Oct 10/2016		509		Oct 10/2012
		515	Oct 10/2016				
		516	Oct 10/2016	27-41-01	401		Apr 20/2004
		517	Oct 10/2016		402		Apr 20/2004
		518	Oct 10/2016		403		Apr 20/2004
		519	Oct 10/2016		404		Oct 10/2012
		520	Oct 10/2016		405		Oct 10/2012
		521	Oct 10/2016				
27-40-00		601	Oct 10/2017	27-41-05	301		Oct 10/2012
		602	Oct 10/2017		302		Oct 10/2012
		603	Oct 10/2017		303		Oct 10/2012
		604	Oct 10/2017		304		Oct 10/2012
		605	Apr 20/2004				
		606	Apr 20/2004	27-41-05	401		Oct 10/2017
		607	Apr 20/2004		402		May 10/2018
		608	Apr 20/2004		403		Dec 10/2020
		609	May 10/2011		404		Apr 10/2016
		610	May 10/2011		405		Apr 10/2016
		611	May 10/2011		406		May 10/2011
		612	May 10/2011		407		May 10/2014
		613	May 10/2011		408		May 10/2018
		614	May 10/2011		409		Apr 10/2017
		615	May 10/2011		410		Apr 10/2017
		616	May 10/2011		411		Apr 10/2017
		617	May 10/2011				
		618	May 10/2011	27-41-15	401		Apr 20/2004
					402		Apr 20/2004
					403		Apr 20/2004
27-41-00		1	Apr 20/2004				
		2	Apr 20/2004				
		3	Apr 20/2004				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		404	Apr 20/2004	27-42-01		401	May 10/2011
		405	Apr 20/2004			402	Apr 20/2004
						403	Oct 10/2018
27-41-15		501	Apr 20/2004			404	Oct 10/2018
		502	Apr 20/2004			405	Oct 10/2018
						406	Oct 10/2018
27-41-20		401	Apr 20/2004			407	Oct 10/2018
		402	Apr 20/2004			408	Oct 10/2018
		403	Apr 20/2004			409	Oct 10/2018
		404	Apr 20/2004			410	Oct 10/2018
		405	Apr 20/2004			411	May 10/2022
						412	May 10/2021
27-41-20		501	Apr 20/2004			413	May 10/2021
		502	Apr 20/2004			414	May 10/2022
						415	May 10/2022
27-41-25		401	Apr 20/2004			416	May 10/2022
		402	Apr 20/2004			417	May 10/2022
		403	Apr 20/2004			418	May 10/2022
		404	Apr 20/2004			419	May 10/2022
		405	Apr 20/2004			420	May 10/2022
						421	May 10/2022
27-41-30		401	Sep 10/2008			422	May 10/2022
		402	May 10/2018			423	May 10/2021
		403	Dec 10/2020			424	May 10/2021
		404	Oct 10/2012			425	May 10/2021
		405	Sep 10/2008			426	May 10/2021
		406	Sep 10/2008			427	May 10/2021
		407	May 10/2014			428	May 10/2021
		408	May 10/2018			429	May 10/2021
		409	Apr 10/2017	27-42-01		601	Oct 10/2017
		410	Apr 10/2017			602	Oct 10/2017
		411	Sep 10/2008			603	Oct 10/2017
		412	Sep 10/2008				
				27-42-05		401	Apr 20/2004
27-42-00	1	Apr 20/2004				402	May 10/2012
	2	Apr 20/2004				403	Apr 20/2004
	3	Apr 20/2004				404	May 10/2012
	4	Apr 20/2004				405	May 10/2012
	5	Apr 20/2004		27-43-00		1	Apr 20/2004
						2	Apr 20/2004

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-50-00		1	Dec 15/2004			404	Apr 20/2004
		2	Apr 20/2004			405	Apr 20/2004
		3	Apr 20/2004				
		4	Apr 20/2004	27-51-05		501	Oct 10/2011
27-51-00		1	Apr 20/2004			502	Oct 10/2011
		2	May 10/2015			503	May 10/2009
		3	Sep 10/2021			504	May 10/2009
		4	Sep 10/2021			505	May 10/2009
		5	May 10/2009			506	May 10/2009
		6	May 10/2009			507	May 10/2009
27-51-01						508	Oct 10/2011
						509	May 10/2009
		401	Apr 20/2004	27-51-10		401	May 10/2013
		402	Sep 10/2021			402	Apr 10/2016
		403	Sep 10/2021			403	Apr 10/2016
		404	Apr 10/2016			404	Apr 10/2016
		405	Apr 10/2016			405	Apr 10/2016
		406	Oct 10/2017			406	Apr 10/2016
		407	Sep 10/2021			407	Apr 10/2016
		408	Oct 10/2017			408	May 10/2013
27-51-01		501	May 10/2021			409	Apr 10/2016
		502	Dec 10/2020			410	Apr 10/2016
		503	May 10/2021			411	Apr 10/2016
		504	May 10/2021			412	Apr 10/2016
		505	Dec 10/2020			413	Apr 10/2016
27-51-05		201	May 10/2009	27-51-10		501	Apr 20/2004
		202	Apr 20/2004			502	Dec 10/2020
		203	Apr 20/2004			503	Dec 10/2020
		204	Dec 10/2020			504	Apr 20/2004
		205	Dec 10/2020			505	Apr 20/2004
		206	Dec 10/2020			506	Dec 10/2020
		207	Dec 10/2020			507	Dec 10/2020
		208	Dec 10/2020			508	Dec 10/2020
		209	Dec 10/2020			509	Dec 10/2020
		210	Dec 10/2020			510	Dec 10/2020
		211	Dec 10/2020			511	Dec 10/2020
27-51-05		401	Dec 10/2005			512	Dec 10/2020
		402	Apr 20/2004			513	Dec 10/2020
		403	Apr 20/2004			514	Dec 10/2020
						515	Dec 10/2020
						516	Dec 10/2020

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		517	Dec 10/2020			508	May 10/2015
		518	Dec 10/2020			509	May 10/2013
		519	Dec 10/2020			510	May 10/2013
		520	Dec 10/2020				
		521	Dec 10/2020	27-52-00		1	Apr 20/2004
		522	Dec 10/2020			2	Apr 20/2004
		523	Dec 10/2020			3	Apr 20/2004
		524	Dec 10/2020			4	Apr 20/2004
		525	Dec 10/2020				
		526	Dec 10/2020	27-52-01		401	Apr 20/2004
		527	Dec 10/2020			402	Apr 20/2004
		528	Dec 10/2020			403	Apr 20/2004
		529	Dec 10/2020			404	Sep 10/2008
		530	Dec 10/2020			405	Sep 10/2008
		531	Dec 10/2020				
		532	Dec 10/2020	27-52-05		401	Apr 20/2004
27-51-15		401	May 10/2015			402	Apr 20/2004
		402	May 10/2009			403	Apr 20/2004
		403	May 10/2009			404	May 10/2018
		404	May 10/2009			405	May 10/2012
		405	May 10/2009			406	May 10/2012
		406	May 10/2009	27-52-05		501	May 10/2021
		407	May 10/2009			502	May 10/2021
		408	May 10/2009			503	May 10/2021
		409	May 10/2013			504	Apr 20/2004
		410	May 10/2012				
		411	May 10/2009	27-53-00		1	Aug 10/2007
		412	May 10/2009			2	Apr 20/2004
		413	May 10/2009			3	Apr 20/2004
		414	May 10/2013			4	Apr 20/2004
		415	May 10/2012				
		416	May 10/2010	27-53-00		501	Apr 10/2006
		417	May 10/2009			502	Apr 10/2006
		418	May 10/2009			503	Apr 10/2006
		419	May 10/2009			504	Apr 10/2006
27-51-15		501	May 10/2015			505	May 10/2011
		502	May 10/2015	27-53-00		601	Sep 10/2008
		503	May 10/2015			602	Sep 10/2008
		504	May 10/2009			603	Sep 10/2008
		505	May 10/2009			604	Sep 10/2008
		506	May 10/2015				
		507	May 10/2015				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		605	Sep 10/2008			609	Sep 10/2008
		606	Sep 10/2008			610	Sep 10/2008
		607	Sep 10/2008			611	Aug 10/2007
		608	Oct 10/2017			612	Sep 10/2008
		609	Oct 10/2017			613	Aug 10/2007
		610	Oct 10/2017			614	Sep 10/2008
		611	Oct 10/2017			615	Aug 10/2007
		612	Oct 10/2017			616	Aug 10/2007
		613	Oct 10/2017			617	May 10/2015
		614	Oct 10/2017			618	May 10/2015
		615	Oct 10/2017			619	May 10/2015
		616	Oct 10/2017			620	May 10/2015
		617	Oct 10/2017			621	May 10/2015
		618	Oct 10/2017			622	May 10/2015
		619	Oct 10/2017			623	May 10/2013
		620	Oct 10/2017			624	Aug 10/2007
		621	Oct 10/2017			625	May 10/2013
						626	Sep 10/2008
						627	Oct 10/2017
						628	Oct 10/2017
						629	Oct 10/2017
						630	* Oct 10/2022
						631	Oct 10/2017
						632	Oct 10/2017
						633	Oct 10/2017
						634	Oct 10/2017
27-53-01		401	Sep 10/2008			401	May 10/2014
		402	Apr 20/2004			402	May 10/2014
		403	Oct 10/2017			403	Oct 10/2017
		404	Oct 10/2017			404	Oct 10/2013
		405	Oct 10/2017			405	May 10/2014
		406	Apr 20/2004			406	Apr 20/2004
		407	Apr 20/2004			407	Apr 20/2004
		408	Apr 20/2004			408	May 10/2013
		409	May 10/2011			409	Oct 10/2013
		410	Sep 10/2008	27-53-05		410	Oct 10/2013
		411	Sep 10/2015			411	Oct 10/2013
		412	Sep 10/2015			412	Oct 10/2013
		413	Sep 10/2015			413	Oct 10/2013
		414	Sep 10/2015			414	Oct 10/2017
		415	Oct 10/2017			415	Oct 10/2017
		416	Oct 10/2017				
		417	Sep 10/2015				
27-53-01		601	Sep 10/2008				
		602	Aug 10/2007				
		603	Aug 10/2007				
		604	Aug 10/2007				
		605	Aug 10/2007				
		606	Aug 10/2007				
		607	Aug 10/2007				
		608	Aug 10/2007				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-53-05		601	Apr 20/2004			426	Apr 10/2016
		602	Aug 10/2007			427	Apr 10/2016
		603	Aug 10/2007			428	Apr 10/2016
		604	Apr 20/2004			429	Apr 10/2016
		605	Dec 15/2004			430	Apr 10/2016
		606	Aug 10/2007			431	Apr 10/2016
		607	Apr 20/2004			432	Apr 10/2016
		608	Sep 10/2008			433	May 10/2018
		609	Apr 20/2004			434	Dec 10/2020
		610	Apr 20/2004			435	Apr 10/2017
		611	Apr 20/2004			436	May 10/2018
		612	Apr 20/2004			437	May 10/2018
		613	Apr 10/2016			438	May 10/2018
		614	Apr 10/2016			439	Apr 10/2017
		615	Apr 10/2016			440	Sep 10/2021
		616	Apr 10/2016			441	May 10/2019
		617	May 10/2009			442	Apr 10/2017
		618	May 10/2009			443	Sep 10/2021
27-53-10		401	Apr 10/2016			444	Sep 10/2021
		402	Oct 10/2012			445	Sep 10/2021
		403	Apr 10/2016			446	Sep 10/2021
		404	Dec 10/2020			447	Apr 10/2017
		405	Apr 10/2017			448	Apr 10/2017
		406	Sep 10/2008			449	Apr 10/2017
		407	Sep 10/2008			450	Dec 10/2020
		408	Sep 10/2008			451	Apr 10/2017
		409	Apr 10/2016			452	Apr 10/2017
		410	Dec 10/2020			453	Apr 10/2017
		411	Apr 10/2016			454	Apr 10/2017
		412	May 10/2019			455	Apr 10/2017
		413	May 10/2019			456	Dec 10/2020
		414	May 10/2019			457	Apr 10/2017
		415	May 10/2019			458	Apr 10/2017
		416	Sep 10/2021			459	May 10/2018
		417	May 10/2019			460	May 10/2018
		418	Apr 10/2017			461	Sep 10/2021
		419	Apr 10/2016			462	Apr 10/2017
		420	Apr 10/2016			463	Apr 10/2017
		421	Apr 10/2016			464	Apr 10/2017
		422	Dec 10/2020			465	Apr 10/2017
		423	Apr 10/2017			466	Apr 10/2017
		424	Dec 10/2020			467	Sep 10/2021
		425	Apr 10/2017			468	Dec 10/2020
						469	Apr 10/2017
						470	Apr 10/2017

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		471	Apr 10/2017			611	Oct 10/2016
		472	Apr 10/2017			612	Apr 10/2017
		473	Apr 10/2017			613	Oct 10/2013
		474	May 10/2018			614	Oct 10/2016
		475	Dec 10/2020			615	Oct 10/2016
		476	Apr 10/2017			616	Oct 10/2016
		477	May 10/2018			617	Oct 10/2016
		478	May 10/2018			618	Oct 10/2016
		479	Apr 10/2017			619	Oct 10/2016
		480	Sep 10/2021			620	Oct 10/2016
		481	Apr 10/2017				
		482	Apr 10/2017	27-53-10		801	May 10/2018
		483	Apr 10/2017			802	May 10/2018
		484	Dec 10/2020			803	May 10/2018
		485	Apr 10/2017			804	May 10/2018
		486	Apr 10/2017			805	May 10/2018
		487	Apr 10/2017			806	May 10/2018
		488	Apr 10/2017			807	May 10/2018
		489	Apr 10/2017			808	Apr 20/2004
		490	May 10/2018			809	Apr 20/2004
		491	Dec 10/2020				
		492	May 10/2019				
		493	May 10/2019	27-54-00		1	May 10/2011
		494	May 10/2019			2	May 10/2011
		495	May 10/2019			3	May 10/2011
		496	Sep 10/2021			4	Apr 20/2004
		497	May 10/2019			5	Apr 20/2004
27-53-10		501	Apr 10/2017	27-54-00		201	Apr 20/2004
		502	Oct 10/2011			202	Apr 20/2004
		503	Dec 10/2020			203	Apr 20/2004
		504	Dec 10/2020			204	Apr 20/2004
		505	Dec 10/2020			205	Apr 10/2016
						206	Dec 10/2020
						207	Dec 10/2020
27-53-10		601	Oct 10/2018			208	Dec 10/2020
		602	Oct 10/2018			209	Dec 10/2020
		603	Dec 15/2004			210	Dec 10/2020
		604	Aug 10/2007			211	Dec 10/2020
		605	Aug 10/2007			212	Dec 10/2020
		606	Oct 10/2006			213	Dec 10/2020
		607	Oct 10/2006			214	Dec 10/2020
		608	Oct 10/2013				
		609	Oct 10/2016				
		610	Oct 10/2016				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-54-00		401	May 10/2019			605	Apr 10/2006
		402	May 10/2019			606	Apr 10/2006
		403	May 10/2019			607	Mar 15/2005
		404	May 10/2019			608	May 10/2013
		405	Apr 10/2016			609	Apr 20/2004
		406	Apr 10/2016			610	Apr 20/2004
		407	Sep 10/2008			611	Apr 20/2004
		408	May 10/2019			612	Apr 20/2004
		409	May 10/2019			613	Apr 20/2004
		410	May 10/2019			614	Apr 20/2004
		411	May 10/2019			615	Apr 20/2004
27-54-00		501	Oct 10/2012	27-54-01		401	Apr 20/2004
		502	Sep 10/2008			402	May 10/2014
		503	Dec 10/2020			403	May 10/2014
		504	Dec 10/2020			404	May 10/2014
		505	Dec 10/2020			405	May 10/2014
		506	Dec 10/2020			406	Oct 10/2018
		507	Dec 10/2020			407	Oct 10/2018
		508	Dec 10/2020			408	Oct 10/2018
		509	Dec 10/2020			409	Oct 10/2018
		510	Dec 10/2020			410	Oct 10/2018
		511	Dec 10/2020			411	Oct 10/2018
		512	Dec 10/2020			412	Oct 10/2018
		513	May 10/2011			413	May 10/2021
		514	Sep 10/2008	27-54-01		601	Apr 20/2004
		515	Sep 10/2008			602	May 10/2015
		516	Sep 10/2008			603	May 10/2015
		517	Sep 10/2008			604	Apr 20/2004
		518	Sep 10/2021			605	Apr 20/2004
		519	Sep 10/2021			606	Apr 20/2004
		520	May 10/2014				
		521	Apr 10/2017				
		522	Sep 10/2021				
		523	May 10/2014	27-54-01		701	Apr 20/2004
		524	May 10/2014			702	Apr 20/2004
		525	May 10/2014			703	Apr 20/2004
		526	May 10/2014			704	Apr 20/2004
		527	May 10/2014				
27-54-00		601	Apr 10/2017	27-54-05		401	Apr 20/2004
		602	May 10/2013			402	Apr 20/2004
		603	Apr 20/2004			403	Apr 20/2004
		604	Apr 10/2006			404	May 10/2009
						405	May 10/2011

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		406	Oct 10/2018	27-54-15		501	Sep 10/2008
		407	Oct 10/2018			502	Sep 10/2008
		408	Oct 10/2018			503	Oct 10/2016
		409	Oct 10/2018			504	Sep 10/2008
		410	Oct 10/2018			505	Sep 10/2008
		411	Oct 10/2018			506	Sep 10/2008
						507	Oct 10/2013
						508	Sep 10/2008
27-54-05		601	Apr 20/2004				
		602	Apr 20/2004				
		603	Apr 20/2004	27-54-16		401	Apr 20/2004
		604	Apr 20/2004			402	Apr 20/2004
		605	Apr 20/2004			403	Apr 20/2004
		606	Apr 20/2004			404	Apr 20/2004
						405	Sep 10/2008
						406	Sep 10/2008
27-54-05		701	May 10/2018				
		702	May 10/2018				
		703	May 10/2018	27-54-20		401	May 10/2019
		704	Apr 20/2004			402	May 10/2019
						403	May 10/2019
27-54-10		401	May 10/2019			404	May 10/2019
		402	Apr 20/2004			405	May 10/2019
		403	Apr 20/2004			406	May 10/2019
		404	Apr 20/2004			407	May 10/2019
		405	May 10/2019			408	May 10/2019
		406	May 10/2014			409	May 10/2019
		407	May 10/2019			410	May 10/2019
						411	May 10/2019
						412	May 10/2019
27-54-15		401	Apr 20/2004			413	May 10/2019
		402	May 10/2014				
		403	Apr 20/2004	27-54-20		501	Sep 10/2008
		404	May 10/2019			502	Sep 10/2008
		405	May 10/2019			503	Sep 10/2008
		406	May 10/2019			504	Sep 10/2008
		407	May 10/2019			505	May 10/2015
		408	May 10/2019			506	May 10/2015
		409	May 10/2019			507	May 10/2015
		410	May 10/2019			508	May 10/2015
		411	May 10/2019			509	Sep 10/2008
		412	May 10/2019			510	Sep 10/2008
		413	May 10/2019			511	Sep 10/2008
		414	May 10/2019			512	Sep 10/2008
						513	Sep 10/2008

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		514	Sep 10/2008	27-60-00	1		Apr 20/2004
		515	Sep 10/2008		2		Apr 20/2004
					3		Apr 20/2004
27-54-25		401	Apr 20/2004				
		402	Apr 20/2004	27-60-00	401		Apr 10/2016
		403	Apr 20/2004		402		Apr 10/2016
		404	May 10/2011		403		Apr 10/2016
		405	Sep 10/2008		404		Apr 10/2016
		406	May 10/2015		405		Apr 10/2016
		407	Sep 10/2008		406		Apr 20/2004
		408	Sep 10/2008		407		Apr 10/2016
					408		Apr 10/2016
27-55-00		1	Apr 20/2004		409		Apr 10/2016
		2	Apr 20/2004		410		Apr 10/2016
		3	Apr 20/2004		411		Apr 10/2016
		4	Apr 20/2004		412		Apr 20/2004
					413		Apr 10/2016
					414		Apr 10/2016
27-55-01		401	Apr 20/2004		415		Apr 10/2016
		402	May 10/2019		416		Apr 10/2016
		403	May 10/2019		417		Apr 10/2016
		404	Apr 20/2004		418		Apr 20/2004
		405	Sep 10/2008		419		Apr 10/2016
		406	Apr 10/2016		420		Apr 10/2016
		407	Apr 10/2016		421		Apr 10/2016
					422		Apr 10/2016
					423		Apr 10/2016
27-55-01		501	May 10/2010				
		502	May 10/2013				
		503	Sep 10/2021	27-60-00	601		Apr 20/2004
		504	Sep 10/2021		602		Apr 20/2004
		505	May 10/2013		603		Apr 20/2004
		506	May 10/2013		604		Apr 20/2004
		507	May 10/2013		605		Apr 20/2004
		508	May 10/2013		606		Oct 10/2016
		509	May 10/2013		607		Oct 10/2016
		510	Apr 10/2016		608		May 10/2011
		511	May 10/2013		609		Oct 10/2016
		512	Apr 10/2016		610		May 10/2011
		513	Apr 10/2016		611		Oct 10/2016
		514	May 10/2020				
		515	May 10/2015	27-61-00	1		May 10/2009
		516	May 10/2013		2		May 10/2009
					3		May 10/2009

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
27-61-00		4	May 10/2009	27-61-01		528	Apr 10/2016
		5	May 10/2009			529	May 10/2011
		6	May 10/2009				
		7	May 10/2009			401	Apr 20/2004
		8	May 10/2009			402	Apr 20/2004
		9	May 10/2009			403	Apr 20/2004
		10	May 10/2009			404	Sep 10/2008
		11	May 10/2013			405	Sep 10/2008
		12	May 10/2013				
		13	May 10/2013				
		14	May 10/2013			201	Apr 20/2004
		15	May 10/2013			202	Apr 20/2004
		16	May 10/2013			203	Apr 20/2004
		17	May 10/2013				
		18	May 10/2013			401	Apr 20/2004
		19	May 10/2013			402	Apr 20/2004
						403	Sep 10/2021
						404	Mar 15/2005
27-61-00		501	Apr 10/2016	27-61-05		405	Mar 15/2005
		502	Apr 10/2016			406	May 10/2009
		503	Apr 10/2016			407	May 10/2009
		504	Apr 10/2016				
		505	May 10/2009			501	May 10/2013
		506	Sep 10/2021			502	May 10/2013
		507	Oct 10/2016			503	Mar 15/2005
		508	Oct 10/2016			504	Sep 10/2014
		509	Oct 10/2016			505	Sep 10/2021
		510	Oct 10/2016			506	Sep 10/2021
		511	Oct 10/2016			507	Sep 10/2021
		512	Mar 15/2005			508	Oct 10/2016
		513	Oct 10/2016			509	Oct 10/2016
		514	Oct 10/2016			510	Sep 10/2014
		515	Oct 10/2016			511	Sep 10/2021
		516	Oct 10/2016			512	Sep 10/2021
		517	Dec 10/2005			513	Sep 10/2021
		518	May 10/2019			514	Oct 10/2016
		519	May 10/2019			515	May 10/2011
		520	May 10/2019			516	May 10/2011
		521	May 10/2019			517	May 10/2011
		522	May 10/2019			518	May 10/2019
		523	May 10/2019			519	May 10/2019
		524	Dec 10/2005			520	Oct 10/2016
		525	Apr 10/2016			521	Oct 10/2016
		526	May 10/2019			522	Oct 10/2016
		527	Apr 10/2016				

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		523	May 10/2011	27-62-00	1	May 10/2010	
		524	Sep 10/2021		2	Apr 20/2004	
		525	May 10/2011		3	Apr 20/2004	
		526	May 10/2011		4	Apr 20/2004	
		527	May 10/2011		5	Apr 20/2004	
		528	May 10/2011				
27-61-10		401	Apr 20/2004	27-62-01	401	Oct 10/2006	
		402	Apr 20/2004		402	Apr 20/2004	
		403	Apr 20/2004		403	Apr 20/2004	
		404	Apr 20/2004		404	May 10/2015	
		405	Sep 10/2008		405	May 10/2015	
		406	Sep 10/2008		406	May 10/2013	
		407	Sep 10/2008		407	May 10/2015	
		408	Sep 10/2008		408	Apr 10/2016	
					409	Apr 10/2016	
					410	May 10/2019	
					411	May 10/2019	
27-61-10		501	Apr 20/2004				
		502	May 10/2019	27-62-01	501	May 10/2009	
		503	May 10/2009		502	May 10/2019	
		504	May 10/2009		503	May 10/2009	
					504	May 10/2009	
27-61-15		401	Apr 20/2004		505	May 10/2009	
		402	Apr 20/2004		506	May 10/2009	
		403	Apr 20/2004		507	May 10/2009	
		404	Apr 10/2016		508	May 10/2009	
		405	Apr 10/2016		509	May 10/2009	
					510	May 10/2009	
27-61-20		401	Apr 20/2004		511	May 10/2009	
		402	Apr 20/2004		512	May 10/2009	
		403	Apr 20/2004		513	May 10/2009	
		404	Apr 20/2004		514	May 10/2009	
		405	Sep 10/2008		515	May 10/2009	
		406	Apr 20/2004		516	May 10/2009	
					517	May 10/2009	
27-61-20		501	Sep 10/2021		518	May 10/2009	
		502	May 10/2019		519	May 10/2009	
		503	May 10/2009		520	May 10/2009	
		504	May 10/2009		521	Sep 10/2021	
		505	May 10/2011		522	May 10/2009	
		506	May 10/2011		523	May 10/2009	
		507	May 10/2009		524	Dec 10/2020	
		508	May 10/2009		525	May 10/2009	
					526	May 10/2009	

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		527	May 10/2009	27-63-05		401	Apr 20/2004
		528	May 10/2009			402	Apr 20/2004
		529	May 10/2009			403	Oct 10/2012
		530	May 10/2009			404	Oct 10/2012
		531	Dec 10/2020			405	Oct 10/2012
						406	Oct 10/2012
						407	Oct 10/2012
						408	Oct 10/2012
27-62-01		601	Aug 10/2007				
		602	Apr 20/2004				
		603	Apr 20/2004				
		604	Apr 20/2004	27-63-07		401	May 10/2021
		605	Dec 10/2020			402	May 10/2021
						403	Oct 10/2011
27-63-00		1	Apr 20/2004			404	Oct 10/2011
		2	Apr 20/2004			405	May 10/2021
		3	Apr 20/2004			406	Oct 10/2011
		4	Apr 20/2004			407	Oct 10/2011
		5	Apr 20/2004			408	Oct 10/2011
						409	Oct 10/2011
27-63-00		501	Aug 10/2007	27-64-00		1	Apr 20/2004
		502	Aug 10/2007			2	Apr 20/2004
27-63-01		401	Apr 20/2004	27-64-00		501	Apr 20/2004
		402	Apr 20/2004			502	Oct 10/2012
		403	Apr 20/2004			503	Oct 10/2012
		404	Apr 20/2004			504	Oct 10/2012
		405	Apr 20/2004			505	Apr 20/2004
		406	Apr 10/2016			506	May 10/2011
		407	Apr 10/2016			507	May 10/2011
		408	Sep 10/2008			508	May 10/2011
		409	Sep 10/2008			509	May 10/2009
		410	Dec 10/2020			510	Apr 20/2004
27-63-01		501	May 10/2019	27-64-01		401	Apr 20/2004
		502	May 10/2019			402	Apr 20/2004
		503	Apr 20/2004			403	Apr 20/2004
		504	Apr 20/2004			404	Apr 20/2004
		505	Apr 20/2004			405	Apr 20/2004
		506	Apr 20/2004			406	May 10/2019
		507	Apr 20/2004			407	May 10/2019
		508	Apr 20/2004			408	Oct 10/2016
		509	Apr 20/2004			409	Oct 10/2016
		510	Dec 10/2020			410	Oct 10/2016

AIRCRAFT MAINTENANCE MANUAL

Chapter Section Subject	Config	Page	Date	Chapter Section Subject	Config	Page	Date
		411	Oct 10/2016	27-65-00		501	Apr 20/2004
		412	Dec 10/2020			502	May 10/2015
						503	May 10/2015
27-64-01		601	May 10/2011			504	Oct 10/2011
		602	Jun 22/2004			505	Oct 10/2011
		603	Jun 22/2004			506	May 10/2015
		604	Jun 22/2004			507	May 10/2015
		605	Jun 22/2004			508	May 10/2015
		606	Apr 20/2004			509	Oct 10/2011
		607	Apr 20/2004			510	Apr 20/2004
		608	Apr 20/2004			511	Apr 20/2004
27-64-05		401	Apr 20/2004	27-65-01		401	May 10/2012
		402	Apr 20/2004			402	May 10/2012
		403	Aug 10/2007			403	May 10/2012
		404	Apr 20/2004			404	Apr 20/2004
		405	Apr 20/2004			405	May 10/2012
		406	Apr 20/2004			406	Oct 10/2016
		407	Apr 20/2004			407	Oct 10/2016
		408	Oct 10/2016			408	Oct 10/2016
		409	Oct 10/2016			409	Oct 10/2016
		410	Oct 10/2016				
		411	Oct 10/2016	27-65-01		601	Jun 22/2004
		412	Sep 10/2021			602	Apr 20/2004
		413	Oct 10/2016			603	Jun 22/2004
						604	Apr 20/2004
27-64-05		601	Jun 22/2004			605	Apr 20/2004
		602	Apr 20/2004				
		603	Jun 22/2004				
		604	Jun 22/2004				
		605	Jun 22/2004				
		606	Apr 20/2004				
		607	Apr 20/2004				
27-65-00		1	Apr 20/2004				
		2	Apr 20/2004				
27-65-00		401	Apr 20/2004				
		402	Apr 20/2004				
		403	Apr 20/2004				
		404	Apr 20/2004				
		405	Apr 20/2004				

THIS PAGE INTENTIONALLY LEFT BLANK

AIRCRAFT MAINTENANCE MANUAL

FLIGHT CONTROLS TABLE OF CONTENTS

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
FLIGHT CONTROLS	27-00-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		2
Aileron		
Rudder		
Elevator		3
Stall Protection System		
Horizontal Stabilizer		
Flaps		
Spoilers		
Crew Force Measuring System		4
Maintenance Practices		201
Effectivity: ON A/C ALL		
General		
General Rigging Instructions		
Flight-Control Safety Precautions		217
Installation of the Flight-Control Cable, Safety		219
Precautions		
Standard Replacement Procedure for Flight		221
Control Cables		
Standard Replacement Procedure for Flight		227
Control Cable Pulleys		
Summary of Reports of Non-Conformance for		232
27-00-00 Maintenance Practices Pageblock		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Flight Control Cable Block		
Installation of the Flight Control Cable Block		404
CREW FORCE MEASURING SYSTEM ECU	27-00-10	
Removal/Installation		401
Effectivity: ON A/C 7673-7699, 7701-7704, 7707-7731, 7733-7737, 7739-7745, 7747-7784, 7786-7850, 7852-7861, 7863, 7865, 7867-7900, 7903-7909, 7911-7914, 7916-7949, 7951-7972, 7974, 7976-7980, 7982-7983, 7985-7988, 8000-8007, 8009, 8011-8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Removal of the ECU		
Installation of the ECU		404
Adjustment/Test		501
Effectivity: ON A/C 7673-7699, 7701-7704, 7707-7731, 7733-7737, 7739-7745, 7747-7784, 7786-7850, 7852-7861, 7863, 7865, 7867-7900, 7903-7909, 7911-7914, 7916-7949, 7951-7972, 7974, 7976-7980, 7982-7983, 7985-7988, 8000-8007, 8009, 8011-8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Operational Test of the Crew Force Measuring System		
Zero Rigging of the Crew Force Measuring System		504
AILERON	27-10-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		
Aileron Control System		
Aileron Trim System		2
Aileron Disconnect System		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Aileron Power–Control System		
Aileron Control–Surface System		3
Operation		
AILERON CONTROL SYSTEM	27–11–00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Control Wheel		
Torque Tube Assembly With Forward		
Quadrants		
Rear Quadrants		2
Tension Regulator and Breakout Device		
Link Assembly (Tension Regulator to PCU)		
Operation		3
Component Location Index		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Rigging of the Aileron Control Cable Circuits		
Rigging of the Aileron PCUs		530
Rigging of the Aileron Trim System		541
Rigging of the Aileron Feel and Centering		546
Mechanism Springs		
Functional Test of the Aileron Control System		550
Operational Test of the Aileron Control System		559
Operational Test of the Aileron Trim System		562
Operational Test of the Aileron Control System		564
Operational Test of the Aileron Trim System		567
Summary of Reports of Non–Conformance for		569
27–11–00 Adjustment/Test Pageblock		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Rigging Check of the Aileron Control System		
Aileron Cable Circuit Tension Check		608
Aileron Backlash Check		616
Check of the Autopilot Cable Tension		623
Detailed Inspection of the Aileron and Aileron– Autopilot Mechanical Control–Path in Non– Pressurized Areas		627
Detailed Inspection of the Aileron Mechanical Control–Path in Pressurized Areas		634
Detailed Inspection of the Aileron Mechanical Control–Path (Forward and Main Avionics Compartments)		641
Detailed Inspection of the Aileron Mechanical Control–Path (Mid–Fuselage Under Floor)		647
Functional Check (Backlash) of the Aileron Control System		650
Check of the Autopilot Cable Tension		657
CONTROL WHEEL	27–11–01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Control Wheel		
Installation of the Control Wheel		405
Removal of the Control Wheel Shaft		412
Installation of the Control Wheel Shaft		416

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
TORQUE TUBE, AILERON	27-11-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron Torque Tube		
Installation of the Aileron Torque Tube		409
FORCE SENSOR, AILERON	27-11-06	
Removal/Installation		401
Effectivity: ON A/C 7673-7990, 8000-8400		
Removal of the Aileron Force Sensor		
Installation of the Aileron Force Sensor		405
Removal of the Aileron Dummy Rod		407
Installation of the Aileron Dummy Rod		410
Adjustment/Test		501
Effectivity: ON A/C 7673-7699, 7701-7704, 7707-7731, 7733-7737, 7739-7745, 7747-7784, 7786-7850, 7852-7861, 7863, 7865, 7867-7900, 7903-7909, 7911-7914, 7916-7949, 7951-7972, 7974, 7976-7980, 7982-7983, 7985-7988, 8000-8007, 8009, 8011-8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Functional Test of the Aileron Force Sensor		
QUADRANT, REAR REMOVAL/INSTALLATION	27-11-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Rear Quadrant		
Installation of the Rear Quadrant		408
Removal of the Aileron Mixer Support		412
Installation of the Aileron Mixer Support		415
Replacement of the Rear Quadrant Bearing		417



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Cleaning/Painting		701
Effectivity: ON A/C ALL		
General		
Cleaning of the Rear Quadrant Assembly		
Cleaning of the Feel Unit Quadrant – Bearing and Cam/Lever Assembly		707
AILERON PULLEYS, OUTBOARD	27-11-13	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Outboard Aileron Pulleys		
Installation of the Outboard Aileron Pulleys		408
TENSION REGULATOR AND BREAKOUT DEVICE	27-11-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Tension Regulator and Breakout Device		
Installation of the Tension Regulator and Breakout Device		410
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Functional Test of the Tension–Regulator and Breakout Device		
LINK, TENSION REGULATOR TO PCU	27-11-20	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Tension Regulator to PCU Link		
Installation of the Tension Regulator to PCU Link		405
AILERON TRIM SYSTEM	27-12-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Trim Actuator		
Aileron/Rudder Trim–Control Panel		
Operation		
Component Location Index		
ACTUATOR, AILERON TRIM	27-12-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron Trim Actuator		
Installation of the Aileron Trim Actuator		404
Summary of Reports of Non–Conformance for		407
27-12-01 Removal/Installation Pageblock		
AILERON TRIM SYSTEM COMPONENTS – REMOVAL/INSTALLATION	27-12-02	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron Trim System Components (Bellcrank and Supporting Assemblies)		
Installation of the Aileron Trim System Components (Bellcrank and Support Assemblies)		406



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
TRIM CONTROL PANEL, AILERON/RUDDER	27-12-10	
Servicing		301
Effectivity: ON A/C ALL		
General		
Lubrication of the Aileron Trim Switch		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron/Rudder Trim Control Panel		
Installation of the Aileron/Rudder Trim Control Panel		404
AILERON DISCONNECT SYSTEM	27-13-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Roll Disconnect Handle		
Roll Disconnect Mechanism		
Operation		
Component Location Index		2
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Rigging of the Disconnect Handle		
Operational Test of the Aileron Disconnect System		505
Operational Test of the Aileron Disconnect System		507

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
ROLL DISCONNECT HANDLE	27-13-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Roll Disconnect Handle		
Installation of the Roll Disconnect Handle		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Disconnect Handle		
DISCONNECT MECHANISM, ROLL	27-13-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Roll Disconnect Mechanism		
Installation of the Roll Disconnect Mechanism		406
SWITCH, ROLL DISCONNECT	27-13-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Roll Disconnect Switch		
Installation of the Roll Disconnect Switch		404
AILERON POWER CONTROL SYSTEM	27-14-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Aileron PCU		
Connecting Arm Assembly		2

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
PCU Output-Link Assembly		2
Operation		
Component Location Index		
POWER CONTROL UNIT (PCU), AILERON	27-14-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the PCU		
Installation of the PCU		407
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Functional Check of Each Aileron PCU for Internal Leakage		
Leakage Test of the Aileron PCU		516
INTERCONNECT LINK, PCU	27-14-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the PCU Interconnect Link		
Installation of the PCU Interconnect Link		406
LINK, PCU OUTPUT	27-14-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the PCU Output Link		
Installation of the PCU Output Link		405

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
AILERON CONTROL SURFACE SYSTEM	27-15-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Aileron		
Flutter Damper		
Position Transmitter		
Operation		2
Component Location Index		
 AILERON	27-15-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron		
Installation of the Aileron		419
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Aileron Assembly		
 DAMPER, AILERON FLUTTER	27-15-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron Flutter Damper		
Installation of the Aileron Flutter Damper		405
Removal of the Flutter-Damper Shear Link		409
Installation of the Flutter-Damper Shear Link		412
Removal of the Flutter Damper Pivot		416
Installation of the Flutter Damper Pivot		417



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Replacement of the Flutter Damper Shear Pin		419
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Fluid Level Transmitter		
Switch		
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Aileron Flutter Damper		
TRANSMITTER, POSITION	27-15-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aileron Position Transmitter		
Installation of the Aileron Position Transmitter		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Adjustment of the Aileron Position Transmitter		
Operational Test of the Aileron Position		512
Transmitter		
RUDDER	27-20-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		
Rudder Control System		
Rudder Trim System		
Rudder Power-Control System		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Rudder Control–Surface System Operation		
RUDDER CONTROL SYSTEM	27–21–00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Rudder–Pedal Assembly		
Rudder–Pedal Front–Pivot Assemblies		
Rudder Primary–Feel Unit		2
Forward Quadrant		
Forward Antijam Mechanism		
Aft (Dual) Quadrant Assembly		
Summing Mechanism		
Load Limiter (Aft Antijam Mechanism)		
Rudder Secondary–Feel Unit		
Load Limiter (Trim Input Area)		3
Lever Assembly (Mixer Mechanism)		
Torque Tube (PCU Input)		
Centering–Mechanism Assembly		
Load Limiter (PCU Input)		
Operation		
Component Location Index		5
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Rigging of the Forward Pivot Assemblies		
Adjustment of the Rudder Pedal Alignment		506
Adjustment of the Primary Feel Mechanism		510
Breakout Force		
Rigging of the Forward Quadrants		514



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Rigging of the Forward Anti-Jam Mechanism		518
Adjustment of the Secondary Feel Mechanism		524
Breakout Force		
Rigging of the Rudder Controls in the Vertical		527
Stabilizer		
Rigging of the Rudder PCUs and Rudder Travel		534
Stops		
Rigging of the Rudder Control Cable Circuits		544
Rigging of the Rudder Pedal Stops		557
Operational Test of the Rudder Control System		561
Operational Test of the Rudder Trim System		563
Operational Test of the Rudder Anti-Jam		565
Mechanism		
Operational Test of the Rudder Trim System		568
Operational Test of the Rudder Control System		569
Functional Test of the Rudder Control System		571
Functional Test of the Rudder Control System		576
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Tension Check of the Rudder Control Cables		
PCU Load Limiter Breakout Check		606
Rudder Backlash Check		610
Rudder Feel Force Check		618
Detailed Inspection of the Rudder System		622
Mechanical Control Path		
Detailed Inspection of the Rudder System		633
Mechanical Control Path (Avionics		
Compartments and Non-Pressurized Areas)		
Detailed Inspection of the Rudder System		642
Mechanical Control Path (Mid-Fuselage Under		
Floor and the ECS and Baggage Compartments)		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
RUDDER PEDAL ASSEMBLY	27-21-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Rudder Pedal Assembly		
Installation of the Rudder Pedal Assembly		410
Removal of the Rudder Pedals		416
Installation of the Rudder Pedals		419
Removal of the Rudder Pedal Console		421
Installation of the Rudder Pedal Console		422
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Alternative Method for the Adjustment of the Position of the Rudder Pedals		
PIVOT ASSEMBLY, FORWARD	27-21-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Forward Pivot Assembly		
Installation of the Forward Pivot Assembly		408
FORCE SENSOR, RUDDER	27-21-06	
Removal/Installation		401
Effectivity: ON A/C 7673-7699, 7701-7704, 7707-7731, 7733-7737, 7739-7745, 7747-7784, 7786-7850, 7852-7861, 7863, 7865, 7867-7900, 7903-7909, 7911-7914, 7916-7949, 7951-7972, 7974, 7976-7980, 7982-7983, 7985-7988, 8000-8007, 8009, 8011-8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Removal of the Rudder Force Sensor		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Installation of the Rudder Force Sensor		405
Adjustment/Test		501
Effectivity: ON A/C 7673-7699, 7701-7704, 7707-7731, 7733-7737, 7739-7745, 7747-7784, 7786-7850, 7852-7861, 7863, 7865, 7867-7900, 7903-7909, 7911-7914, 7916-7949, 7951-7972, 7974, 7976-7980, 7982-7983, 7985-7988, 8000-8007, 8009, 8011-8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Functional Test of the Rudder Force Sensor		
FEEL UNIT, PRIMARY	27-21-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Primary Feel Unit		
Installation of the Primary Feel Unit		406
QUADRANT, FORWARD	27-21-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Forward Quadrant		
Installation of the Forward Quadrant		406
QUADRANT, AFT RUDDER	27-21-25	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Aft Rudder Quadrant		
Installation of the Aft Rudder Quadrant		404

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
LOAD LIMITER (AFT ANTIJAM MECHANISM)	27-21-30	
Removal/Installation		
Effectivity: ON A/C ALL		
General		
Removal of the Load Limiter (Aft Anti-Jam Mechanism)		
Installation of the Load Limiter (Aft Anti-Jam Mechanism)		404
FEEL UNIT, SECONDARY	27-21-35	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Secondary Feel Unit		
Installation of the Secondary Feel Unit		404
LOAD LIMITER 2 (TRIM INPUT AREA)	27-21-40	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Load Limiter 2 (Trim Input Area)		
Installation of the Load Limiter 2 (Trim Input Area)		405
TORQUE TUBE, POWER CONTROL UNIT (PCU) INPUT	27-21-45	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Torque Tube Assembly		
Installation of the Torque Tube Assembly		405



<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
LOAD LIMITER, POWER CONTROL UNIT (PCU)	27-21-55	
INPUT		
Removal/Installation		
Effectivity: ON A/C ALL		
General		
Removal of the Load Limiter		
Installation of the Load Limiter		405
RUDDER TRIM SYSTEM	27-22-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Rudder Trim Actuator		
Operation		
Component Location Index		
RUDDER TRIM ACTUATOR	27-22-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Rudder Trim Actuator		
Installation of the Rudder Trim Actuator		405
Removal of the Yaw Damper System		408
Installation of Yaw Damper System		416
RUDDER POWER CONTROL SYSTEM	27-23-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Operation		2
Component Location Index		
POWER CONTROL UNIT (PCU), RUDDER	27-23-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Rudder PCU		
Installation of the Rudder PCU		407
Removal of the Rudder Centering Mechanism		412
Installation of the Rudder Centering Mechanism		417
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Leakage Test of the Rudder PCU		
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Rudder PCU Rod End		
Spherical Ball		
Detailed Inspection of the Rudder PCU Rod End		607
Spherical Ball		
RUDDER CONTROL SURFACE SYSTEM	27-24-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Rudder		
Rudder Position Transmitter		
Operation		
Component Location Index		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
RUDDER	27-24-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Rudder		
Installation of the Rudder		409
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Rudder Attachments and Clearances		
TRANSMITTER, RUDDER POSITION	27-24-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Transmitter		
Installation of the Transmitter		405
Removal of the Transmitter Connecting Link		407
Installation of the Transmitter Connecting Link		410
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Rudder Position Transmitter		
Adjustment of the Rudder Position Transmitter		504
Adjustment and Test of the Rudder Pedal RVDT's		509
ELEVATOR	27-30-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Description		
Elevator Control System		
Elevator Disconnect System		
Elevator Power–Control System		
Elevator Surface System		2
Stall Protection System		
Operation		
ELEVATOR CONTROL SYSTEM	27–31–00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Elevator Control Columns		
Torque Tube Assembly		
Forward Cable Quadrants		
Aft Cable Quadrants		
Pitch Feel Control Unit		2
Pitch Feel Simulators		
Pitch Feel Linear Actuator		
Elevator Load Limiter		
Jam–Tolerant Mechanism		
Operation		
Component Location Index		3
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Rigging of the Control Column Control Rod		
Rigging of the Pitch Feel System		506
Rigging of the Gain Change and Centering		511
Mechanism		
Rigging of the Load Limiter		518



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Rigging of the PCU Input and Centering Mechanisms		522
Rigging of the PCU Input Torque Tube Stops		528
Rigging of the PCU Input Linkage Balance Springs		533
Rigging of the Elevator Control Cable Circuits		538
Rigging of the Control Column Stops		555
Operational Test of the Elevator Control System		561
Operational Test of the Pitch Feel System		564
Operational Test of the Elevator Control System		566
Functional Test of the Elevator Control System		569
Functional Test of the Pitch Feel System		575
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Operational Check of the PCU Jam-Tolerant Mechanism		
Elevator and Autopilot Control Cable Tension Check		606
Elevator Backlash Check		609
Elevator Backlash Check		617
Stick Pusher Cable Circuit Tension Check		625
Control Column Feel Force and Centering Check		628
Control Column System Resolution		638
Detailed Inspection of the Elevator-System Mechanical Control-Path		640

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Detailed Inspection of the Elevator–System		654
Mechanical Control–Path (Avionics and Aft Equipment Compartments and Non–Pressurized Areas)		
Detailed Inspection of the Elevator–System		664
Mechanical Control–Path (Mid–Fuselage Under Floor and the ECS and Baggage Compartments)		
CONTROL COLUMN	27–31–01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Control Column		
Installation of the Control Column		405
FORCE SENSOR, ELEVATOR	27–31–02	
Removal/Installation		401
Effectivity: ON A/C 7673–7699, 7701–7704, 7707–7731, 7733–7737, 7739–7745, 7747–7784, 7786–7850, 7852–7861, 7863, 7865, 7867–7900, 7903–7909, 7911–7914, 7916–7949, 7951–7972, 7974, 7976–7980, 7982–7983, 7985–7988, 8000–8007, 8009, 8011–8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Removal of the Elevator Force Sensor		
Installation of the Elevator Force Sensor		405
Adjustment/Test		501
Effectivity: ON A/C 7673–7699, 7701–7704, 7707–7731, 7733–7737, 7739–7745, 7747–7784, 7786–7850, 7852–7861, 7863, 7865, 7867–7900, 7903–7909, 7911–7914, 7916–7949, 7951–7972, 7974, 7976–7980, 7982–7983, 7985–7988, 8000–8007, 8009, 8011–8118 and ON A/C 7862, 7864 Post K601R50206		
General		
Functional Test of the Elevator Force Sensor		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
FORWARD QUADRANT	27-31-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Forward Quadrant		
Installation of the Forward Quadrant		405
AFT QUADRANT, ELEVATOR	27-31-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Elevator Aft Quadrant		
Installation of the Elevator Aft Quadrant		408
Removal of the Elevator Servo Cables		412
Installation of the Elevator Servo Cables		417
SIMULATOR UNIT, PITCH FEEL	27-31-20	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Pitch Feel Simulator Unit		
Installation of the Pitch-Feel Simulator Unit		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Functional Test of the Pitch Feel Simulator Pilot		
Input Lever		
CONTROL UNIT, PITCH FEEL	27-31-21	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Pitch Feel Control Unit		
Installation of the Pitch Feel Control Unit		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Pitch Feel Control Unit		
ACTUATOR, LINEAR PITCH FEEL	27-31-23	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Linear Pitch Feel Actuator		
Installation of the Linear Pitch Feel Actuator		404
LOAD LIMITER	27-31-25	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Load Limiter		
Installation of the Load Limiter		404
JAM TOLERANT MECHANISM	27-31-30	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Jam Tolerant Mechanism		
Installation of the Jam Tolerant Mechanism		404
MECHANICAL PATH CONTROL ELEMENTS	27-31-35	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the elevator control lever assembly		
Installation of the elevator control lever assembly		405
ELEVATOR DISCONNECT SYSTEM	27-32-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		
Pitch Disconnect Mechanism		
Pitch Disconnect Handle		
Operation		
Component Location Index		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Elevator Disconnect System		
Operational Test of the Elevator Disconnect System		503
Functional Test of the Elevator Disconnect System		506
Rigging of the Elevator Disconnect System		512
ELEVATOR DISCONNECT MECHANISM	27-32-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Elevator Disconnect Mechanism		
Installation of the Elevator Disconnect Mechanism		404

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
ASSEMBLY, PITCH DISCONNECT HANDLE	27-32-05	
Removal/Installation		
Effectivity: ON A/C ALL		
General		
Removal of the Pitch Disconnect Handle		
Assembly		
Installation of the Pitch Disconnect Handle		405
Assembly		
ELEVATOR POWER CONTROL UNIT (PCU)	27-33-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Power Control Unit		
Operation		2
Component Location Index		
POWER CONTROL UNIT (PCU), ELEVATOR	27-33-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Elevator PCU		
Installation of the Elevator PCU		406
Removal of the Elevator Centering Mechanism		410
Installation of the Elevator Centering Mechanism		414
Disconnection of the Elevator PCU		416
Connection of the Elevator PCU		419
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Leakage Test of the Elevator PCU		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Elevator PCU Rod End		
Spherical Ball		
Detailed Inspection of the Elevator PCU Rod End		606
Spherical Ball		
ELEVATOR CONTROL SURFACE SYSTEM	27-34-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Elevator		
Flutter Damper		
Elevator Position Transmitter		
Operation		
Component Location Index		2
ELEVATOR	27-34-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Elevator		
Installation of the Elevator		409
FLUTTER DAMPER	27-34-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Elevator Flutter Damper		
Installation of the Elevator Flutter Damper		405

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Elevator Flutter–Damper Shear Pins		408
Installation of the Elevator Flutter–Damper Shear Pins		411
Disconnection of the Elevator Flutter Damper		413
Connection of the Elevator Flutter Damper		416
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Fluid Level Transmitter Switch		
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Elevator Flutter Damper		
ELEVATOR POSITION TRANSMITTER	27–34–10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Elevator Position Transmitter.		
Installation of the Elevator Position Transmitter.		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Elevator Position Transmitter		
Adjustment of the Elevator Position Transmitter		504



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
STALL PROTECTION SYSTEM	27-35-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
SPS Computer		
AOA Transducer		
Stick Shaker Unit		2
Stick Pusher Assembly		
Mach Transducers		
Stick Pusher ON/OFF Switch		
Warning Test Switch/Lights		3
Operation		
Component Location Index		4
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Angle-of-Attack Vanes		
Detailed Inspection of the Angle-of-Attack Vanes		602
COMPUTER, STALL PROTECTION	27-35-01	
Maintenance Practices		201
Effectivity: ON A/C ALL		
General		
Stall Protection Computer Memory Reset		
Procedure		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Stall Protection Computer		
Installation of the Stall Protection Computer		404
Adjustment/Test		501

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Effectivity: ON A/C ALL		
General		501
Operational Test of the Stall Protection System (Pre-Flight Test)		
Operational Test of the Stall Protection Computer (Autopilot Interface)		509
Operational Test of the Stall Protection Computer (Flap Position Transmitter Interface)		516
Operational Test of the Stall Protection Computer (Autopilot Interface)		520
Operational Test of the Stall Protection Computer (Flap Position Transmitter Interface)		527
Functional Test of the Stall Protection Computer (Green Line Accuracy)		531
TRANSDUCER, ANGLE-OF-ATTACK	27-35-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Angle-of-Attack Transducer		
Installation of the Angle-of-Attack Transducer		408
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Angle-of-Attack Transducer		
UNIT, STICK SHAKER	27-35-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Stick Shaker Unit		
Installation of the Stick Shaker Unit		404
ACTUATOR, STICK PUSHER	27-35-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Stick Pusher Actuator		
Installation of the Stick Pusher Actuator		404
CAPSTAN, STICK PUSHER	27-35-20	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Stick Pusher Capstan		
Installation of the Stick Pusher Capstan		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Functional Check of the Stick-Pusher Capstan		
Shaft		
Functional Check of the Stick-Pusher Capstan		505
Shaft		
Rigging of the Stick Pusher Cable Circuit		509
TRANSDUCER, MACH	27-35-25	
Removal/Installation		401
Effectivity: ON A/C 7003-7067, 7069-7890		
General		
Removal of the Mach Transducer		
Installation of the Mach Transducer		404
Adjustment/Test		501

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Effectivity: ON A/C 7003–7067, 7069–7890		
General		501
Functional Test of the Mach Transducer		
SWITCH/LIGHT, STALL	27–35–35	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the STALL Switch/Light		
Installation of the STALL Switch/Light		405
SWITCH, STICK PUSHER "ON/OFF"	27–35–40	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Stick Pusher ON/OFF Switch		
Installation of the Stick Pusher ON/OFF Switch		403
HORIZONTAL STABILIZER	27–40–00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		
Horizontal–Stabilizer Control System		
Horizontal–Stabilizer Trim–Actuating System		
Horizontal–Stabilizer Control–Surface System		
Operation		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Horizontal Stabilizer Trim System		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Operational Test of the Horizontal Stabilizer Trim System		507
Operational Test of the Horizontal Stabilizer Trim Control System Switches		513
Functional Test of the Horizontal Stabilizer Trim System		518
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Backlash Check of the Pitch Trim Actuator		
Horizontal Stabilizer Fits and Clearance Check		606
Frictional Load Check of the Horizontal Stabilizer Hinge Bushings		609
HORIZONTAL STABILIZER CONTROL SYSTEM	27-41-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Horizontal-Stabilizer Trim-Control Unit		
Pilot's Manual Trim Switch		2
Pilot's Manual-Disconnect Switch		
Trim Channel-Engage Switch		
Mach-Trim Engage Switch		
Pitch-Trim Control Panel		
Operation		
Component Location Index		5
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Functional Check (Ground Maintenance Test) of the HSTCU		
Self-Test of the Horizontal Stabilizer Trim Control Unit (HSTCU)		506
CONTROL UNIT, HORIZONTAL STABILIZER TRIM (HSTCU)	27-41-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Horizontal Stabilizer Trim Control Unit		
Installation of the Horizontal Stabilizer Trim Control Unit		404
SWITCH, PITCH TRIM	27-41-05	
Servicing		301
Effectivity: ON A/C ALL		
General		
Lubrication of the Horizontal Stabilizer Pitch Trim Switches		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Pitch Trim Switch		
Installation of the Pitch Trim Switch		407
SWITCH/LIGHT, STAB TRIM CHANNEL ENGAGE	27-41-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Stab Trim Channel Engage Switch		

CSP A-001 – Master
EFFECTIVITY: **ON A/C ALL



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Installation of the Stab Trim Channel Engage Switch		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Stab Trim Channel Engage Switch		
SWITCH/LIGHT, MACH TRIM ENGAGE	27-41-20	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Mach-Trim Engage Switch/Light		
Installation of the Mach-Trim Engage Switch/Light		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Mach Trim Engage Switch/Light		
PANEL ASSEMBLY, STAB TRIM/MACH TRIM	27-41-25	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Panel Assembly		
Installation of the Panel Assembly		404
SWITCH, PITCH DISCONNECT – REMOVAL/INSTALLATION	27-41-30	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Pitch Disconnect Switch		
Installation of the Pitch Disconnect Switch		407
Discard of the Horizontal Stabilizer Pitch Trim Disconnect Switch		412
HORIZONTAL STABILIZER TRIM ACTUATING SYSTEM	27-42-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Motor Control Unit		
Horizontal-Stabilizer Trim Actuator (HSTA)		
Operation		2
Component Location Index		3
ACTUATOR, HORIZONTAL STABILIZER TRIM (HSTA)	27-42-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the HSTA		
Installation of the HSTA		411
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the HSTA Secondary Load Path Indicator		



<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
MOTOR CONTROL UNIT, HORIZONTAL STABILIZER	27-42-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Horizontal Stabilizer Motor Control Unit		
Installation of the Horizontal Stabilizer Motor Control Unit		404
HORIZONTAL STABILIZER CONTROL SURFACE SYSTEM	27-43-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Horizontal Stabilizer		
Operation		
Component Location Index		
FLAPS	27-50-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		
Flap Control System		
Flap Power-Drive System		
Flap Actuating-Mechanism System		
Flap Control-Surface System		
Flap-Position Indicating System		
Operation		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
FLAP CONTROL SYSTEM	27-51-00	
Description and Operation		
Effectivity: ON A/C ALL		
General		
Component Details		
Flap Control Lever		
Flap Electronic–Control Unit		
Brake and Position Sensor Unit		2
Skew Detection System		
Operation		
Operation of the Skew Detection Unit (SDU):		3
Component Location Index		4
CONTROL LEVER, FLAP	27-51-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Flap Control Lever		
Installation of the Flap Control Lever		406
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Self–Test of the Flap Control Lever		
ELECTRONIC CONTROL UNIT (FECU), FLAP	27-51-05	
Maintenance Practices		201
Effectivity: ON A/C ALL		
General		
FECU Operational Procedures		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the Flap Electronic Control–Unit		
Installation of the Flap Electronic Control–Unit		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Functional Check of the Flap Electronic Control Unit		
FECU Flap System Test (Test 1)		506
FECU Test (Test 6)		508
BRAKE AND POSITION SENSOR UNIT	27–51–10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Brake and Position Sensor Unit		
Installation of the Brake and Position Sensor Unit		409
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Self–Test of the BPSU (Brake Holding Test)		
BITE Test of the BPSU (FECU Test 2&3)		505
Rigging Check of the BPSUs		509
Rigging of the BPSUs		518
Manual Brake Holding Test		530
SKUEW DETECTION SYSTEM, FLAP	27–51–15	
Removal/Installation		401
Effectivity: ON A/C 7901–7990, 8000–8009, 8011–8400 and ON A/C 7003–7067, 7069–7900, 8010 Post SB601R–27–116		
General		
Removal of the Skew Detection Unit		
Installation of the Skew Detection Unit		404

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the No 3. Flap Actuator Skew Detection Sensor		406
Installation of the No. 3 Flap Actuator Skew Detection Sensor		409
Removal of the No. 4 Flap Actuator Skew Detection Sensor		411
Installation of the No. 4 Flap Actuator Skew Detection Sensor		414
Deactivation of the Skew Detection System		416
Reactivation of the Skew Detection System		418
Adjustment/Test		501
Effectivity: ON A/C 7901–7990, 8000–8009, 8011–8400 and ON A/C 7003–7067, 7069–7900, 8010 Post SB601R–27–116		
General		
Operational Test of the Skew Detection System (IBIT)		
Operational Test of the Skew Detection System (IBIT)		506
FLAP POWER DRIVE SYSTEM	27–52–00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Power Drive Unit		
Motor and Brake Assembly		
Operation		2
Component Location Index		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
POWER DRIVE UNIT (PDU), FLAP	27-52-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the PDU		
Installation of the PDU		404
MOTOR AND BRAKE ASSEMBLY	27-52-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Motor and Brake Assembly		
Installation of the Motor and Brake Assembly		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Self-Test of the Motor and Brake Assembly		
FLAP ACTUATING MECHANISM SYSTEM	27-53-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Flexible Drive Shafts		
Flap Actuators		
Operation		2
Component Location Index		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Synchronization of the Actuators		
Inspection/Check		601

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Effectivity: ON A/C ALL		
General		601
Low-Temperature Torque Check of the Flap Actuator		
Torque Check of the Flap Drive System		608
Linear Backlash Check of the Flap Actuator		613
Leak Check of the Flap Actuator Gearbox		619
ACTUATOR, INBOARD FLAP	27-53-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Inboard Flap Actuator		
Installation of the Inboard Flap Actuator		410
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
General Visual Inspection of the Visible Portion of the Attachment on the Inboard Flap Actuators for Condition and Security		
Detailed Inspection of the Inboard Flap-Actuator Fittings and Trunnion Housings		605
Backlash Check of the Inboard Flap Actuators		608
Detailed Inspection of the Inboard Flap Actuator for Structural Integrity and External Disconnect		617
Inboard Flap Actuator Internal Disconnect Check		620
Flap Actuator-Ballnut Endplay Measurement for the Flap Actuators		625
Detailed Inspection of the Inboard Flap Actuator		630
Flap Actuator-Ballnut Endplay Measurement for the Flap Actuators		631



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
ACTUATOR, OUTBOARD FLAP	27-53-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Outboard Flap Actuator		
Installation of the Outboard Flap Actuator		409
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Outboard Flap Actuator		
Fittings and Trunnion Housings		
Backlash Check of the Outboard Flap Actuators		604
Detailed Inspection of the Outboard Flap Actuator		613
for Structural Integrity and External Disconnect.		
Visual Inspection of the Outboard Flap Actuator		616
for Internal Ballnut Disconnect		
FLEXIBLE DRIVE-SHAFT ASSEMBLY	27-53-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of Flexible Drive Shaft No. 1 (PDU to		
Inboard Flap)		
Installation of Flexible Drive Shaft No. 1 (PDU to		410
Inboard Flap)		
Removal of Flexible Drive Shaft No. 2 (Inboard		419
Flap)		
Installation of Flexible Drive Shaft No. 2 (Inboard		433
Flap)		
Removal of Flexible Drive Shaft No. 3 (Inboard to		447
Outboard Flap)		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Installation of Flexible Drive Shaft No.3 (Inboard to Outboard Flap)		456
Removal of Flexible Drive Shaft No. 4 (Outboard Flap)		465
Installation of Flexible Drive Shaft No. 4 (Outboard Flap)		474
Removal of Flexible Drive Shaft No. 5 (Outboard Flap to BPSU)		483
Installation of Flexible Drive Shaft No. 5 (Outboard Flap to BPSU)		490
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Pressure Test of the Flexible Drive–Shaft Assembly		
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Detailed Inspection of the Flexible Drive–Shaft		
Detailed Inspection of the Flexible Drive–Shaft Core		608
Damage Inspection of the Heat–Shrinkable Covering of the Flexible Drive–Shaft		618
Repairs		801
Effectivity: ON A/C 7003–7067, 7069–7225		
General		
Repair of the Heat Shrinkable Covering of the Flexible Drive Shaft		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
FLAP CONTROL SURFACE SYSTEM	27-54-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Inboard Flaps		
Movable Leading-Edge Vanes		
Movable Vane Actuators		
Outboard Flaps		
BUTE Doors		2
BUTE Door Actuators		
Operation		
Component Location Index		
Maintenance Practices		201
Effectivity: ON A/C ALL		
General		
Electrical Extension of the Flaps		
Electrical Retraction of the Flaps		203
Manual Operation of the Flaps with the BPSUs		205
Connected and Electrical Power Available		
Manual Operation of the Flaps Without Electrical		211
Power (BPSUs Disconnected)		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Deactivation of the Flap Position Potentiometer		
Reactivation of the Flap Position Potentiometer		405
Replacement of the Sealing Tape to the Openings		408
on the Tips of the Flap Assemblies and Flap		
Vane Assemblies		
Adjustment/Test		501
Effectivity: ON A/C ALL		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
General		501
Rigging of the Flaps		
Operational Test of the Flaps		517
Functional Test of the Flaps		520
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Rigging Check of the Flaps with the Flap Profile		
Check Boards		
Detailed Inspection of the Flap Control System		612
FLAP, INBOARD	27-54-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Inboard Flap		
Installation of the Inboard Flap		406
Summary of Reports of Non-Conformance for		413
27-54-01 Removal/Installation Pageblock		
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Springback Check of the Inboard Flap		
Cleaning/Painting		701
Effectivity: ON A/C ALL		
General		
Application of the Teflon Abrasion Strip to the		
Inboard Flap		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
FLAP, OUTBOARD	27-54-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Outboard Flap		
Installation of the Outboard Flap		406
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Springback Check of the Outboard Flap		
Cleaning/Painting		701
Effectivity: ON A/C ALL		
General		
Application of the Teflon Abrasion Strip to the Outboard Flap		
MOVEABLE VANE	27-54-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Inboard Flap Vane		
Installation of the Inboard Flap Vane		405
ACTUATOR, MOVEABLE VANE	27-54-15	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Inboard Flap Vane Actuator		
Installation of the Inboard Flap Vane Actuator		408
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Adjustment of the Beam Freeplay of the Moveable Vane Actuator		
Adjustment of the Extension Distance of the Moveable Vane Actuator		505
ACTUATOR SPRING	27-54-16	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Inboard Flap Vane Actuator Spring		
Installation of the Inboard Flap Vane Actuator Spring		405
DOOR, BENT-UP TRAILING EDGE	27-54-20	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the BUTE Door Assembly		
Installation of the BUTE Door		405
Replacement of the BUTE Door Rollers		407
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Rigging of the Bent-Up Trailing Edge (BUTE) Door		
ACTUATOR, BENT-UP TRAILING EDGE (BUTE) DOOR	27-54-25	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Removal of the BUTE Door Actuator		
Installation of the BUTE Door Actuator		405
FLAP POSITION INDICATING SYSTEM	27-55-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Operation		
Component Location Index		2
TRANSMITTER, FLAP POSITION	27-55-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Flap Position Transmitter		
Installation of the Flap Position Transmitter		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Flap Position Transmitter		502
Rigging of the Flap Position Transmitter		506
Adjustment of the Flap Position Transmitter		510
Potentiometer		
SPOILERS	27-60-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Description		
Spoiler Control System		
Flight Spoiler/Spoileron Actuating-System		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Ground Spoiler Actuating–System		
Flight Spoiler/Spoileron Surface–System		
Ground Spoiler Control Surface–System		2
Operation		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Installation of the Flight Spoiler Teflon Pads		
Installation of the Spoileron Teflon Pads		407
Installation of the Ground Spoiler Teflon Pads		413
Installation of the Polyester Film Decal/Label		419
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Clearance Check of the Proximity Sensor		
Detailed Inspection of the Spoileron, Flight Spoiler and Ground Spoiler Surfaces		605
Detailed Inspection of the Spoiler PCUs, Ground Spoiler Actuators and Ground Spoiler Manifolds		608
SPOILER CONTROL SYSTEM	27-61-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Spoilers Electronic Control–Unit		
Flight Spoiler Control Lever		4
Roll Control Input–Module		5
Ground Spoiler Arming Switch		
Roll Priority Switches		
Ground–Spoiler Proximity Sensor		
Spoiler–PCU Circuit–Breaker Panels		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Operation		6
Flight Spoilers and Spoilerons		
Roll Priority Operation		9
EICAS Indications		
PCU Circuit Breaker Operation		13
Component Location Index		14
Component Location Index		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Spoiler Control System		
With the Databus Tester		
Functional Test of the Spoiler Control System		505
Functional Check of the Spoiler Ground–Lift–		518
Dumping Function		
Functional Test of the Spoiler Ground Lift		525
Dumping Function		
CONTROL LEVER, FLIGHT SPOILER	27-61-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Flight Spoiler Control Lever		
Installation of the Flight Spoiler Control Lever		404
SPOILER ELECTRONIC CONTROL UNITS (SECU)	27-61-05	
Maintenance Practices		201
Effectivity: ON A/C ALL		
General		
Reading and Erasing the SECU Fault Log		
Removal/Installation		401
Effectivity: ON A/C ALL		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
General		401
Removal of the SECU		
Installation of the SECU		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Post-Landing Operational Test of the SECU		
Self-Test of the SECU (SECU BITE)		504
Functional Test of the SECU (SYST BITE)		510
Operational Check of the Spoileron and Flight		523
Spoiler Autostow Circuitry		
ROLL CONTROL INPUT MODULE (RCIM)	27-61-10	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the RCIM		
Installation of the RCIM		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the RCIM		
PANEL ASSEMBLY, SPOILERS/THRUST	27-61-15	
REVERSER		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Spoilers/Thrust Reverser Panel		
Assembly		
Installation of the Spoilers/Thrust Reverser Panel		404
Assembly		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
SWITCH, ROLL PRIORITY	27-61-20	
Removal/Installation		
Effectivity: ON A/C ALL		
General		
Removal of the Roll Priority Switch		
Installation of the Roll Priority Switch		405
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Roll Priority System		
 FLIGHT SPOILER/SPOILERON ACTUATING SYSTEM	27-62-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Power Control Unit		
Operation		2
Component Location Index		
 POWER CONTROL UNIT (PCU), FLIGHT SPOILER/SPOILERON	27-62-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Flight Spoiler/Spoileron PCU		
Installation of the Flight Spoiler/Spoileron PCU		406
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the PCU		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Leak Test of the PCU		505
Rigging of the Flight Spoiler/Spoileron PCU		509
Resistance/Insulation Test of the PCU Bypass Valve Solenoid		516
Resistance Test of the PCU Electrical Circuits		520
Ratiometric Value Test of the PCU LVDT		524
Summary of Reports of Non-Conformance for 27-62-01 Adjustment/Test Pageblock		531
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Rigging Check of the Flight Spoiler/Spoileron PCU		
Summary of Reports of Non-Conformance for 27-62-01 Inspection/Check Pageblock		605
GROUND SPOILER ACTUATING SYSTEM	27-63-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Ground Spoiler Actuator		
Ground-Spoiler Manifold Assembly		
Operation		2
Component Location Index		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Hydraulic Lock Circuit		



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
ACTUATOR, GROUND SPOILER	27-63-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Ground Spoiler Actuator		
Installation of the Ground Spoiler Actuator		406
Summary of Reports of Non-Conformance for		410
27-63-01 Removal/Installation Pageblock		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Rigging of the Ground Spoiler Actuator		
Operational Test of the Ground Spoiler Actuator		508
Summary of Reports of Non-Conformance for		510
27-63-01 Adjustment/Test Pageblock		
CONTROL VALVE MANIFOLD, GROUND SPOILER	27-63-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Ground-Spoiler Manifold		
Assembly		
Installation of the Ground-Spoiler Manifold		406
Assembly		
SWITCH, GROUND SPOILER PROXIMITY	27-63-07	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Ground Spoiler Proximity Sensor		
Installation of the Ground Spoiler Proximity		405
Sensor		

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
FLIGHT SPOILER/SPOILERON SURFACE SYSTEM	27-64-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Flight Spoiler/Spoileron		
Component Location Index		
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Flight Spoiler/Spoileron		
Flight Spoiler/Spoileron Travel Check		505
SPOILERON	27-64-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Spoileron		
Installation of the Spoileron		406
Summary of Reports of Non-Conformance for		412
27-64-01 Removal/Installation Pageblock		
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Backlash Check of the Spoileron		
FLIGHT SPOILER	27-64-05	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Flight Spoiler		
Installation of the Flight Spoiler		408



AIRCRAFT MAINTENANCE MANUAL

<u>Subject</u>	<u>Chapter Section Subject</u>	<u>Page</u>
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Backlash Check of the Flight Spoiler		
GROUND SPOILER SURFACE SYSTEM	27-65-00	
Description and Operation		1
Effectivity: ON A/C ALL		
General		
Component Details		
Ground Spoiler		
Component Location Index		
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Deactivation of the Inboard or Outboard Ground Spoiler Pair		
Reactivation of the Inboard or Outboard Ground Spoiler Pair		404
Adjustment/Test		501
Effectivity: ON A/C ALL		
General		
Operational Test of the Ground Spoiler Control System		
Ground Spoiler Travel Check		510
GROUND SPOILER	27-65-01	
Removal/Installation		401
Effectivity: ON A/C ALL		
General		
Removal of the Ground Spoiler		
Installation of the Ground Spoiler		406

<u>Subject</u>	Chapter Section <u>Subject</u>	<u>Page</u>
Inspection/Check		601
Effectivity: ON A/C ALL		
General		
Backlash Check of the Ground Spoilers		

**ON A/C ALL

POWER CONTROL UNIT (PCU), RUDDER – INSPECTION/CHECK

1. General

- A. The maintenance procedure that follows is for the detailed inspection of the rudder PCU rod end spherical ball (written as the "spherical ball" in this procedure). The spherical balls are installed on the PCUs in the vertical stabilizer. This procedure is applicable to all spherical balls.

TASK 27-23-01-220-801

Detailed Inspection of the Rudder PCU Rod End Spherical Ball

1. Job Set-Up Information

Subtask 27-23-01-943-003

A. Tools and Equipment

REFERENCE	DESIGNATION
GSB 1200015 OR Equivalent	Scissor Lift – Self Propelled Aerial
Commercially Available	Wrench – Torque, 0 to 150 lbf.in (0 to 17 N.m)

Subtask 27-23-01-944-002

B. Consumable Materials

REFERENCE	DESIGNATION
04-001	Grease
05-001	Cloth, cleaning, low-lint

Subtask 27-23-01-946-004

C. Reference Information

REFERENCE	DESIGNATION
TASK 12-00-06-863-802	Release Hydraulic Pressure – Systems No. 1 and No. 2
TASK 12-00-06-863-804	Release Hydraulic Pressure – System No. 3
TASK 12-00-07-861-801	Connect External AC Power
TASK 12-00-07-861-802	Remove External AC Power
TASK 24-00-00-910-801	Electrical/Electronic Safety Precautions
TASK 27-00-00-910-803	Flight-Control Safety Precautions
TASK 27-21-00-710-801	Operational Test of the Rudder Control System
TASK 27-23-01-000-801	Removal of the Rudder PCU
TASK 27-23-01-400-801	Installation of the Rudder PCU
TASK 29-00-00-910-801	Hydraulic Safety Precautions

AIRCRAFT MAINTENANCE MANUAL

REFERENCE	DESIGNATION
TASK 55-32-07-000-815	Removal of the Rudder-PCU Access Panel (325DR)
TASK 55-32-07-400-815	Installation of the Rudder-PCU Access Panel (325DR)
TASK 55-43-01-000-802	Removal of the Left Center Rudder-Hinge Access Panel (327BL)
TASK 55-43-01-400-802	Installation of the Left Center Rudder-Hinge Access Panel (327BL)
TASK 55-43-01-000-804	Removal of the Right Center Rudder-Hinge Access Panel (327BR)
TASK 55-43-01-400-804	Installation of the Right Center Rudder-Hinge Access Panel (327BR)

2. Job Set-Up

Subtask 27-23-01-910-005

- A. Make sure that the aircraft is in the standard configuration for maintenance.

■ Subtask 27-23-01-910-007

- B. Obey all the electrical/electronic safety precautions (Ref. TASK 24-00-00-910-801).

Subtask 27-23-01-910-006

- C. Obey all the flight-control safety precautions (Ref. TASK 27-00-00-910-803).

■ Subtask 27-23-01-910-015

- D. Obey all the hydraulic safety precautions (Ref. TASK 29-00-00-910-801).

Subtask 27-23-01-866-003

- E. Connect the external AC power (Ref. TASK 12-00-07-861-801).

- F. Set the rudder trim to neutral as follows:

- (1) On the center console, operate the RUD TRIM knob to put the rudder trim to neutral on the EICAS secondary-display status page (trim position pointer in green on the rudder-trim position scale).

- G. Set each yaw damper to its neutral position as follows:

- (1) Make sure that the YAW DAMPER amber caution message is shown on the EICAS.
- (2) Push and release the YD1 and YD2 engage switches on the yaw damper control-panel.
- (3) Make sure that the YAW DAMPER amber caution message is not shown.
- (4) Let 2 minutes go by. This will let the yaw dampers go to the neutral position.
- (5) Push and release the DISC switch on the yaw damper control-panel.

AIRCRAFT MAINTENANCE MANUAL

- (6) Make sure that the YAW DAMPER amber caution message is shown on the EICAS.

Subtask 27-23-01-863-004

- H. Release the pressure for hydraulic systems No. 1 and No. 2 (Ref. TASK 12-00-06-863-802).
- I. Release the pressure for hydraulic system No. 3 (Ref. TASK 12-00-06-863-804).
- J. Remove the external AC power (Ref. TASK 12-00-07-861-802).

Subtask 27-23-01-941-009

- K. Install warning placards on the pilot's and copilot's control columns to give a warnings not to operate or move the flight controls.

Subtask 27-23-01-941-010

- L. Install warning placards on the hydraulic control panel and at the external hydraulic-service connections to give a warnings not to pressurize the hydraulic system.

Subtask 27-23-01-865-007

- M. Open and tag the circuit breakers that follow:

CB PANEL	CB NO.	NAME	ZONE
CBP-1	G11	HYD SYST AC PUMP CONT 3B	221
CBP-1	G14	HYD SYST AC PUMP CONT 2	221
CBP-2	F6	RUDDER TRIM	222
CBP-2	G14	HYD SYST AC PUMP CONT 1	222
CBP-2	G15	HYD SYST PUMP CONT 3A	222

Subtask 27-23-01-010-004

- N. Remove the left center rudder-hinge access-panel 327BL (Ref. TASK 55-43-01-000-802).
- O. Remove the right center rudder-hinge access-panel 327BR (Ref. TASK 55-43-01-000-804).

Subtask 27-23-01-010-005

- P. If necessary, remove the rudder-PCU access panel 325DR (Ref. TASK 55-32-07-000-815).

3. Procedure

Subtask 27-23-01-220-002

Refer to Figure 601

AIRCRAFT MAINTENANCE MANUAL

A. Do the detailed inspection of the spherical ball (9) as follows:

(1) Disconnect each PCU (1) from the rudder surface as follows:

WARNING: MAKE SURE THAT YOU USE EYE PROTECTION WHEN YOU CUT THE COTTER PIN. IF YOU DO NOT DO THIS THE PIECES THAT BREAK OFF CAN CAUSE EYE INJURY.

- (a) Remove and discard the cotter pin (2).
- (b) Remove the nut (3) and the washer (4).
- (c) Hold the PCU (1) and remove the bolt (7) and the washer (6).
- (d) Remove the straight bushing (5).

(2) On the PCU (1), make sure spherical ball (9) rotates in the rod end assembly (8) as follows:

(a) With finger force, make sure spherical ball (9) rotates freely (no binding) in any direction in the rod end assembly (8).

NOTE: You can move the rudder surface fully right to get access to the spherical ball.

(b) If too much force is necessary to rotate the spherical ball (9) or binding/jam is observed do as follows:

- 1 Remove the affected PCU (Ref. TASK 27-23-01-000-801).
- 2 Install a new PCU (Ref. TASK 27-23-01-400-801).

(c) If the spherical ball (9) rotates freely do as follows:

- 1 Remove the spherical ball (9) from the rod end assembly (8).
- 2 Clean the inner race and spherical ball using a dry non-abrasive cloth.

NOTE: Cleaning fluids or other lubricants are not permitted.

- 3 Inspect interfaces of the spherical ball and inner race for pitting and/or corrosion.

(d) If pitting and/or corrosion is found do as follows:

- 1 Remove the affected PCU (Ref. TASK 27-23-01-000-801).
- 2 Install a new PCU (Ref. TASK 27-23-01-400-801).

(e) Connect the disconnected PCU (1) to the rudder surface as follows:

- 1 Re-insert the spherical ball (9) in the rod end assembly (8).

NOTE: Do not lubricate the spherical ball.

- 2 Using finger force, make sure that free rotation is maintained (no binding) in any direction.

- 3 Apply grease on the bushing (5).

- 4 Install the bushing (5).

- 5 Put the PCU piston rod in position.

- 6 Install the bolt (7), the washers (6) and (4), and the nut (3)

- 7 Torque the nut (3) from 50 to 120 lbf.in (5.65 to 13.56 N.m).

NOTE: Torque the nut to the minimum torque value and then increase the torque if necessary, to align the nut with the cotter pin hole.

8 Safety the nut (3) with the cotter pin (2).

4. Close Out

Subtask 27-23-01-410-003

A. Remove all tools, equipment, and unwanted materials from the work area.

Subtask 27-23-01-410-004

B. Install the left center rudder-hinge access-panel 327BL (Ref. TASK 55-43-01-400-802).

C. Install the right center rudder-hinge access-panel 327BR (Ref. TASK 55-43-01-400-804).

Subtask 27-23-01-010-008

D. If necessary, install the rudder-PCU access panel 325DR (Ref. TASK 55-32-07-400-815).

Subtask 27-23-01-865-006


E. Remove the tags and close the circuit breakers that follow:

CB PANEL	CB NO.	NAME	ZONE
CBP-1	G11	HYD SYST AC PUMP CONT 3B	221
CBP-1	G14	HYD SYST AC PUMP CONT 2	221
CBP-2	F6	RUDDER TRIM	222
CBP-2	G14	HYD SYST AC PUMP CONT 1	222
CBP-2	G15	HYD SYST PUMP CONT 3A	222


Subtask 27-23-01-710-003

F. Do an operational test of the rudder control system (Ref. TASK 27-21-00-710-801).

AIRCRAFT MAINTENANCE MANUAL

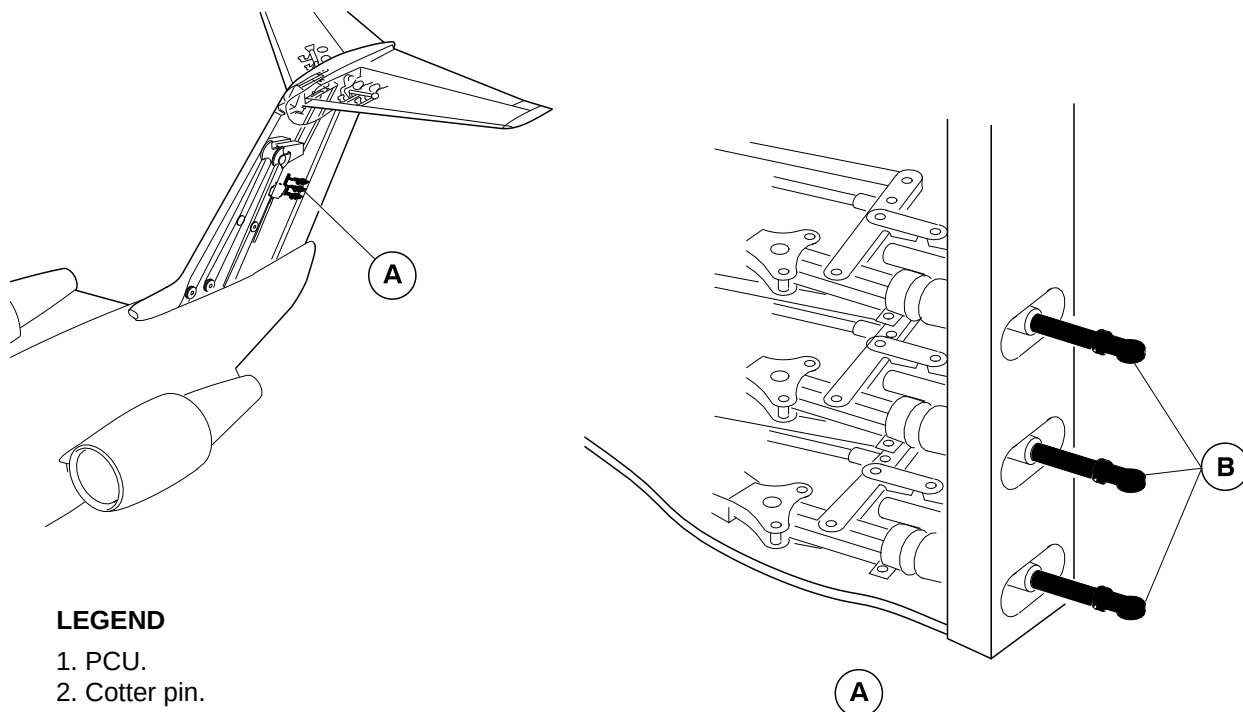
LEGEND

1. PCU.
2. Cotter pin.
3. Nut.
4. Washer.
5. Bushing.
6. Washer.
7. Bolt.
8. Rod end assembly.
9. Spherical Ball.

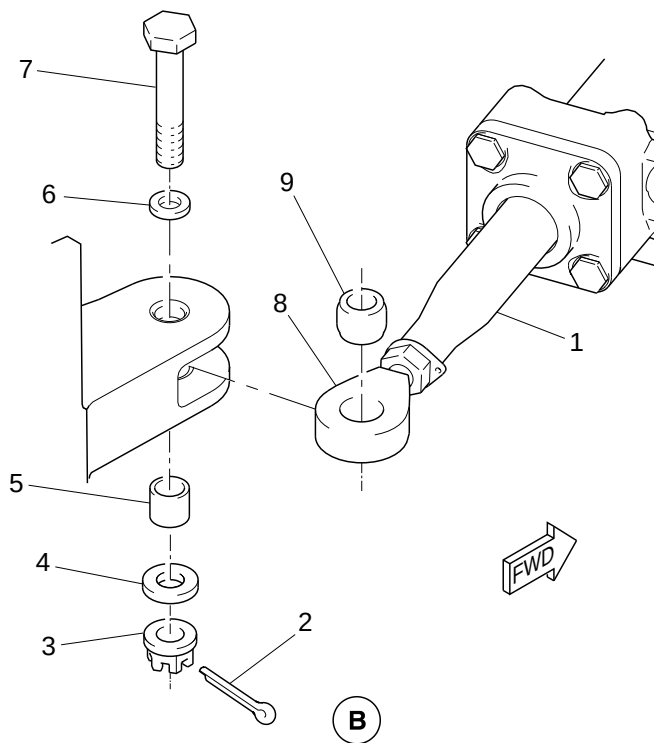

Rudder Power Control Unit – Inspection/Check
Figure 601

ram2723016_001.dg, hg, feb16/2015