

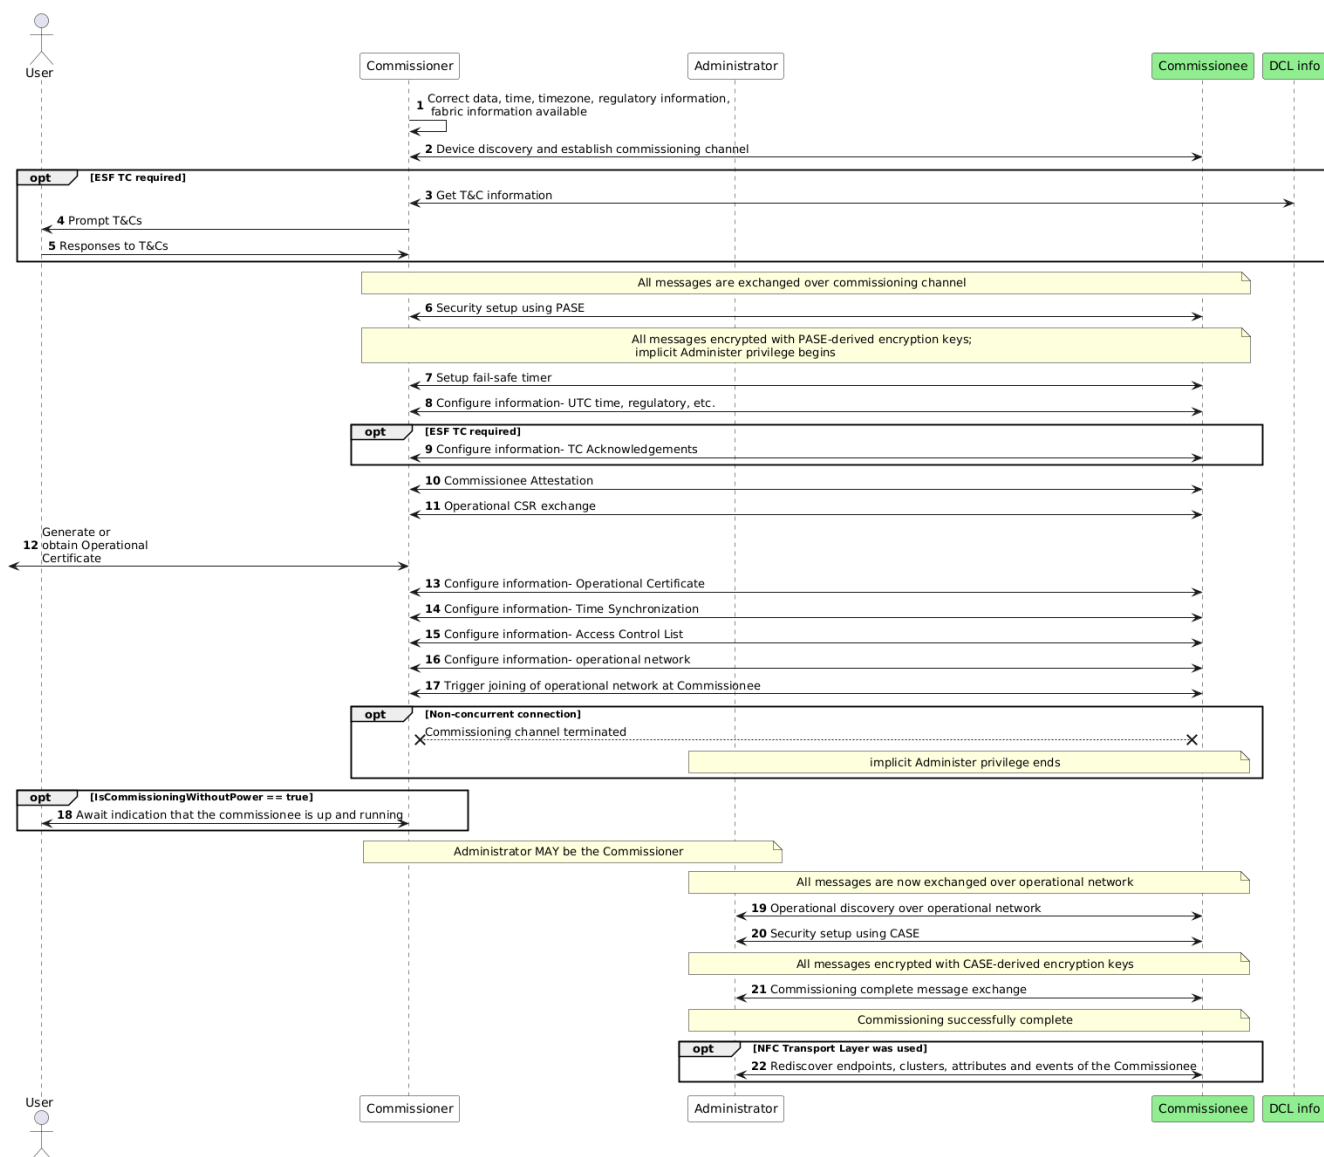


Figure 45. Commissioning flow diagram

5.6. Administrator Assisted Commissioning Flows

5.6.1. Introduction

In this method, a current Administrator of a Node first sends the [OpenCommissioningWindow](#) command to the Node over a [CASE](#) session. The new Administrator SHALL already have network connectivity and complete commissioning based on the two flows described below.

The commands for these flows are defined in [Section 11.19, “Administrator Commissioning Cluster”](#).

5.6.2. Basic Commissioning Method (BCM)

This method is **OPTIONAL** for Nodes and Administrators/Commissioners to implement. In this method, the current Administrator SHALL send the [OpenBasicCommissioningWindow](#) command to the Node over a [CASE](#) session. The Node SHALL advertise its presence over DNS-SD (see [Section 5.4.2.7, “Using Existing IP-bearing Network”](#) and [Section 4.3.1, “Commissionable Node Discovery”](#)) after receiving the [OpenBasicCommissioningWindow](#) command.