

method described in [Section 5.6.3, “Enhanced Commissioning Method \(ECM\)”](#). All Nodes SHALL support having a commissioning window opened using the mandatory method described in [Section 5.6.3, “Enhanced Commissioning Method \(ECM\)”](#).

An Administrator MAY open a commissioning window on a Node using the optional method described in [Section 5.6.2, “Basic Commissioning Method \(BCM\)”](#), if the Node supports the method.

12.5. Node Behavior

The Node SHALL host an [Section 11.19, “Administrator Commissioning Cluster”](#). The Cluster exposes commands which enable the entry into commissioning mode for a prescribed time, and which SHALL be invoked over a [CASE](#) secure channel. See [Section 11.19.8.1, “OpenCommissioningWindow”](#) and [Section 11.19.8.2, “OpenBasicCommissioningWindow”](#). During such a commissioning window, the Node SHALL maintain its existing configuration, such as its operational network connection and identities, and SHOULD allow normal interactions from other Nodes.

12.6. Fabric Synchronization

12.6.1. Introduction

The Fabric Synchronization feature enables commissioning of devices from one fabric to another without requiring user intervention for every device. It defines mechanisms that can be used by multiple ecosystems/controllers to communicate with one another to simplify the experience for users.

The following diagram shows how two ecosystems/controllers would communicate after a single setup sequence.

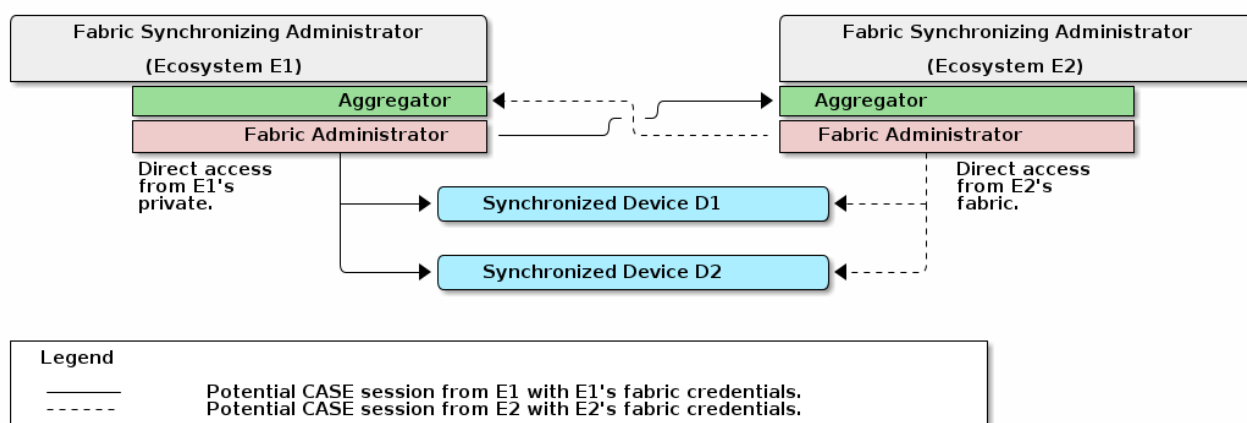


Figure 110. Example of two synchronized fabrics

12.6.2. Terminology

A component within an ecosystem which supports Fabric Synchronization will be referred to as a **Fabric Synchronizing Administrator**. This includes the Aggregator and Fabric Administrator node(s).