

- When there is any increase or decrease in the estimated time remaining that was due to progressing insight of the server’s control logic.

Changes to this attribute merely due to the normal passage of time with no other dynamic change of closure state SHALL NOT be reported.

As this attribute is not being reported during a regular countdown, clients SHOULD NOT rely on the reporting of this attribute in order to keep track of the remaining duration.

5.4.7.2. MainState Attribute

This attribute SHALL indicate the current operational state of the closure associated with the server.

NOTE

The MainState diagram is provided exclusively for informational purposes only and is an exemplary design of the internals of a closure implementation to help illustrate the aspects of function that are considered by the cluster’s normative text.

5.4.7.2.1. MainState Diagram

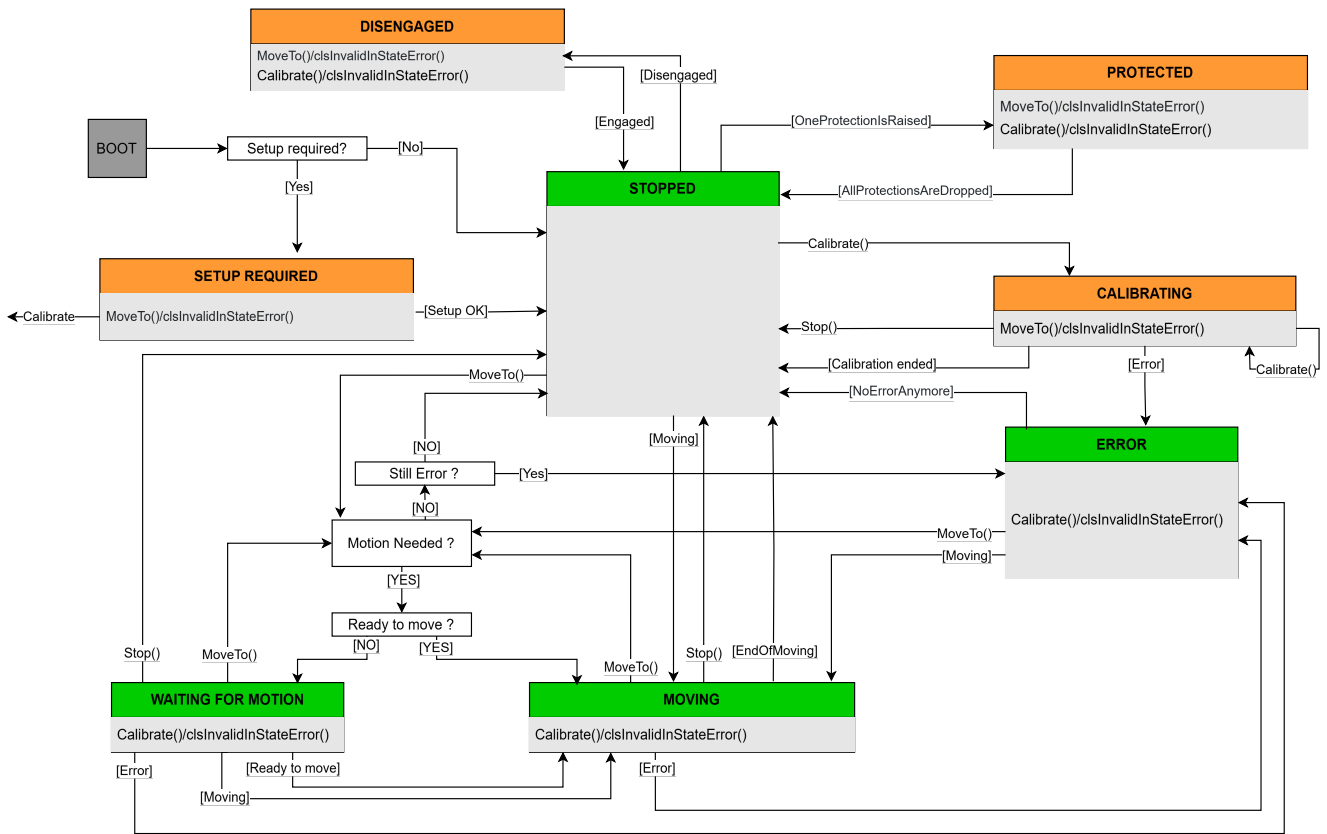


Figure 17. State diagram for Closure Control’s MainState

NOTE

The Calibrating state is exited upon completion of the calibration routine (whether through self-calibration or assisted by external tools, depending on the closure or manufacturer implementation), or if an error occurs, or if a stop command is received.