

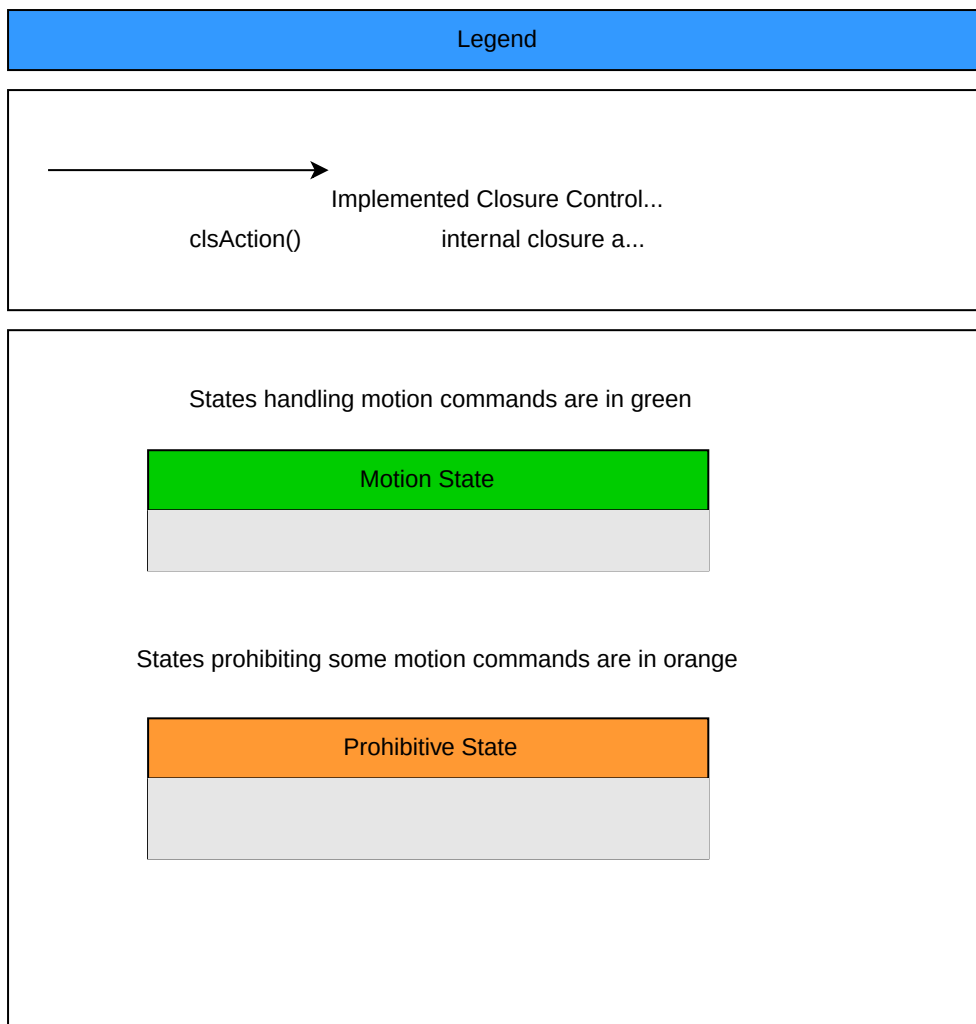


Figure 18. Legend

5.4.7.3. CurrentErrorList Attribute

This attribute SHALL indicate the currently active errors.

An empty list SHALL indicate that there are no active errors.

There SHALL NOT be duplicate values of [ClosureErrorEnum](#) within the CurrentErrorList.

5.4.7.4. OverallCurrentState Attribute

This attribute SHALL indicate the current Position, Latch and/or Speed states, whichever are applicable according to the feature flags set.

This attribute SHALL be null, if the state is unknown. Examples could be, but are not limited to:

- The state of Position/Latch is not known yet because the closure is not calibrated.
- The product has lost its Position/Latch state after manual motion during a shutdown.

The values of the different fields within the structure of this attribute depend on:

- The effects of MoveTo commands.
- The effects of SetTarget and Step commands in a [Closure Dimension Cluster](#) associated with this