


The Camera begins by sending the [ProvideOffer](#) command to the Controller and getting back a [ProvideOfferResponse](#). The Controller then sends a [Answer](#) command to the Camera. The rest of the flow is the same as in [WebRTC Normal Flow](#).

This flow is used when the Camera needs to start the streaming session, such as in an outbound call from a TV with a built-in camera or an Intercom style system, when the Camera has both the [Provider](#) and [Requestor](#) roles.

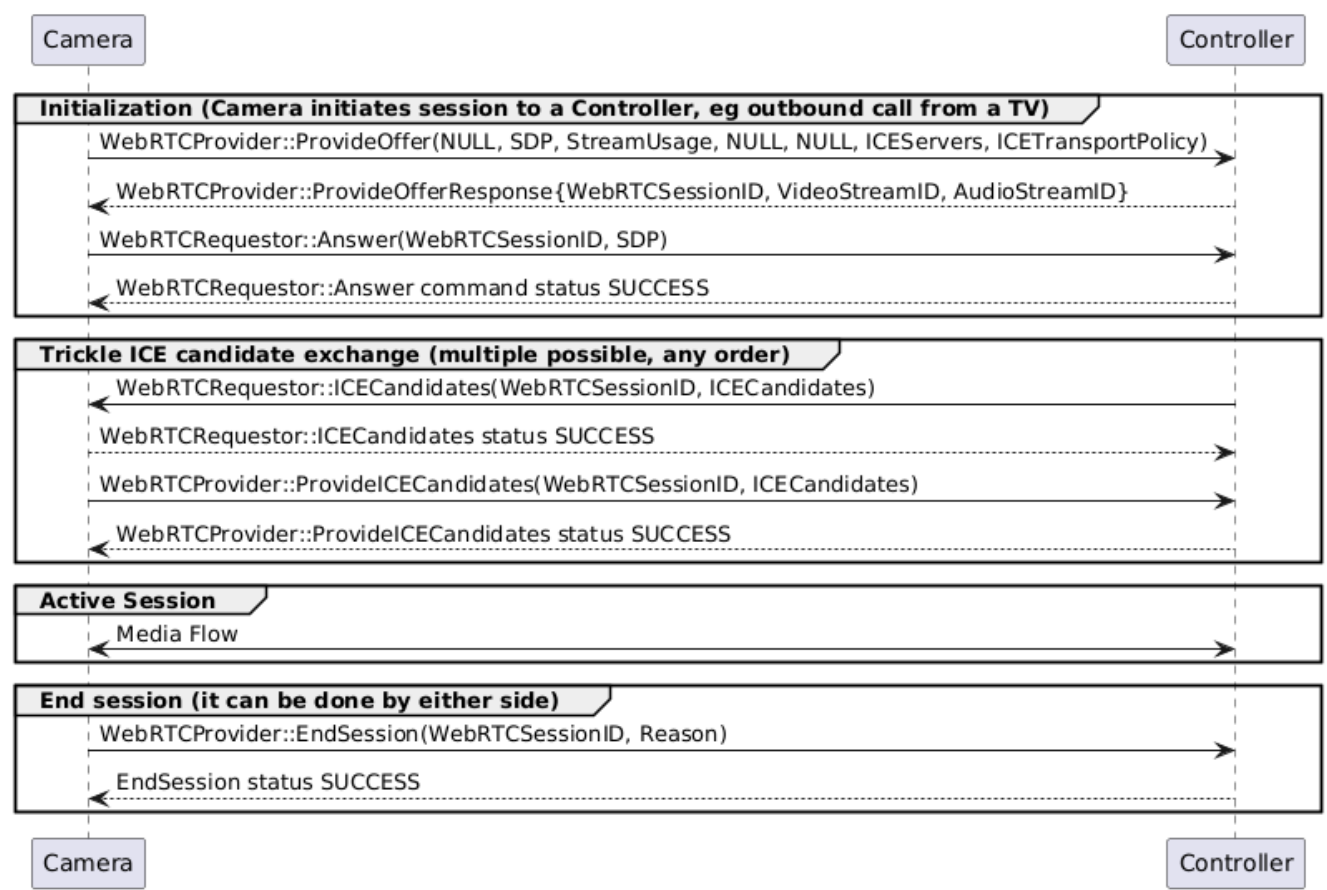

11.4.3.4. Signaling Modes

There are two signaling modes depending on the network topology of the camera, the Matter controller and the livestream viewer entities.

11.4.3.4.1. In-Home Streaming

In this situation, all the entities share the same local area network and there are no firewall restrictions between any of them. There would be no use of STUN/TURN servers and the signaling SHALL be done completely over a Matter CASE session. In the example shown below both the controller and the liveview client are the same device/node. The WebRTC session SHALL be established between the Matter controller and the camera after the signaling is done between them.