Search this site

Embedded Files

Skip to main content

Skip to navigation

CabinetSense Wiki
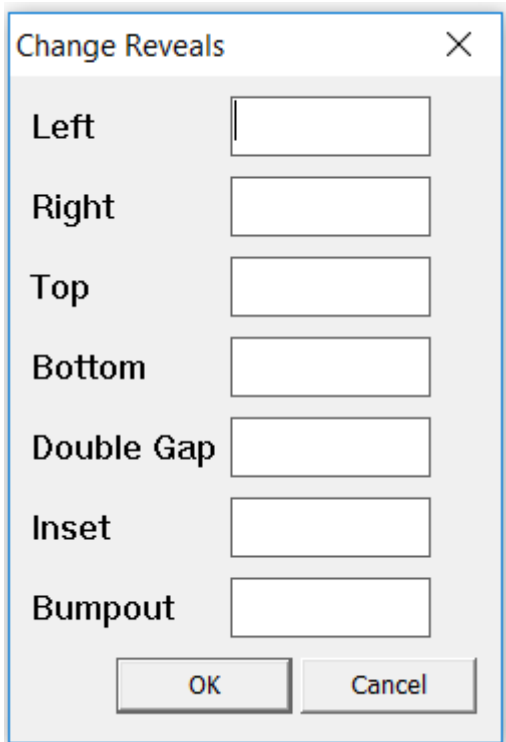
[CabinetSense Wiki](#)

Change Reveals

This dialog allows you to change the door, drawer front and panel reveals on all selected components

Usage:

- Multiple Components

Entering a measurement. use the following syntax:

- [=|+|-] numeric value [units]

- [=+-]: optional. The default value is "=".

- examples:

- =14: set the reveal to 14 of the current unit of measure.

- 14: Same as =14.

- +2: add 2 to the doors (or drawer fronts) currently existing value.

- -2: subtract 2 from the currently existing value.

- [units]: optional. If omitted will use CabinetSense primary unit of measure (inch or mm)

Double Gap:

- The amount of space that you want between a pair of doors when you have the door count set to 2.

  - on a Euro box, this would typically be your normal gap between doors.

  - On an inset faceframe cabinet, it would be the width of your mid-stile plus the tolerance between the stile and the door (2x - one for each door)

Inset:

- On an inset faceframe cabinet, you would normally inset your door the thickness of the door material

Bumpout:

- The amount of space typically left between the door (or drawer front) and the front of the cabinet caused by using plastic bumper pads.