
Skip to navigation

<u>CabinetSense Wi</u>ki

- Home
- 32mm System
- Build History
- Closet Systems
- CNC
- Common Attributes
- Component Library
 - Components
 - Applied End
 - Apron
 - Cabinet
 - CNC Cutters
 - Connectors
 - Corner Angled Cabinet
 - Corner Cabinet
 - Door
 - Drawer
 - Material Palette
 - Mid-Rail
 - Mid-Stile
 - Nailer
 - Pane
 - Partition
 - Pattern
 - Project
 - Shell
 - Valance or Toekick
 - Wall
- Construction Templates
- Cutlist Plus Integration
- Dynamic User Components
- Flevation and Plan Dimensions
- Frequently Asked Questions
- Known Issues
- Menus
- Plugins, Programs, and Links
- Scene and Layer Management
- Shop and Submittal Drawings
- Sketchup Lutorials
- Lips and Tricks
- Troubleshooting
- Tutorials
- Videos


CabinetSense Wiki

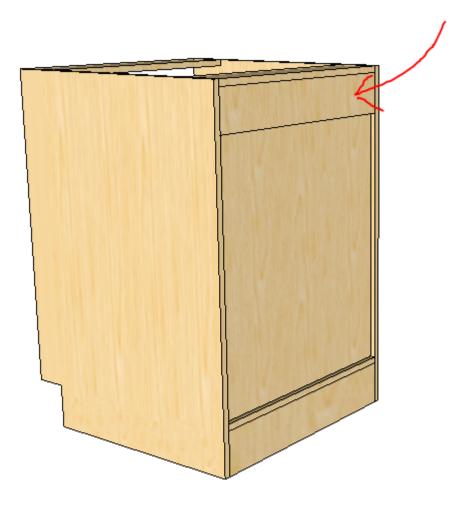

The nailer is placed inside the cabinet and will position itself flush with the back of the cabinet. The nailer sizes itself to be the inside width of the cabinet.


Unique Attributes:

• Thickness Overide: By default the thickness of the nailer is set to the depth of the back inset unless over ridden with a non-zero value in this property

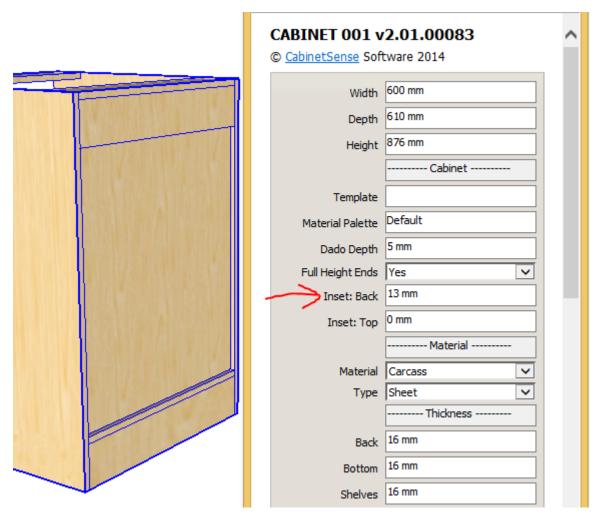

· Height: The height of the nailer

Position

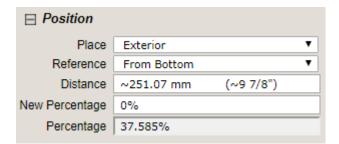

• Place: The nailer is to be placed on the interior or exterior of the cabinet.

• Reference: The Distance is measured from the top or bottom of the cabinet

• Distance: The distance to place the part based on the reference point (see above).

- New Percentage: The % distance between the top and bottom of the cabinet as measured from the Reference point.
- Percentage: Displays the percentage that the nailer is currently positioned as measured from the Reference point.

Page updated Report abuse