Serial Brun — starting a bench soak from the front panel

Ian Ameline · version 1.73 · MIT licence

`Serial_brun.tspa` puts the bench engine behind a settings screen on the instrument, so a lap can be started with nobody connected. It is the same `brun.soak()` the host drives — a second door into one engine, not a second engine. Everything `tools/run_bench.py` did still works, and a host-driven load leaves this screen available for the next lap.

It is bench scaffolding and is not the Serial Decode app. It carries the whole app inside it, because the engine measures through `sdec.acquire()`, but it installs separately and shows its own screen. Do not install it on an instrument you want as a serial analyser.

What it cannot do, and why that shapes the screen


It cannot draw a plan. `tools/soakplan.py` draws the cell list on the host and the USB key carries it as `/usb1/SERDEC/PLAN.CSV`. Re-deriving that draw on the instrument would be a second implementation of the one thing every lap is compared against — the amplitude, the offset and the wait are all keyed off the cell index, so a plan drawn twice is two different experiments wearing one name.

So the screen **narrows a plan that is already there**. Push one once:

```
python3 tools/run_bench.py --push-plan                          # the full draw
python3 tools/run_bench.py --push-plan --spec v98d:std,v99a:std # a targeted subset
```

and from then on laps start at the panel. The screen reports what it found, and refuses to start without it. A `--spec` push **overwrites** `PLAN.CSV`, so the row count on the screen is the only thing that says which plan is actually on the key.

The screen

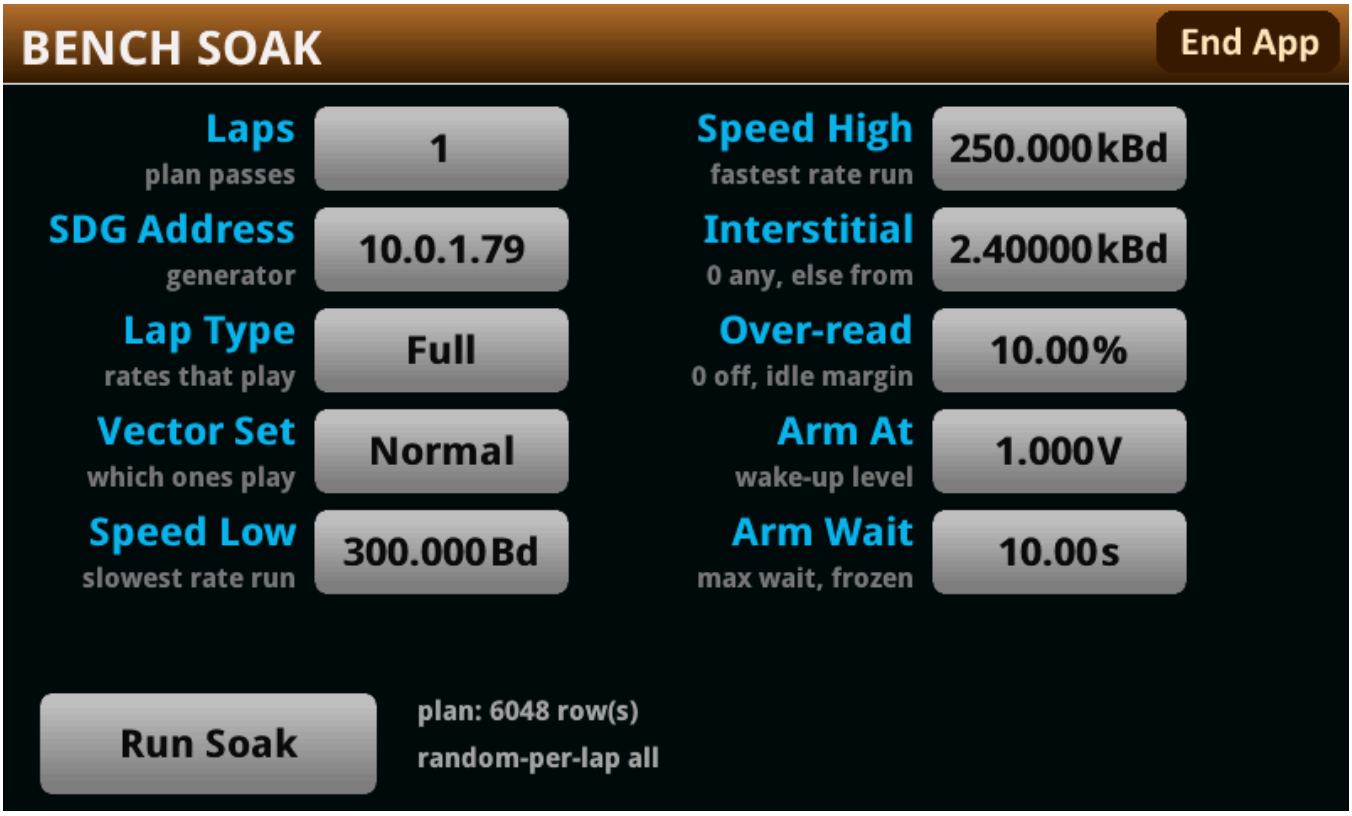

There is no Cancel button. `End App` in the title bar is the way out, and it is wired to the same teardown Cancel called — which is a complete exit here rather than a screen change, because the bench package's entry point calls `brun.panel()` and never `sdec.start()`, so the form is the only thing this app has built.

The plan runs in two short lines beside **Run Soak**, which is dead space in a single-button row and is what made room for ten fields; it used to take a field slot of its own. It is read off the key when the screen is built, so it describes what is actually there rather than what was last pushed from this host. The count is the plan's own `# rows=` header — data rows, which is six fewer than the line count `run_bench.py --push-plan` reports, that figure including the header and comment lines.

field	what it does
Laps	passes over the plan, 1 to 210. There is deliberately no "forever": an unbounded run started at the panel has nobody watching a host log that would say so.
SDG Address	the generator, as a pick list. There is no string-entry object in this firmware's set, and a list cannot produce the typo that costs a lap to discover. The live value leads it.
Lap Type	narrows the plan — see below.
Speed Low / **Speed High**	the rate window in Bd, inclusive at both ends. Defaults span the ladder: 300 is the slowest rate drawn, 250 000 the decoder's own ceiling.
Interstitial	a floor under the *drawn* rates only, `0` for none. Standard rates still play below it. At the bottom of the ladder a non-standard rate costs the most seconds and tests the least.
Vector Set	which vectors play — see below. Defaults to **Normal**.
Over-read	the idle margin on every recording, as a percentage, `0` for off. The app's own `sdec.strm_overread`, which until now could only be set from the host with `run_bench.py --over-read`.

field	what it does
Arm At	the comparator level that wakes a capture on a line which has not started talking. `sdec.armlevel`, 0.33 to 6 V.
Arm Wait	how long an armed capture waits, and the quiet-line exit once the line is up. `sdec.armwait`, 2 to 120 s. **On a soak this is seconds per cell**, so it is the field most able to turn a lap into an overnight run.

The last four are the app's own capture settings rather than the bench's, and they are applied the way the Options form applies them — the arm pair unclamped, because `arm_level_v()` and `arm_wait_s()` clamp at use so the form keeps showing what was typed, and Over-read clamped to `overread_max` because that ceiling is a field argument and a form built before it moved would still offer the old one.

Lap Type, and Vector Set

Two axes, and they compose. Until 2026-10-21 one field carried both: `Lap Type` read Full / Normal / Adversarial, where *Normal* filtered rates and *Adversarial* filtered vectors. So "adversarial vectors at standard rates only" could not be asked for at all. `Lap Type` is now the rate axis alone and `Vector Set` is the vector axis.

Lap Type	what plays
Full	every rate the plan holds, which is what the host-driven path runs
Standard only	standard rates only — no drawn interstitial or edge rate

Vector Set	what plays
Normal	the default. No gap vectors and nothing `barb.loud` excuses — the lap you want when the question is whether the decoder still works
All	every vector the plan holds
Start gap	a gap *before the first byte*: the `GapLead` pair, which is the armed-start case
All gaps	every gap vector — lead, mid, both, and the long ones
Adversarial	only the vectors known to produce errors, so a lap spends its time where the answers are

Three of those are **derived, not listed**. `Adversarial` is `barb.expect`'s `loud` entries — the vectors the plan drives into conditions where refusing is the documented right answer. `Start gap` and `All gaps` key on the generator's own waveform **name** through `barb.of`, every gap vector carrying `Gap` in its, so a gap vector added later is covered without editing a second list.

A vector the name table does not know is run, not skipped. `barb.of` answers nil only when `arb_names.tsp` is stale, and a stale table should fail loudly at the `ARWV` that cannot find the waveform rather than quietly shrink the lap — which is the one outcome nobody would notice.

Running one

Press **Run Soak**. The settings screen is torn down and the engine's own status screen takes over, which is the same screen a host-driven lap shows: lap and cell, the waveform playing, the measured rate, the error line and a spinner that keeps moving through the parts of a capture that take seconds.

Two refusals can appear on the plan line instead, and both are worth reading rather than retrying:

`REFUSED: no plan on the key` — nothing to run. Push one.

`REFUSED: a smoke has run on this power cycle` — a soak started after a smoke fails *every* cell with `acq: line is idle (no transitions)`, and only a power cycle clears it. This has happened three times on this bench; the last was 705 cells of 705. The host guard that catches it lives in `run_bench.py`, so the panel carries its own.

Stopping is the front-panel **TRIGGER** key. The run ends after the current waveform and closes the record, which is what commits it on a FAT key. Cutting the power costs at most the last row.

The status screen

`Run Soak` tears the form down and `brun.ui_build()` takes over. It is the same screen a host-driven lap shows — the title changes with the run's tag, so a smoke reads `SD SMOKE` and a soak `SD SOAK`. Nine lines, and every one of them answers a different question.

The title is `SD <TAG> – TRIGGER TO STOP`. The stop instruction lives there because the title is the one part of the screen that never scrolls and never redraws; the body's 58 characters are all needed for what changes.

line	reads	what it is for
headline	`SOAK HEALTH 97% RUNNING 5420k`	the answer from across the room: health, the run's state in a word, and the Lua heap. Red if it gave up or the heap is past `heapbadk`, green while healthy, amber when either is borderline, cyan before there is a figure at all.
spinner	`|` top right	one character, redrawn six times a cell, driven from inside the app's long loops. If it stops moving the instrument is wedged, not merely slow — it keeps turning through `sdec.acquire()`, which is 58 % of a cell and where a hang is most likely.
lap / cell	`L1 C86 r86 Ran: 4m Left: 2m`	position in the lap, then the lap's own elapsed and remaining. `r86` is the plan's **own** cell label and appears only when it differs from the position — the record writes rows as `L<iter>C<label>`, so that is the number to search for.
totals	`Total: 12m of 1.4h – 86/1512 c 6%`	elapsed of the **projected** total, then cells done out of the whole run. Not a second countdown: "left 853.8h" says nothing about how long the thing was ever going to be.
stimulus	`v98d 9600 Bd 8N1 SER_LoremGap100ms_8N1_x10`	the vector, the commanded rate, the expected format and the generator's **own** waveform name. The full name rather than the short form, because that is what `ARWV NAME` was sent and the one thing that can be checked against the generator.
refusals	`Refusals: Allowed 12 Unexpected 0 of 86 cells`	cells that refused to decode. `Allowed` is the vectors the plan drives into conditions where refusing is correct; `Unexpected` is the count that matters.
vector	`Vec: v98d 4 of 20 bad  I3 L0 S1`	this vector's own failure count beside the run's, because the two answer different questions — whether the soak is healthy, and whether **one** waveform is the reason it is not. `I`, `L`, `S` are idle, levels and swing; initials because spelled out at six-figure totals the line is 70 characters against the 58 the glass holds.

line	reads	what it is for
log	five scrolling lines	stamped with the lap and cell they happened at. This is what says *when* something started, which is the row that pays for itself on a run nobody is standing at.
errors	`Errors: 22  Bad: 640/17160` `nodec 10  flag 7  wrong 5/132`	see below.

The error line

`Errors:` leads with the total of all three classes. Each class is written only when it is nonzero, so a clean run reads `Errors: 0` exactly and a reader's eye is not trained to skip a row of zeroes.

- **`Bad: b/t`** — payload **bytes**, wrong over compared. This is the one to read first: `wrong 5/132` says five cells are bad and nothing about whether that is a byte each or a whole payload each.
- **`nodec N`** — cells that decoded nothing on a vector that should decode.
- **`flag N`** — cells where the app itself flagged a large share of its frames. Healthy cells run 0 to 2 % flagged and the wrong ones 30 to 55 %, so this is the class that shows trouble earliest.
- **`wrong N/M`** — cells whose bytes were not the payload, over cells that could be judged at all. The denominator is load-bearing: a zero with no denominator is not a pass, it is a question nobody asked.

`Bad:` and `wrong:` are derived from the same comparison inside one gate, so they always describe the same set of cells. When the line will not fit the glass the per-class breakout is dropped and the count and the byte figure are kept — a bad run is exactly when this line is widest, so a byte figure living in the droppable part would be invisible whenever it mattered.

The panel is not the oracle. The error line is a health indicator computed on the instrument; the verdict comes from the host judge below.

Reading the result

The record is `/usb1/SERDEC/SOAK.csv` on the key and the panel is not the oracle — the error line is a health indicator, and a lap's real verdict comes from the host judge:

```
python3 tools/run_bench.py --fetch --no-load
python3 tools/judge_bench.py --verbose out/bench/SOAK.csv
```

The error line reads `Errors: N  Bad: b/t  nodec N  flag N  wrong N/M`. `Bad:` is bytes and `wrong:` is cells, and the difference matters: `wrong 5/132` says five cells are bad, where `Bad: 251/1313` says four fifths of the bytes were fine and the damage is localised. When the line will not fit the screen the per-class breakout is dropped and the count and the byte figure are kept.

Installing

```
python3 tools/package_tspa.py --bench          # writes Serial_brun.tspa
```

Copy it to the key's root and install it from **Menu > Scripts**. It needs the same USB key the record and the plan live on.

What it does not change

The host path is untouched. `run_bench.py --start --detach` behaves exactly as before, including its own smoke-poison guard and the key pruning it does first. The panel's settings are applied to the same `brun.*` fields the host sets, and every filter defaults to nil — so a host-driven lap reads the rows it always did, whatever was last chosen on the glass.