



Refrigerator user manual

imagine the possibilities

Thank you for purchasing this Samsung product.

Free Standing Appliance

SAMSUNG

Contents

SAFETY INFORMATION	2
SETTING UP YOUR SIDE-BY-SIDE REFRIGERATOR	15
OPERATING THE SAMSUNG SIDE-BY-SIDE REFRIGERATOR	24
TROUBLESHOOTING	35

Safety information

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it at a safe place near the appliance for your future reference.
- Use this appliance only for its intended purpose as described in this instruction manual.
This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.

- Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your refrigerator may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com/ (021-8255).

Important safety symbols and precautions:

 WARNING	Hazards or unsafe practices that may result in severe personal injury or death.
--	--



Hazards or unsafe practices that may result in **minor personal injury or property damage.**

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions carefully.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the contact center for help.
	Note.

**These warning signs are here to prevent injury to you and others.
Please follow them carefully.
After reading this section,
keep it in a safe place for future reference.**

CE Notice

This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC), RoHS Directive (2011/65/EU), Commission Delegated Regulation (EU) No 1060/2010 and the Eco-Design Directive(2009/125/EC) implemented by Regulation (EC) No 643/2009 of the European Union. (For products sold in European Countries only)



SEVERE WARNING SIGNS FOR TRANSPORTATION AND SITE

- When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
- R-600a or R-134a is used as a refrigerant.
Check the compressor label on the rear of the appliance or the rating label inside the refrigerator to see which refrigerant is used for your refrigerator.
- When this product contains flammable gas (Refrigerant R-600a),
 - Refrigerant leaking from the pipe work could ignite or cause an eye injury.
If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which the appliance is standing for several minutes.
 - In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs,

the size of the room in which the appliance may be sited depends on the amount of refrigerant used.

- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

The room where the refrigerator will be sited must be 1 m³ in size for every 8 g of R-600a refrigerant inside the appliance.

The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.

- If the appliance contains isobutane refrigerant (R-600a), a natural gas with high environmental compatibility that is, however, also combustible.

When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.



SEVERE WARNING SIGNS FOR INSTALLATION

- Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).
- Deteriorated insulation of electrical parts may cause an electric shock or fire.
- Do not place this refrigerator in direct sunlight or expose to the heat from stoves, room heaters or other appliances.
- Do not plug several appliances into the same multiple power board. The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matched the rating plate.
- This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
If the wall socket is loose, do not insert the power plug.
- There is a risk of electric shock or fire.

- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
 - Do not bend the power cord excessively or place heavy articles on it.
 - Do not use aerosols near the refrigerator.
 - Aerosols used near the refrigerator may cause an explosion or fire.
 - Do not install this appliance in a location where gas may leak.
 - This may result in an electric shock or fire.
-
- ★ • The installation or any service of this appliance is recommended by a qualified technician or service company.
 - Failing to do so may result in an electric shock, fire, explosion, problems with the product, or injury.
 - This refrigerator must be properly installed and located in accordance with the manual before it is used.
 - Connect the power plug in proper position with the cord hanging down.
- If you connect the power plug upside down, wire can get cut off and cause fire or an electric shock.
 - Make sure that the power plug is not squashed or damaged by the back of the refrigerator.
 - When moving the refrigerator, be careful not to roll over or damage the power cord.
 - This constitutes a fire hazard.
 - The appliance must be positioned so that the plug is accessible after installation.
-
-  • The refrigerator must be grounded.
- You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.
 - Never use gas pipes, telephone lines or other potential lightning rods as ground.
 - Improper use of the ground plug can result in an electric shock.
-
-  • If the power cord is damaged, have it replaced immediately by

the manufacturer or its service agent.

- The fuse on the refrigerator must be changed by a qualified technician or service company.
- Failing to do so may result in an electric shock or personal injury.

CAUTION SIGNS FOR INSTALLATION

-  • Keep ventilation opening in the appliance enclosure or mounting structure clear of obstruction.
- Allow the appliance to stand for 2 hours after installation.

SEVERE WARNING SIGNS FOR USING

-  • Do not insert the power plug with wet hands.
- Do not store articles on the top of the appliance.
- When you open or close the door, the articles may fall and cause a personal injury and/or material damage.

- Do not put items filled with water on the refrigerator.
- If spilled, there is a risk of fire or electric shock.
- Do not let children hang on the door.
- Failure to do so may cause serious personal injury.
- Do not leave the doors of the refrigerator open while the refrigerator is unattended and do not let children enter inside the refrigerator.
- Do not allow babies or children to go inside the drawers.
- It can cause death from suffocation by entrapment or personal injury.
- Do not sit on the Freezer door.
- The door can be broken and cause personal injury.
- To prevent children entrapment, you must reinstall the divider using provided screws after cleaning or other actions if you removed the divider from the drawer.
- Never put fingers or other objects into the dispenser hole.

- Failure to do so may cause personal injury or material damage.
 - Do not store volatile or flammable substances such as benzene, thinner, alcohol, ether or LP gas in the refrigerator.
 - The storage of any of such products may cause an explosion.
 - Do not store low temperature-sensitive pharmaceutical products, scientific materials or other low temperature-sensitive products in the refrigerator.
 - Products that require strict temperature controls must not be stored in the refrigerator.
 - Do not place or use electrical appliance inside the refrigerator, unless they are of a type recommended by the manufacturer.
 - Do not use a hair dryer to dry the inside of the refrigerator.
Do not place a lighted candle in the refrigerator for removing bad odors.
 - This may result in an electric shock or fire.
 - Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
- This may cause frostbite.
 - Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - Do not damage the refrigerant circuit.
-
- ★ • This product is intended only for the storage of food in a domestic environment.
 - Bottles should be stored tightly together so that they do not fall out.
 - In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.
Do not touch the appliance or power cord.
 - Do not use a ventilating fan.
 - A spark may result in an explosion or fire.
 - Use only the LED Lamps provided by manufacturer or service agent.

- Children should be supervised to ensure that they do not play with and/or climb into the appliance.



- Do not disassemble or repair the refrigerator by yourself.
- You run a risk of causing a fire, malfunction and/ or personal injury.
In case of malfunction, please contact your service agent.



- If the appliance generates a strange noise, a burning or smell or smoke, unplug the power plug immediately and contact your nearest service center.
- Failing to do so may result in an electric shock or fire hazards.
- If you experience difficulty when changing the light, contact service agent.
- If the products is equipped with the LED Lamp, do not disassemble the Lamp Cover and LED Lamp by yourself.
- Please contact your service agent.
- If any dust or water is in the

refrigerator, pull out power plug and contact your Samsung Electronics service center.

- There is a risk of fire.



CAUTION SIGNS FOR USING

- To get best performance from the product,
- Do not place foods too closely in front of the vents at the rear of the appliance as it can obstruct free air circulation in the refrigerator compartment.
- Wrap the food up properly or place it in airtight containers before putting it into the refrigerator.
- Do not put any newly introduced food for freezing near to already existing food.
- Do not place carbonated or fizzy drinks in the freezer compartment.
Do not put bottles or glass containers in the freezer.
- When the contents freeze, the glass may break and cause personal injury and property damage.

- Do not change or modify the functionality of the refrigerator.
 - Changes or modifications may result in a personal injury and/or property damage. Any changes or modifications performed by a 3rd party on this completed appliance are neither covered under Samsung warranty service, nor is Samsung responsible for safety issues and damages that result from 3rd party modifications.
- Do not block air holes.
 - If the air holes are blocked, especially with a plastic bag, the refrigerator can be over cooled.
If this cooling period lasts too long, the water filter may break and cause water leakage.
 - Do not put any newly introduced food for freezing near to already existing food.
- Please observe maximum storage times and expiry dates of frozen goods.
- Fill the water tank, ice tray, water cubes only with potable water.
- Use only the ice-maker provided with the refrigerator.
- The water supply to this refrigerator must only be installed/connected by a suitably qualified person and connected to a potable water supply only.
- In order to operate the ice-maker properly, water pressure of 138~862 kpa (1.4~8.8 kgf/cm³) is required.
- Do not spray volatile material such as insecticide onto the surface of the appliance.
 - As well as being harmful to humans, it may also result in an electric shock, fire or problems with the product.
- Do not apply strong shock or excessive force onto the surface of glass.
 - Broken glass may result in a personal injury and/or property damage.



CAUTION SIGNS FOR CLEANING AND MAINTENANCE

- ★ • Do not directly spray water inside or outside the refrigerator.
 - There is a risk of fire or electric shock.
- Do not use or place any substances sensitive to temperature such as inflammable sprays, inflammable objects, dry ice, medicine, or chemicals near the refrigerator.

Do not keep volatile or inflammable objects or substances (benzene, thinner, propane gas, etc.) in the refrigerator.

 - This refrigerator is for storing food only.
 - This may result in a fire or an explosion.
- Do not spray cleaning products directly on the display.
 - Printed letters on the display may come off.
- Remove any foreign matter or dust from the power plug pins.

But do not use a wet or

damp cloth when cleaning the plug, remove any foreign material or dust from the power plug pins.

- Otherwise there is a risk of fire or electric shock.
- Never put fingers or other objects into the dispenser hole and ice chute.
 - It may cause a personal injury or material damage.
- Clean the unreachable parts such as hinges by using brush or toothbrush.



- Unplug the refrigerator before cleaning and performing maintenance.
- If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service center.
 - Failing to do so may result in an electric shock or fire.



SEVERE WARNING SIGNS FOR DISPOSAL

- ★ • Ensure that none of the pipes on the back of the appliance are damaged prior to disposal.

- R-600a or R-134a is used as a refrigerant.

Check the compressor label on the rear of the appliance or the rating label inside the refrigerator to see which refrigerant is used for your refrigerator.

When this product contains flammable gas (Refrigerant R-600a), contact your local authority in regard to safe disposal of this product.

Cyclopentane is used as an insulation blowing gas.

The gases in insulation material require special disposal procedure.

Please contact your local authorities in regard to the environmentally safe disposal of this product.

Ensure that none of the pipes on the back of the appliances are damaged prior to disposal.

The pipes shall be broken in

the open space.

- When disposing of this product or other refrigerators, remove the door/door seals, door latch so that small children or animals cannot become trapped inside. Leave the shelves in place so that children may not easily climb inside. Children should be supervised to ensure that they do not play with the old appliance.
- Please dispose of the packaging material for this product in an environmentally friendly manner.



ADDITIONAL TIPS FOR PROPER USAGE

- In the event of a power failure, call the local office of your Electricity Company and ask how long it is going to last.
 - Most power failures that are corrected within an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door

openings while the power is off.

- Should the power failure last more than 24 hours, remove all frozen food.
- If keys are provided with the refrigerator, the keys should be kept out of the reach of children and not be in the vicinity of the appliance.
- The appliance might not operate consistently (possibility of temperature becoming too warm in the refrigerator) when sited for an extended period of time below the cold end of the range of temperature for which the refrigerating appliance is designed.
- Do not store food which spoils easily at low temperature, such as bananas, melons.
- Your appliance is frost free, which means there is no need to manually defrost your appliance, as this will be carried out automatically.
- Temperature rise during defrosting can comply with ISO requirements.
But if you want to prevent an undue rise in the temperature

of the frozen food while defrosting the appliance, please wrap the frozen food up in several layers of newspaper.

- Any increase in temperature of frozen food during defrosting can shorten its storage life.
- When you use this function the energy consumption of the refrigerator will increase. Remember to turn it off when you don't need it and return the freezer to your original temperature setting.
If you need to freeze large amount of food stuff, activate Power Freeze function at least 24 hours before.

Saving Energy Tips

- Install the appliance in a cool, dry room with adequate ventilation.
Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (radiator, for example).
 - Never block any vents or grilles on the appliance.
 - Allow warm food to cool down before placing it in the appliance.
 - Put frozen food in the refrigerator to thaw.
You can then use the low temperatures of the frozen products to cool food in the refrigerator.
 - Do not keep the door of the appliance open for too long when putting food in or taking food out.
The shorter time for which the door is open, the less ice will form in the freezer.
 - Clean the rear of the refrigerator regularly.
Dust increases energy consumption.
 - Do not set temperature colder than necessary.
 - Ensure sufficient air exhaust at the refrigerator base
- and at the back wall of the refrigerator.
Do not cover air vent openings.
- Allow clearance to the right, left, back and top when installing.
This will help reduce power consumption and keep your energy bills lower.
 - For the most efficient use of energy, please keep the all inner fittings such as baskets, drawers, shelves on the position supplied by manufacturer.

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

Setting up your side-by-side refrigerator



GETTING READY TO INSTALL THE REFRIGERATOR

Congratulations on the purchase of your Samsung Side-By-Side Refrigerator.

We hope you will enjoy the many state-of-the-art features and efficiencies that this new appliance has to offer.

Selecting the best location for the Refrigerator

- Select a location with easy access to a water supply.
- Select a location without direct exposure to sunlight.
- Select a location with level (or nearly level) flooring.
- Select a location with enough space for the refrigerator doors to open easily.
See the diagram below.
- Select a location that allows sufficient space to the right, left, back, and top for air circulation.
See the diagram below.
- Select a location that allows you to move the refrigerator easily if it needs maintenance or service.

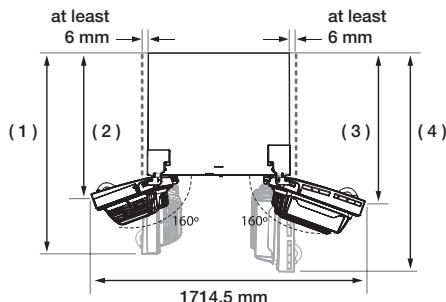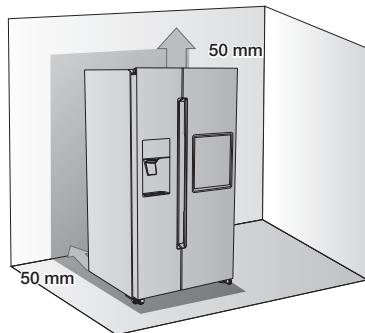


	(1)	(2)	(3)	(4)
RS73K**	1198.7	903.6	951	1326.1
RS72K**	1198.7	920.6	968	1326.1


When moving your refrigerator

To prevent floor damage, be sure the front levelling legs are in the up position (above the floor). Refer to "Levelling the refrigerator" in this manual page 19.

To protect the finish of your flooring while you are installing the refrigerator, place a large section of the cardboard carton under the refrigerator where you are working.

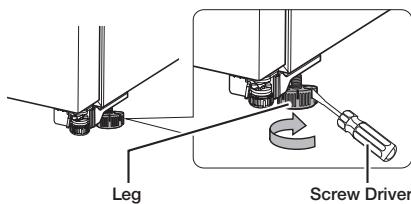

CAUTION When installing, servicing or cleaning behind the refrigerator, be sure to pull the unit straight out and push back straight in after finishing.

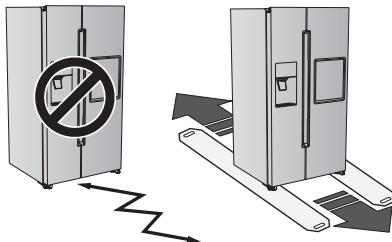

SETTING UP THE REFRIGERATOR

Now that you have your new Refrigerator installed in place, you are ready to set up and enjoy the features and functions of the appliance.

By completing the following steps, your Refrigerator should be fully operational.

If not, first check the power supply and electricity source or try the troubleshooting section at the back of this user's guide.

If you have any further questions, contact your Samsung Electronics service center.


1. Place the Refrigerator in an appropriate location with reasonable clearance between the wall and the Refrigerator.
Refer to installation instructions in this manual.
2. Once the Refrigerator is plugged in, make sure the interior light comes on when you open the doors.
3. Set the Temperature control to the coldest temperature and wait for an hour.
The Freezer will get slightly chilled and the motor will run smoothly.
4. After powering the Refrigerator, it will take a few hours to reach the appropriate temperature.
You can store food and drinks in the Refrigerator after the temperature is sufficiently cool.

SETTING UP THE REFRIGERATOR DOORS


If your entrance won't allow the refrigerator to pass easily through it, you can remove the doors.

Separating the water supply line from the refrigerator

- Pull the two water lines (which are in the Fixer) out to the front.

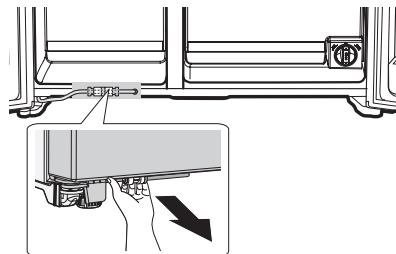


- Remove two water lines (White one is for water and the other one is for ice) by pressing the coupler (1) and pulling the water line (2) away.

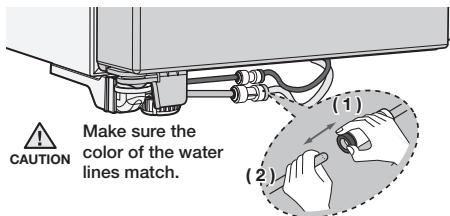

Reattaching the Water Supply Line

- The Water Line must be fully inserted to the Center of transparent coupler to prevent water leakage from the dispenser.
- Insert the 2 clips in the install pack and check that each clip holds the line firmly.

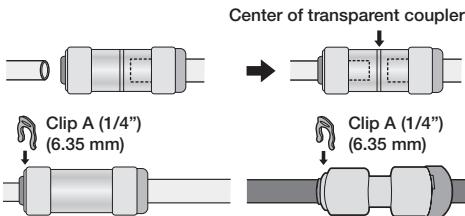


Do not cut the water line.
Gently separate it from the coupler.

Removing the freezer door

A few things to mention first.


- Make sure that you lift the door straight up so the hinges are not bent or broken.
- Be careful not to pinch the water tubing and wire harness on the door.
- Place doors on a protected surface to prevent scratching or damage.

- Disconnect the power cord, and remove 2 cover screws using a Phillips screwdriver (1). **Then open the refrigerator door and pull the hooks on the sides to loosen the cover (2).** **Lift up the cover and towards you to detach it (3).**
- Detach the hinge cover with the door open and then close the door once the hinge cover has been detached.

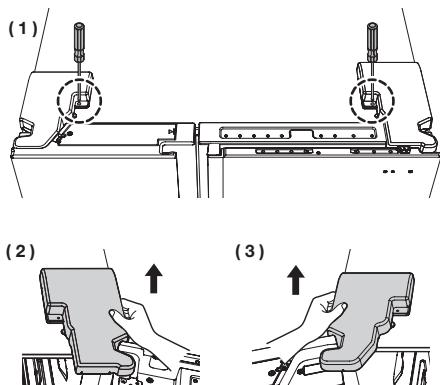


The upper hinge cover is either integrated or separate depending on the model.


- Remove the hinge cover and then disconnect the electrical wire connector.

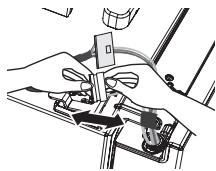


- Flip the clamp (A) up in direction (1) and then pull it off in direction (2).

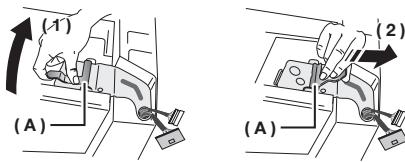

- Remove the hinge (B).

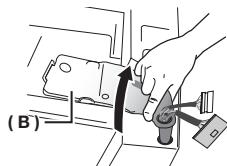

- Next, remove the door from the lower hinge (4) by carefully lifting the door straight up (5).

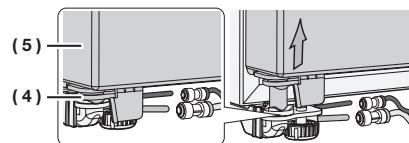


Be careful not to pinch the water tubing and wire harness on the door.

Removing the freezer door


To reattach the freezer doors, replace parts in reverse order.

Removing the Fridge Door


- Disconnect the power cord, and remove 2 cover screws using a Phillips screwdriver (1). Then open the refrigerator door and pull the hooks on the sides to loosen the cover (2).

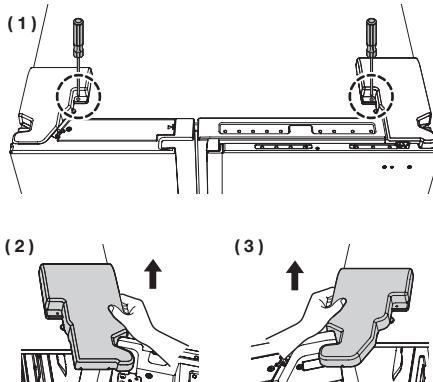

2. Disassemble the housing connector.

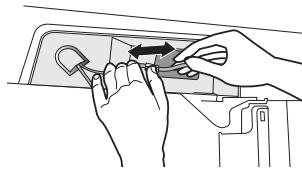

3. Remove the door from the lower hinge (4) by lifting the door straight up (5).

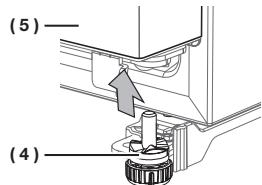


Reattaching the Fridge door

CAUTION To reattach the fridge doors, replace parts in reverse order.

LEVELLING THE REFRIGERATOR


Now that the doors are back on the refrigerator, you want to make sure the refrigerator is level so that you can make final adjustments.

If the refrigerator is not level, it will not be possible to get the doors perfectly even.

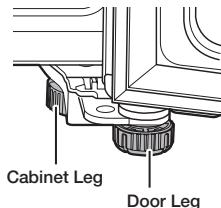


When the Freezer part is lower than the Fridge part.

- Insert a flat-blade screwdriver into a slot on the Freezer Cabinet Leg, then turn it clockwise.

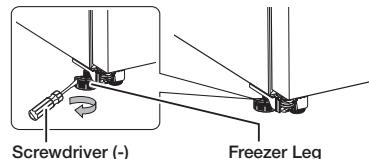


When the Fridge part is lower than the Freezer part.

- Insert a flat-blade screwdriver into a slot on the Fridge Cabinet Leg, then turn it clockwise.

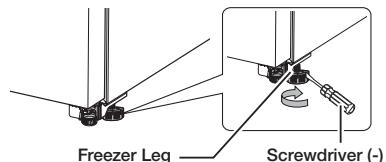

- Refer to the next section for the best way to make very minor adjustments to the doors.

Turn it clockwise for Leg to reach the ground as the picture beside so that the Door Leg can support its Door. (the same for fridge, freezer)

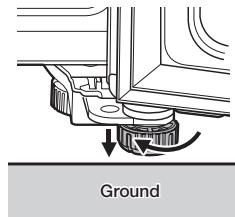


MAKING MINOR ADJUSTMENTS TO THE DOORS

Remember, a level refrigerator is necessary for getting the doors perfectly even.

If you need help, review the previous section on levelling the refrigerator.


When the door of the fridge is higher than the freezer

- Insert a flat-blade screwdriver into a slot on the Freezer Door Leg, then turn it clockwise.

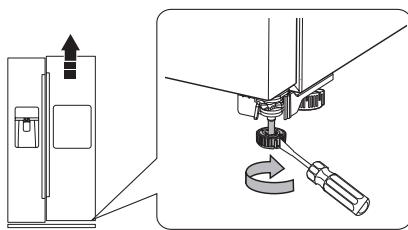

When the door of the freezer is higher than the fridge

- Insert a flat-blade screwdriver into a slot on the Fridge Door Leg, then turn it clockwise.

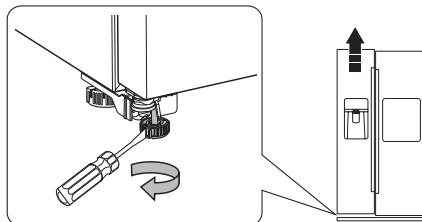

CHECKING THE WATER DISPENSER LINE

A water dispenser is one of the helpful features on your new Samsung Refrigerator.

To help promote better health, the Samsung water filter removes unwanted particles from your water. However, it does not sterilize or destroy microorganisms.

You may need to purchase a water purifying system to do that.

In order for the ice maker to operate properly, a water pressure of 20~125 psi (pound per square inch) is required.

Under normal conditions, a 170 cc (5.75 oz.) paper cup can be filled in 10 seconds.

If the Refrigerator is installed in an area with low water pressure (below 20 psi), you can install a booster pump to compensate for the low pressure. Make sure the water storage tank inside the Refrigerator is properly filled.

To do this, press the water dispenser lever until the water runs from the water outlet.



Water line installation kits are available at extra cost from your dealer. We recommend using a water supply kit that contains copper tubing.



The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


Connecting to the water supply line

1. First, shut off the main water supply line.
2. Locate the nearest cold, drinking water line.
3. Follow the Water Line Installation Instructions in the installation kit.

CAUTION

The water line must be connected to the cold water pipe.

If it is connected to the hot water pipe, it may cause the purifier to malfunction.

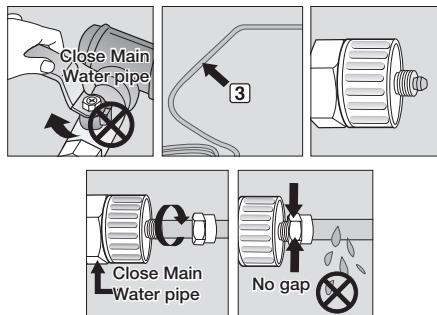


4. After connecting the water supply to the water filter, turn your main water supply back on and Dispense about 3 L to clear and prime the water filter.

Connecting the water line to the refrigerator

1. Remove the cap from water line on the unit and insert compression nut to the water line on the unit after disassembling from provided water line.
2. Connect both water line from the unit and water line in the kit.
3. Tighten the compression nut onto the compression fitting.
Be careful no gap between two items.
4. Turn water on and check for any leakage.



Only connect the water line to a drinkable water source.

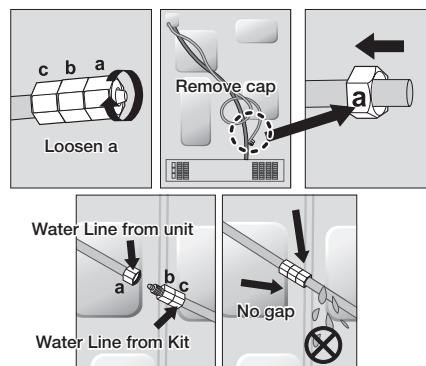


If you have to repair or disassemble the water line, cut off 6.5 mm of the plastic tubing to make sure you get a snug, leak-free connection.



CAUTION Before being used, the leakage in these places should be examined.

- Samsung Warranty does not cover WATER LINE INSTALLATION.
- It'll be done at customer's charge unless the retail price includes installation cost.
- Please contact Plumber or Authorized Installer for the installation if needed.
- If Water leakage occurs due to improper installation, Please contact installer.

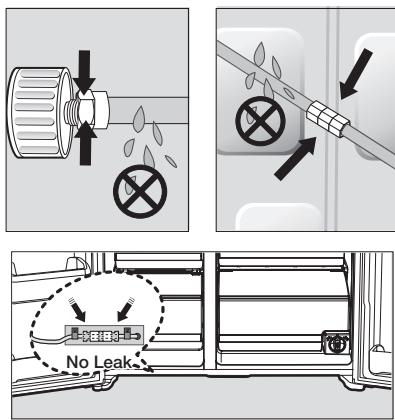

1. Slip the compression nut (**A**) through the supplied plastic tubing (**A**).
2. Tighten the compression nut (**A**) onto the 1/4" compression fitting.
- If you are using copper tubing, slip the compression nut (**B**) (not included) and ferrule (not included) on copper tubing (not included) as shown.
- If you are using plastic tubing (**B**), insert the molded end (Bulb) of the plastic tubing (**B**) into the compression fitting.

CAUTION Do not use without the molded end (Bulb) of the plastic tubing (**B**).

3. Tighten the compression nut (**B**) onto the compression fitting.
Do not over-tighten the compression nut (**B**).
4. Turn water on and check for any leakage.



Only connect the water line to a drinkable water source.

If you have to repair or disassemble the water line, cut off 1/4" of the plastic tubing to make sure you get a snug, leak-free connection.

BEFORE USING ICEMAKER

Remove

- Hold the handle as shown in Figure 1.
- Slightly pull up the bottom part.
- Take out the ice bucket slowly.



Figure 1

Install

- Assemble the icemaker in the reverse order of disassembly.
- Push the bucket in firmly until you hear a clicking sound.



Figure 2

Before calling service

- Any sounds you hear when the ice maker dumps ice into the bucket are part of normal operation.
- If you don't dispense ice for a long period of time, the ice may form clumps in the ice bucket. If ice clumps form, remove the remaining ice and empty the bucket.
- When ice does not come out, check for ice stuck in the chute and remove it.


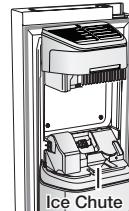


Figure 3

- CAUTION**
- When Ice Off blinks on the display panel, reinsert the bucket and/or make sure it's installed properly.
 - When the door is open, the Ice and water dispenser do not work.
 - If you close the door hard, it may cause water spilling over the ice maker.
 - To prevent dropping the ice bucket, use both hands when removing it.
 - To prevent injury, be sure to clean up any ice or water that may have dropped on the floor.
 - Do not let the children hang on the ice dispenser or on the bucket. They may get hurt.
 - Be sure not to put your hand or any object into the ice chute. It may cause personal injury or damage mechanical parts.

Removing residual matter inside the water supply line after installing filter.

- Turn ON the main water supply.
- Press the Water button and push the Dispenser Lever.
- Flush 1 gallons of water through the filter before use. (Flush approximately 6 minutes.) This will clean the water supply system and remove air from the lines.
- Additional flushing may be required in some households.
- Open the refrigerator door and make sure there are no water leaks coming from the water filter.

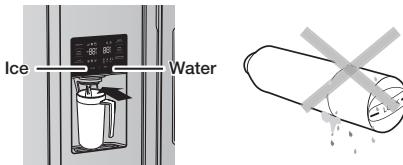

- CAUTION**
- A newly installed water filter cartridge may cause water to briefly spurt from the water dispenser. This is due to air getting into the line. It should pose no problem to operation.


Check the amount of water supplied to the ice tray.

- Lift up the icemaker cover and gently pull it out.
- When you press the Test button for 3 seconds, the ice cube container is filled with water from the water supply tap.

Check to make sure the amount of water is correct (see the illustration below).

If the water level is too low, the ice cubes will be small.



This is a water pressure problem from within the main water pipes, not the refrigerator.

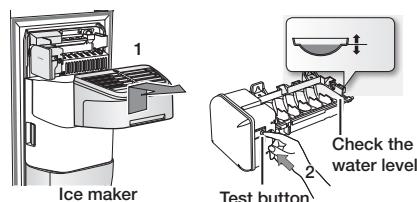

- CAUTION**
- It will take a few minutes for the water to reach the correct level after you push the Test button.
 - Do not press the test button continuously when the tray is filled with ice or water. Water may overflow or ice jamming may occur.
 - When the bucket is not installed, the ice maker does not work.
 - When Ice Off blinks on the display panel, reinsert the bucket and/or make sure it's installed properly.

Operating the SAMSUNG side-by-side refrigerator

USING THE CONTROL PANEL

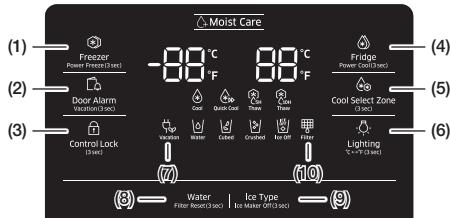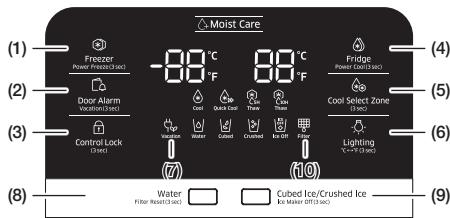

(1) Freezer / Power Freeze (3 sec)

The Freezer button serves two purposes:

- To set the Freezer to your desired temperature.
- To turn the Power Freeze function on and off.

1. To set the Freezer temperature, touch the Freezer button.

You can set the temperature between 5 °F (-15 °C) and -8 °F (-23 °C).

2. Power Freeze function

Touch and hold this button for 3 seconds to decrease the time needed to freeze products in the Freezer.

It can be helpful if you need to quickly freeze easily spoiled items or if the temperature in the freezer has warmed dramatically.

(For example, if the door was left open.) When you use this function, the energy consumption of the refrigerator will increase.

Remember to turn it off when you don't need it and return the freezer to your original temperature setting.

If you need to freeze a large amount of food, activate the Power Freeze function at least 20 hours before you put the food into the freezer.

(2) Door Alarm

You can set the alarm for a reminder. If the door is left open for more than 2 minutes, the alarm will sound with the alarm indicator blinking.



The alarm is enabled by factory default. To disable the alarm, press Door Alarm. To enable, press Door Alarm again.

<p>(3) Control Lock (3 sec)</p>  <p>To activate the Control Lock, press and hold Control Lock for 3 seconds. The controls on the display are disabled, and the dispenser does not operate even if you push the lever. To deactivate, press and hold again for 3 seconds.</p>	<p>(5) Cool Select Zone (3 sec)</p> <p>With the Cool Select Zone function, you can arrange food items in the Cool Select Room in an organized manner, which is located on the bottom right of the refrigerator. Press and hold Cool Select Zone for 3 seconds, and then press to cycle through the modes. When a desired mode is selected, release the button. There are 3 modes available as below:</p>
<p>(4) Fridge / Power Cool (3 sec)</p>  <p>The Fridge button serves two purposes:</p> <ul style="list-style-type: none"> - To set the Fridge to your desired temperature. - To turn the Power Cool function on and off. <ol style="list-style-type: none"> 1. To set the Fridge temperature, press the Fridge button. You can set the temperature between 44 °F (7 °C) and 34 °F (1 °C). 2. Power Cool function Touch and hold this button for 3 seconds to decrease the time needed to cool products in the Refrigerator. It can be helpful if you need to quickly cool easily spoiled items or if the temperature in the fridge has warmed dramatically. (For example, if the door was left open.) 	<p>Thaw Select Thaw to thaw frozen food in 5- or 10-hour settings.</p> <ul style="list-style-type: none"> - The thawing time can be shortened or extended depending on the size and thickness of the food item. - Remove any items that you don't want affected from the Cool Select Room before starting the thawing function. <p>Quick Cool Select Quick Cool to quickly cool 1-3 canned beverages within an hour.</p> <p>Cool Select Cool to set the Cool Select Room to the same temperature as the fridge. This is useful to keep food for general purposes, such as keeping water, juice, soft drinks, and beer.</p> <p> • To cancel any selected mode, press Cool Select Zone. • When a selected mode finishes, the Cool Select Zone returns to Cool mode.</p> <p> If the button does not activate, make sure the button is unlocked. Press and hold Control Lock for more than 3 seconds until the lock icon turns off. Then, press and hold Cool Select Zone for more than 3 seconds to change the mode.</p>


<p>(6) Lighting / °C↔°F (3 sec)</p>  <p>The Lighting button serves two purposes:</p> <ul style="list-style-type: none"> - To turn the dispenser light on and off - To switch the temperature units between °C and °F. <p>1. Light Function Touching the Lighting button turns on the Dispenser LED lamp in continuous mode so that it stays on continuously. The button also lights up. If you want the Dispenser lamp to come on only when someone uses the dispenser, press the Lighting button to turn the continuous mode off.</p> <p>2. To switch the temperature units between °C and °F. Touch and hold this button for 3 seconds to select the temperature display you want. Each time you press and hold the button, the °C and °F temperature modes alternate and the °C or °F icon lights up, indicating your selection.</p>	<p>(8) Water / Filter Reset (3 sec)</p>  <p>The Water button can be used to dispense water, or to reset the water filter.</p> <p>Dispensing Press Water to dispense water. In this mode, no ice will be dispensed.</p> <p>Filter Reset After about 6 months (approximately 300 gallons) of using the original water filter, the Filter indicator turns red to remind you that the filter needs to be replaced. If this happens, replace the filter, and press and hold Filter Reset for 3 seconds.</p>
<p>(7) Vacation</p>  <p>The Vacation button can be used to activate/deactivate Vacation mode. If you are going on vacation or a business trip, or if you do not intend to use the refrigerator for an extended time, use the Vacation feature. Press and hold Vacation for 3 seconds to turn off the fridge operation with the Vacation indicator (💡) on.</p>	<p>(9) Cubed/Crushed Ice (or Ice Type) / Ice Maker Off (3 sec)</p> <p>Cubed/Crushed Ice (or Ice Type) You can select an ice type. Press the button to toggle between the cubed and crushed ice types. The corresponding indicator turns on.</p> <p>Ice Maker Off To disable ice making, press and hold for 3 seconds. In this mode, ice making is disabled even if you press the button. Note that Ice Maker Off mode will be deactivated if you press and hold the ice lever to dispense ice for more than 5 seconds.</p>
 <p>It is strongly recommended to empty the fridge compartment and make sure the door is closed.</p>	<p>(10) Filter</p>  <p>This icon lights when you need to change the filter, usually after the refrigerator has dispensed about 300 gallons of water (after about 6 months). The icon will blink red for several seconds when you open or close the door. After you install the new water filter, reset the filter indicator by touching and holding Filter Reset button for 3 seconds. When you reset the filter indicator, the filter lifecycle will be reset and the filter indicator turns off.</p>

CONTROLLING THE TEMPERATURE

Basic temperature of Freezer and Refrigerator Compartments

The basic temperature and recommended temperatures of the Freezer and Refrigerator Compartments are -20 °C and 3 °C respectively. If the temperature of the Freezer or Refrigerator Compartments are too high or low, adjust the temperature manually.

Controlling the Freezer temperature

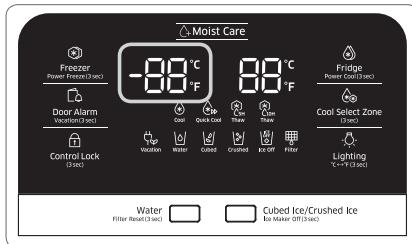

Recommend Temp (Freezer) : -20 °C


You can set the Freezer temperature between -23 °C and -14 °C to suit your particular needs. Touch the Freezer button repeatedly until the desired temperature is shown in the temperature display.

The temperature will move 1 °C degrees with each touch as follows: -20 °C → -21 °C → -22 °C → -23 °C → -14 °C → -15 °C → -16 °C → -17 °C → -18 °C → -19 °C → -20 °C.

Keep in mind that foods such as ice cream can melt at -15 °C.

The temperature display will move sequentially from -23 °C to -14 °C.

Controlling the Fridge temperature

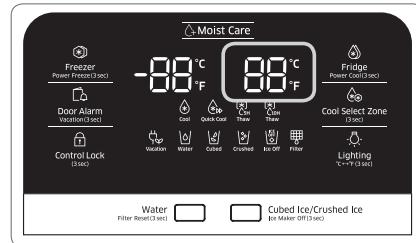

Recommend Temp (Fridge) : 3 °C

You can set the fridge temperature between 7 °C and 1 °C to suit your particular needs.

Touch the Fridge button repeatedly until the desired temperature is shown in the temperature display. The temperature will move 1 °C degrees with each touch as follows: 3 °C → 2 °C → 1 °C → 7 °C → 6 °C → 5 °C → 4 °C → 3 °C.

The temperature control process for the Fridge works just like the Freezer process.

Touch the Fridge button to set your desired temperature.

After a few seconds, the Fridge will begin adjusting towards the newly set temperature.


This will be reflected in the digital display.



- The temperature of the Freezer or Fridge may rise when you open the doors too frequently, or if a large amount of warm or hot food is placed inside.
- This may cause the digital display to blink. Once the Freezer and Fridge temperatures return to their normal set temperatures, the blinking will stop.
- If the blinking continues, you may need to "reset" the Refrigerator. Try unplugging the appliance, wait for around 10 minutes, and then plug the power cord back in.
- If there is a communication error between the Display and Main Controller, the Convertible Display light may blink. If the blinking continues for a long period of time, please contact a Samsung Electronics Service Center.
- When opening and closing the freezer door, be careful of touching the control panel. Certain functions that you do not want might be selected.

HOW TO USE THE DISPENSER

Push the appropriate Ice Type button or the Water button to select what you want dispensed.

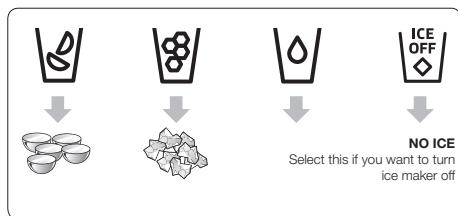

Press the Ice Type button to select the type of ice you want.

Place your cup under the ice outlet and push gently against the dispenser lever.

Make sure the glass is in line with the dispenser to prevent the ice from bouncing out.

When you select Cubed Ice after using the Crushed Ice feature, a small amount of residual crushed ice might be produced.



- Please wait 2 seconds before removing the glass under the dispenser to prevent spills.

If the Refrigerator door opens, the Dispenser does not work.

- Do not pull the lever out.
You could damage or break the lever's spring.
- To clean the ice bin/bucket, wash with a mild detergent, rinse well, and dry thoroughly it. Do not use harsh or abrasive cleaners or solvents.
- In case ice doesn't come out, pull out the ice bucket and press the test button located on the right side of ice maker.
- Do not press the test button continuously when the tray is filled with ice or water.
Water may overflow or ice may jam the bucket.



When you press the Test button, you will hear the refrigerator chime (ding-dong). When the chime sounds, release the Test button.

- The chime sounds automatically again to let you know the ice maker is working well.




If a power failure occurs, ice cubes may melt then freeze together when the power comes back on, causing the dispenser to be out of order.

- To prevent this problem, after a power failure, pull out the ice bucket and discard the residual ice or water.



After you dump the ice from the ice bucket, you should press the dispenser lever once with the 'ICE CUBED' or 'CRUSHED' function ON.

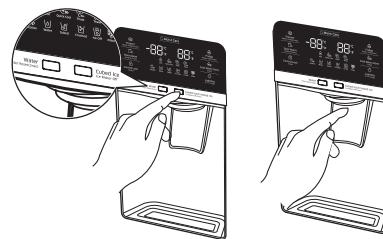


The ice maker will make new ice faster after you return the ice bucket to the refrigerator.




- Do not put your fingers, hands or any other unsuitable objects in the chute or ice-maker bucket.
It may result in personal injury or material damage.
- Use only the ice maker provided with the refrigerator.
- The water supply to this refrigerator must be installed/connected by a suitably qualified person and connect to a potable water supply only.
- For the ice maker to operate properly, the water pressure must be between 20 and 125 psi.


- CAUTION**
- If you have a long vacation or business trip and won't use the water or ice dispensers, close the water valve.
 - Otherwise, water leakage may occur.
 - When you have not used the Ice maker for a while, or you have opened the Freezer door frequently, the Ice may stick together. If this has occurred, empty the ice bucket or break up the ice with a wood kitchen tool. Do not use sharp items such as knives or forks.
 - When the bucket is removed, there may still be some residual ice in the ice maker that the icemaker can release.

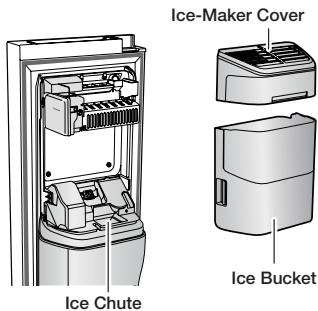

- CAUTION**
- If ice does not dispense, pull out the icemaker cover and press test button located on the ice maker.
 - Do not press the test button continuously when the tray is filled with ice or water. Water may overflow or the ice may jam the icemaker or dispenser.

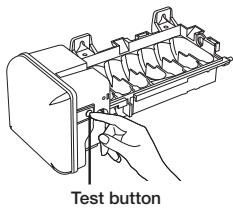


For more space, you can store food with Guard FRE-UPP instead of the ice bucket (1). It is two star (**) section.

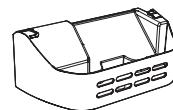


GUARD FRE-UPP (Optional)

OPERATING

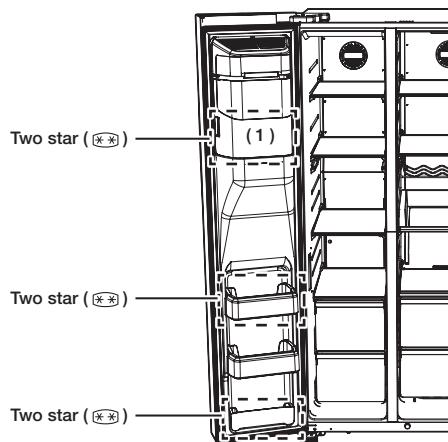

PARTS AND FEATURES

Use this page to become more familiar with the parts and features of the Refrigerator.
(This image may different depends on the model.)

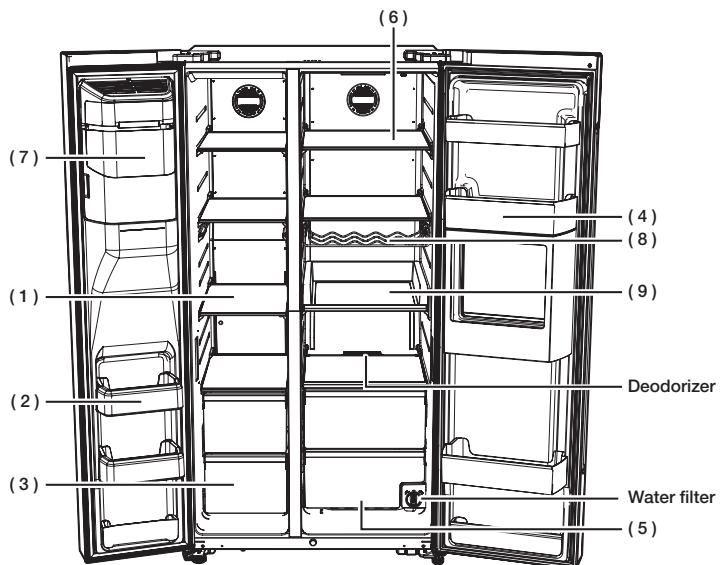

The temperature of two star sections is slightly higher than other freezer compartment.

(1)	Freezer Shelves
(2)	Multipurpose Freezer Compartments
(3)	Dried Food and Meat Storage Bin
(4)	Fridge Compartments
(5)	Well-Being Vegetable Bin
(6)	Refrigerator Shelves
(7)	Ice Maker Bucket (Only dispenser model)
(8)	Wine Rack (Optional)
(9)	EZ slide shelves (Optional)




- If you plan to go away for a significant time, empty the refrigerator and turn it off. Wipe the excess moisture from the inside of the appliance and leave the doors open. This helps keep odor and mold from developing.
- If the refrigerator is not to be used for a long period of time, pull out the power plug.
- Deterioration in the power cord insulation may cause fire.

REMOVING THE REFRIGERATOR ACCESSORIES

1. Shelves (Freezer/Fridge)

- Open the door completely and then lift up the shelf as you pull it out to remove it.

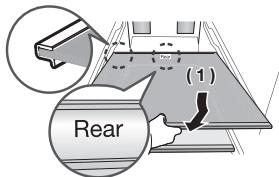

- If you are unable to open the door completely, pull out the shelf, lift it up, and turn it to remove it.




CAUTION Be careful not to insert the shelf upside down.



Glass containers can scratch the surface of the glass shelves.


2. Door Bin

- Remove the Door Bin by holding the door bin with both hands and then gently lift it up.

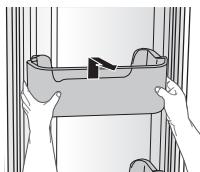


3. Drawer

- Remove the Drawer by pulling it out and lifting it up slightly.

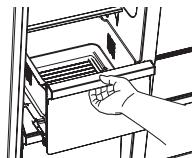

4. Vegetable Bin/Dry Bin Cover


- Take out the bin above the Vegetable Bin (refrigerator)/Dry Bin (freezer).
- Press down on the clips on either side of the Vegetable Bin (refrigerator)/Dry Bin (freezer) and pull them out towards you to remove the bin.

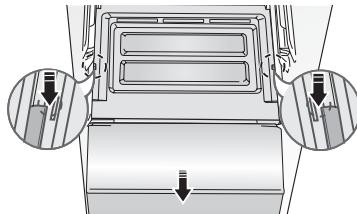

(Optional)

5. Vegetable Bin/Dry Bin

- Before taking out the Vegetable Bin/Dry Bin, you need to remove the multipurpose compartments from the door.
- Lift the bin up slightly as you pull it out.

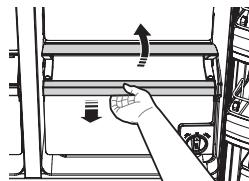

6. Ice Bucket (Freezer)

- Remove the Icemaker Bucket by lifting it up and pulling it out slowly.
- Grip the handle as shown in the figure.
- Remove the Ice Bucket slowly to prevent damage.




Do not use excessive force when removing the drawer cover.
You can break the cover and cause injury.



Before removing any accessories, make sure that no food is in the way.
When possible, remove the food altogether to reduce the risk of accidents.

7. Removing the Deodorizer

- Pull out the shelf slightly and then pull out the unit while pushing the deodorizer cover clip up using a flathead screwdriver.

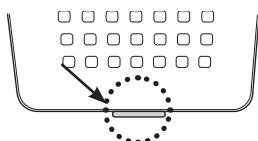

8. Cleaning the Deodorizer

- Clean the deodorizer once every two years or whenever you feel its performance has diminished.
- Dry the deodorizer under the sun for 24 hours and then replace it in the reverse order of its removal.

CLEANING THE REFRIGERATOR



- Do not use benzene, thinner, Clorox, or car detergent to clean the refrigerator. They can damage the surface of the appliance and may cause a fire.
- Do not spray the refrigerator with water while it is plugged in. This can cause an electric shock.

To clean the refrigerator, follow these steps:

1. Unplug the power code of the refrigerator.
2. Slightly dampen a soft lint-free cloth or paper towel with water.
3. Wipe the inside and outside of refrigerator until it is clean and dry.
4. Plug the power cord of the refrigerator back in.

CHANGING THE INTERIOR LIGHTS

Freezer / Fridge LED Lamp

- If the LED Lamp Cover is stained with foreign substances, the LED lamp may not look bright. Wipe the surface cover with clean dry cloth to return the light to full brightness.



Do not disassemble or replace the LED lighting yourself.
To replace the LED lights, contact a Samsung service centre or your authorized Samsung dealer.



If you attempt to replace the LED lamps yourself, you risk subjecting yourself to an electric shock or serious personal injury.

CHANGING THE WATER FILTER

WARNING To reduce risk of water damage to your property DO NOT use generic brands of water filters in your SAMSUNG Refrigerator.

USE ONLY SAMSUNG BRAND WATER FILTERS. SAMSUNG is not legally responsible for any damage, including, but not limited to property damage caused by water leakage from the use of a generic water filter.

SAMSUNG Refrigerators are designed to work ONLY WITH SAMSUNG Water Filters.

If you want to purchase any accessories, please contact with Samsung service center.


The "Filter Indicator" light lets you know when it is time to change your water filter cartridge.

To give you preparation time to get a new filter, the red light will come on just before the capacity of the current filter runs out.


Changing the filter on time provides you with the freshest, cleanest water from your fridge.

To change the water filter, follow these steps:


1. Turn the water filter 90° counter-clockwise.

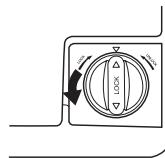


2. Pull the water filter from the filter housing.

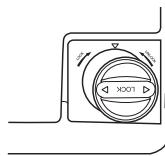

3. Insert new water filter inside the filter housing.

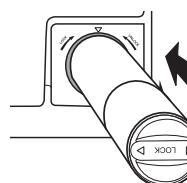

4. Turn the new water filter 90° clockwise.

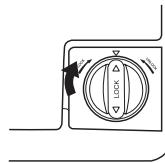

5. Press the Filter Reset button for about 3 seconds to reset the water filter. The color of indicator changes from red to light off.



A newly installed water filter cartridge may cause water to briefly spurt from the water dispenser.

This is due to air getting into the line. It should pose no problem to operation.

Removing residual matter inside the water supply line after installing a new filter

1. Press the Water button, and then push the Dispenser Lever with a cup or glass.
2. Flush 1 gallon of water through the filter, one cup or glass at a time.
(Flush approximately 6 minutes.)
This will clean the water supply system and remove air from the lines.
- Additional flushing may be required in some households.
3. Open the refrigerator door and make sure there are no water leaks coming from the water filter.

Reverse Osmosis Water Supply

IMPORTANT :

The pressure of the water supply coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPa).

If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa.)

If the water pressure to the reverse osmosis system is less than 40 to 60 psi (276 to 414 kPa):

- Check to see whether the sediment filter in the reverse osmosis system is blocked.
Replace the filter if necessary.
- Allow the storage tank on the reverse osmosis system to refill after heavy usage.
- If your refrigerator has a water filter, it may further reduce the water pressure when used in conjunction with a reverse osmosis system.
Remove the water filter.

If you have questions about your water pressure, call a licensed, qualified plumber.

Ordering replacement filters

To order more water filter cartridges, contact your authorized Samsung dealer.

Troubleshooting

PROBLEM	SOLUTION
The refrigerator does not work at all or it does not chill sufficiently.	<ul style="list-style-type: none"> Check that the power plug is properly connected. Is the temperature control on the display panel set to the correct temperature? Try setting it to a lower temperature. Is the refrigerator in direct sunlight or located too near a heat source? Is the back of the refrigerator too close to the wall and therefore keeping air from circulating?
The food in the fridge is frozen.	<ul style="list-style-type: none"> Is the temperature control on the display panel set to the correct temperature? Try setting it to a warmer temperature. Is the temperature in the room very low? Did you store the food with a high water content in the coldest part of the fridge?
You hear unusual noises or sounds.	<ul style="list-style-type: none"> Check that the refrigerator is level and stable. Is the back of the refrigerator too close to the wall and therefore keeping air from circulating? Was anything dropped behind or under the refrigerator? A “ticking” sound is heard from inside the refrigerator. This is normal and occurs because various accessories are contracting or expanding in relation to the temperature of the refrigerator interior.
The front corners of the appliance are hot and condensation is occurring.	<ul style="list-style-type: none"> Some heat is normal as anti-condensators are installed in the front corners of the refrigerator to prevent condensation. Is the refrigerator door ajar? Condensation can occur when you leave the door open for a long time.
Ice is not dispensing.	<ul style="list-style-type: none"> Did you wait at least 12 hours after installation of the water supply line before making ice? Is the water line connected and the shut-off valve open? Did you manually stop the ice making function? Make sure Ice Type is set to Cubed or Crushed. Is there any ice blocked within the ice maker bucket? Is the freezer temperature too warm? Try setting the freezer temperature lower.
You can hear water bubbling in the refrigerator.	<ul style="list-style-type: none"> This is normal. The bubbling comes from the refrigerant coolant liquid circulating through the refrigerator.
There is a bad smell in the refrigerator.	<ul style="list-style-type: none"> Has a food item spoiled? Make sure that strong smelling food (for example, fish) is wrapped so that it is airtight. Clean out your freezer periodically and throw away any spoiled or suspect food.

PROBLEM	SOLUTION
Frost forms on the walls of the freezer.	<ul style="list-style-type: none"> • Is the air vent blocked? Remove any obstructions so air can circulate freely. • Allow sufficient space between the foods stored for efficient air circulation. • Is the freezer door closed properly?
Water dispenser is not functioning.	<ul style="list-style-type: none"> • Is the water line connected and the shut-off valve open? • Has the water supply line tubing been crushed or kinked? Make sure the tubing is free and clear of any obstruction. • Is the water tank frozen because the refrigerator temperature is too low? Try selecting a warmer setting on the main display panel.

Memo

Ambient Room Temperature Limits

This refrigerator is designed to operate in ambient temperatures specified by its temperature class marked on the rating plate.

Class	Symbol	Ambient Temperature range (°C)	
		IEC 62552 (ISO 15502)	ISO 8561
Extended Temperate	SN	+10 to +32	+10 to +32
Temperate	N	+16 to +32	+16 to +32
Subtropical	ST	+16 to +38	+18 to +38
Tropical	T	+16 to +43	+18 to +43



Internal temperatures may be affected by such factors as the location of the fridge/freezer, ambient temperature and the frequency with which you open the door.

Adjust the temperature as required to compensate for these factors.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)	
English	(Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.
	 A large black X drawn over a standard trash bin icon, indicating that the product should not be disposed of in regular household waste.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

COUNTRY	CALL	Web site
IRAN	021-8255	www.samsung.com/iran/support

محدوده های دمای محیط در اتاق

این بخچال طوری طراحی شده که در دمای محیط که توسط طبقه بندی دمایی که در پلاک درجه بندی آن قید شده کار کند.

محدوده دمای محیط (درجه سانتیگراد)		علامت	طبقه بندی
ISO 8561	IEC 62552 (ISO 15502)		
۳۲+ تا ۱۰+	۳۲+ تا ۱۰+	SN	متداول مجدد شده
۳۲+ تا ۱۶+	۳۲+ تا ۱۶+	N	معادل
۳۸+ تا ۱۶+	۳۸+ تا ۱۶+	ST	نیمه حاره
۴۳+ تا ۱۶+	۴۳+ تا ۱۶+	T	حاره

دماهای داخلی ممکن است خت تأثیر عواملی از قبیل محل بخچال/فریزر، دمای محیط و دفعاتی که درب را باز می کنید، قرار گیرند.
دما را در صورت لزوم برای جبران این عوامل تنظیم کنید.



نحوه به دوراندزی صحیح این محصول

(زیاله وسائل برقی و الکترونیک)

فارسی



به کنشورهایی که سیستم های جمع آوری جداگانه مربوط می شود، این علامت بر روی محصول، ملحقات و نوشته ها نشان می دهد که این محصول و ملحقات الکترونیکی آن (برای مثال، شازر، گوشی، کابل USB) نبایستی در بیان عمر کاری شان به همراه سایر زیاله های خانگی به دور ریخته شوند. برای جلوگیری از زیان احتمالی به محیط زیست یا سلامت انسانی در نتیجه دور انداختن کنترل نشده زیاله، لطفاً این اقلام را از انواع دیگر زیاله جدا کرده و برای اشاعه استفاده دوباره منابع مادی قابل محافظت، بازیابی کنید. کاربران خانگی برای جزئیات محل و نحوه بازیابی این اقلام از لحاظ محیط زیست، بایستی با فروشنده ای که این محصول را از او خریداری کردن یا دفتر دولت محلی شان تماس بگیرند. کاربران بازگانی بایستی با منع تأمیناتی خود تماش گرفته و شرایط و ضوابط قرارداد خرید را کنترل کنند. این محصول و ملحقات الکترونیکی آن را نبایستی با زیاله های بازگانی دیگر برای دورانداختن مخلوط کرد.

از هر جای دنیا با سامسونگ تماس بگیرید

چنانچه هر سوال یا توضیحاتی در مورد محصولات سامسونگ دارد، لطفاً با مرکز خدمات مشتریان سامسونگ تماس حاصل فرمایید.

کشور	شماره تماس	وب سایت
IRAN	021-8255	www.samsung.com/iran/support

بادداشت

مشکل	راه حل
<ul style="list-style-type: none"> ● آیا منفذ هوا مسدود شده است؟ ● هرگونه مانع را بردازید تا هوا بتواند به راحتی گردش کند. ● برای گردش موثر هوا، فضای کافی را بین غذاهای ذخیره شده قائل نشود. ● آیا در فریزر درست بسته می شود؟ 	دیوارهای فریزر برفک می گیرند.
<ul style="list-style-type: none"> ● آیا لوله آب وصل شده و شیر بستن آب باز است؟ ● آیا لوله جریان آب له شده یا گره خورده است؟ ● مطمئن شوید که لوله هیچ‌گونه انسدادی نداشته باشد. ● آیا مخزن آب به واسطه اینکه دمای یخچال زیادی پایین است، منجمد شده است؟ تنظیم گرم تری را در صفحه نمایش اصلی انتخاب کنید. 	آبریز درست کار نمی کند.

حل مشکلات

مشکل	راه حل
بخجال اصل‌کار نمی‌گند یا به اندازه کافی سرد نمی‌گردند.	<ul style="list-style-type: none"> کنترل کنید که دوشاخه درست وصل شده باشد. آیا کنترل دما در صفحه نمایش، روی دمای درست تنظیم شده است؟ آنرا روی دمای پائین تری تنظیم کنید. آیا بخجال در معرض نور مستقیم خورشید یا زیادی نزدیک منبع گرمای قرار دارد؟ آیا پشت بخجال زیادی نزدیک دیوار است و به همین دلیل جلوی جریان هوا گرفته می‌شود؟
غذای داخل بخجال منجمد شده است.	<ul style="list-style-type: none"> آیا کنترل دما در صفحه نمایش، روی دمای درست تنظیم شده است؟ آنرا روی دمای گرم تری تنظیم کنید. آیا دمای اتاق بسیار پایین است؟ آیا غذائی که محتوی آب زیادی می‌باشد را در سردترین بخش بخجال گذاشته اید؟
سروصدا یا صدای غیرعادی می‌شنوید.	<ul style="list-style-type: none"> کنترل کنید که بخجال ترازو و باتبات باشد. آیا پشت بخجال زیادی نزدیک دیوار است و به همین دلیل جلوی جریان هوا گرفته می‌شود؟ آیا چیزی پشت بخجال یا زیر آن افتاده؟ یک صدای "تیک تیک" از داخل بخجال به گوش می‌رسد. <p>این موضوع عادیست و چون ملحقات مختلف در رابطه با دمای داخل بخجال منقبض و منبسط می‌شوند، این صدا ایجاد می‌شود.</p>
گوشش های جلوی دستگاه داغ بوده و تقطیر ایجاد می‌شود.	<ul style="list-style-type: none"> قدرتی گرمای عادیست چون وسائل ضد تقطیر در گوشش های جلوی بخجال نصب شده تا از تقطیر جلوگیری شود. آیا در بخجال کاملاً باز است؟ <p>تقطیر ممکن است زمانی پیش بباید که در را برای مدت طولانی باز بگذارد.</p>
بخ خارج نمی‌شود.	<ul style="list-style-type: none"> آیا قبل از درست کردن بخ، برای حداقل ۱۲ ساعت بعد از اتصال لوله جریان آب منتظر شدید؟ آیا لوله آب وصل شده و شیر بستن آب باز است؟ آیا به طور دستی عملکرد بخ سازی را متوقف کردید؟ مطمئن شوید که نوع بخ روی قالبی یا خردشده گذاشته شده باشد. آیا هرگونه یخی موجب مسدود شدن سلطان بخ ساز شده است؟ آیا دمای فریزر زیادی گرم است؟ سعی کنید دمای فریزر را پایین ببروید.
می‌توانید صدای کف کردن آب در داخل بخجال را بشنوید.	<ul style="list-style-type: none"> این موضوع عادیست. <p>کف کردن از جریان پیدا کردن مایع سرdesاز در داخل بخجال ایجاد می‌شود.</p>
بوی متعفنی در داخل بخجال به مشام می‌رسد.	<ul style="list-style-type: none"> آیا غذائی خراب شده است؟ <p>مطمئن شوید که بوی قوی دارد (برای مثال، ماهی) به طور کثیف پوشانده شده باشد.</p> <p>فریزر را به طور نوبتی غیز کرده و غذاهای فاسد یا منشکوک را دور ببریزید.</p>

جیران آب اسمز معکوس نکته مهم:

فشار جیران آبی که از سیستم اسمز معکوس خارج شده و به شیر آب بخجال وارد می شود بایستی بین ۲۵ و ۱۰ پوند بر اینچ مربع ۸۲۷ و ۲۴۱ کیلوپاسکال) باشد.

اگر سیستم تصفیه آب اسمز معکوس به جیران آب سرد شما وصل شده فشار آب به سیستم اسمز معکوس بایستی حداقل ۴۰ تا ۶۰ پوند بر اینچ مربع (۲۶۵ تا ۴۱۴ کیلوپاسکال) باشد.

اگر فشار آب به سیستم اسمز معکوس کمتر از ۴۰ تا ۶۰ پوند بر اینچ مربع (۲۷۶ تا ۴۱۴ کیلوپاسکال) است:

- کنترل کنید که آیا فیلتر رسوبات در سیستم اسمز معکوس مسدود شده است یا خیر. فیلتر را در صورت لزوم تعویض کنید.
- اجازه بدهد که مخزن آب در سیستم اسمز معکوس پس از استفاده زیاد دوباره پر شود.
- اگر یخچال شما فیلتر آب دارد، مکن است هنگام استفاده همزمان با سیستم اسمز معکوس، فشار آب بیشتر کاهش پیدا کند. فیلتر آب را بدرارید.

اگر در مورد فشار آب سوال دیگری دارید، با یک لوله کش مهندس همراه تماس بگیرید.

سفارش فیلترهای جایگزین

برای سفارش کارتیج های فیلتر بیشتر، با فروشنده محاز Samsung تماس بگیرید.

تعویض فیلتر آب



برای کاهش خطر خسارت مربوط به آب به دارای تابعیت از فیلترهای آب بدون مارک در یخچال سامسونگ استفاده نکنید.

فقط از فیلترهای آب مارک سامسونگ استفاده کنید. از SAMSUNG از لحاظ قابلیت برای هیچ خسارتی مستلزم نمی باشد که شامل خسارت یه دارای در نتیجه نشست آب به واسطه استفاده از فیلتر آب بدون مارک می شود ولی به آن محدود نمی شود.

یخچال های SAMSUNG طوری طراحی شده اند که فقط با فیلترهای آب SAMSUNG کار کنند.

اگر مایلید که هریک از ملحقات را خریداری کنید. لطفاً با مرکز خدمات Samsung تماش حاصل نمائید.

"نشانگر فیلتر" به رنگ قرمز روشن شده تا به شما اطلاع دهد که وقت تعویض کارتریج فیلتر آب شده است.

برای اینکه وقت آماده شدن داشته باشید تا فیلتر جدید را تهیه کنید. چراغ قرمز درست قبل از اینکه ظرفیت فیلتر کنونی خامه پیدا کند.

روشن می شود. عوض کردن به موقع فیلتریه شما آب نازه تر و غیرزنی را از یخچال ارائه می کند.

برای تعویض فیلتر آب. مراحل زیر را دنبال کنید:

۱. دکمه Filter Reset (تنظیم مجدد فیلتر) را برای در حدود ۳ ثانیه فشار دهید تا فیلتر آب مجدد تنظیم شود.

رنگ نشانگر از قرمز به خاموش تغییر می کند.

فیلتر آبی که تازه نصب شده ممکن است موجب جهش آب از پخشش گر آب به مدت کوتاهی شود. این به واسطه ورود هوا به لوله است. این موضوع نیابتی مشکلی در استفاده ایجاد کند.

برداشتن مواد باقیمانده در داخل لوله جریان آب بعد از نصب فیلتر جدید


۱. دکمه Water (آب) را فشار داده و سپس اهرم پخشش گر را توسط فنجان یا لیوان فشار دهید.

۲. گالان آب را از طریق فیلتر به صورت یک فنجان یا لیوان در هریار فلاش کنید.


(برای تقریباً ۶ دقیقه فلاش کنید). اینکار سیستم جریان آب را تمیز کرده و هوا را از لوله های آب خارج می کند.

- در بعضی منازل ممکن است نیاز به فلاش کردن اضافی آب باشد. در یخچال را باز کرده و مطمئن شوید آب از فیلتر آب نشست نمی کند.


۱. فیلتر آب را ۹۰ درجه در جهت عکس عقربه ساعت بگردانید.

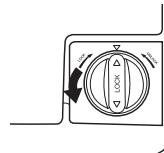

۲. فیلتر آب را از داخل محفظه فیلتر بپوشید.

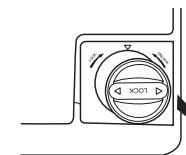

۳. فیلتر آب جدید را به داخل محفظه فیلتر وارد کنید.

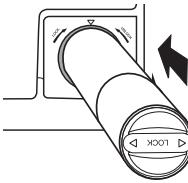

تمیز کردن یخچال

- ازین، تیر با Clorox یا شوینده اتومبیل برای تمیز کردن یخچال استفاده نکنید. مکن است به سطح خارجی دستگاه صدمه وارد کرده و موجب آتشسوزی شود.
- هنگامیکه یخچال به برق زده روی آن آب نپاشید. اینکار ممکن است موجب برق گرفتنگی شود.
- برای تمیز کردن یخچال، مراحل زیر را دنبال کنید:

۱. سیم برق یخچال را از پریز بکشید.

۲. یک پارچه بدون کرک یا حوله کاغذی را آب قدری نمایند.

از هیچگونه شوینده برای تمیز کردن یخچال استفاده نکنید. چون ممکن است موجب رنگ رنگنگی یا آسیب به یخچال شود.

۳. داخل و خارج یخچال را پاک کنید تا تمیز و خشک شود.

۴. سیم برق یخچال را به پریز بزنید.

- سطل بخ ساز را بالا کشیدن و سپس بیرون کشیدن آن به طور آهسته خارج کنید.

- دسته را به طوری که در تصویر نشان داده شده محکم بگیرید.
- سطل بخ را برای جلوگیری از صدمه به آرامی جدا کنید.



وضع کردن چراغ های داخلی

لامپ LED فریزر / یخچال

اگر قاب لامپ LED با مواد خارجی لکه دار شده، لامپ LED ممکن است پرتوهای نظر نرسد. سطح قاب را با پارچه تمیز و خشک پاک کرده تا روشنائی کامل را به لامپ برگردانید.

لامپ های نوع LED را اوراق یا تعویض نکنید. احتیاط برای تعویض لامپ های نوع LED با مرکز خدمات Samsung یا فروشنده مجاز Samsung خود تماس بگیرید.


اگر خودتان سعی کنید که لامپ های LED را تعویض کنید، خودتان را در معرض خطر برق گرفتنگی یا مصدومیت شخصی جدی قرار می دهید.



- هنگام برداشتن پوشش کشوی، زیاد فشار وارد نکنید.
- ممکن است که پوشش بشکند و موجب مصدومیت شود.

- قبل از برداشتن هرگونه ملحقات، مطمئن شوید که غذا سر راه نباشد.
- در صورت امکان، همه غذا را خارج کنید تا خطر وقوع حادث کاهش بپیدا کند.


- برداشتن بوگیر
- قفسه را قدری بیرون کشیده و سپس یونیت را در حین فشراد دان گیره قاب بوگیر به سمت بالا با استفاده از پیچ گوشتش تیغه تخت بیرون بکنید.

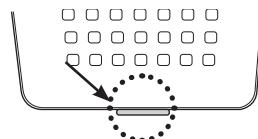


- تمیز کردن بوگیر
- بوگیر را هر دو سال یکبار با هر وقت که احساس می کنید کارآبی آن ضعیف شده تمیز کنید.
- بوگیر را برای ۲۴ ساعت زیر نور خورشید خشک کرده و سپس آنرا به تنظیب عکس برداشتن سرجایش بگذارید.

برداشتن ملحقات بخچال

۳. کشو
کشو را با بیرون کشیدن و قدری بلند کردن خارج کنید.

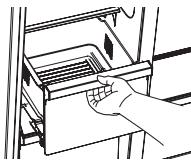


۴. قاب محفظه سبزیجات/محفظه خشک
محفظه بالای محفظه سبزیجات (بخچال)/محفظه خشک (فریزرا) را خارج کنید.
بر روی گیره ها در دو طرف محفظه سبزیجات (بخچال)/محفظه خشک (فریزرا) فشرنار آورده و برای جدا کردن محفظه به سمت خودتان بیرون بکشید.

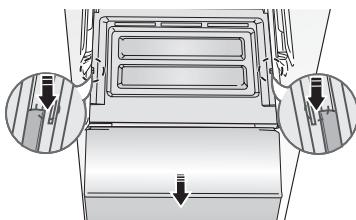


(انتخابی)

۵. محفظه سبزیجات/محفظه خشک
قبل از بیرون آوردن محفظه سبزیجات/محفظه خشک، لازم است که محفظه های چند منظوره را از روی در بردارید.
محفظه را در حین بیرون کشیدن قدری بلند کنید.

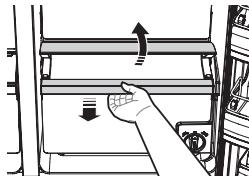

۱. قفسه ها (فریزرا/بخچال)
در را کاملاً باز کرده و سپس قفسه را در حالیکه برای برداشتن بیرون می کشید بلند کنید.

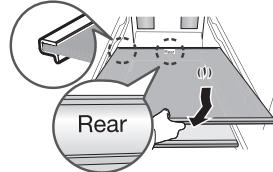

۲. اگر نمی توانید در را کاملاً باز کنید، قفسه را بیرون بکشید. آنرا بلند کرده و سپس برای برداشتن برگردانید.




مراقب باشید که قفسه را وارونه قرار ندهید.



محفظه های شیشه ای ممکن است سطح قفسه های شیشه ای را خراشیده کنند.




۶. محفظه روی درب
با نگه داشتن محفظه روی در برا دو دست و سپس بلند کردن آن با ملایمیت، آنرا خارج کنید.

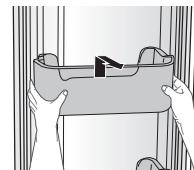

قطعات و ویژگی ها

از این برگ برای کسب اطلاعات بیشتر در مورد قطعات و ویژگی های یخچال استفاده کنید.
(این تصویر ممکن است باستگی به مدل متفاوت باشد.)

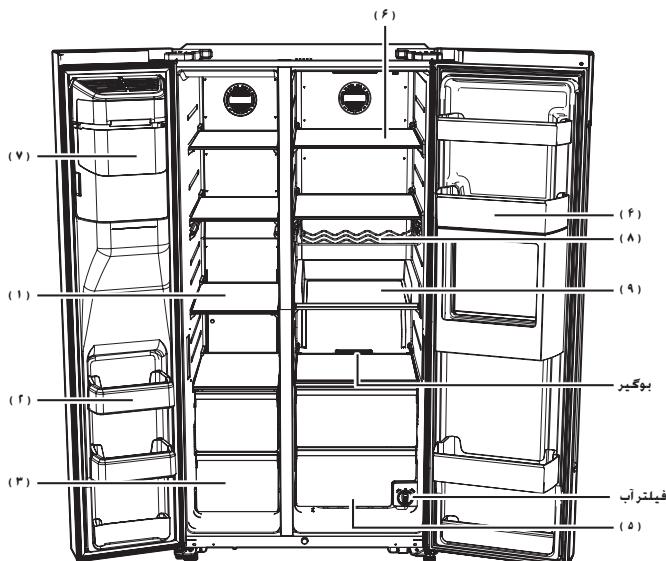


دماه قسمت های دو ستاره قدری بیشتر از دماه محفظه دیگر فریزر است.

- اگر برای مدت طولانی به مسافت می روید، یخچال را خالی کرده و آنرا خاموش کنید. رطوبت بیش از حد را از داخل یخچال پاک کرده و درها را باز بگذارید. اینکار به جلوگیری از ایجاد بو و کپک کمک می کند.
- اگر قرار است از یخچال برای مدت طولانی استفاده نشود، دوشاخه را بکشید.
- فرسودگی در عایق بندی سیم برق ممکن است موجب آتشسوزی شود.




۱) قفسه های فریزر
۲) محفظه های چندمنظوره فریزر
۳) محفظه نگهداری غذا و گوشت خشک شده
۴) محفظه های یخچال
۵) محفظه سبزیجات تندرستی
۶) قفسه های یخچال
۷) سطل بخ ساز (فقط مدل پخشگر)
۸) قفسه شراب (انتخابی)
۹) قفسه های کشویی EZ (انتخابی)

برای ایجاد فضای بیشتر می توانید غذا را به چای سطل
باخ (۱) در Guard FRE-UPP قرار دهید. قسمت دو ستاره
(*) است.

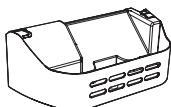

Guard FRE-UPP (انتخابی)

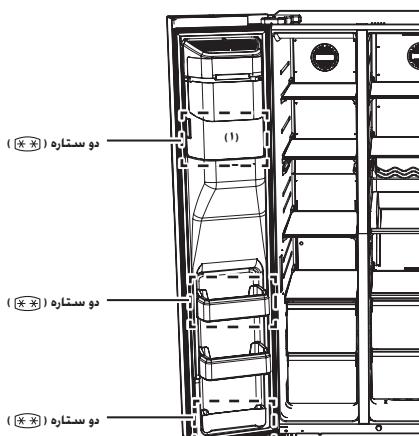

- احتیاط** پخشش گر آب یا بخ استفاده نخواهد کرد. شیر آب را بیندید.

در غیر مرخصی یا مسافت اداری طولانی می روید و از

هنگامیکه برای مدتی از بخ ساز استفاده نکرده اید با در فریزر را

مرتب باز کرده باشید. بخ ها ممکن است به هم بچسبند.


اگر چنین اتفاقی افغان سطل بخ را خالی کنید یا بخ را با استفاده از ابزار چوبی آشپزخانه بشکنید.

از وسائل نیز مانند چاقو یا چنگال استفاده نکنید.


هنگامیکه سطل برداشته شد. هنوز ممکن است مقداری باقی

مانده بخ در بخ ساز مانده باشد که بخ ساز می تواند خارج کند.

پوشش بخ ساز

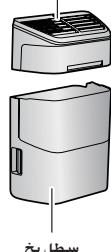

سطل بخ

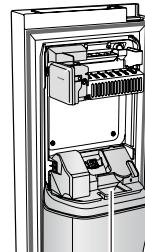


روزنگار بخ

- احتیاط** اگر بخ خارج نمی شود. پوشش بخ ساز را ببرون گذشیده و دکمه آزمایش را روی بخ ساز فشار دهید.

هنگامیکه سبیسی پر از بخ یا آب شد. دکمه آزمایش را به طور مندامن فشار ندهید.

ممکن است که آب سرازیر شود یا بخ در بخ ساز یا پخشگر گیر کند.

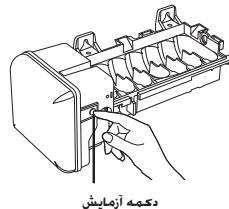

دکمه آزمایش

نحوه استفاده از پخشش گر


هنگامیکه دکمه Test (آزمایش) را فشنار می خواهد صدای زنگ بخچال (دینگ-دانگ) را خواهید شنید. هنگامیکه زنگ به صدا درآمد، دکمه Test (آزمایش) را رها کنید.

زنگ به طور خودکار دوباره صدا کرده تا به شما اطلاع دهد که بخ سازاره خوبی کار می کند.

اگر برق قطع شود، قالب بخ ممکن است آب شده و هنگامیکه برق دوباره وصل شد، مجدداً منجمد شود که موجب خرابی پخششگر می شود.

برای جلوگیری از این مشکل، پس از قطع شدن برق، سطل بخ را بپردازید و بخ یا آب باقیمانده را دور بریزید.


پس از دور ریختن بخ از سطل بخ، باسته اهرم پخش کننده را در حالتیکه عکسکرد "ICE CUBED" (بخ قالبی) یا "CRUSHED" (خردشده) روشن نماید. یکبار فشنار دهید.

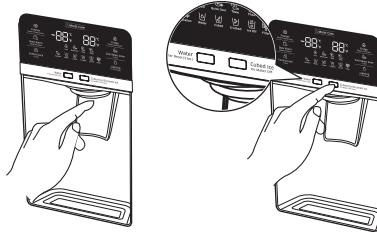

بخ ساز پس از قرار دادن دوباره سطل بخ روی بخچال، بخ جدید را سریع تر درست خواهد کرد.

- انگشتان دست ها یا سایر اشیاء نامناسب را در روزنه یا سطل بخ ساز قرار ندهید.
- اینکار ممکن است منجر به مصدومیت شخصی یا آسیب وارد شدن به مواد شود.
- تنها از بخ سازی استفاده کنید که به همراه بخچال عرضه شده است.
- تفздیه آب این بخچال باستی توسط یک شخص مجرب نصب / وصل شده و فقط به تفздیه آب قابل شرب وصل شود.
- برای اینکه بخ ساز به طور صحیح کار کند، فشنار آب باید بین ۱۰ و ۱۵ پوند بر اینچ مربع باشد.

دکمه Ice Type (نوع بخ) یا دکمه Water (اب) مناسب را برای انتخاب آنچه می خواهید توزع سود، فشنار دهید.

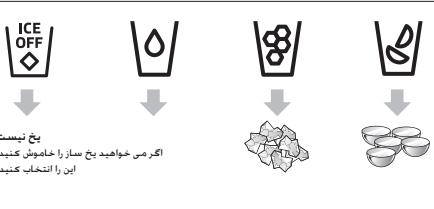


دکمه Ice Type (نوع بخ) را برای نوع بخی که می خواهید فشنار دهید. فنجان را زیر خروجی بخ قرار داده و اهرم پخش گر را با ملایمت فشنار دهید. مطمئن شوید که لیوان با پخش کننده همتراز باشد تا از جهش بخ به خارج جلوگیری شود. هنگامیکه بخ قالبی را پس از استفاده از ویزگی بخ خرد شده انتخاب می کنید، مقدار کمی بخ خرد شده باقیمانده ممکن است تولید شود.



- لطفاً قبل از برداشتن لیوان از زیر پخش کننده، ۲ ثانیه صبر کنید تا از پاشیدن جلوگیری شود. در صورت باز شدن در بیخچال پخش کننده کار نمی کند.
- اهرم را به بپردازید.
- ممکن است به فنر اهرم آسیب وارد کرده یا آنرا بشکنید. برای نیز کردن محفظه سطل بخ آنرا با شوپیده ملایم نشسته، خوب آنکشی کرده و کاملاً خشک کنید.
- از تمیزکننده ها یا محلول های خشن با ساینده استفاده نکنید.
- اگر بخ خارج نشد، سطل بخ را بپردازید و دکمه آزمایش را که در سمت راست بخ ساز قرار دارد، فشنار دهید.
- هنگامیکه سینی پر از بخ یا آب شد، دکمه آزمایش را به طور متداوم فشنار ندهید.
- ممکن است آنرا زیادی پر کرده یا اینکه بخ در سطل گیر کند.

کنترل دمای یخچال

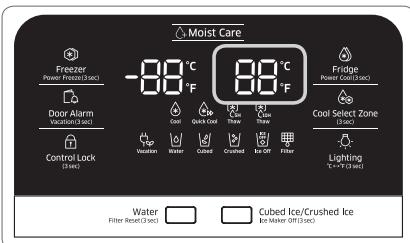

دماهی توصیه شده (یخچال): ۳ درجه سانتی گراد

دماهی یخچال را می توانید بنابر نیازهای خاص شما بین ۷ و ۱ درجه سانتی گراد تنظیم کنید.

دکمه Fridge (یخچال) را مکرراً لمس کنید تا دماهی مورد نظر در صفحه نمایش دما نشان داده شود.

دما با هر بار لمس کردن به میزان یک درجه سانتی گراد به ترتیب زیر تغییر خواهد کرد: ۴ °C ← ۵ °C ← ۶ °C ← ۷ °C ← ۱ °C ← ۲ °C ← ۳ °C ← ۳ °C ←.

روال کنترل دما برای یخچال درست مثل روال فریزر کار می کند. دکمه Fridge (یخچال) را برای تنظیم دماهی مورد نظرتان لمس کنید پس از چند ثانیه، دماهی یخچال شروع می کند به سمت دماهی که ذازه تنظیم شده تغییر کند.

این موضوع در صفحه نمایش دیجیتال نشان داده خواهد شد.

- هنگامیکه در براحتی باز می کنید با اگر مقدار زیادی غذای گرم یا داغ را در داخل فریزر یا یخچال قرار می دهید، دما ممکن است افزایش پیدا کند.

- اینکار ممکن است موجب چشمک زدن صفحه نمایش دیجیتال شود. زمانیکه دماهی فریزر و یخچال به دماهای عالی برگرد، چشمک زدن متوقف خواهد شد.

- اگر چشمک زدن ادامه پیدا کرد، ممکن است لازم باشد که یخچال را "محدوداً تنظیم کنید". یخچال را از برق ببرون آورده، برای در حدود ۱۰ دقیقه صبر کنید و سپس دوباره سیم برق را به برق بزنید.

- اگر بین صفحه نمایش و کنترل کننده اصلی، خطای ارتباطی وجود داشته باشد، چراخ صفحه نمایش تبدیل ممکن است چشمک بزند. اگر چشمک زدن برای مدت طولانی ادامه پیدا کرد، لطفاً با مرکز خدمات Samsung Electronics ماس بگیرید.

- هنگام باز کردن و بستن درب فریزر، مراقب باشید به پنل کنترل دست نزنید.

- بعضی عملکردهائی که نمی خواهید ممکن است انتخاب نشوند.


کنترل دما

دماهی اولیه محفظه های فریزر و یخچال

دماهی اولیه و دماهای توصیه شده محفظه های فریزر و یخچال به ترتیب ۲۰ و ۳ درجه سانتی گراد می باشند.

اگر دماهی محفظه های فریزر یا یخچال زیادی بالا با پایین هستند، دما را به طور دستی تنظیم کنید.

کنترل دمای فریزر

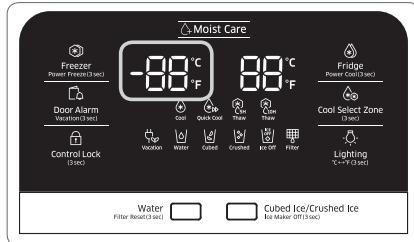

دماهی توصیه شده (فریزر): ۴۰ درجه سانتی گراد

دماهی فریزر را می توانید بنابر نیازهای خاص شما بین ۱۴-۲۳ درجه سانتی گراد تنظیم کنید. دکمه Freezer (فریزر) را مکرراً لمس کنید تا دماهی مورد نظر در صفحه نمایش دما نشان داده شود.

دما با هر بار لمس کردن به میزان یک درجه سانتی گراد به ترتیب زیر تغییر خواهد کرد: -20 °C ← -21 °C ← -22 °C ← -23 °C ← -14 °C ← -16 °C ← -15 °C ← -17 °C ← -18 °C ← -19 °C ← -20 °C ←.

توجه داشته باشید که غذاهایی از قبیل بستنی ممکن است در ۱۵ درجه سانتی گراد آب شوند. نمایشگر دما به طور متوالی از ۲۳-۱۴ درجه سانتی گراد تغییر پیدا خواهد کرد.

Water / Filter Reset (3 sec) (آب / تنظیم مجدد فیلتر ۳ ثانیه)	(۸)	Lighting / °C↔°F (3 sec) (روشنایی / سانتی گراد ↔ فارنهایت ۳ ثانیه)	(۹)
<p>از دکمه Water (آب) می‌توان برای جاری کردن آب یا تنظیم مجدد فیلتر آب استفاده کرد.</p> <p>Filter Reset (جاری کردن)</p> <p>دکمه Water (آب) را برای جاری کردن آب فشار دهید. در این حالت، بخ توزیع خواهد شد.</p> <p>Filter Reset (تنظیم مجدد فیلتر)</p> <p>در حدود ۶ ماه (ققریباً ۲۰۰ گالان) بعد از استفاده از فیلتر اصلی آب، نشانگر فیلتر قرمز می‌شود تا به شما یادآوری شود که لازم است فیلتر تعویض شود. در این صورت، فیلتر را تعویض کرده و Filter Reset (تنظیم مجدد فیلتر) را برای ۳ ثانیه فشار دهید.</p>		<p>دکمه Lighting (روشنایی) دو منظور را برآورده می‌کند:</p> <ul style="list-style-type: none"> - برای روشن و خاموش کردن چراغ پخشگر - برای تبدیل واحد دمای دما بین °C و °F <p>۱. عملکرد روشنایی لمس کردن دکمه Lighting (روشنایی) چراغ LED پخش گر را در حالت پیوسته روشن می‌کند تا به طور پیوسته روشن باقی بماند. دکمه نیز روشن می‌شود. اگر می‌خواهید که چراغ پخش گر فقط هنگامیکه شخصی از پخش گر استفاده می‌کند روشن شود، دکمه Lighting (روشنایی) را برای خاموش کردن حالت پیوسته فشار دهید.</p> <p>۲. برای تبدیل واحد دمای دما بین °C و °F این دکمه را برای ۳ ثانیه لمس کرده و نگه دارید تا دمایی که می‌خواهید ثابت داده شود. هربار که این دکمه را فشرده و نگه می‌دارید، حالت دما متناوبًا بین °C و °F عوض شده و چراغ نماد °C یا °F روشن می‌شود. که انتخاب شما را نشان می‌دهد.</p>	
<p>برخی مناطق محلی نسبتاً مقدار زیادی آهک در آب دارند. این موضوع ممکن است چربه موام فیلتر را کاهش دهد. در این مناطق لازم خواهد بود که فیلتر آب را به دفعات بیشتری از آنجه در بالا ذکر شد تعویض کنید.</p> <p>Cubed/Crushed Ice (or Ice Type) / Ice Maker Off (3 sec) (بخ قالبی/خرد شده یا نوع بخ) / بخ ساز خاموش ۳ ثانیه) </p>	(۹)	<p>Vacation (مرخصی)</p> <p>از دکمه Vacation (مرخصی) می‌توان برای فعل غیرفعال سازی حالت مرخصی استفاده کرد. اگر به مرخصی یا مسافرت کاری می‌روید یا اگر در نظر ندارید که برای مدت طولانی از بچال استفاده کنید، از ویژگی Vacation (مرخصی) استفاده کنید. نشانگر مرخصی (🕒) روشن است برای ۳ ثانیه فشرده و نگه دارید.</p>	
<p>این دکمه را برای سوپیج کردن بین انواع بخ قالبی و خرد شده فشار دهید. نشانگر مروطه روشن می‌شود.</p> <p>Ice Maker Off (بخ ساز خاموش)</p> <p>برای غیرفعال سازی تولید بخ، برای ۳ ثانیه فشرده و نگه دارید. تولید بخ در این حالت غیرفعال می‌شود حتی اگر دکمه را فشرد. توجه کنید که حالت Ice Maker Off (بخ ساز خاموش) اگر اهرم بخ را برای بیش از ۵ ثانیه فشرده و نگه دارید، غیرفعال خواهد شد.</p>		<p>اکیداً توصیه می‌شود که محفظه یخچال را خالی کرده و مطمئن شوید که درست باشد.</p>	
Filter (فیلتر) (۱۰)			
<p>این نماد هنگامی روشن می‌شود که لازم است فیلتر را تعویض کنید. معمولاً بعد از اینکه بچال در حدود ۲۰۰ گالان آب را توزیع کرده است (بعد از حدود ۶ ماه). این نماد هنگامیکه درب را باز یا بسته می‌کنید برای چند ثانیه چشمک خواهد زد.</p> <p>پس از تنصیب فیلتر آب جدید، نشانگر فیلتر را می‌لنس کردن و تکه داشتن دکمه Filter Reset (تنظیم مجدد فیلتر) برای ۳ ثانیه مجدد تنظیم کنید. هنگامیکه نشانگر فیلتر را مجدد تنظیم می‌کنید، سیکل عمر فیلتر مجدد تنظیم شده و نشانگر فیلتر خاموش خواهد شد.</p>			

<p>(۴) Cool Select Zone (3 sec) (حوزه انتخاب سرما (۳ ثانیه))</p> <p>با قابلیت حوزه انتخاب سرما، می توانید اقلام غذایی را در اتفاق انتخاب سرما که در قسمت پایین سمت راست بخچال قرار دارد، به صورتی مرتبت و منظمی قرار دهید.</p> <p>آنکه انتخاب سرما (Cool Select Zone) را برای ۳ ثانیه فشنده و نگه دارید. هنگامیکه حالت مورد نظر انتخاب شد، دکمه را کنید.</p> <p>حالت به صورت زیر موجود است:</p>  <p>(آب شدن) Thaw</p> <ul style="list-style-type: none"> - آب شدن را برای آب کردن یخ غذای منجمد در تنظیمات ۵ یا ۱ ساعت انتخاب کنید. - زمان آب شدن را می توان بستگی به اندازه و ضخامت اقلام غذایی کوتاه یا تند کرد. - قبل از شروع قابلیت آب شدن، هرگونه اقلامی که نمی خواهید یخ زدی شوند را از اتفاق انتخاب سرما خارج کنید. <p>(خنک سریع) Quick Cool</p> <p>خنک سریع را برای سرد کردن ۱ تا ۳ قوطی نوشابه در ظرف یک ساعت انتخاب کنید.</p> <p>(خنک) Cool</p> <p>برای تنظیم Cool Select Room (اتفاق انتخاب سرما) روی دمای مشابه یخچال، Cool (خنک) را انتخاب کنید.</p> <p>این قابلیت برای نگه داشتن غذا برای منظورات عمومی از قبیل نگه داشتن آب، آب میوه، نوشابه و آبجو مفید است.</p>	<p>(۳) Control Lock (3 sec) (قفل کنترل ۳ ثانیه))</p> <p>برای فعال سازی Control Lock (قفل کنترل)، برای ۳ ثانیه Control Lock (قفل کنترل) را فشنده و نگه دارید.</p> <p>کنترل های روی نمایشگر غیرفعال می شوند و پخشگر کار نمی کنند حتی اگر اهرم را فشار دهید.</p> <p>برای غیرفعال سازی، برای ۳ ثانیه وباره فشنده و نگه دارید.</p> 
<p>(۴) Fridge / Power Cool (3 sec) (یخچال / سرد کردن پرقدرت (۳ ثانیه))</p> <p>دکمه Fridge (یخچال) دو منظور را برآورده می کند:</p> <ul style="list-style-type: none"> - برای تنظیم یخچال روی دمای مخفاه شما. - برای روشن و خاموش کردن عملکرد سردی پرقدرت. <p>۱. برای تنظیم دمای یخچال، دکمه Fridge (یخچال) را فشنار دهید.</p> <p>من توانید دما را بین ۲۴ درجه فارنهایت (۷ درجه سانتی گراد) و ۳۴ درجه فارنهایت (۱ درجه سانتی گراد) تنظیم کنید.</p>  <p>۲. عملکرد سردی پرقدرت برای کاهش زمان لازم برای سرد کردن محصولات در یخچال.</p> <p>این دکمه را برای ۳ ثانیه نلس کرده و نگه دارید.</p> <p>این عملکرد هنگامی می تواند مفید باشد که لازم است اقلامی که زود خراب می شوند را سریعاً سرمه کنید یا اینکه دمای داخل یخچال به طور شدید گرم شود.</p> <p>(برای مثال، اگر در بار ماند).</p>	<p>(۴) Fridge / Power Cool (3 sec) (یخچال / سرد کردن پرقدرت (۳ ثانیه))</p> <p>دکمه Fridge (یخچال) دو منظور را برآورده می کند:</p> <ul style="list-style-type: none"> - برای تنظیم یخچال روی دمای مخفاه شما. - برای روشن و خاموش کردن عملکرد سردی پرقدرت. <p>۱. برای تنظیم دمای یخچال، دکمه Fridge (یخچال) را فشنار دهید.</p> <p>من توانید دما را بین ۲۴ درجه فارنهایت (۷ درجه سانتی گراد) و ۳۴ درجه فارنهایت (۱ درجه سانتی گراد) تنظیم کنید.</p>  <p>۲. عملکرد سردی پرقدرت برای کاهش زمان لازم برای سرد کردن محصولات در یخچال.</p> <p>این دکمه را برای ۳ ثانیه نلس کرده و نگه دارید.</p> <p>این عملکرد هنگامی می تواند مفید باشد که لازم است اقلامی که زود خراب می شوند را سریعاً سرمه کنید یا اینکه دمای داخل یخچال به طور شدید گرم شود.</p> <p>(برای مثال، اگر در بار ماند).</p>

- برای لغو حالت انتخاب شده، Cool Select Zone (حوزه انتخاب سرما) را فشنار دهید.
 - هنگامیکه حالت انتخاب شده تمام شد، حوزه انتخاب سرما به حالت خنک برگشت.
- اگر دکمه فعال نمی شود، مطمئن شوید که قفل دکمه باز شده باشد.
- نگه دارید تا ماد قفل خاموش شود. سپس Cool Select Zone (حوزه انتخاب سرما) را برای بیش از ۳ ثانیه فشنده و نگه دارید تا حالت تغییر کند.
- 

استفاده از یخچال ساید بای ساید

SAMSUNG

Freezer / Power Freeze (3 sec) (فریزر / بخ زدن پرقدرت ۳ ثانیه)

(۱)

دکمه Freezer (فریزر) دو ممنتور را برآورده می کند:

- برای تنظیم فریزر روی دمای یخچاه شما.
- برای روشن و خاموش کردن عملکرد بخ زدن پرقدرت.

۱. برای تنظیم دمای فریزر دکمه Freezer (فریزر) را لمس کنید.
می توانید دما را بین ۵ درجه فارنهایت (۱۵-۰ درجه سانتی گراد) و ۸-۱۰ درجه فارنهایت (۲۰-۲۲ درجه سانتی گراد) تنظیم کنید.

۲.

عملکرد بخ زدن پرقدرت

برای کاهش زمان لازم برای احمداد محصولات در فریزر، این دکمه را برای ۳ ثانیه لمس کرده و نگه دارید.

۳. عملکرد هنگامی می تواند مفید باشد که لازم است اقلامی که زود خراب می شوند را سریعاً منجمد کنید یا اینکه دمای داخل فریزر به طور شدید گرم شود.



(برای مثال، اگر در بارگیراند)

هنگامیکه از این عملکرد استفاده می کنید، مصرف انرژی بخچال افزایش پیدا می کند.

خاموش نکنید که آنرا هنگامیکه به آن نیاز ندارید خاموش کنید و فریزر را به تنظیمات دمای اصلی تان ببرگردانید.

اگر می خواهید مقدار زیادی غذا را منجمد کنید، عملکرد بخ زدن پرقدرت را حداقل ۲۰ ساعت قبل از قراردادن غذا در فریزر فعال کنید.

استفاده از صفحه کنترل

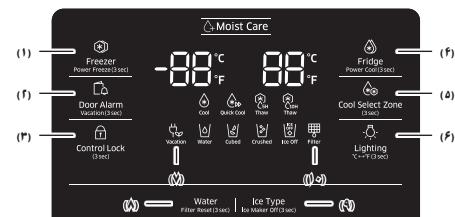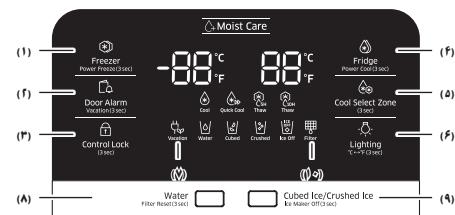

Door Alarm (آذرم درب)

(۵)

می توانید آذرم را برای یادآوری تنظیم کنید.

اگر درب را برای بیش از ۳ دقیقه باز بگذارید، آذرم در حالیکه نشانگر آذرم چشمک می زند، به صدا در خواهد آمد.




آذرم توسط پیش فرض کارخانه فعال می شود.

برای غرفه عال سازی آذرم، Door Alarm (آذرم درب) را فشنار دهید.

برای فعال سازی Door Alarm (آذرم درب) را دوباره فشنار دهید.

مقدار آبی که در جایخی جمع می شود را کنترل کنید.

- ۱. قاب بخ ساز را بلند کرده و آنرا با ملامیت ببرون بکشید.
- ۲. هنگامیکه دکمه Test (آزمایش) را برای ۳ ثانیه فشار می دهید.
- ۳. محفظه قالب بخ از شیر جریان آب با آب پر می شود.
- ۴. کنترل کنید که حتماً مقدار آب درست باشد (به تصویر زیر مراجعه کنید).
- ۵. اگر سطح آب زیادی کم باشد، قطعات بخ کوچک خواهد بود.
- ۶. این یک مشکل فشار آب در داخل لوله های جریان آب بوده و اشکال بخچال نیست.

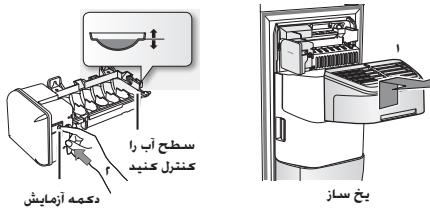


- ۷. پس از اینکه دکمه Test (آزمایش) را فشار می دهید، چند دقیقه ای طول می کشد تا آب به سطح صحیح برسد.
- ۸. هنگامیکه سینی پر از بخ یا آب شد، دکمه آزمایش را به طور متداوم فشار ندهید.
- ۹. آب ممکن است لبریز شده با گیرکردگی بخ ایجاد شود.
- ۱۰. هنگامیکه سطحل نسب نشده، بخ ساز کار می کند.
- ۱۱. هنگامیکه سطحل را دوباره وارد کنید و با مطمئن شوید که درست نصب شده باشد.

- **● هنگامیکه Off (بخ خاموش) روی صفحه نمایشگر چشمک می زند.** سطحل را دوباره وارد کنید و با مطمئن شوید که درست نسب شده باشد.
- **● هنگامیکه در باز باشد.** پخش گر بخ و آب کار می کنند.
- **● اگر در را محکم ببندید.** مکن است موجب سوازیر شدن آب در بخ ساز شود.
- **● برای جلوگیری از انداختن سطحل بخ هنگام برداشتن آن از هردو دست استفاده کنید.**
- **● برای جلوگیری از مصدومیت، حتماً هرگونه بخ با آب را که مکن است روی کف اتفاق ریخته شده باشد تمیز کنید.**
- **● به کودکان اجازه ندهید که به پخش گر بخ یا سطحل آبیزان شوند.**
- **● مطمئن شوید که دست های یا هرگونه شیوه را روزنه بخ وارد نکنید.**
- **● اینکار کن ابتدا موجب مصدومیت شخصی یا آسیب وارد نشدن به قطعات مکانیکی شود.**

برداشتن مواد باقیمانده در داخل لوله جریان آب بعد از نصب فیلتر.

- ۱. لوله جریان آب را باز کنید.
- ۲. دکمه آب را فشارده و اهرم پخش گر را فشار دهید.
- ۳. گاللن آب را قبل از استفاده از طریق فیلتر خارج کنید. (برای تقریباً ۶ دقیقه فلاش کنید).
- ۴. اینکار سیستم جریان آب را تمیز کرده و هوا را از لوله های آب خارج می کند.
- ۵. در بعضی منازل ممکن است نیاز به فلاش کردن اضافی آب باشد.
- ۶. در بخچال را باز کرده و مطمئن شوید آب از فیلتر آب نشست نمی کند.

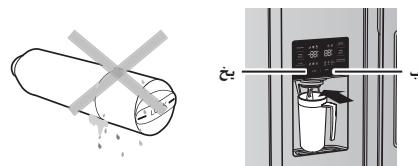

- **● فیلتر آبی که تازه نصب شده ممکن است موجب جهش آب از پخش گر آب به مدت کوتاهی شود.**
- **● این به واسطه ورود هوا به لوله است.**
- **● این موضع نایستی منتکسی در استفاده ایجاد کند.**



قبل از استفاده از بخ ساز

جدا کنید

- دسته را به طوریکه در تصویر ۱ نشان داده شده نگه دارید.
- قسمت ختانی را قادری بالا بکشید.
- سطل بخ را آهسته خارج کنید.




تصویر ۱

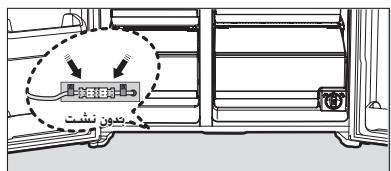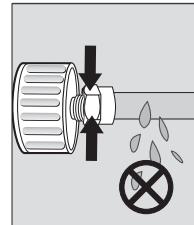

نصب

- بخ ساز را در جهت عکس پیاده کردن. سوار کنید.
- سطل را محکم به داخل فشنار دهید تا صدای کلیک شنیده شود.

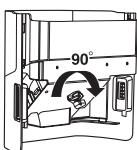

تصویر ۲

۱. مهره تراکمی (A) را از طریق لوله پلاستیکی ارائه شده (A) حرکت دهید.

۲. مهره تراکمی (A) را روی ابزار تراکمی ۱/۴ اینچ محکم کنید.


۳. اگر از لوله مسی استفاده می کنید. مهره تراکمی (B) (عرضه نشده) و بست (عرضه نشده) را روی لوله مسی (عرضه نشده) به طوری که نشان داده شده حرکت دهید.

۴. اگر از لوله پلاستیکی (B) استفاده می کنید. انتهای قالبگیری شده لوله پلاستیکی (B) را به قطعه تراکمی وارد کنید.

⚠️
بدون انتهای قالبگیری شده لوله پلاستیکی (B) استفاده نکنید.
احتیاط

قبل از اتصال با مرکز تعییرات

- هر صدائی که از بخ ساز در هنگام انداختن بخ در سطل می شنود.
- بخشی از کارکرد عادی می باشد.
- اگر از بخ ساز به مدت طولانی استفاده نکنید. مکن است بخ در سطل بخ تشکیل توهه دهد. اگر توهه بخ تشکیل شد. بخ باقیمانده را برداشته و سطل را خالی کنید.
- هنگامیکه بخ خارج می شود. کنترل کنید که بخ در روزنه گیر نکرده باشد و آنرا خارج کنید.

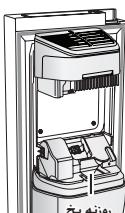

تصویر ۳

۳. مهره تراکمی (B) را روی قطعه تراکمی محکم کنید.

۴. مهره تراکمی (B) را زیادی سفت نکنید.

۵. آب را باز کرده و هرگونه نشت را کنترل کنید.

⚠️
لوله آب را فقط به منبع آب آشامیدنی وصل کنید.


۶. اگر لازم شد که لوله آب را تعییر با اوراق کنید. ۱/۴ اینچ از لوله پلاستیکی را ببرید تا مطمئن شوید که اتصال جسبان و بدون نشت باشد.



اتصال لوله آب به یخچال

۱. سرپوش لوله آب دستگاه را برداشته و مهره تراکمی را بعد از جدا کردن از لوله آب به لوله آب در دستگاه وارد کنید.
۲. هر دو لوله آب از دستگاه و لوله آب در کیت را متصل کنید.
۳. مهره تراکمی را روی قطعه تراکمی مکم کنید.
۴. مراقب باشید که فاصله ای بین این دو نباشد.
۵. آب را باز کرده و هرگونه نشت را کنترل کنید.

لوله آب را فقط به منبع آب آشامیدنی وصل کنید.

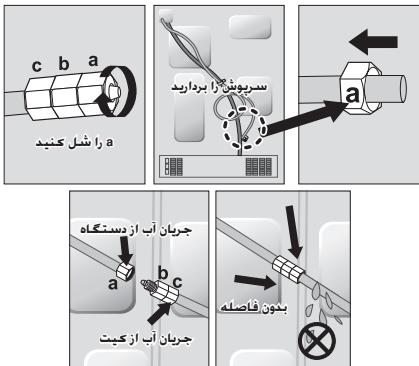

اگر لازم شد که لوله آب را تعمیر با اوراق کنید، ۶۱۵ میلی متر از لوله پلاستیکی را ببرید تا مطمئن شوید که اتصال چیزیان و بدون نشت باشد.

قبل از استفاده باستی مطمئن شد که در این محل ها **نشت وجود نداشته باشد.**




- نصب لوله آب خت پوشش ضمانت سامسونگ نیست.
- اینکار به هزینه مشتری انجام خواهد شد مگراینکه بهای فروش شامل هزینه نصب باشد.
- لطفاً در صورت لزوم با لوله کشنش یا نصب کننده مجاز تماش بگیرید.
- اگر نصب نادرست موجب نشت آب شد، لطفاً با نصب کننده تماش بگیرید.

اتصال به لوله جریان آب

۱. ابتدا شیرفالکه جریان اصلی آب را ببندید.
۲. نزدیک ترین لوله آب شرب سرد را پیدا کنید.
۳. دستورالعمل های نصب لوله آب در کیت نصب را دنبال کنید.

احتیاط

لوله آب باستی به لوله آب سرد متصل شده باشد.
اگر به لوله آب گرم متصل شده باشد، ممکن است موجب درست کار نکردن دستگاه تصفیه شود.

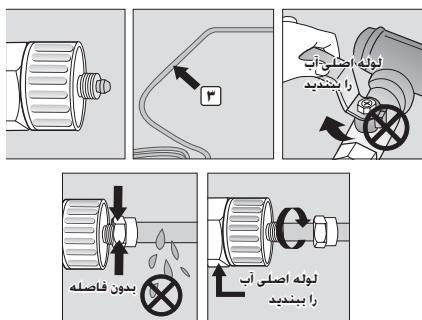

۴. پس از اتصال جریان آب به فیلتر آب، جریان آب را باز کرده و در حدود ۳ لیتر آب را برای پاکسازی و راه اندازی فیلتر جاری کنید.

ایجاد تنظیمات جزئی در درها

فراموش نکنید که برای هم تراز کردن کامل درها، بچال بایستی تراز باشد.
اگر به کمک نیاز دارید، بخش قبلى را در مورد تراز کردن بچال مرور کنید.

کنترل لوله پخش گر آب

آبریز یکی از ویژگی های مفید در بچال Samsung جدید شما می باشد.
برای کمک در اشاعه بهداشت بهتر، فیلتر آب Samsung ذرات ناخواسته را از آب شما پاک می کند.

با این وجود، آب را ضدغیره نکرده یا موجودات ریز را نابود نمی کند.
برای اینکار ممکن است لازم باشد که یک سیستم تصفیه آب را خردباری کنید.

برای اینکه بخ ساز درست کار کند، فشار آب بایستی بین ۲۰ و ۱۵ پوند بر اینچ مربع باشد.
تخت شرابیط عادی، یک فنجان کاغذی ۱۷۰ سانتی متر مکعب (۵۰ اونس) را می توان در ظرف ۱۰ ثانیه پُر کرد.

اگر بچال در منطقه ای نصب شده که فشار آب پایین است (از ۱۰ پوند بر اینچ مربع)، می توانید یک پمپ بوسنتر را برای جبران کمی فشار آب نصب کنید.


مطمئن شوید که مخزن ذخیره آب در داخل بچال به خوبی پوشیده باشد.
برای اخراج اینکار، دسته آبریز را فشار دهید تا آب از خروجی آب جاری شود.

کیت های نصب لوله آب را می توانید با پرداخت هزینه اضافی از فروشنده خود دریافت کنید.
ما استفاده از کیت جریان آب که حاوی لوله کشی مسی است را توصیه می کنیم.

باید از مجموعه شبانگ جدید که به همراه دستگاه عرضه می شود استفاده شود و نباید از مجموعه شبانگ قدیمی دوباره استفاده کرد.


هنگامیکه در بچال بالاتر از فریزر است

• یک پیچ گوشتنی تیغه تخت را در شکاف روی بایه در فریزر وارد کرده.
سپس آنرا در جهت عقربه ساعت بگردانید.

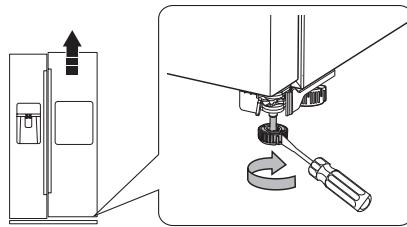


هنگامیکه در فریزر بالاتر از بچال است

• یک پیچ گوشتنی تیغه تخت را در شکاف روی بایه در بچال وارد کرده. سپس آنرا در جهت عقربه ساعت بگردانید.

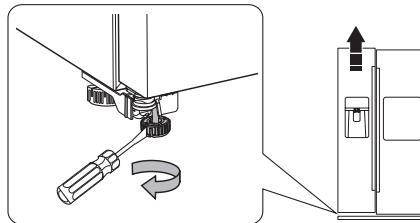


هنگامیکه قسمت فریزر پائین تراز قسمت یخچال است.

- یک پیچ گوشتشی تیغه تخت را در شکاف روی پایه فریزر وارد کرده.
سپس آنرا در جهت عقربه ساعت بگردانید.

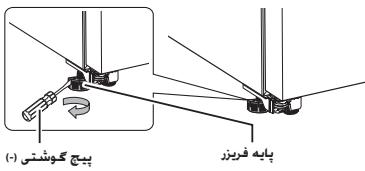

هنگامیکه قسمت یخچال پائین تراز قسمت فریزر است.

- یک پیچ گوشتشی تیغه تخت را در شکاف روی پایه یخچال وارد کرده.
سپس آنرا در جهت عقربه ساعت بگردانید.

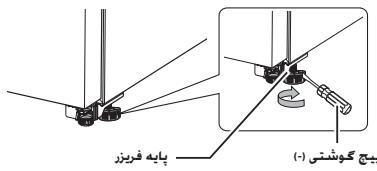


- برای بهترین روش ایجاد تنظیمات بسیار جزوی در درب ها
به دفعش بعدی مراجعه کنید.


به طوریکه در تصویر نشان داده شده پایه را در جهت عقربه ساعت
بگردانید تا به زمین برسد و پایه در بتواند دریش را تحمل کند.
(همانطور برای یخچال، فریزر)



- اتصال دهنده محفظه را جدا کنید.

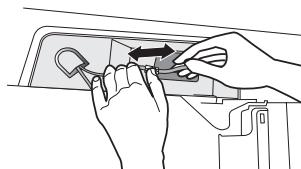

- درب را مستقیماً به سمت بالا بلند کنید (5) تا درب از لوولای ختans
(4) جدا شود.

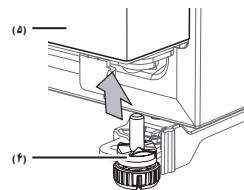


سوار کردن مجدد درب یخچال

برای سوار کردن مجدد درب های یخچال، قطعات را به ترتیب
معکوس سرجایشان بگذارید.




تراز کردن یخچال

حالا که درب ها را دوباره روی یخچال نصب کرده اید، می خواهید مطمئن
شوید که یخچال تراز است تا بتوانید آخرین تنظیمات را انجام دهید.
اگر یخچال تراز نباشد، امکان ندارد که بتوان درب ها را کاملاً هم تراز کرد.

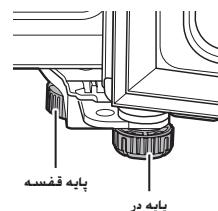

۵. سپس درب را مستقیماً به سمت بالا با احتیاط بلند کنید (۵) تا درب از لولای ختانی (۶) جدا شود.

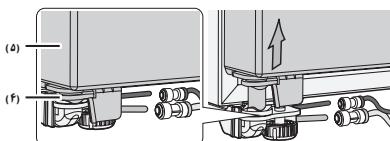




مراقب باشید تا لوله آب و تسمه سیمی روی درب فشرده نشوند.
احیاط نشوند.

جدا کردن درب فریزر

برای سوار کردن مجدد درب های فریزر، قطعات را به ترتیب معکوس سر جایشان بگذارید.
احیاط


جدا کردن درب یخچال

۱. سیم برق را قطع کرده و ۱ پیچ قاب را با استفاده از پیچ گوشتشی چهاررسو (۱) باز کنید.
سپس در یخچال را باز کرده و قلاب ها را در دو طرف بکشید تا قاب (۲) نشل شود.

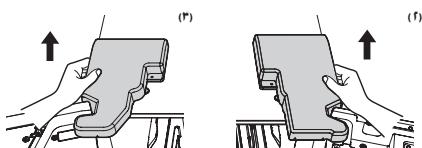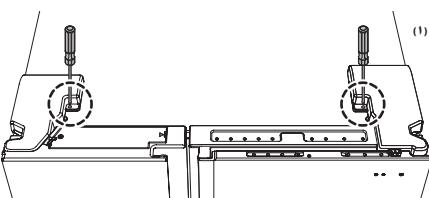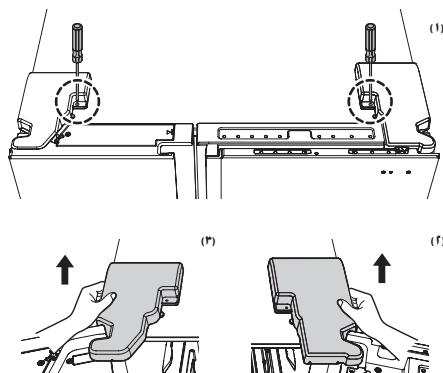


قب لولای فوقانی بستگی به مدل به صورت یکپارچه یا جدگانه می باشد.


۱. قاب لولا را جدا کرده و سپس اتصال سیم برق را قطع کنید.

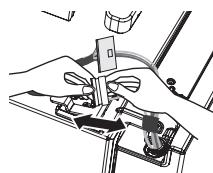

۲. گیره (A) را در جهت (۱) بلند کرده و سپس آنرا در جهت (۴) بپرون بکشید.

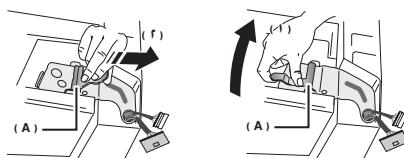

۳. لولا را بردارید (B).

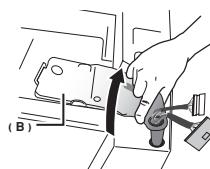


کارگذاری درهای یخچال


اگر در ورودی به شما امکان نمی دهد تا یخچال را به راحتی از داخل آن عبور دهید. می توانید درب ها را ببردید.

جدا کردن لوله جریان آب از یخچال

- دو لوله آب (که در فیکسر هستند) را به جلو بکشید.

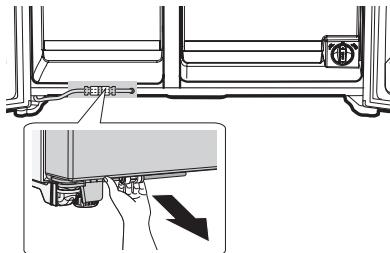

- دو لوله آب (سفید برای آب و دیگری برای یخ می باشد) را توسط فشار دادن بست (۱) و بپرون کشیدن لوله آب (۲) جدا کنید.

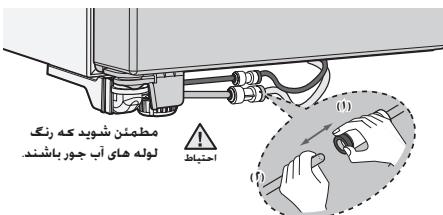

جدا کردن درب فریزر


چند نکته که بایستی ابتداء ذکر شود.

- حتماً در را به طور مستقیم به بالا بلند کنید تا لولاهای خمیده با شکسته نشوند.
- مراقب باشید تا لوله آب و تسممه سیمی روی درب فشرده نشوند.
- درها را روی سطح محافظت شده قرار دهید تا از خراشیده شدن یا آسیب وارد شدن به آنها جلوگیری شود.

- سیم برق را قطع کرده و آ پیچ قاب را با استفاده از آپیچ گوشتشی چهاررسو (۱) باز کنید.
سپس در یخچال را باز کرده و قلاب ها را در دو طرف بکشید تا قاب (۲) نشل شود.
- قب را بلند کرده و به سمت خودتان بکشید تا جدا شود (۳). قاب لولا را در حالیکه در باز است جدا کرده و سپس زمانیکه قاب لولا جدا شد. در را بیندید.

هنگام حرکت دامن یخچال


برای جلوگیری از وارد شدن آسیب به کف اتاق، مطمئن شوید که پایه های جلو در وضعیت بالا (بالای کف اتاق) باشند.
به "توازن کردن یخچال" در این فترچه راهنمای صفحه ۱۹ مراجعه کنید.
برای محافظت از جلای کف اتاق در طول نصب یخچال، در هنگام کار بک قطعه بزرگ مقوا را زیر یخچال قرار دهید.

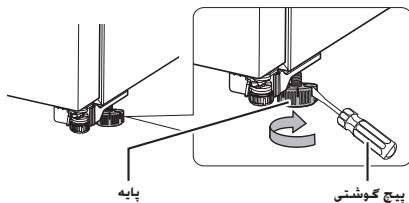

حالا که یخچال جدید را سرگایش نصب کرده اید، آماده اید که آنرا راه بیاندازید و از ویژگی ها و عملکردهای آن بهره مند شوید.
یخچال بایستی با اجرای مراحل زیر کاملاً راه اندازی شود.
در غیر اینصورت، منبع نیرو و منبع برق را کنترل کرده با به بخش رفع مشکلات در پشت این راهنمای استفاده کاربر مراجعه کنید.
اگر سوال دیگری دارید، با مرکز تعمیراتی Samsung Electronics تماس بگیرید.



۱. یخچال را در محل مناسب و در فاصله قابل قبول بین دیوار و یخچال قرار دهید.
به دستورالعمل های نصب در این فترچه راهنمای مراجعه کنید.
۲. هنگامیکه یخچال به پوزیزیون شود، مطمئن شوید که چراغ داخلی هنگامیکه درها را باز مس کنید. روشن شود.
۳. کنترل دما را روی سرعتی دما قرار داده و برای یک ساعت منتظر شوید.
فریزر قادر سرد شده و موتور به طور روان گردش خواهد کرد.
پس از روشن کردن یخچال، چند ساعتی طول می کشد تا دمای مناسب برسد.
می توانید پس از اینکه دما به اندازه کافی سرد شد، غذا و نوشابه ها را در یخچال قرار دهید.

هنجام نصب، تعمیر یا تمیز کردن پشت یخچال، حتماً دستگاه را به طور مستقیم به بیرون کشیده و بعد از اینکه کارتان تمام شد به طور مستقیم سرگایش مل دهید.

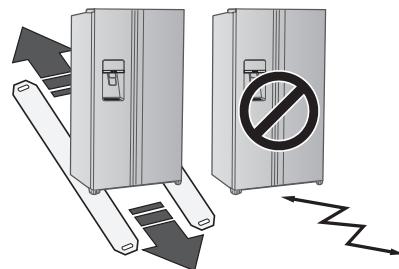

کارگذاری یخچال ساید بای ساید

راهنمای
انتخاب

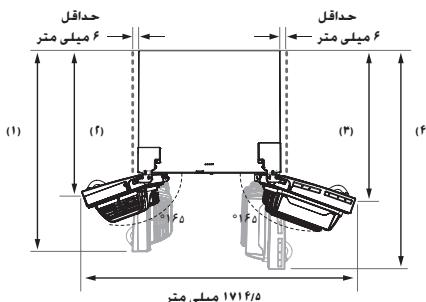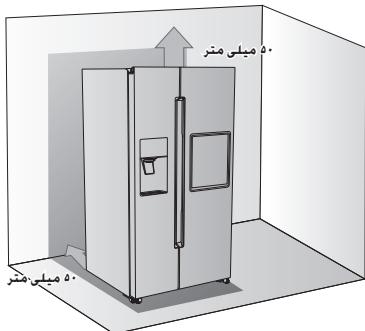

(f)	(m)	(f)	(l)	
132F/1	951	903/F	1148/V	RS73K++
132F/1	968	920/F	1148/V	RS72K++

آماده شدن برای نصب یخچال

خرید یخچال ساید بای ساید Samsung را به شما تبریک می‌گوئیم.
امیدواریم که از بسیاری ویژگی‌ها و کارائی‌های بسیار پیشرفته ای که
این دستگاه جدید عرضه می‌کند لذت ببرید.

انتخاب بهترین محل برای یخچال

- محلی را انتخاب کنید که دسترسی آسان به منبع آب دارد.
- محلی را انتخاب کنید که در معرض نور مستقیم خورشید نیست.
- محلی را انتخاب کنید که زمین تراز (با تقریباً تراز) دارد.
- محلی را انتخاب کنید که برای باز کردن آسان درهای یخچال به اندازه کافی جا باشد.
- به نمودار زیر مراجعه نمایید.
- محلی را انتخاب کنید که فضای کافی برای جریان هوا در سمت راست، چپ، پشت و بالا قائل شود. به نمودار زیر مراجعه نمایید.
- محلی را انتخاب کنید که به شما امکان می‌دهد تا یخچال را در صورت نیاز به تعمیر و نگهداری به آسانی حرکت دهید.

- هنگام نصب، فضای کافی در سمت راست، چپ، پشت و بالا قائل شوید. این موضوع مصرف برق را کاهش داده و صورخساب برق شما را در حد پائین تری نگه می دارد.
- برای استفاده مؤثر از انرژی، لطفاً اقلام داخلی از قبیل سبدها، کشوها، قفسه ها را در محلی قرار دهید که توسط سازنده ارائه شده است.

این دستگاه به منظور استفاده در محیط خانگی و کاربردهای مشابه می باشد از قبیل

- محیط آشپزخانه کارکنان در فروشگاه ها، دفاتر و سایر محیط های کاری؛
- خانه های روستائی و توسط مشتریان در هتل ها، متل ها و سایر محیط های از نوع مسکونی؛
- محیط های از نوع پانسیون (تخت و صبحانه)؛
- فراهم کردن خوراک برای ضیافت ها و کاربردهای غیرخرده فروشی مشابه.

- نکاتی در مورد صرفه جوئی در انرژی - دستگاه را در یک اتاق خنک و خشک که هوایگیری کافی دارد نصب کنید.
- مطمئن شوید که در معرض نور خورشید قرار ندارد و هرگز آنرا در نزدیک منبع مستقیم گرما (برای مثال شوفاژ) قرار ندهید.
- هرگز منفذهای تهویه یا هوایکش های مشبک دستگاه را مسدود نکنید.
- قبل از قرار دادن غذای گرم در داخل دستگاه، بگذارید خنک شود.
- غذای منجمد را برای آب شدن در یخچال بگذارید.
- سپس می توانید از دمایهای پایین فرآورده های منجمد برای خنک کردن غذا در یخچال استفاده کنید.
- نگذارید در دستگاه هنگام گذاشتن یا برداشتن غذا از داخل آن زیادی باز باقی بماند. هرچه در دستگاه کمتر باز باقی بماند، یخ کمتری در فریزر تولید خواهد شد.
- پشت یخچال را به طور مرتب تیز کنید.
- گرد و غبار مصرف انرژی را افزایش می دهد.
- دما را سرددتر از میزان لازم تنظیم نکنید.
- مطمئن شوید که هوای کافی از زیر یخچال و دیواره پشتی آن خارج می شود.
- روزنه های منفذ هوا را نپوشانید.

- افزایش دمای غذای منجمد در طول یخ زدایی ممکن است طول عمر نگهداری آن را کوتاه کند.
- هنگامیکه از این عملکرد استفاده می کنید، مصرف انرژی یخچال افزایش پیدا می کند. فراموش نکنید که آنرا هنگامیکه به آن نیاز ندارید خاموش کنید و فریزر را به تنظیمات دمای اصلی تان برگردانید.
اگر لازم است که مقدار زیادی غذا را منجمد کنید، عملکرد Power Freeze (یخ زدن پرقدرت) را حداقل ۲۴ ساعت قبل فعال کنید.
- اگر خاموشی برق بیش از ۲۴ ساعت طول کشید، همه غذاهای منجمد را خارج کنید.
- اگر کلیدهایی برای یخچال در نظر گرفته شده، این کلید ها بایستی از دسترس کودکان به دور بوده و در اطراف دستگاه قرار داده نشوند.
- در صورتیکه این یخچال برای مدت طولانی در پایین ترین حد سرما که این دستگاه برای آن طراحی شده قرار داده شود ممکن است به طور مداوم کار نکند (احتمال زیاد گرم شدن دما در داخل یخچال).
- از غذاهایی از قبیل موز و طالبی که به آسانی خراب می شوند در دمای پایین نگهداری نکنید.
- این دستگاه برفک نمی زند، یعنی لازم نیست به طور دستی آنرا یخ زدایی کرد چون اینکار به طور خودکار انجام می شود.
- افزایش دما در طول یخ زدائی بایستی با شرایط ISO سازگار باشد.
ولی اگر می خواهید از افزایش بیش از حد دمای غذای منجمد در طول یخ زدائی دستگاه جلوگیری کنید، لطفاً غذای منجمد را در چند لایه روزنامه بپیچید.

**!
مشار
انداختن**

- هنگام دور انداختن این محصول یا سایر یخچال‌ها، در پلیمپ دور در و چفت در را جدا کنید تا کودکان یا حیوانات کوچک نتوانند در داخل آن محبوس شوند. قفسه‌ها را خارج نکنید تا کودکان نتوانند به راحتی داخل شوند.
- با ایستی مراقب کودکان بود تا اطمینان حاصل شود که با دستگاه قدیمی بازی نمی‌کنند.
- لطفاً مواد بسته بندی برای این محصول را به صورتی دور بریزید که خطری برای محیط زیست ایجاد نشود.

نکات اضافی برای استفاده صحیح از دستگاه

- در صورت خاموشی برق، با مأمور محلی شرکت برق تماس گرفته و از وی بپرسید که این خاموشی چه مدت طول خواهد کشید.
- بیشتر خاموشی‌های برق که در ظرف یکی دو ساعت برطرف شوند بر روی دمای یخچال تأثیری نخواهند گذاشت. با این وجود با ایستی هنگام قطع برق، تعداد دفعات بازکردن درب فریزر را به حداقل برسانید.

- قبل از دور انداختن، مطمئن شوید که به هیچیک از لوله‌ها در پشت دستگاه آسیب وارد نشده باشد.

- از R-600a یا R-134a به عنوان مبرد استفاده شده است.
برچسب کمپرسور در پشت دستگاه یا برچسب درجه بندی در داخل یخچال را کنترل کنید تا ببینید از چه مبردی برای یخچال شما استفاده شده است.
هنگامیکه این محصول حاوی گاز قابل اشتعال است (مبرد R-600a). در مورد روش دور انداختن این این این محصول با مقامات محلی تماس بگیرید. از سیکلوبنتان به عنوان گاز دمتش عایق بندی استفاده شده است.

گازهای داخل مواد عایق بندی نیاز به شیوه دور انداختن ویژه دارند. لطفاً در مورد دورانداختن این این محصول از لحاظ محیط زیست، با مقامات محلی تان تماس بگیرید. قبل از دور انداختن، مطمئن شوید که به هیچیک از لوله‌ها در پشت دستگاه آسیب وارد نشده باشد. لوله‌ها در فضای باز خواهند شکست.



احتیاط

علائم احتیاط برای تمیز کردن و حفظ و نگهداری

- به طور مستقیم به داخل یا خارج یخچال آب نپاشید.
- خطر آتش سوزی یا برق گرفتگی وجود دارد.
- موادی که در مقابل دما حساس هستند. از قبیل افسانه های قابل اشتعال، اشیاء قابل اشتعال، یخ خشک، دارو یا مواد شیمیائی را در نزدیک یخچال قرار ندهید. اشیاء یا مواد فرار یا قابل اشتعال (بنزن، تینر، گاز پروپان و غیره) را در یخچال نگه داری نکنید.
- این یخچال فقط برای نگهداری غذا می باشد.
- اینکار ممکن است منجر به آتش سوزی یا برق گرفتگی شود.
- محصولات تمیزکننده را مستقیماً روی نمایشگر اسپری نکنید.
- حروف چاپ شده بر روی نمایشگر ممکن است پاک شوند.
- هرگونه ذرات خارجی یا گرد و غبار را از برق گرفتگی یا آتشسوزی شود.

خارهای دوشاخه پاک کنید. ولی هنگام تمیز کردن دوشاخه از پارچه خیس یا نم دار استفاده نکنید. هرگونه ذرات خارجی یا گرد و غبار را از خارهای دوشاخه پاک کنید.

- در غیر اینصورت خطر آتش سوزی یا برق گرفتگی وجود دارد.
- هرگز انگشتان یا اشیاء دیگر را در داخل سوراخ پخشگر و منفذ یخ قرار ندهید.
- اینکار ممکن است موجب جراحت شخصی یا آسیب وارد شدن به مواد شود.
- قسمت های غیرقابل دسترسی از قبیل لولاهای را با استفاده از یک برس یا مسوک تمیز کنید.

• یخچال را قبل از تمیز کردن و اجرای عملیات حفظ و نگه داری از پریز بکشید.

- اگر هرگونه ماده خارجی از قبیل آب وارد دستگاه شده، دوشاخه را از پریز کشیده و با نزدیکترین مرکز تعمیرات تماش حاصل نمایید.
- قصور در اخیام اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.

- منبع آب این یخچال فقط بایستی توسط یک شخص مجرب نصب/وصل شده و فقط به منبع آب قابل شرب وصل شود.
- برای کارکرد صحیح بخ ساز لازم است فشار آب بین ۱۳۸ تا ۸۶۲ کیلوپاسکال (۱/۹ تا ۸/۸ کیلوگرم نیرو بر متر مکعب) باشد.
- مواد فرار از قبیل حشره کش را بر روی سطح دستگاه اسپری نکنید.
- علاوه بر اینکه برای انسان مضر است، مکن است منجر به برق گرفتگی، آتشسوزی یا مشکلاتی برای محصول شود.
- ضریبه یا فشار بیش از حد را به سطح شیشه ای وارد نکنید.
- شیشه خرد شده مکن است منجر به مصدومیت شخصی و/یا آسیب وارد شدن به اموال شود.
- در عملکرد یخچال تغییر یا تعديل ایجاد نکنید.
- تغییرات یا تعديلات مکن است منجر به مصدومیت شخصی و/یا آسیب وارد شدن به اموال شود. هرگونه تغییرات یا تعديلاتی که توسط شخص ثالث بر روی این دستگاه کامل شده انجام شود خت پوشش خدمات گارانتی Samsung نبوده و Samsung برای موضوعات مربوط به اینمی و صدماتی که در نتیجه تغییرات شخص ثالث ایجاد شود، مسئول خواهد بود.
- منفذهای هوا را مسدود نکنید.
- اگر منفذهای هوا مخصوصاً توسط یک کیسه پلاستیکی مسدود شوند، مکن است که یخچال زیادی سرد شود. اگر این مدت سرد شدن زیادی طول بکشد، مکن است فیلتر آب شکسته و موجب نشت آب شود.
- غذاهای تازه را برای منجمد شدن در کنار غذاهایی که قبل گذاشته شده قرار ندهید.
- لطفاً حداقل مدت نگهداری و تاریخ مصرف مواد منجمد را مراعات کنید.
- مخزن آب، جایخی و محفظه های آب را فقط با آب قابل شرب پر کنید.
- تنها از بخ سازی استفاده کنید که به همراه یخچال عرضه شده است.

- اگر هرگونه گرد و غبار یا آب در بخشال وجود دارد، دوشاخه را کشیده و با مرکز خدمات Samsung Electronics تماس بگیرید.
- خطر آتش سوزی وجود دارد.

علائم احتیاط برای استفاده

- برای کسب بهترین عملکرد از این محصول.

- غذاها را زیاد نزدیک هوایکش ها و در عقب بخشال قرار ندهید چون ممکن است جلوی گردش آزاد هوا را در محفظه بخشال بگیرد.
- غذا را قبل از گذاشتن در بخشال، درست بپوشانید یا در محفظه های کیپ و در بسته قرار دهید.
- غذاهای تازه را برای منجمد شدن در کنار غذاهایی که قبلاً گذاشته شده قرار ندهید.
- نوشابه های گازدار یا پرکف را در محفظه فریزر قرار ندهید.
- نوشابه هنگامیکه محتویات منجمد شود، ممکن است بشکند و موجب مصدومیت شخصی و آسیب وارد شدن به اموال شود.

- بایستی مراقب کودکان بود تا اطمینان حاصل شود که با دستگاه بازی نمی کنند و/یا از آن بالا نمی روند.

-  بخشال را خودتان اوراق یا تعمیر نکنید.

- اینکار ممکن است موجب آتشسوزی، خراب کار کردن و/یا مصدومیت شخصی شود. در صورت خراب کار کردن، لطفاً با کارگزار تعمیراتی خود تماس بگیرید.

- اگر دستگاه یک صدای غیرعادی، بوی سوختگی یا دود ایجاد می کند، فوراً دوشاخه را کشیده و با نزدیکترین مرکز تعمیراتی خود تماس بگیرید.

- قصور در اخمام اینکار ممکن است منجر به خطرات برق گرفتگی یا آتش سوزی شود.
- اگر در هنگام عوض کردن لامپ با مشکلاتی روبرو شدید، با کارگزار تعمیراتی تماس بگیرید.

- اگر محصول مجهز به لامپ LED می باشد، خودتان پوشش لامپ و لامپ LED را اوراق نکنید.

- لطفاً با نماینده خدمات خود تماس بگیرید.

- دیواره های داخل فریزر یا محصولاتی که در فریزر گذاشته شده اند را با دست های خیس لمس نکنید.
 - اینکار ممکن است موجب سرمایزدگی شود.
 - از وسائل مکانیکی یا هرروش دیگری به غیر از روش هائی که توسط سازنده توصیه شده برای تسريع روال بخ زدائی استفاده نکنید.
 - به مدار مبرد آسیب وارد نکنید.
-
- این محصول فقط به منظور نگهداری غذا در محیط خانگی می باشد.
 - بطری ها بایستی تنگ هم قرار داده شوند تا نیافتد.
 - در صورت نشت گاز (از قبیل گاز پروپان، گاز LP و غیره)، بدون دست زدن به دوشاخه فوراً هوایگیری کنید.
 - به یخچال یا سیم برق دست نزنید.
 - از فن تهویه استفاده نکنید.
 - یک جرقه ممکن است منجر به انفجار یا آتش سوزی شود.
 - تنها از چراغ های LED که توسط سازنده یا تعمیرکار ارائه شده استفاده کنید.
- قصور در انجام این کار ممکن است موجب مصدومیت شخصی یا آسیب وارد شدن به اموال شود.
 - از مواد فرار یا قابل اشتعال از قبیل بنزن، تینر، الکل، اتریا گاز LP در یخچال نگهداری نکنید.
 - نگهداری از چنین محصولاتی ممکن است موجب انفجار شود.
 - از محصولات داروئی حساس در مقابل دمای پائین، مواد علمی یا سایر محصولات حساس در مقابل دمای پایین در یخچال نگهداری نکنید.
 - محصولاتی که به کنترل دقیق دما نیاز دارند نبایستی در این یخچال نگهداری شوند.
 - وسائل برقی را در یخچال قرار نداده و از آنها استفاده نکنید. مگراینکه از نوعی هستند که توسط سازنده برای اینکار توصیه شده باشند.
 - از سشوار برای خشک کردن داخل یخچال استفاده نکنید. یک شمع روشن را برای از بین بردن بوی متعفن در داخل یخچال قرار ندهید.
 - اینکار ممکن است منجر به برق گرفتگی یا آتشسوزی شود.

- ظروفی که با آب پر شده اند را روی یخچال قرار ندهید.
- اگر آب به بیرون بپاشد، خطر آتشسوزی یا برق گرفتگی وجود دارد.
- اجازه ندهید که کودکان به درب آویزان شوند.
- قصور در اخام اینکار ممکن است موجب جراحت شخصی شدید شود.
- نگذارید که درهای یخچال هنگامیکه کسی مراقب نیست باز باشند و نگذارید که کودکان داخل یخچال شوند.
- اجازه ندهید که نوزادان یا کودکان به داخل کشوها بروند.
- اینکار ممکن است به واسطه خفگی در نتیجه گیرافتادن، مهلك بوده یا موجب مصدومیت شخصی شود.
- روی در فریزر ننشینید.
- ممکن است که در بشکند و موجب جراحت شخصی شود.
- برای جلوگیری از محبوس شدن کودکان، اگر جداکننده را از روی کشو برداشتید، بایستی جداکننده را پس از تمیز کردن یا اقدامات دیگر با استفاده از پیچ‌های ارائه شده دوباره نصب کنید.
- هرگز انگشتان یا اشیاء دیگر را در داخل سوراخ پخشگر قرار ندهید.
- فیوز یخچال بایستی توسط تکنسین های مهندس یا شرکت‌های خدماتی تعویض شود.
- قصور در اخام اینکار ممکن است منجر به برق گرفتگی یا مصدومیت شخصی شود.

علائم احتیاط برای نصب

- اجازه ندهید که روزنه هواگیری در محفظه دستگاه یا ساختار سوار کردن مسدود شود.
- اجازه دهید که دستگاه پس از نصب برای ۲ ساعت به طور ایستاده باقی بماند.

علائم هشدار شدید برای استفاده

- دوشاخه برق را با دست‌های خیس وارد نکنید.
- اشیاء را بر روی دستگاه انبار نکنید.
- هنگامیکه در را باز یا باسته می‌کنید، ممکن است که اشیاء بیفتند و موجب مصدومیت شخصی و یا آسیب به اموال شود.

- اگر دوشاخه را سرو ته وصل کنید، مکن است که سیم قطع شده و موجب آتشسوزی یا برق گرفتگی شود.
 - مطمئن شوید که دوشاخه در پشت یخچال فشرده نشده یا به آن آسیب وارد نشود.
 - هنگام حرکت دادن یخچال، مراقب باشید که آنرا روی سیم برق نغلطانید یا به سیم آسیب وارد نکنید.
 - این موضوع خطر آتش سوزی محسوب می شود.
 - این دستگاه بایستی به صورتی قرار داده شود که دوشاخه پس از نصب قابل دسترسی باشد.
-
- یخچال بایستی زمینی شود.
 - بایستی برای جلوگیری از نشت برق یا برق گرفتگی که توسط نشت جریان برق از یخچال ایجاد می شود، یخچال را زمینی (ارت) کنید.
 - هرگز از لوله های گاز خطوط تلفن یا سایر میله های برق گیر بالقوه به عنوان گراند استفاده نکنید.
 - استفاده نادرست از دوشاخه گراند مکن است منجر به برق گرفتگی شود.
-
- اگر سیم برق صدمه دیده، فوراً ترتیب تعویض آنرا توسط سازنده یا متصدی تعمیراتی بدھید.

- از سیمی که در امتداد طولش یا در هر دو انتهایش نشانه های ترک خوردگی یا ساییدگی وجود دارد، استفاده نکنید.
- سیم برق را زیادی خم نکنید یا اشیاء سنگین را بر روی آن قرار ندهید.
- از اسپری ها در نزدیکی یخچال استفاده نکنید.
- استفاده از اسپری ها در نزدیکی یخچال مکن است موجب انفجار یا آتش سوزی شود.
- این دستگاه را در محلی که مکن است گاز نشت کند نصب نکنید.
- اینکار مکن است منجر به برق گرفتگی یا آتشسوزی شود.

- توصیه می شود که نصب یا هرگونه تعمیر این دستگاه توسط تعمیرکار مجبوب یا شرکت تعمیراتی اجام شود.
- قصور در اجام اینکار مکن است منجر به برق گرفتگی، آتشسوزی، انفجار، مشکلاتی برای محصول یا مصدومیت شود.
- این یخچال بایستی قبل از استفاده بربطق دفترچه راهنمای استفاده به طور مناسب نصب و در محل مناسب قرار داده شود.
- دوشاخه را در محل مناسب و در حالیکه سیم آویزان است وصل کنید.

⚠ علائم هشدار جدی برای نصب

- این دستگاه را در محل مرتبط، روغنی یا پر گرد و خاک، در محلی که در معرض نور مستقیم خورشید و آب (قطرات باران) باشد نصب نکنید.
- فرسودگی در عایق بندی بخش های برقی ممکن است موجب برق گرفتگی یا آتش سوزی شود.
- این یخچال را در معرض نور مستقیم خورشید یا گرمای اجاق، بخاری یا سایر دستگاه ها قرار ندهید.
- چندین دستگاه خانگی را باهم به یک تخته نیروی چندگانه نزنید.
یخچال بایستی همیشه به پریز برق خودش زده شود که میزان ولتاژ آن با پلاک درجه بندی یکسان باشد.
- اینکار بهترین طرزکار را ارائه کرده و از زیاد پرشدن مدارهای سیمی خانه جلوگیری می کند که ممکن است موجب خطر آتشسوزی به دلیل گرمای بیش از حد سیم ها شود.
اگر پریز شل شده، دوشاخه را به آن نزنید.
- خطر برق گرفتگی یا آتش سوزی وجود دارد.

- هرگز دستگاهی که نشانه های آسیب دارد را به کار نیاندازید. اگر مطمئن نیستید، با فروشنده مشورت کنید.

اتفاق که یخچال در آن قرار داده می شود باشست برای هر ۸ گرم مبرد R-600a در داخل دستگاه، به اندازه ۱ متر مکعب فضای داشته باشد.

مقدار مبرد در دستگاه خاص شما بر روی پلاک مشخصات در داخل دستگاه نشان داده شده است.

- اگر دستگاه حاوی مبرد ایزوپوتان (R-600a) می باشد، این گاز طبیعی سازگاری زیادی با محیط زیست داشته ولی قابل احتراق نیز می باشد.
هنگام حمل و نقل و نصب دستگاه، باشست مراقب بود تا اطمینان حاصل شود به هیچ بخشی از مدار سرد کننده آسیب وارد نشود.

اعلامیه CE

تشخیص داده شده که این محصول با رهنمود ولتاژ پایین (2006/95/EC)، رهنمود سازگاری الکترومغناطیسی (2004/108/EC)، رهنمود RoHS (2011/65/EU)، مقررات تفویض شده کمیسیون (EU) شماره ۲۰۱۰/۱۰۶ و Eco-Design (2009/125/EC) شماره ۲۰۰۹/۶۴۳ که توسط مقررات (EC) شماره ۲۰۰۹/۶۴۳ اخادیه اروپا وضع شده سازگاری دارد. فقط برای محصولات فروخته شده در کشورهای اروپایی)

علامه هشدار جدی برای حمل و نقل و محل نصب

- هنگام حمل و نقل و نصب دستگاه،
با است مرآقب بود تا اطمینان حاصل شود به هیچ بخشی از مدار سرد کننده آسیب وارد نشود.
- از R-134a یا R-600a به عنوان مبرد استفاده شده است.
برچسب کمپرسور در پشت دستگاه یا برچسب درجه بندی در داخل یخچال را کنترل کنید تا بینید از چه مبردی برای یخچال شما استفاده شده است.
- هنگامیکه این محصول حاوی گاز قابل اشتعال است (مبرد (R-600a).
 - نشت مبرد از لوله کشی ممکن است مشتعل شده یا موجب مصدومیت چشم شود.
در صورت مشاهده نشت شدید گاز، از هرگونه شعله باز یا منبع بالقوه اشتعال پرهیز کرده و اتفاقی که دستگاه در آن قرار دارد را برای چند دقیقه هوایگیری کنید.
 - برای جلوگیری از ایجاد ترکیب گاز و هوای قابل اشتعال در صورت ایجاد نشت در مدار سردکننده، اندازه اتفاقی که می توان دستگاه را در آن قرار داد بستگی به مقدار مبردی دارد که استفاده شده است.

عملکردهای خطرناک یا غیرایمن
که ممکن است منجر به
مصدومیت شخصی خفیف یا
آسیب به دارائی شوند.



اینکار را نکنید.	<input type="checkbox"/>
از هم باز نکنید.	<input checked="" type="checkbox"/>
دست نزنید.	<input checked="" type="checkbox"/>
دستورات را با دقت مراعات کنید.	<input checked="" type="checkbox"/>
دوشاخه را از پریز برق بکشید.	<input checked="" type="checkbox"/>
مطمئن شوید که درستگاه برای جلوگیری از برق گرفتگی زمینی (ارت) شده باشد.	<input type="checkbox"/>
برای دریافت راهنمائی به مرکز تماس تلفن کنید.	<input checked="" type="checkbox"/>
تذکر.	<input checked="" type="checkbox"/>

این علائم هشدار برای جلوگیری از مصدومیت
شما و دیگران در اینجا ذکر شده اند.
لطفاً با دقت به آنها عمل کنید.
این بخش را پس از مطالعه، برای مراجعت
در آینده در یک محل امن بگذارید.

- هشدارها و دستورات ایمنی مهم ذکر شده در این دفترچه راهنمای همه شرایط و موقعیت های احتمالی که ممکن است اتفاق بیافتد را پوشش نمی دهند.

شما مسئول هستید که در هنگام
نصب، حفظ و نگهداری و استفاده از این
دستگاه، عقل سليم، احتیاط و مراقبت
را به کار گیرید.

- چون دستورات استفاده زیر، مدل های
گوناگونی را پوشش می دهد، خصوصیات
یخچال شما ممکن است قدری با
خصوصیاتی که در این دفترچه راهنمای
توضیح داده شده متفاوت باشند و همه
هشدارها ممکن است اطلاق پذیر نباشند.
اگر سوال یا نگرانی هایی دارید، با نزدیکترین
مرکز خدماتی تماس بگیرید یا راهنمائی و
اطلاعات را به صورت آنلاین و در وب سایت
www.samsung.com
(۰۵۵۵-۰۱) پیدا کنید.

علائم و احتیاط های ایمنی مهم:

عملکردهای خطرناک یا غیرایمن که ممکن است منجر به مصدومیت شخصی یا مرگ شوند.	هشدار
---	-------

فهرست مندرجات

۱	اطلاعات ایمنی
۱۵	کارگذاری یخچال ساید با ساید
۲۴	استفاده از یخچال ساید با ساید SAMSUNG
۳۵	حل مشکلات

اطلاعات ایمنی

- | | |
|--|---|
| • کودکان از سن ۸ سال و اشخاصی که توانایی های محدود جسمانی، حسی یا روانی یا فقدان چریه و دانش دارند در صورتی می توانند از این دستگاه استفاده کنند که نظارت یا دستوراتی را در مورد استفاده ایمن از دستگاه دریافت کرده و از خطرات مربوطه آگاهی داشته باشند.
کودکان نباید با این دستگاه بازی کنند.
کودکان بدون نظارت و سرپرستی به موارد تمیز کردن و حفظ و نگهداری توسط کاربر نخواهند پرداخت. | اطلاعات ایمنی
• لطفاً قبل از استفاده از این دستگاه، این دفترچه راهنمای را به طور کامل مطالعه کرده و برای مراجعه در آینده در محل امنی در نزدیکی دستگاه بگذارید.
• از این دستگاه فقط برای منظوری که در این دفترچه دستورات توضیح داده شده استفاده کنید.
این وسیله نباید توسط افراد خردسال یا ناتوان استفاده شود مگر آنکه توسط یک شخص آگاه، کاملاً بر کار آنها نظارت شود و استفاده ایمن از دستگاه تضمین گردد. |
|--|---|



سامسونگ
فقط با فناخت سام سرویس
WWW.samservice.com



سام
سرویس

یخچال

دفترچه راهنمای کاربر

امکانات را تصور کنید

از اینکه این محصول Samsung را خریداری کردید. متشکریم.

SAMSUNG

دستگاه خودایستا



DA68-02976S-00