


دفترچه راهنمای یخچالهای

TDR625-AWD | TDR625-ASD

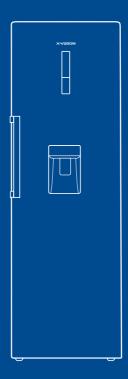

شـر کت صنایع ماشـینهای اداری ایران در سـال ۱۳٤۳ تاسـیس گردید. این شـر کت شـامل شـر کتهای زیر مجموعـه متعـددی در حوزههـای مختلـف میباشــد کـه از جملـه آنهـا میتوان به شرکت صنایع لوازم خانگی مادیران اشاره نمود.

مادیــران بــا بیــش از نیــم قــرن ســابقه و حضــور فعــال در کشــور، پیشــرو در تولیــد و عـرضــه محصــولات متعــددی در حــوزه لــوازم خانگــی، الکترونیــک، فنــاوری اطلاعــات و ... با بر ندهای مختلــف از جملــه ایکـس ویــژن و تــی ســی ال می باشــد.

مادیــران همچنیــن بــه عنــوان یـک برند کار آفرین، توانســته تا امروز زمینه اشــتغال بســیاری از نیروهــای جــوان و برتــر کشــور را فراهم آورد.

كارخانه لوازم خانكي

کارخانه لـوازم خانگی مادیـران واقع در منطقه ویـژه اقتصادی پیام در سـال ۱۳۹۷ احداث گردیـد تـا بـا بهره گیـری از بروز تریـن و پیشـرفته ترین ماشـین آلات اقـدام بـه تولیـد محصولاتی بسـیار بـا کیفیـت و در سـطح جهانـی، بخـش وسـیعی از نیـاز بـازار لـوازم خانگـی در داخـل کشـور را تامیـن نمایـد.

محصولات اصلى شركت صنايع لوازم خانگى ماديران،


- يخچال و فريزر
- ماشین لباسشویی
- دستگاه تهویه مطبوع (کولر گازی)
- و با دو برند ایکس ویژن و تیسیال میباشد.

خدمات پس از فروش مادیران

شرکت پشتیبانی فروش مادیران، به عنوان بازوی اصلی خدمات رسانی به مشتریان، پاسخگوی نیاز ایشان در امور نصب و راه اندازی دستگاهها، خدمات پس از فروش و رفع مشکلات دستگاهها میباشد. خدمات پس از فروش مادیران، با بهرهمندی از دفاتر استانی و شعب فراوان در سراسر کشور، آماده ارائه خدمات پیشرفته و حرفهای در کوتاه ترین زمان ممکن میباشد. مشتریان محترم برای بهرهمندی از این خدمات میتوانند با شماره ۸۲۲۶۶۸-۲۱ (داخلی ۱) تماس حاصل نمایند.

		دستورالعملهاي ايمني
	۱ ا	دستورانستانهای اینتی جزئیات یخچال
	۶	جریت یعپان حمل و جابجایی یخچال
	ء	نصب و راهاندازی
	Ι,	تعیب و راداند. آمادهسازی دستگاه برای استفاده
	\ \ \	اهادههای صفحه کنترل کلیدهای صفحه کنترل
تنظیم دمای یخچال	۹	ميدهای صفحه مسرن
عملکرد سرمایش سریع	۱ ٬	
2.7 0 . 7 7	١,-	نگهدا <i>ر</i> ی مواد غذایی
نگهدا <i>ر</i> ی مواد غذایی تازه	١,٠	تعهداری مواد عدایی
نگهداری لبنیات و تخممرغ نگهداری لبنیات و تخممرغ	١,٠	
نگهداری مواد غذایی مانده و آماده	١,٠	
کشوی میوه و سبزیجات کشوی میوه و سبزیجات	١,٠	
حسوی میود و سبریبات	'	
	\ \\	اطلاعات و نکات مفید
	''	عيد حديث عيد
	14	سرویس و نگهدا <i>ر</i> ی
تمیز کردن بدنه	114	سرريس ر عهداري
تميز كردن داخل يخچال	14	
تمیز کردن لاستیک د <i>ر</i> ب ی خچ ال	14	
تعويض لامپ LED	118	
	``	
	۱۳	تغییر جہت د <i>ر</i> ب یخچال
	18	نصب دستگیره
	۱۷	آبسردکن
	17	. ر ل رفع اشکال
	۲۱	مشخصات فنی
	44	نقشه مدا <i>ر</i> دستگاه
	۱۲۳	برچسب انرژی
		G,, , ,,.

این محصول صرفا جہت مصرف خانگی است!



- ۱- برای اطمینان از دستکاری نشدن دستگاه توسط کودکان، بهتر است هنگام استفاده آنها از یخچال نظارت داشته باشید. افراد کم توان از نظر جسمی، ذهنی یا روحی و یا افراد کم تجربه و کم اطلاع در صورتی می توانند از این دستگاه استفاده کنند که تحت نظارت بوده و یا دستورالعمل استفاده صحیح و بی خطر از این دستگاه به آنها ارائه شده باشد و از خطرات مربوطه اطلاع داشته باشند. به کودکان اجازه ندهید از یخچال بالا رفته یا با دستگاه بازی کنند. تمیز کردن و تعمیر و نگهداری توسط کودکان نباید بدون نظارت انجام شود.
- ۲- گذاشتن مواد غذایی در داخل یخچال یا برداشتن آنها توسط کودکان ۳ تا ۸ سال مانعی ندارد.
- ۳- در صورت آسیب دیدن کابل برق، برای پیشگیری از وقوع حادثه، از شرکت سازنده، مرکز خدمات پس
 از فروش مربوطه یا اشخاص واجد شرایط بخواهید تا آن را تعویض نمایند.
 - از مسدود کردن گردش هوای داخل یخچال خودداری نمایید.
 - ۵- جبت تسریع یخزدایی مواد غذایی، از به کاربردن هرگونه وسیله مکانیکی (مانند سشوار) یا
 روشی غیر از آنچه که توسط سازنده توصیه شده است، خودداری نمایید.
 - -9 از آسیب زدن به مدار خنک کننده دستگاه خودداری کنید.
- ۱ز قرار دادن وسایل برقی در محفظه یخچال به جز لوازمی که توسط سازنده توصیه شده است.
 خودداری نمایید.
- از نگهداری مواد قابل انفجار مانند قوطیهای اسپری حاوی مواد اشتعال زا در یخچال خودداری کنید.
 - ۹- این دستگاه جهت مصارف خانگی و موارد مشابه قید شده در ذیل، در نظر گرفته شده است:
 - آشپزخانه پرسنل فروشگاهها، ادارات و سایر محیطهای اداری
 - خانههای روستایی، مشتریان هتلها، متلها و سایر محیطهای مسکونی
 - يانسيون ومسافر خانه
 - کترینگ و موارد مشابه
- ۱۰- بین یخچال و دیـوار پشت آن باید حداقل ۵۰ میلیمتر و حداکثر ۷۵ میلیمتر فضای خالـی وجود داشته باشد.
 - ۱۱- هنگام نصب و راهاندازی دستگاه دقت کنید تا کابل برق گیر نکرده یا آسیب نبیند.
 - ۱۲- از قرار دادن چندراهی سیار یا منبع تغذیه پرتابل در پشت دستگاه خودداری نمایید.
 - ۱۳- برای جلوگیری از آلوده و فاسد شدن مواد غذایی به نکات زیر توجه نمایید:
- باز گذاشتن درب یخچال به مدت طولانی باعث بالا رفتن بیش از حد دمای محفظه مواد غذایی میشود.
- بدنه یخچال را که در تماس مستقیم با مواد غذایی بوده و همچنین سینی تخلیه آب را به طور مرتب تمیز نمایید.
 - در صورت استفاده نکردن از مخزنهای آب به مدت ٤٨ ساعت، آنها را تميز کنيد.
- در صورت استفاده نکردن از آبسردکن به مدت ۵ روز، مسیر آبسردکن متصل به شیر اصلی
 را با فشار آب شستشو دهید.

- گوشت وماهی خام را در محفظهای قرار دهید که با سایر مواد غذایی در تماس نباشد یا
 آب آنها بر روی مواد غذایی دیگر چکه نکند.
- محفظه مواد غذایی منجمد با علامت ۲ ستاره برای نگهداری مواد غذایی از پیش منجمد شده و درست کردن بستنی و یخ مناسب است.
- محفظه مواد غذایی با علامت ۱، ۲ و ۳ ستاره برای منجمد کردن مواد غذایی تازه مناسب نست.
- چنانچه به مدت طولانی از یخچال استفاده نمی کنید، آن را خاموش کرده و پس از انجام اقدامات لازم از جمله برفک زدایی، تمیز و خشک کردن آن، برای جلو گیری از ایجاد کپک درب دستگاه را نیمه باز بگذارید.
- ۱۵- در صورت استفاده نکردن از یخچال یا بازکردن و نصب قطعات پیش از تمیز کردن دستگاه، دوشاخه آن را از پریز برق خارج نمایید.
 - ۱۵- هنگام اتصال دوشاخه به پریز برق از قرار گرفتن کامل آن در پریز اطمینان حاصل کنید.
 - ۱۶- دوشاخه دستگاه را حتما به پریز تک سوکت و دارای اتصال زمین وصل کنید.
 - ۱۷- از نصب و راهاندازی یخچال در محل نگهداری مواد اشتعالزا و قابل انفجار خودداری کنید.
- ۱۸- بنا به دلایل ایمنی، سرویس یا تعویض قطعات را به نمایندگان خدمات پس از فروش معتبر واگذار نمایید.
 - ۱۹- موتور یخچال مجهز به سیستم روغنکاری دائمی بوده و نیاز به روغنکاری ندارد.
 - ۲۰- یخچال را در محلی قرار دهید که به آسانی بتوان به پریز برق دسترسی پیدا کرد.
- ۲۱- به علت خطر خروج گاز قابل اشتعال هنگام دفع دستگاه قدیمی بر اساس مقررات و آییننامه دفع دستگاههای قدیمی محل زندگی خود عمل کنید. قبل از معدوم کردن دستگاه جهت جلوگیری از گیرافتادن کودکان در داخل دستگاه درب آن را جدا کنید.
- ۲۲- هنگام تمیز کردن یخچال یا در صورت استفاده نکردن از آن، دوشاخه آن را از پریز برق خا*رج* نمایید.
 - ۲۳- برای تمیز کردن یخچال از شویندههای ملایم یا محلولهای شیشه پاککن استفاده نمایید.
 - ۲۶- توصیه می گردد از سیم رابط یا چندراهی برق برای اتصال یخچال به پریز برق استفاده نکنید و آن را مستقیماً به پریز برق وصل کنید.
- ۲۵- از قرار دادن موادغذایی یا مایعات داغ در داخل یخچال خودداری کنید و قبل از گذاشتن آن در یخچال اجازه دهید سرد شده و دمای آنها به دمای اتاق برسد.
- ۲۶- پس از گذاشتن مواد غذایی داخل یخچال بلا فاصله درب آن را ببندید تا دمای داخل یخچال بیش از حد بالا نرود.
 - ۲۷- دستگاه را دور از منابع گرمازا یا تابش مستقیم نور خورشید قرار دهید.
- ۲۸- برای اطمینان از تراز بودن دستگاه، آن را بر روی سطح صاف و محکم قرار دهید و از گذاشتن یخچال بر روی سطوح نرم خودداری نمایید.
 - ۲۹- از قرار دادن وسایل اضافی بر روی یخچال و خیس کردن آن خودداری کنید.
- ۳۰- جهت پیشگیری از خطربرق گرفتگی هر گز با دست مرطوب یا در حالیکه برروی سطح خیس ایستادهاید، از یخچال استفاده نکنید.
 - ۳۱- از گذاشتن یخچال در فضای باز یا محل مرطوب خودداری کنید.

- ۳۲- از کشیدن کابل برق برای خا*ر*ج کردن دوشاخه دستگاه از پریز خوددا*ر*ی کنید. برای خاموش کردن یخچال باید دوشاخه آن را گرفته و سپس از پریز خارج نمایید.
 - ۳۳- کابل برق را دور از سطوح گرم قرار دهید.
- ۳۵- ولتاt منبع تعذیه محل سکونتتان باید با ولتاt قید شده بر روی برچسب انرژی مطابقت داشته باشد.
 - ۳۵- دستگاه را به پریز برق جداگانه و مجهز به سیم اتصال زمین وصل کنید.
- ۳۶- در صورت قطع برق به مدت طولانی و یا استفاده نکردن از دستگاه، برای جلو گیری از بو گرفتن یخچال یا فریزر حتما دستگاه را تمیز کنید.
- ۳۷- برفک و یخ تشکیل شده داخل فریزر را هر ماه تمیز کنید، چرا که برفکهای موجود در داخل فریزر ممکن است بر میزان خنککنندگی آن تاثیر بگذارد.
- ۳۸- در صـورت قطـع و وصل شــدن برق حتماً برای روشـن کــردن یخچال ۵ دقیقه منتظــر بمانید؛ در غیر این صورت ممکن است باعث آسیب دیدن کمپرسور شود.
- ۳۹- هنگامی که کودکان از دستگاه استفاده می کنند بر نحوه استفاده آنها نظارت داشته باشید تا تنظیمات دستگاه را بهم نزنند.
 - ۵۰ این محصول برای استفاده با تایمر خارجی یا سیستم کنترل از راه دور طراحی نشده است.
- ٤١- دوشاخه این محصول مجهز به دوشاخه اتصال زمین است از این رو اطمینان حاصل کنید که پریز خانه نیز مجهز به پلاتین اتصال زمین باشد.
- 2۲- برای اطمینان از سالم بودن کابل برق بطور منظم آن را کنترل کنید. در صورت آسیب دیدن کابل هرگز از یخچال استفاده نکنید.
 - ٤٣- جهت تعویض لامپ دستگاه به بخش "سرویس و نگهداری" مراجعه نمایید.
- 28- برای حمل، نصب و راهاندازی، نگهداری و مراقبت و سرویس دستگاه به بخشهای "حمل و جابجایی دستگاه"، "نصب و راهاندازی"، "سرویس و نگهداری"، و "رفع اشکال" مراجعه نمایید.
- 28- از رده خارج کردن دستگاه منسوخ: برای جلوگیری از آسیب احتمالی ناشی از دفع کنترل نشده زبالهها به محیط زیست یابه خطر افتادن سلامت انسان، دستگاه منسوخ خود راباهدف حمایت از استفاده مجددو پایدار ازمنابع مواد بازیافت نمایید. از رده خارج کردن دستگاههای منسوخ بهتر است توسط مراکز جمع آوری ضایعات انجام گیرد. از آنجایی که این دستگاهها ممکن است حاوی کلروفور کربن (CFC)، عامل مخرب لایه ازن، باشند، برای کسب اطلاعات بیشتر در رابطه با روش صحیح دورانداختن دستگاه منسوخ خود با نزدیک ترین مرکز مدیریت پسماند تماس بگیرید.



٤٤- هشدار! خطر آتشسوزی ناشی از مواد اشتعالزا

یخچال را در حین استفاده، سرویس و تعمیر یا از رده خارج ساختن آن دور از منابع اشتعالزا قرار دهید.

نحوه صحیح دفع ضایعات و دستگاه منسوخ




علامت سمت راست به این معناست که این کالا نباید همراه با سایر زبالههای خانگی دفع گردد. جهت پیشگیری از آسیب احتمالی به محیط زیست و سلامتی انسان به علت دفع کنترل نشده زبالهها و برای حمایت از استفاده مجدد و پایدار از منابع مواد، آن را باز یافت نمایید. برای باز گرداندن دستگاه منسوخ خود با نمایندگی مربوطه تماس گرفته یا از سیستمهای بازگشت و جمع آوری ضایعات استفاده کنید.

شر کت مسئولیت هیچ گونه خسارت یا حادثه ناشی از استفاده از دستگاه را که مطابق با دستورالعملهای این دفتر چه نباشد، بر عهده نخواهد گرفت.

جزئيات يخجال

ویژگیها

- ۱- مجهز به سیستم هوشمند کنترل دما، سیستم خنک کننده هوا و ضد برفک میباشد.
- ۲- مجهز به سـردکن سـازگار با محیط زیسـت که شـامل مواد بدون CFC (کلروفلورو کربنها) بوده و ۸۰ درصد قطعات اصلی قابل بازیافت هستند.
- ۳-مجهــز بــه کشــوهای شـفاف بــا ظاهــری مــدرن بــه طــوری کــه مــواد غذایــی داخل آنهــا را در یکـــ نـگاه میتــوان دید.
- ۵- طبقات شیشهای مقاوم (سکوریت) با قابلیت تنظیم ارتفاع (جابجایی آنها)، ضد سایش و نسوز بوده و کاربردی میباشند.
- ۵- کندانســور مخفـی دســتگاه بــا طراحـی تخــت، بینظیــر و هماهنــگ از ســادگی، قابلیــت تمیــز کــردن آســان و اســتفاده مفیــد از فضــا برخــوردار میباشــد.
- ۶- ایـن محصـول نـام تجـاری بینالمللـی در کمپرسـورهای بیصـدا را بـه خـود اختصـاص داده
 و از ویژگی مصـرف انـرژی پاییـن و صـدای کـم برخـوردار اسـت و بدیـن منظـور محصولـی
 مناسـب بـرای مصـارف خانگـی و تجـاری میباشـد.
- توجـه: در صـورت بـالا بـودن مـدل دسـتگاه، دسـتورالعملهای منـدرج در ایـن راهنمـا ممکـن اسـت بـا دسـتگاه شـما متفـاوت باشـد. امـا عملکـرد و روش اسـتفاده از آن تناقضـی بـا مندرجـات ایـن دفترچـه نـدارد، از ایـن رو بـا آرامـش خاطـر از آن اسـتفاده نماییـد.

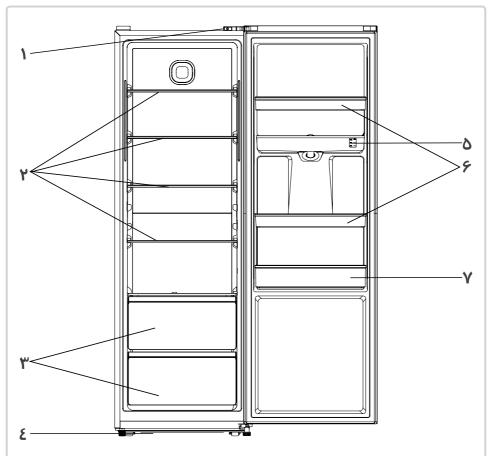

- ۱- کلید لامپ یخچال
 - ۲- طبقات شیشهای
- ۳- کشوی میوه و سبزیجات
 - ٤- پايەھاى قابل تنظيم
 - ۵- مخزن آب
- ۶- قفسه نگهدارنده لبنیات وبطری
 - ۷– قفسه بطری

توجه: هنگام تمیز کردن فریزر یا قرار دادن مواد غذایی در آن میتوانید طبقات شیشهای و کشوها را بیرون آورده و مجددا در جای خود قرار دهید. برای حمل، یخچال از قسمت بالای آن گرفته و با زاویه کمتر از ۵۵ درجه با دقت بلند کنید. هرگز برای جابجایی دستگاه از دستگیرهها به عنوان اهرم استفاده نکنید. از سر و ته کردن یخچال یا خواباندن آن خودداری کنید. یخچال را روی پایههای خود قرار داده و به کمک پایههای چرخدار در محل مورد نظر قرار دهید.


نصب و راهاندازی

برای تراز بودن یخچال باید آن را بر روی سطح صاف و محکم قرار دهید. از قرار دادن یخچال بر روی سطوح نرم خودداری کنید.

محل نصب یخچال باید دور ازمنبع گرما، تابش مستقیم نورخورشید یا سایر تجهیزات گرمازا باشد. یخچال را در محل خشک که از تهویه مناسب برخوردار باشد قرار دهید و از قرار دادن آن در محیط خورنده (اسیدی ، قلیایی و ...) خودداری کنید.

برای بهبود عملکرد سیستم خنک کننده یخچال و صرفهجویی در مصرف انرژی باید تهویه و جریان هوای کافی در اطراف آن برای کاهش گرمای یخچال و جود داشته باشد.


یخچال را در حالی که با دیوار پشتی حداقل ۵۰ و حداکثر ۷۵ میلیمتر فاصله داشته باشد در جای خود قرار دهید.

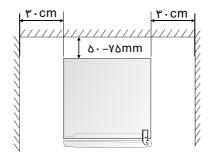

در اطـراف یخچـال بایـد فضـای خالـی بـه انـدازه کافـی وجـود داشـته باشـد، در صورتـی کـه فضـای خالـی کـم باشـد یـا وسـایل دیگـر در بـالایـا کنـار یخچـال قـرار داده شـود، مانـع از پخـش گرمـای یخچـال و در نتیجـه موجـب اتـلاف انـرژی میشـود. از طـرف دیگـر ممکـن اسـت باعـث سـوختن دیـوار و وسـایل اطـراف یخجـال شـود.

بـرای تـراز کـردن یخچـال قسـمت جلـو و پایههـای آن را تنظیـم کنیـد. تـراز نبـودن یخچـال باعـث ایجـاد صـدا و لـرزش میشـود.

ابعاد دستگاه و فضای مورد نیاز برای نصب یخچال در شکل زیر نشان داده شده است:

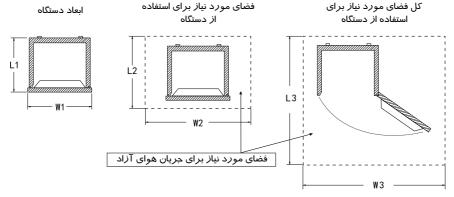

واحد: میلیمتر


	ابعاد دستگاه		فضای مورد نیاز برای استفاده از دستگاه		کل فضای مورد نیاز برای استفاده از دستگاه	
مدل دستگاه			ار دستناه		ر دستاه	
	L1	W 1	L2	W2	L 3	W3
TDR625-AWD/ASD	660	595	>L1+100	>W1+ 200	>L1+760	>W1+ 430

آمادهسازی دستگاه برای استفا<u>ده</u>

- ۱- ابتدا کلیه لوازم بسته بندی یخچال از قبیل ضربه گیر زیر یخچال، فومها و تسمههای لاستیکی را باز کنید.
- ۲- پایهها را تنظیم کرده و با استفاده از دستمال و آب گرم قسمتهای داخلی و بدنه یخچال را تمیز
 کنید.
 - ۳- پس از نصب یخچال بلافاصله آن را روشن نکنید.
- ۵- قبل از روشن کردن یخچال و برای اطمینان از عملکرد صحیح آن در حدود ۲ الی ۶ ساعت یخچال را
 در همان حالت باقی بگذارید.
- ۵- برای جلوگیری از آسیب دیدن کابل برق و هرگونه عواقب ناشی از آن دقت داشته باشید که یخچال یا سایر وسایل روی کابل برق قرار نگرفته باشد.
- ۶- قبل از روشن کردن یخچال، مطمئن شوید که ولتاژ یخچال با ولتاژمنبع تغذیه آن مطابقت داشته باشد.
- ۷- پس از راهاندازی و روشن کردن یخچال و قبل از گذاشتن مواد غذایی در داخل آن، اجازه دهید
 به مدت ۲ تا ۳ ساعت در همان حالت بماند تا به دمای عملیاتی ثابت رسیده و خنک شود.
 - ٨- در صورت خاموش شدن يخچال قبل از روشن كردن مجدد آن، ۵ دقيقه منتظر بمانيد.

كليدهاي صفحه كنترل

جهت استفاده از دستگاه طبق دستورالعملهای زیر عمل کنید. در تصویر صفحه کنترل تنظیمات دستگاه و نحوه استفاده از آن نشان داده شده است. پس از روشن کردن دستگاه برای اولین بار، دکمههای صفحه کنترل روشن میشوند. در صورت استفاده نکردن از صفحه کنترل یا بسته بودن درب یخچال، نور پسزمینه خاموش خواهد شد.

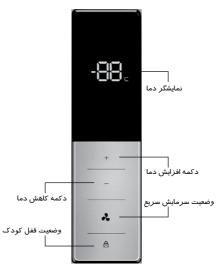

تنظيم دماى يخچال

در صورت استفاده از دستگاه برای اولین بار بهتر است دمای یخچال را بر روی ۵ درجه سانتیگراد تنظیم نمایید. برای تغییر دمای یخچال به ترتیب زیر عمل نمایید:

احتیاط: با تنظیم دما، محفظه انجماد بر روی دمای متوسط تنظیم خواهد شد. دمای محفظهها با توجه به محل نگهداری و مقدار مواد غذایی ممکن است با دمای نشان داده شده بر روی صفحه نمایش متفاوت باشد. دمای محیط نیز ممکن است بر روی دمای تنظیم شده فریز تاثیر بگذارد.

در صورت روشن بودن نشانگر 🚅 کلیه دکمهها قفل خواهند شد. برای باز کردن قفل دکمههای صفحهی کنترل، دکمه 🚨 را به مدت ۳ ثانیه فشار دهید.

با استفاده از دکمههای "+" و "-" دمای یخچال را بسته به نیاز خود از ۲ تا ۸ درجه سانتیگراد تنظیم کنید. با هر بار فشار دادن دکمههای "+" و "-" دمای مربوطه روی صفحه نمایش ظاهر میشود. ۵ ثانیه پس از انتخاب دمای مورد نظر، نشانگر از حالت چشمک زن خارج شده و دمای تنظیم شده ذخیره میشود.

عملکرد سرمایش سریع (Super Cool)

عملکـرد سـرمایش سـریع (Super Cool) بـرای خنـک شـدن سـریع مـواد غذایـی دمـای یخچـال را بـه سـرعت کاهـش میدهـد. ایـن عملکـرد بـه حفـظ مـواد مغـذی و ویتامینهـای موجود در مـواد غذایی تـازه کمـک کـرده و مـواد غذایـی را بـرای مــدت طولانی تـری تـازه نگـه میدارد.

عملکـرد سـرمایش سـریع (Super Cool) پـس از ۳ سـاعت بـه طـور خـودکار از وضعیـت سـرمایش سـریع خـارج میشـود. در حالـت سـرماش سـریع، گزینـه "FC" روی نمایشـگر دمـا ظاهـر میشـود. برای غیر فعال کردن این عملکرد، دکمه 🎝 را فشار دهید تا دمای یخچال به تنظیم قبلی بازگردد.

قطع برق

در صورت قطع بـرق کلیـه تنظیمـات انجـام شـده بـه طـور خـود کار در حافظـه ذخیـره میشـود مگر آنکـه بخواهیـد تنظیمـات انجـام شـده را تغییـر دهید.

زنگ هشدار باز بودن درب یخچال

در صورت باز ماندن درب یخچال به مدت بیش از ۲ دقیقه، زنگ هشدار به صدا در می آید. زنگ هشدار در هر دقیقه ۳ بار بوق میزند و پس از ۱۰ دقیقه به طور خودکار قطع میشود.

برای صرفهجویی در مصرف انرژی هنگام استفاده از یخچال از باز نگاه داشتن درب آن به مدت طولانی خودداری کنید. برای قطع زنگ هشدار درب یخچال را ببندید. توجه: از تماس مستقیم مواد غذایی با بدنه داخلی یخچال خودداری کنید. برای این منظور بایدآنها را جداگانه با فویل آلومینیوم یا سلفون بستهبندی کرده یا داخل ظروف پلاستیکی دربسته قرار دهید.

نگهداری مواد غذایی

محفظه فریزر به افزایش زمان نگهداری مواد غذایی فاسدشدنی تازه کمک می کند.

نگهداری مواد غذایی تازه

- مواد غذایی با کیفیت و تازه را داخل یخچال قرار دهید.
- قبل از گذاشتن مواد غذایی در یخچال، آنها را به خوبی بستهبندی کنید. این کار از خشک شدن مواد غذایی و از بین رفتن رنگ و طعم آنها جلوگیری کرده و به حفظ طراوت و شادایی آنها کمک میکند، همچنین مانع از پخش شدن بوی مواد غذایی میشود. در صورت نگهداری مواد غذایی در کشوی میوه و سبزیجات نیازی به بستهبندی کردن آنها نیست.
- مواد غذایی بودار را حتماً در ظروف دربسته قرار داده و دور از مواد غذایی مانند شیر، کره یا خامه که در اثر بوی تند ممکن است آلوده و فاسد شوند، نگاه دارید.
 - قبل از گذاشتن مواد غذایی گرم در یخچال اجازه دهید تا در دمای اتاق خنک شوند.

نگهداری لبنیات و تخممرغ

- لبنیات و تخم مرغ را می توانید در محفظه خنک کننده قرار داده و قبل از اتمام تاریخ مصرف قید شده بر روی بسته بندی مصرف کنید.
- از آنجایی که بوی تند ممکن است باعث فاسد شدن کره شود، حتما آن را داخل ظروف در بسته قرار دهید.
 - تخممرغ ها را نیز باید در محفظه خنک کننده قرار دهید.

نگهداری مواد غذایی مانده و آماده

- برای جلوگیری از خشک شدن غذاهای آماده یا مانده، آنها را در ظروف دردار گذاشته و در یخچال
 قرار دهید.
 - آنها را فقط ۱ تا ۲ روز در پخچال نگهداری کنید.
 - غذاهای مانده را فقط یکبار و تا زمانی که کاملا داغ شود، گرم کنید.

کشوی میوه و سبزیجات

- کشوی میوه و سبزیجات بهترین محل برای نگهداری میوه و سبزی تازه است.
- از نگهداری میوه و سبزیجات زیر، به مدت طولانی در دمای کمتر از ۷ درجه سانتیگراد خودداری کنید: مرکبات، صیفیجات (خربزه، طالبی، هندوانه)، گیاهان بومی، آناناس، پشن فروت، پاپایا، خیار، فلفل و گوجهفرنگی.
- نگهداری میوه و سبزی در دمای پایین باعث نرم شدن، تغییر رنگ یا فاسد شدن آنها میشود.
 - از نگهداری آووکادو (قبل از رسیدن آن)، موز و انبه در یخچال خودداری کنید.

جهت صرفهجویی در مصرف انرژی به نکات زیر توجه نمایید:

- برای صرفه جویی در مصرف انرژی از باز نگهداشتن درب یخچال به مدت طولانی خودداری کنید.
- دستگاه را ازمنبع گرما (تابش مستقیم نور خورشید، اجاق گاز برقی یا اجاق گاز و غیره) دور نگاه دارید.
 - درجه دمای دستگاه را نباید پایین تر از حد لازم تنظیم کنید.
 - از قراردادن غذای گرم یا مایعات داغ درداخل یخچال خودداری کنید.
 - دستگاه را در محل بدون رطوبت که از تهویه مناسب برخوردار باشد قرار دهید.
- چیدمان طبقات، قفسه و کشوها طبق تصویر نشان داده شده در بخش " جزییات یخچال" مناسب است. از آنجایی که طرح بر اساس استفاده بهینه از انرژی طراحی شده است، بهتر است از جابجا کردن طبقات خودداری کنید.

نکاتی در رابطه با نگهداری موادغذایی تازه در یخچال

- از قرار دادن مواد غذایی گرم در یخچال یا فریزر خودداری کنید، این کارباعث بالا رفتن دمای داخلی دستگاه و در نتیجه کارکردن بیش از حد کمپرسور و مصرف بیشتر انرژی میشود.
- حتماً قبل از گذاشتن مواد غذایی در یخچال، به ویژه غذاهای بودار، آنها را داخل ظروف در بسته قرارداده یا روی آنها را بیوشانید.
- مواد غذایی را طوری درون یخچال قرار دهید که هوا به راحتی در اطراف آن جریان داشته باشد.

نکاتی در رابطه با یخچال

- گوشت (انواع مختلف) در بسته بندی پلیاتیان: انواع گوشت با بستهبندی پلیاتیان را بر روی طبقه شیشهای در بالای کشوی سبزیجات قرار دهید. همیشه به زمان نگهداری مواد غذایی توجه کرده و تا تاریخ توصیه شده توسط تولیدکننده مصرف کنید.
- غذای پخته شده، مواد غذایی سرد و غیره: روی مواد غذایی باید پوشانده شود، سپس میتوان
 آنها را در هریک از طبقات یخچال قرار داد.
 - میوه و سبزیجات: باید در کشوی میوه و سبزیجات نگهداری شوند.
 - کره و پنیر: باید داخل فویل یا سلفون بستهبندی و سپس در یخچال گذاشته شوند.
 - بطریهای شیر: باید درپوش داشته باشند و در قفسههای درب نگهداری شوند.

خاموش کردن دستگاه

اگـر میخواهیـد بـرای مـدت طولانـی از یخچـال اسـتفاده نکنیـد، بـرای پیشـگیری از ایجاد کپـک در یخچـال اقدامـات زیـر راانجـام دهیـد.

- ۱- تمام مواد غذایی را از یخچال خارج کنید.
 - ۲- دوشاخه را از پریز خا*ر*ج کنید.
- ۳- داخل یخچال را کاملاً تمیز و سپس خشک کنید.
- ٤- درب يخچال را كمى باز بگذاريد تا هوا در آن جريان داشته باشد.

بنا به دلایل بهداشتی توصیه میشود حداقل هر دو ماه یکبار یخچال (متعلقات و بدنه) را تمیز کنید. هشدار: به علت وجود خطر برق گرفتگی، یخچال نباید هنگام تمیز کردن به برق متصل باشد. برای همین منظور پیش از اقدام به تمیز کردن یخچال، آن را خاموش کرده و دوشاخه را از پریز خارج کنید.

تميز كردن بدنه

- برای حفظ زیبایی بدنه یخچال به طور منظم آن را تمیز کنید.
- صفحه نمایش دیجیتالی را با استفاده از دستمال نرم و مرطوب تمیز کنید.
- به جای اسپری مستقیم آب بر روی بدنه، آن را بر روی دستمال تمیز اسپری کنید. این کار باعث میشود، آب به طور یکنواخت سطح بدنه یخچال را مرطوب کند.
- با استفاده از محلول شوینده رقیق دستگیره، بدنه و درب یخچال را تمیز کرده و سپس با دستمال نرم آن را خشک کنید.

احتياط:

- برای تمیز کردن بدنه از اشیاءِ تیز استفاده نکنید چرا که ممکن است باعث ایجاد خراشیدگی بر روی بدنه شود.
- هرگز از تینر، شویندههای خودرو، سفید کنندهها، روغنهای اتری یا فرار (اسانس)، پاککنندههای ساینده یا حلالهای آلی مانند بنزن برای تمیز کردن بدنه استفاده نکنید؛ چرا که ممکن است باعث آسیب دیدن بدنه یا حتی آتشسوزی شود.

تميز كردن داخل يخچال

داخل یخچال نیز به طور منظم باید تمیز شود. تمیز کردن یخچال زمانی که مواد غذایی داخل آن کمتر است، آسانتر خواهد بود. داخل یخچال را با محلول رقیق جوش شیرین تمیز کرده و سپس با آب گرم و دستمال یا اسفنجی که آب آن کاملا گرفته شده باشد، پاک کنید. قبل از جاگذاری طبقات و کشوها، تمام سطوح و قطعات را کاملاً خشک کنید.

احتىاط:

- برای تمیز کردن برفکهای فریزر هرگز از وسایل نوک تیز استفاده نکنید.
- پس از خشک شدن کامل داخل یخچال میتوانید آن را روشن کرده و دوشاخه را به پریز برق وصل کنید.

تميز كردن لاستيك درب يخچال

لاستیک دور درب یخچال را تمیز نگاه دارید. مایعات و مواد غذایی چسبناک ممکن است باعث چسبیدن لاستیک به بدنه و در نتیجه پاره شدن آن هنگام باز کردن درب یخچال شود. لاستیک دور درب را با محلول آب گرم و شوینده ملایم شسته و سپس آن را با آب پاک کرده و کاملاً خشک نمایید.

احتىاط:

پس از خشک شدن کامل لاستیک دور درب یخچال میتوانید آن را روشن کنید.

تعويض لامپ LED

هشدار: هر گز شخصا اقدام به تعویض لامپ یخچال نکنید. در صورت آسیب دیدن لامپ LED با نمایندگی خدمات پس از فروش تماس بگیرید.

برای تعویض لامپ LED مراحل زیر باید انجام شود:

- ۱ دوشاخه را از پریز برق خارج کنید.
- ۲ درپوش محفظه لامپ را با کشیدن آن به سمت بالا و سپس بیرون خارج کنید.
- ۳ سر پوش لامپ LED را با یک دست نگاه داشته و در حالی که ضامن اتصال را فشار می دهید با دست دیگر به سمت بیرون بکشید.
 - ٤ لامپ را تعویض کرده و به آن ضربه کوتاهی بزنید تا در جای خود محکم شود.


تغییر جہت درب یخچال

در صورت نیاز میتوانید جهت باز شدن درب یخچال را از چپ به راست تغییر دهید.

هشدار! هنگام تغییر جهت درب، نباید دستگاه به برق متصل باشد؛ از این رو حتما دوشاخه آن را از پریز برق خارج کنید.


دستگاه را در حالت عمودی قرار داده، درب آن را باز کرده و طبقات آن را برای جلو گیری از آسیب دیدن آنها خارج کنید. سپس درب دستگاه را ببندید.

برای تغییر جهت درب به ترتیب زیر عمل نمایید:

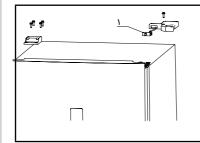


- ۱- بااستفاده از پیچ گوشتی چهار سو، چهار عدد پیچ را که در
 گوشه سمت چپ بالای دستگاه قرار دارد باز کرده و سریوش را جدا کنید.
- ۲- پیچی را که در سرپوش لولای راست قرار دارد با پیچگوشتی چهار سو باز کنید.
- ۳- اتصال سوییچ لامپ یخچال(۱) را قطع کرده و آن را بازکنید.

تغيير جبت درب يخجال

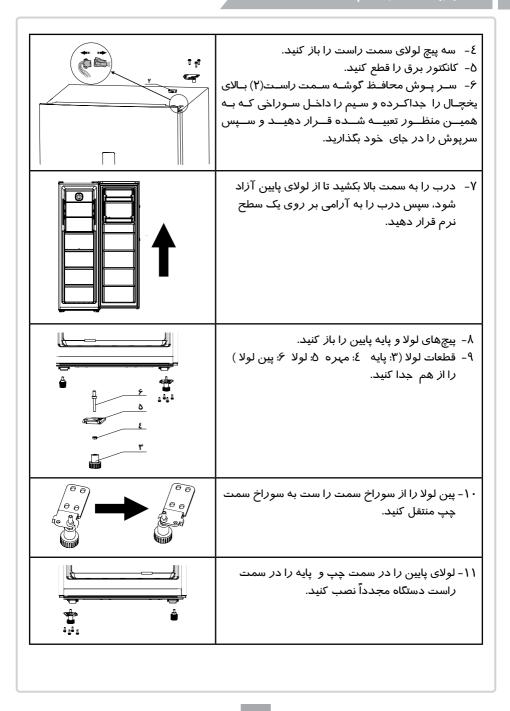


تغيير جبت درب يخجال

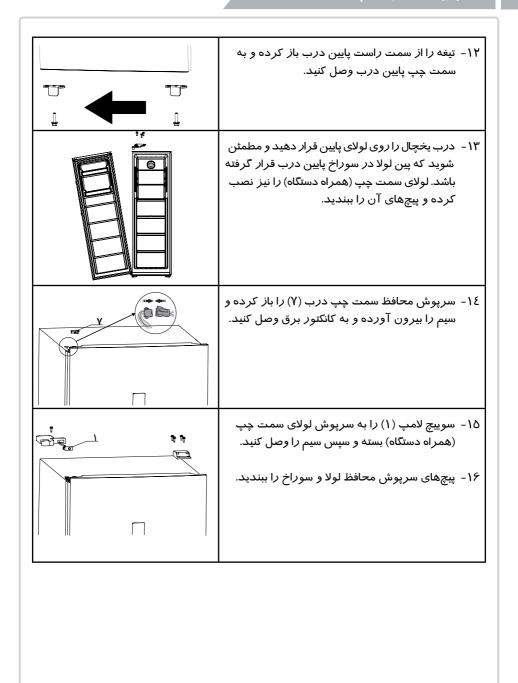

این دستگاه مجهز به دستگیره بیرونی است که در جعبه گذاشته شدهاند. برای نصب آنها به ترتیب زیر عمل نمایید:

- ۱- با استفاده از پیچگوشتی ٤ سو، پیچها (٨) را باز کنید.
- ۲- دستگیره را از جعبه خارج کرده و با استفاده از پیچها در جای خود ببندید.
- ۳- پیچها را با سرپوشهایی (۱۰) که داخل کیسه پلاستیکی کوچک در کنار دستگیره قرار دارد، بپوشانید.

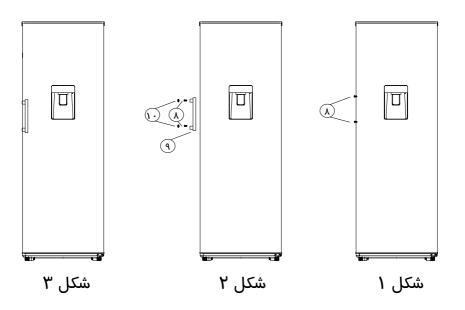

شکل ۱: نمای جلو بدون دستگیره


شکل ۲ : نمای تفکیکی از نحوه نصب دستگیره

شکل ۳: نمای جلو پس از نصب دستگیره

این دستگاه مجهز به آبسردکن است که امکان دسترسی به آب خنک را بدون نیاز به باز کردن درب یخچال برای شما فراهم میکند.

بدین ترتیب تعداد دفعات باز و بسته شدن درب یخچال کمتر شده و از هدر رفتن سرمای یخچال جلوگیری میگردد، در نهایت باعث صرفهجویی در مصرف برق میشود.





یر کردن مخزن آب

- دریچه مخزن آب را باز کنید.
- مخزن را از آب تصفیه شده یر کنید.
- از پر کردن بیش از حد مخزن خودداری کنید. حداکثرظرفیت مخزن ۲ لیتر است.
 - دریچه مخزن را ببندید.

توجه: مخزن را به جز آب تصفیه شده از مایعات دیگر پر نکنید. نوشیدنیهایی از قبیل آبمیوه و نوشابههای گازدار و ... جهت استفاده در آبسردکن مناسب نیستند. پر کردن مخرن آب از این قبیل نوشیدنیها ممکن است باعث از کار افتادن و آسیب دیدن آن شده که غیر قابل تعمیر باشد. مواد شیمیایی و افزودنیهای موجود در نوشابهها ممکن است باعث خوردگی و آسیب دیدن مواد اولیه مخزن آب شود و گارانتی شرکت شامل این قبیل از پیشامدها نمیشود.

نحوه استفاده از آبسردکن

- با لیوان خود پدال آبسردکن را فشار دهید.
 - برای قطع جریان آب، یدال را رها کنید.
- میزان جریان آب به شدت فشار دادن پدال بستگی دارد.
 فشار کامل پدال: جریان کامل آب
 - فشار پدال با شدت کم: جریان کم آب
- با بالا رفتن سطح آب در لیوان برای جلوگیری از سرریز شدن آب شدت فشار بر روی پدال را کمتر کنید.

قفل کردن پدال آبسردکن

برای قفل شدن پدال آبسردکن کلید زیر آبریز را به سمت چپ بکشید.

توجه: برای فشار دادن پدال آبسردکن از لیوان نرم و قابل انعطاف استفاده نکنید. در صورت استفاده از لیوان یکبار مصرف با انگشت خود و از پشت لیوان پدال را فشار دهید.

تمیز کردن مخزن آب

- درپوش مخزن آب را باز کرده و تمام قطعات را با آب گرم و تمیز بشویید. سپس با یک دستمال نرم و تمیز آنها را خشک کنید.
 - مجدداً مخزن و درپوش را در جای خود نصب کنید.
 - برای جلو گیری از نشت احتمالی آب، مطمئن شوید که تمام قطعات باز شده در جای اصلی خود قرار گرفته باشد.

توجه: مخزن آب و متعلقات آن قابل شستشو د*ر* ماشین ظرفشویی نیستند.

رفع اشكال

چنانچه در استفاده از یخچال دچار مشکل شده یا دغدغهای در رابطه با عملکرد صحیح آن دارید، قبل از تماس با خدمات پس از فروش موارد زیر راکنترل کنید.

هشدار:


هر گز شخصاً اقدام به سرویس و تعمیر دستگاه نکنید. در صورت بررسی موارد زیر و رفع نشدن اشکال با نمایندگی مجاز خدمات پس از فروش، متخصص برق یا فروشگاهی که از آن یخچال را خریداری کردهاید، تماس بگیرید.


علل احتمالی و راه حل	اشكال
اتصال برق دستگاه را کنترل کنید. فیوز یا مدار منبع برق را کنترل کرده و در صورت نیاز تعویض نمایید. دمای محیط بسیار پایین است. برای رفع این اشکال دمای یخچال را روی درجهای که کمتر از دمای محیط باشد، تنظیم کنید. دستگاه در حین برفکزدایی خودکار یا پس از روشن شدن برای محافظت از کمپرسور شروع به کار نمیکند و این حالت کاملاً طبیعی است.	یخچال د <i>ر</i> ست کار نمیکند.
ممکن است دستگاه نیاز به تمیز کردن داشته باشد. برخی از مواد غذایی، ظروف یا بسته بندیها ممکن است باعث ایجاد بوی نامطبوع شوند.	بوی نامطبوع احساس میشود.
صداهای زیر کاملاً طبیعی هستند: صدای کارکردن کمپرسور صدای جریان هوا از فن کوچک صدای موتور داخل محفظه یخچال یا سایر محفظه ها صدای غرغر شبیه به جوش آمدن آب صدای ترق تروق هنگام برفکزدایی خودکار صدای تق قبل از به کار افتادن کمپرسور سایر صداهای غیر عادی ممکن است به دلایل زیر باشدکه باید آن را بررسی کرده و جهت رفع آن اقدام نمایید: در صورتی که دستگاه تراز نباشد. بدنه پشتی دستگاه با دیوار در تماس باشد. بطری ها و ظروف داخل یخچال افتاده یا تکان میخورند.	صدای غیر عادی از یخچال شنیده میشود.
شنیدن صدای موتور معمولاً طبیعی است. در موارد زیر موتور دستگاه شروع به کار می کند: دمای دستگاه سردتر از حد نیاز تنظیم شده باشد. مواد غذایی گرم به مقدار زیاد و به تازگی داخل یخچال گذاشته شده باشد. دمای بیرون از یخچال بسیار بالا باشد. درب یخچال به مدت طولانی باز مانده باشد. پس از نصب و راهاندازی دستگاه یا هنگامی که دستگاه به مدت طولانی خاموش مانده و از آن استفاده نشده باشد.	موتور بی وقفه کار می کند.

علل احتمالی و راه حل	اشكال
دقت کنید که مواد غذایی خروجی هوا را مسدود نکرده باشد. از تهویه مناسب هوا نیز هنگام گذاشتن مواد غذایی داخل دستگاه اطمینان حاصل کنید. از بسته بودن کامل درب مطمئن شوید. برای تمیز کردن برفک به بخش "سرویس و نگهداری" مراجعه نمایید.	لایههای برفک در دستگاه تشکیل میشود.
ممکن است درب یخچال یا فریزر برای مدت طولانی باز مانده یا به دفعات باز و بسته شده باشد. وسیلهای مانع بسته شدن درب شده است. فضای خالی مناسب در بالا، اطراف و پشت دستگاه وجود نداشته باشد.	داخـل دسـتگاه بیـش از حــد گرم می شود.
طبق توضیحات بخش "کلیدهای صفحه کنترل" دمای یخچال را زیاد کنید.	داخـل دسـتگاه بیـش از حد سـرد میشـود.
توجه داشته باشید که درب یخچال یا فریزر به اندازه ۱۰ الی ۱۵ میلیمتر به سمت عقب شیب داشته باشد تا درب به طور خودکار بسته شود و یا ممکن است چیزی در داخل یخچال مانع از بسته شدن درب میشود.	درب به آسانی بسته نمیشود.
ظرف یا سینی تخلیه آب (در منتهی الیه زیر دستگاه) درست در جای خود قرار نگرفته است تا آب ناشی از ذوب شدن یخها به داخل آن هدایت شود و یا لوله تخلیه آب مسدود شده است. در این حالت باید یخچال را به جلو کشیده تا از دیوار فاصله بگیرد و سپس ظرف یا سینی آب و لوله تخلیه آب را کنترل کنید.	آب روی زمین چکه میکند.
لامپ LED ممکن است خراب شده باشد. برای تعویض آن به بخش "سرویس و نگهداری" مراجعه نمایید. سیستم دستگاه به دلیل باز بودن درب یخچال به مدت طولانی، لامپ را غیر فعال کرده است. برای روشن شدن لامپ درب یخچال را بسته و مجدداً باز کنید.	لامپ دستگاه <i>ر</i> وشن نمیشود.


A+	رتبه بهرهوری انرژی ردهبندی انرژی از +++A (حداکثر بهرهوری انرژی) تا D (حداقل بهرهوری انرژی)
۱٤٣ KWh/an	مصرف انرژی سالانه ۱٤٣ kWh مصرف انرژی در سال بر اساس نتایج بدست آمده در طول ۲۶ ساعت و تحت شرایط استاندارد آزمایشگاهی محاسبه شده است. مصرف واقعی انرژی به نحوه استفاده و محل دستگاه بستگی دارد.
٣۶.	ظرفیت کل دستگاه
-	تعداد ستاره
Т	طبقهبندی اقلیمی این دستگاه جهت استفاده در شرایط محیطی با دمای ۱۶ الی ٤٣ درجه سانتیگراد طراحی شده است.
dB(A)	ميزان صدا
ነለδ·× ዕዓδ × ۶۲۵mm	ابعاد دستگاه (ا <i>ر</i> تفاع× عرض× عمق)
\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\	ابعاد فضای مورد نیاز (ارتفاع× عرض× عمق)
٧٠.٤٢-٠٢٢	ولتاژ مصرفی مجاز
۲A	جريان مجاز
۵۰Hz	فر کانس مجاز
۷ ۷ حداکثر	توان لامپ يخچال
I (کلاس ی <i>ک</i>)	ردهبندی ایمنی در برابر برق گرفتگی

تعداد	متعلقات دستگاه	تعداد	متعلقات دستگاه
٤	قفسه شیشهای	٣	جای بطری
١	جای تخممرغ	١	تانک آب
١	دفترچه راهنما	۲	کشو

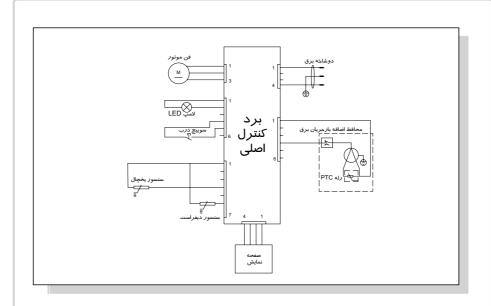

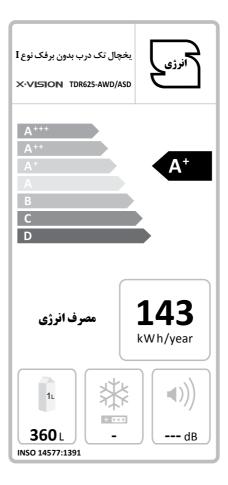

۱٤٣ kWh مصرف انرژی در سال بر اساس نتایج به دست آمده در طول ۲۶ ساعت و تحت شرایط استاندارد آزمایشگاهی محاسبه شده است. مصرف واقعی انرژی به نحوه استفاده و محل دستگاه بستگی دارد.

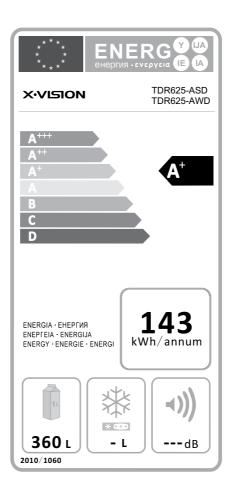

Notes: 143 kWh per year, based on the results of standard tests tested over a 24-hour period. The actual energy consumption will depend on the mode of use and location of the device.

Household refrigerating appliance model category

Refrigerator with one or more fresh-food storage compartments

Energy efficiency class A+

A+++ (the highest energy efficiency) to D (the lowest efficiency)

Annual energy consumption (AEc) 143 kWh/an

Energy consumption of 144 kWh per year, calculated based on the result obtained for 24 hours under standardized test conditions. The actual energy consumption depends on the conditions of use and location of the device.

Total useful volume 358

- of which compartment for highly perishable goods (I)

- of which storage compartment of fresh food (I) 358

- of which the wine storage compartment (I)

- of which cellar compartment (I)

Freezing capacity

- of which frozen food storage compartment (I)

 Number of stars:
 NA

 Lowest temperature of the wine storage compartment
 NA

 Frost-free
 NA

 Autonomy
 NA

NA N-ST-T

Climatic class This appliance is designed to be used at an ambient

temperature between °16+C and °43+C

Noise level --- dB(A) re 1 Pw

Built-in appliance No
Product dimensions (H x W x D) 1850 x 595 y

Product dimensions (H x W x D) 1850 x 595 x 625 mm Installation space (H X W x D) 1900 x 1200 x 1300 mm

Rated voltage 240-220V~
Rated current 2.0A

Rated frequency 50Hz
Lamp power Max 2W

Protection against electrical shock

Problem	Possible cause & Solution
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top.
Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 15-10mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan(located at the rear bottom of the cabinet) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	 The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. The control system has disabled the light due to the door being kept open too long, close and reopens the door to reactivate the light.

Problem	Possible cause & Solution	
Noise from the appliance	The sounds below are quite normal: Compressor running noises. Air movement noise from the small fan motor in the freezer compartment or other compartments. Gurgling sound similar to water boiling. Popping noise during automatic defrosting. Clicking noise before the compressor starts.	
	Other unusual noises are due to the reasons below and may need you to check and take action: The cabinet is not level. The back of appliance touches the wall. Bottles or containers fallen or rolling.	
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: • Temperature setting is set colder than necessary • Large quantity of warm food has recently been stored within the appliance. • The temperature outside the appliance is too high. • Doors are kept open too long or too often. • After your installing the appliance or it has been switched off for a long time.	
A layer of frost occurs in the appliance	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning and care chapter.	

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below. You can carry out some easy checks according to this section before calling for service.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
Appliance is not working correctly	It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odors from	The interior may need to be cleaned.
the appliance	Some food, containers or wrapping cause odors.

Using the dispenser

- Push in the lever of the water dispenser with your glass.
- Releasing the lever, stops further dispensing of water.
- Flow rate is dependent on how far the lever is pushed back:

Fully back = full flow Gently back = trickle

 As the level of water in your cup/glass rises, gently reduce the amount of pressure on the lever to avoid overflow.

Lock Function: It has a mechanical device in the groove, move to the left, the plate is locked and no water out.

Notes: Push the water dispenser lever with a rigid cup. If you are using a plastic disposable cup, then push the lever with your fingers from behind the cup.

Clean the water tank

- Take off the cover of water tank. Clean them with warm and clean water and dry them with clean and soft cloth.
- Install them with opposite steps.
- To prevent possible leakage, ensure that any parts removed during cleaning are refitted correctly in their original locations.


Notes: The water tank and dispenser components are not dishwasher-proof.

The refrigerator is built with water dispenser.

The water dispenser allows access to chilled water without having to open the refrigerator door.

The number of door openings is thus reduced, less cold air is lost from the refrigerator and you save on electricity costs.





Filling the water tank

- Open the cap of the water tank.
- Fill with pure and clean drinking water.
- Do not overfill the tank. The capacity is 2L.
- Close the cap.

Notes: Do not fill water tank with any liquid other than drinking water. Beverages such as fruit juice, carbonated fizzy soda drinks and alcohol are not suitable for use with the water dispenser. If such liquids are used, the water dispenser may malfunction and be damaged beyond repair. Some chemical ingredients and drink additives may also attack and damage the water tank material. The guarantee does not cover such eventualities.

This appliance has been built with external handle, which is in poly bag. Please follow instruction below to install them:

- 1. Remove two screws(8) by a cross screwdriver.
- 2. Take out the handles(9) and fix it with the two screws(8).
- 3. Cover the two screws(8) with two caps(10). The caps re in a small poly bag together with the handles.

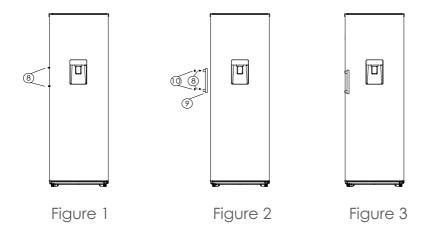



Figure 1: Front view without handles

Figure 2: Exploded view of installing the handles

Figure 3: Front view with handles


DOOR REVERSE

14. Open the cover on door left(7) and take out the wire. Connect the electrical connector.



15. Install the light switch(1) to left hinge cover(supplied with the appliance) and connect the wire.



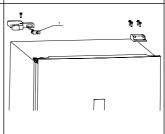


7. Lift the door upwards to disengage it from the bottom hinge, put the door to one side and lay it down gently on a padded surface. 8. Screw off the bottom hinge part and foot. 9. Disassemble the hinge to four parts: (3)foot; (4)nut; (5)hinge; (6) hinge pin. 10. Remove the hinge pin from right hole to left hole and assemble the four parts. 11. Install back the bottom hinge part in left and foot in right to the appliance. 12. Screw off the block on door bottom right and install it to the bottom left. 13. Place the door on the bottom hinge, making sure that the hinge pin is inserted in the hole at the bottom of the door. Install the left hinge(supplied with the appliance) and fix it with screws.


The side at which the door opens can be changed, from the left side (as supplied) to the right side, if the installation site requires.

Warning! When reversing the door, the appliance must not be connected to the mains. Ensure that the plug is removed from the mains socket.

Note: Before you start lay the appliance on its back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the backboard. Stand the appliance upright. Open the door to take out all door racks (to avoid racks damaged) and then close the door. To reverse the door, the following steps are generally recommended.

- 1. Screw off the four bolts which in top left with cross opener and take off the cover.
- 2. Screw off the one bolt which in right hinge cover with cross opener and take it off.
- 3. Disconnect the light switch(1) and take it off.
- 4. Screw off the three bolts in right hinge and take them off.
- 5. Disconnect the electrical connector.
- 6. Take off the cover on door right(2) and put the wire into the hole and cover it

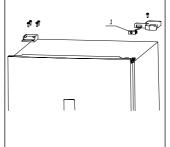

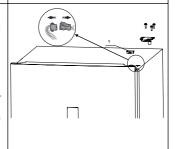

will be easier to clean when food stocks are low. Wipe the inside of the fridge freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and baskets. Thoroughly dry all surfaces and removable parts.

Caution!

 Don't use sharp objects to remove frost from the freezer. Only after the interior completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

Caution!

• Only after the door seals are completely dry should the appliance be powered on.

Replacing the LED light

Warning: The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance. To replace the LED light, the below steps can be followed:

- 1. Unplug your appliance.
- 2. Remove light cover by pushing up and out.
- 3. Hold the LED cover with one hand and pull it with the other hand while pressing the connector latch.
- 4. Replace LED light and snap it correctly in place.

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.

WARNING: The appliance must not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

- To maintain good appearance of your appliance, you should clean it regularly.
- Wipe the digital panel and display panel with a clean, soft cloth.
- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance.
 This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

Caution!

- Don't use sharp objects as they are likely to scratch the surface.
- Don't use Thinner, Car detergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

Interior cleaning

You should clean the appliance interior regularly. It

Hints for refrigerator

- Meat (All Types) Wrap in polythene food: wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.
- Cooked food, cold dishes, etc.: They should be covered and may be placed on any shelf.
- Fruit and vegetables: They should be stored in the special drawer provided.
- Butter and cheese: Should be wrapped in airtight foil or plastic film wrap.
- Milk bottles: Should have a lid and be stored in the door racks.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

- 1. Remove all food:
- 2. Remove the power plug from the mains socket;
- 3. Clean and dry the interior thoroughly;
- 4. Ensure that all the doors are wedged open slightly to allow air to circulate.

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat(Direct sunlight, electric oven or cooker etc)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

Hints for fresh food refrigeration

- Do not place hot food directly into the refrigerator or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Fish and seafood

- Whole fish and fillets should be used on the day of purchase. Until required, refrigerate on a plate loosely covered with plastic wrap, waxed paper or foil.
- If storing overnight or longer, take particular care to select very fresh fish. Whole fish should be rinsed in cold water to remove loose scales and dirt and then patted dry with paper towels. Place whole fish or fillets in a sealed plastic bag.
- Keep shellfish chilled at all times. Use within 2-1 days.

Precooked foods and leftovers

- These should be stored in suitable covered containers so that the food will not dry out.
- Keep for only 2-1 days.
- Reheat leftovers only once and until steaming hot.

Vegetable container

- The vegetable container is the optimum storage location for fresh fruit and vegetables.
- Take care not to store the following at temperatures of less than °7C for long periods: Citrus fruit, melons, aborigines, pineapple, papaya, curettes, passion fruit, cucumber, peppers, tomatoes.
- Undesirable changes will occur at low temperatures such as softening of the flesh, browning and/or accelerated decaying.
- Do not refrigerate avocados (until they are ripe), bananas and mangoes.

- or covered and stored away from foods such as butter, milk and cream which can be tainted by strong odours.
- Cool hot foods down before placing them in the fridge compartment.

Dairy foods and eggs

- Most pre-packed dairy foods have a recommended 'use by /best before/best by/ date stamped on them. Store them in the fridge compartment and use within the recommended time.
- Butter can become tainted by strong smelling foods so it is best stored in a sealed container.
- Eggs should be stored in the fridge compartment.

Red meat

- Place fresh red meat on a plate and loosely cover with waxed paper, plastic wrap or foil.
- Store cooked and raw meat on separate plates.
 This will prevent any juice lost from the raw meat from contaminating the cooked product.

Poultry

- Fresh whole birds should be rinsed inside and out with cold running water, dried and placed on a plate. Cover loosely with plastic wrap or foil.
- Poultry pieces should also be stored this way.
 Whole poultry should never be stuffed until just before cooking, otherwise food poisoning may result.

minute and will automatically stop alarming 10 minutes later.

To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can be cleared by closing the door.

STORAGE OF FOOD

Your appliance has the accessories as the "Structure illustration" showed in general, with this part instruction you can have the right way to storage your food. The glass shelves and crisper can be removed to store food if needed.

Note: Food is not allowed to touch directly all surfaces inside the appliance. It has to be wrapped separately in aluminum sheet or in cellophane sheet or in airtight plastic boxes.

Storing food in the refrigerator compartment

The fridge freezer compartment helps to extend the storage times of fresh perishable foods.

Fresh food care for best results:

- Store foods that are very fresh and of good quality.
- Ensure that food is well wrapped or covered before it is stored. This will prevent food from dehydrating, deteriorating in colour or losing taste and will help maintain freshness. It will also prevent odour transfer. Vegetables and fruit need not be wrapped if they are stored in the vegetable container of the fridge compartment.
- Make sure that strong smelling foods are wrapped

Caution! When you set a temperature, you set an average temperature for the whole freezer cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance. All the buttons are locked if the icon"≜" is illuminated, press the "≜" button for 3 seconds to unlock them.

Press "+" and "-" to set the temperature between °2C and °8C as needed, and control panel will display corresponding values. After 5s, the display will stop flashing and the setting takes effect.

Super cool ♣

Super cool will quickly lower the temperature within the appliance so food will cool faster. This can lock in the vitamins and nutrients of fresh food and keep food fresh longer.

Super cool automatically switches off after 3 hours and the temperature setting displays FC.

When super cool function is on you can switch off by pressing "&" and the temperature setting will revert back to the previous setting.

Power outage

In the event of a power failure, all temperature settings will automatically preserved, unless you change the setting of temperature.

Door Alarm


If the door is opened for over 2 minutes, the door alarm will sound. Buzzer will sound 3 times every 1


Use your appliance according to the following control regulations, your appliance has the corresponding functions and modes as the control panels showed in the pictures below. When the appliance is powered on for the first time, the backlight of the icons on display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off.



Controlling the temperature

We recommend that when you start your appliance for the first time, the temperature is set to °5C. If you want to change the temperature, follow the instructions below.

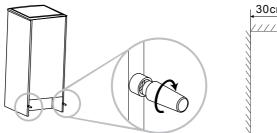

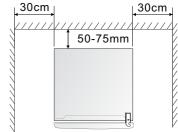

FIRST USE

Before the use of the refrigerator, remove all the packages, including bottom cushion and foam pads and rubber belts in the refrigerator.

Adjust the feet and clear the outside and inside of the refrigerator with warm cloth.

Do not start the refrigerator immediately after vertical placement. Only start it after 6-2 hours standing to ensure its proper operation.

To prevent damage to the power cord and any consequence incidents, the power cord should be not covered by the refrigerator or other objects. Before switching on the refrigerator, please check the voltage range of refrigerator carefully if the same as that of the power supply.

When the refrigerator is first installed, allow it stabilize at normal operating temperatures for 3-2 hours prior to filling it with fresh or frozen foods.

If operation is interrupted, wait for 5 minutes before restarting.

When transportation, hold the base and lift the refrigerator carefully with an angle inferior at 45 degree. Never hold the door handle as support. Never place it upside down nor horizontally. Push refrigerator on its basis and place it thanks to its roller feet.

INSTALLATION


To fix stably, the appliance must be placed on a flat and solid surface. It should not be laid on any soft material.

Choose a location where there is no heat source. Keep the refrigerator away from direct sunlight or other appliance producing heat.

Choose a dry and well-ventilated place where there is no corrosive air.

In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator.

The appliance is supplied with two plastic spacers. After installation of these spacers, the appliance cannot be pushed against the wall to maintain proper ventilation. Insert the spacers into the relevant openings on the back of the appliance, then screw the spacers tightly. Place the appliance against a wall with a free distance that not exceeding 75 mm but more than 50mm.

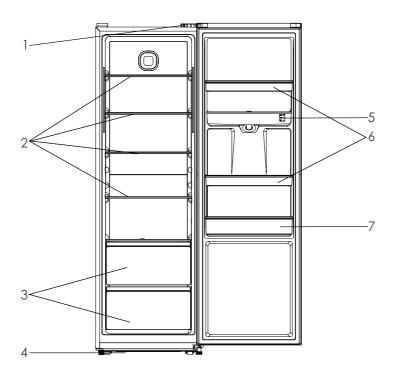

- 1. Light switch
- 2. Glass shelves
- 3. Fruits and vegetables crisper
- 4. Adjustable feet
- 5. Water tank
- 6. Balcony
- 7. Bottle rack

Note: The glass shelves and the crisper can be removed and inserted for cleaning and storing of food according to the appliance.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

We decline liability for any damage or accident derived from any use of this product which is not in conformity with the instructions contained in this booklet. and the appliance should not be used if the cable is damaged.

- 43. Regarding the information for replacing of the lamps of the appliance, thanks to refer to the paragraph "CLEANING AND CARE" of the manual.
- 44. Regarding the information pertaining to the installation, handing, maintenance, servicing and disposal of the appliance, thanks to refer to the paragraph "TRANSPORT AND HANDING" "INSTALLATION" "CLEANING AND CARE" "TROUBLESHOOTING" of the manual.
- 45. Disposal of the appliance: To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. And the disposal should only be done through public collection points. Old refrigerators can contain CFC that destroy the ozone; contact the waste treatment center nearest your home for more details on the correct procedures for disposal.



46. WARNING! Risk of fire – flammable material. Please keep the product far away fire source during using, service and disposal. There are flammable materials at the back of the appliance.

- 30. To avoid injury or death from electrical shock do not operate the appliance with wet hands, while standing on a wet surface or while standing in water.
 - 31. Do not use outdoors or in wet conditions.
- 32. Never pull the cord to disconnect it from the outlet. Grasp the plug and pull it from the outlet.
 - 33. Keep the cord away from heated surfaces.
- 34. Check that the voltage of the power supply in your home is the same as the voltage shown on the rating label of this product.
- 35. Connect your refrigerator to an independent electrical socket and use a safe ground wire.
- 36. When the frost in freezer is removed, or when there is no electricity or when refrigerator ceases to be used, it should be cleaned in order to prevent it from smelling.
- 37. Defrost the freezer at least once a month because too much frost may affect refrigeration.
- 38. Turn on electricity only 5 minutes later after electricity goes off. Otherwise, the compressor may be damaged.
- 39. Children should be supervised to ensure that they do not play with the appliance.
- 40. The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- 41. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- 42. It is recommended to check regularly the supply cord for any sign of possible deterioration,

parts at an authorized service dealers.

- 19. The motor is permanently lubricated and will require no oil.
- 20. The appliance must be positioned so that the plug is accessible.
- 21. Please according to local regulations regarding disposal of the appliance for its flammable blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.
- 22. Ensure the refrigerator is unplugged before cleaning or if the product is not in use.
- 23. To clean the appliance use only mild detergents or glass cleaning products. Never use harsh detergents or solvents.24. It is not recommended to use this refrigerator with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet.
- 25. Do not place hot food or drink into the refrigerator before it cools down to room temperature.
- 26. Close the door immediately after putting in any items so the inside temperature will not rise dramatically.
- 27. Keep appliance away from any heat source or direct sunlight.
- 28. To fix stably, the appliance must be placed on a flat and solid surface. It should not be laid on any soft material.
- 29. Do not place any other appliance on top of the refrigerator, and do not wet it.

respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- 14. Unplug the appliance from outlet when not in use, before putting on or taking off parts, before cleaning.
- 15. Make sure to place the plug all the way into socket when connecting your appliance.
 - 16. Insert the plug into a single grounded socket.
- 17. Never use the appliance in place where combustible and inflammable materials are kept.
 - 18. For safety reason, be sure to repair or replace

clear of obstruction.

- 5. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 6. **WARNING:** Do not damage the refrigerant circuit.
- 7. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 8. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- 9. This appliance is intended to be used in household and similar applications such as
- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- 10. Placed the appliance against a wall with a free distance not exceeding 75 mm and more than 50mm
- 11. **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- 12. **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
 - 13. To avoid contamination of food, please



This product is for household use only!

Please read these instructions carefully before the first use of this product and save this manual for your future reference.

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- 3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 4. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure,

TABLE OF CONTENTS

Important safety instructions	1
Structure illustration	8
Transport and handing	9
Installation	9
First use	10
Display controls	11
Storage of food	13
Helpful hints and tips	16
Cleaning and care	18
Doorreverse	20
Water dispenser	24
Troubleshooting	26
Technical specifications	29



مرکز خدمات پس از فروش تلفن: ۸۲۲۶۶ – ۲۰۱۱ داخلی ۱ service@iominds.com

رضایت مشتری تلفن: ۸۲۲۶۶ - ۲۱ داخلی ۲ rezayat@maadiran.com

> صندوق پستی ۱۹۹۴۸ – ۱۹۹۴۸

sanaye@maadiran.com

دفتر مرکزی (فروش):

تهران، میدان ونک، خیابان شهید خدامی (بیژن سابق)، خیابان آفتاب، پلاک ۳ تلفن: ۸۲۲۶۰–۲۱۰ فاکس: ۳۱ میدان ۳۸ میدان آفتاب، پلاک ۳

> www.maadiran.com www.xvision.ir