


Dome Projector Setting and Trouble Shooting

Projectors may reroute, and positions numbered 1 through 5 may appear differently when activating the dome projectors during the Preshow set up.

- Verify the projector layout within the Nvidia Control Panel by navigating to "System" and selecting "View Projectors" under the "Output" settings.
- Confirm each projector's resolution in the Nvidia Desktop Application (e.g., 1920x1200).
- Note that the desktop monitor's resolution will differ from that of the projectors.
- If necessary, refresh input configurations in NestMap, which is located above the projector array.

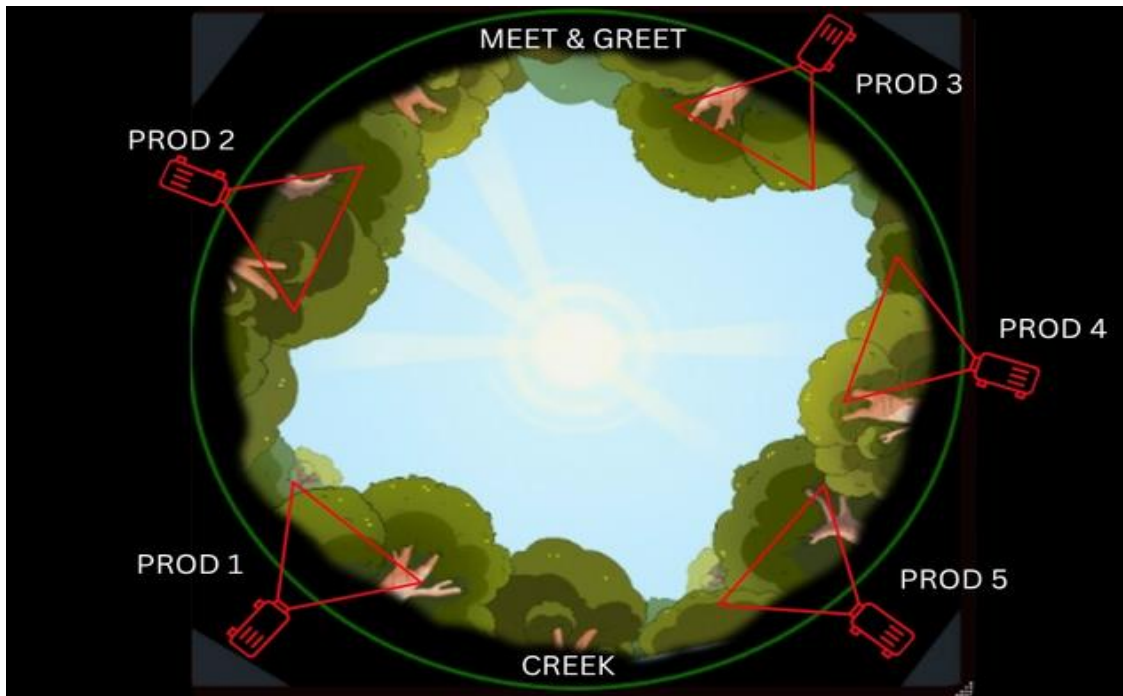

PROD-1 HIDM connected to Kramer Pico Tools PT-1C via the graphics card interface.

PT-1C is located in Dome Nook.



- Prod-2, 3, and 4 are connected to the AMX Enova DGX-1600 switcher via the AMX DxLink multi-format transmitter, mounted behind the projectors within the Dome.


Front.



Back.



- Prod-1 is connected via AV Access HDBaseT utilizing one transmitter and one receiver. The transmitter is positioned at the rear of the projector, while the receiver is installed in the dome nook atop the rack.

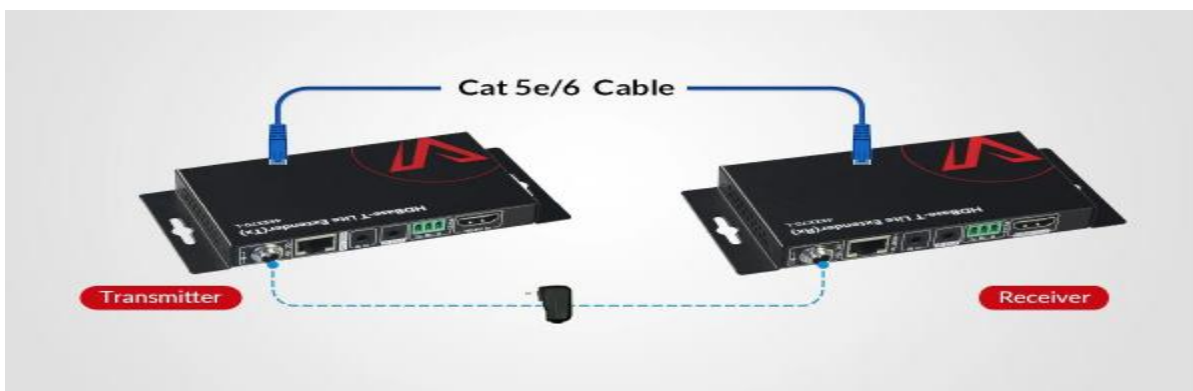

Frankenstein. 17.10.25