


Sub-node — Tank / Cargo Temperature

2 per wagon · cargo temperature (−50...+150°C)

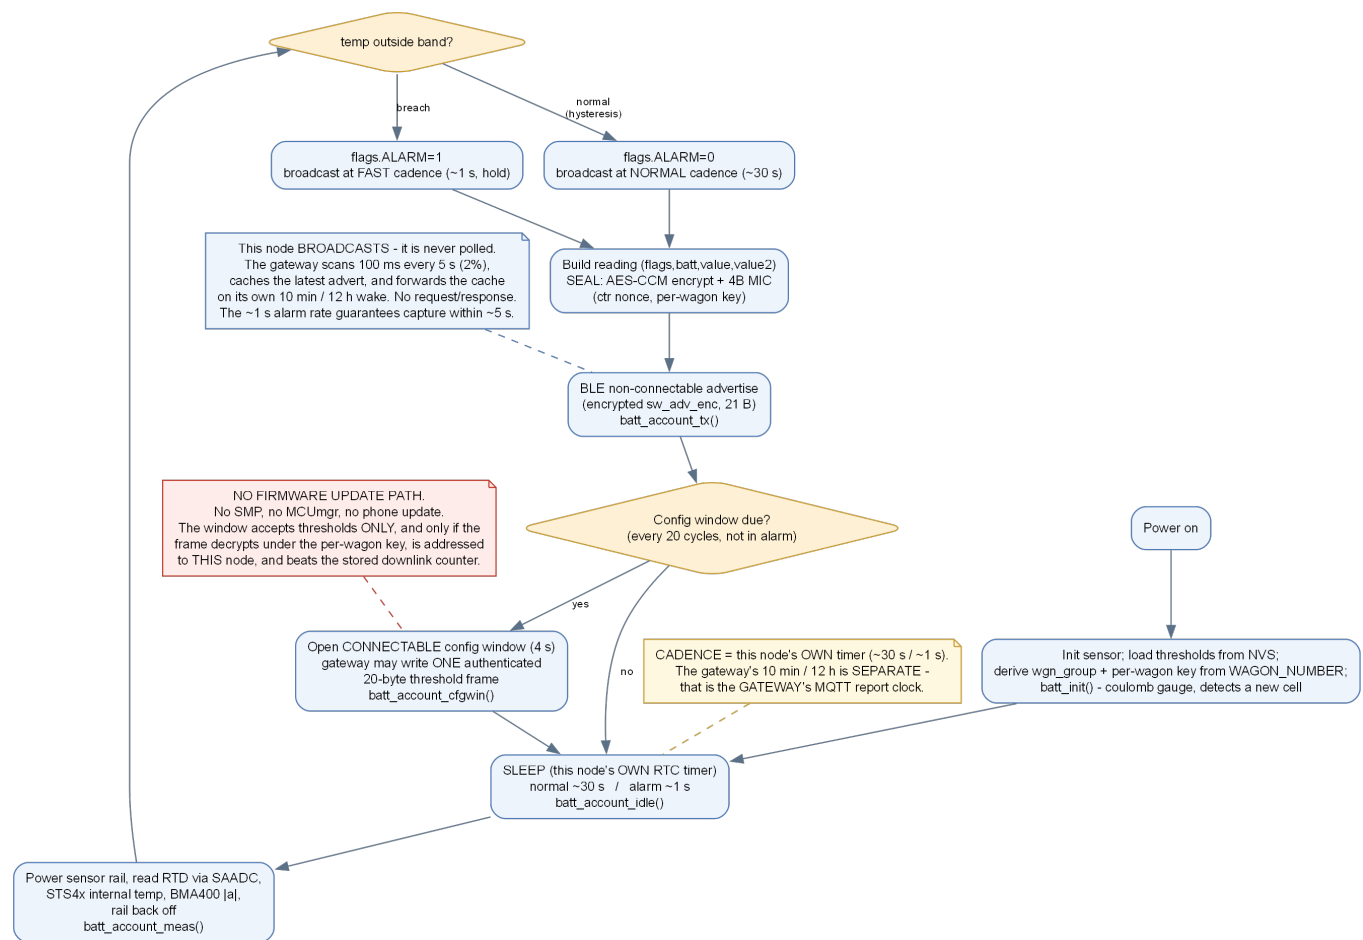

1. Role

A battery-powered, **connectionless BLE broadcaster**. It measures its sensor, **encrypts** the reading into a BLE advertisement (AES-CCM, with the wagon-group id for isolation), broadcasts a short burst, and sleeps. On a threshold breach it switches to fast "alarm" advertising so the gateway's receive window catches it within ~5 s. It forms a connection only during a periodic **config window**, and only to receive thresholds.

Timing — no polling: this node advertises on its **own** timer — about every **30 s** normally, **~1 s** while in alarm. The gateway's **10 min / 12 h** cadence is a **separate** clock. This node is **never polled**: it broadcasts blind, the gateway's low-power scan (**100 ms every 5 s, 2% duty**) caches the latest advert, and on the gateway's own schedule it forwards that cache upward.

2. Algorithm

1. Init: load `node_id`, `wgn_group` and thresholds from NVS; start the coulomb gauge (which auto-zeroes if it detects a replacement cell).
2. Wake on the node's own RTC timer; power sensor rail, read rtd via saadc, sts4x internal temp, bma400 |a|, rail back off.
3. Evaluate against the alarm threshold **with hysteresis** (on > high or < low, off inside band).
4. **Seal** the reading with AES-CCM under the per-wagon key, using a fresh monotonic counter `ctr` as the nonce (persisted in NVS so it never repeats). Nonce byte 7 carries a direction tag so an uplink nonce can never collide with a downlink one.
5. Advertise the encrypted burst (non-connectable); **slow when normal (~30 s), fast while in alarm (~1 s)**.
6. Every 20 normal cycles (never during an alarm) open a 4 s connectable **config window** so the gateway can write new thresholds. **No firmware can be loaded through it.**

3. Advertisement payload (encrypted `sw_adv_enc`, 21 B)

Cleartext header (company, ver, wgn_group, type, id, ctr) + **AES-CCM ciphertext** of the fields below + 4-byte MIC. The header is authenticated; the reading itself is encrypted.

Field	Meaning for this node
wgn_group	This wagon's isolation group, from the wagon number (gateway drops other groups; cleartext)
node_type / node_id	sensor type + unique id within the wagon (cleartext header)
ctr	monotonic nonce counter, persisted in NVS (cleartext; makes each advert unique)
flags / batt (encrypted)	ALARM/LOWBATT flags, battery % from the coulomb gauge
value	RTD cargo temperature ×10 (°C) [primary]
value2	STS4x internal temperature ×10 (°C)
flags	ALARM (over-temp) IMPACT LOWBATT

4. Alarm / event mapping

Condition	Protocol code	Notes
Tank/cargo temperature breach	TANK_OVERTEMP	immediate alert on breach
Tamper impact	TANK_TAMPER	off-spec code - not in Protocol Rev.1 §3.2
Cell low	NODE_LOW_BATTERY	advisory

5. Battery gauge (coulomb counting)

The cell is a **non-rechargeable 13 Ah Li-SOCI&sub2; ER34615**. Its discharge curve is flat, so a voltage-to-percent map reads ~100 % for years and then collapses. State of charge is therefore obtained by **integrating what the firmware spends**: every sleep, measurement, advertising burst and config window adds (current × time) in nAh to an accumulator persisted in NVS. Self-discharge is carried as a constant current so elapsed time is never free.

Item	Value
Usable capacity	BATT_USABLE_MAH = 10000 (derated from the 13 Ah nameplate for cold and load)
Total current ceiling	13 Ah over a 6-year life = 247 µA average
Predicted average	~134 µA (sleep 5 + self-discharge 15 + measure 1 + advertising 60 + config window 53)
Independent end-of-life check	BATT_EOL_MV = 3000 mV, so counter drift cannot hide a dying cell

Calibration outstanding: every BATT_I_*_UA constant except self-discharge is an estimate marked MEASURE: in the source. They must be measured with a Nordic PPK2 in series with the cell over one full wake cycle before the projected life means anything.

6. Hardware & pin map (verified against the TANK schematic)

Function	Net	Pin
I2C SDA / SCL (BMA400 + STS4x)	SDA / SCL	P1.04 / P1.05 (i2c21)
Sensor-rail enable (TPS22917)	SW_AXI	P1.06
BMA400 interrupt INT1	BMA_INT	P0.04
RTD analog in (LMV321 bridge amp)	Temp_Sense	P1.07 / AIN3
External watchdog WAKE / DONE (TPL5010)	uC_Wakeup / uC_Alive	P0.00 / P0.01

7. Why this node does NOT keep its sensor rail on

Unlike the DOOR node, the sensor rail here is **gated off between reads**. The RTD bridge is excited by a TL431 reference that draws roughly 1 mA continuously, and it shares `VCC_AXI` with the BMA400. Leaving that rail up to satisfy §7.3 would cost about four times the entire 247 µA budget. The trade is deliberate: continuous tamper watch is provided on the DOOR nodes, and this node powers its rail only to measure.

8. Open items

- **RTD calibration outstanding.** The element type (PT100 vs PT1000) and the LMV321 gain are not determinable from the drawing, so `RTD_CAL_M` / `RTD_CAL_B` must be set from a two-point bench calibration. **Until then the reported cargo temperature is not trustworthy.**
- **STS4x address** `0x44` in firmware vs `0x4A` on the pin-map sheet.
- `TANK_TAMPER` is not a Protocol Rev.1 alarm code.

Ref: RDSO WD-35-MISC-2024 · SmartWagon Telemetry Protocol Rev.1 (pv=1) · controller nRF54L15 (QFN52). Generated from the firmware sources by DOCS/gen_pdfs.py - regenerate after changing the code.