

TUBE | VARNISH COATING SYSTEM



TUBE COATING SYSTEM FOR CONTINUOUS LINE PRODUCTION

- ◆ Basic Airless spray coating system
- ◆ Closed spray chamber equipped with
 - | Spray chambers.
 - | Suction chamber.
 - | Over-sprayed coating material re-cycling system.
 - | Fumes exhaust system.
 - | Water spraying chamber to remove traces of coating material
- ◆ Tanks
 - | Coating material tank.
 - | Solvent tank.
 - | Water tank.



◆ BASIC AIRLESS SPRAY COATING SYSTEM CONSISTS OF

- | Airless pump
- | Double filter system : Two high pressure cassette filters provided in series with drain ball valves.
- | In-line heater.
- | Two auto on/off valve one for paint and one for solvent.
- | Spray Ring for different type of pipe sizes

CLOSED SPRAY CHAMBERS

◆ SPRAY CHAMBER

The tube moving on the conveyor enters in a cube shaped spray chamber through a round opening at the end wall of the spray chamber.

◆ SUCTION CHAMBER

Inside the chamber, it passes through a circular spraying ring mounted with a number of airless spray Nozzles. These spray nozzles are mounted on adjustable rods to adjust spraying distance from the tube outer surface. The spray nozzle size, the spraying distance and the number of nozzles depends on


- | | |
|---|----------------------------|
| Tube size (OD), | Conveyor speed, |
| Required coating thickness | Required coating thickness |
| Coating material specifications (viscosity etc.). | |

◆ OVER SPRAY RE-CYCLING SYSTEM

Over-sprayed coating material is collected at the bottom of the spray chamber. A transfer pump is used to re-circulate this material to the coating material tank filter through a bag type low-pressure filter.

◆ FUMES COLLECTION:

The fumes created by spray (Hot airless spray creates lesser fumes compared to any other type of spray systems) are sucked and blown out with the help of exhaust blower provided at the top of the spray chamber. Some traces of the coating material that are carried by these exhaust fumes are first collected in suction chamber on sides then these fumes enter in water spray chamber.

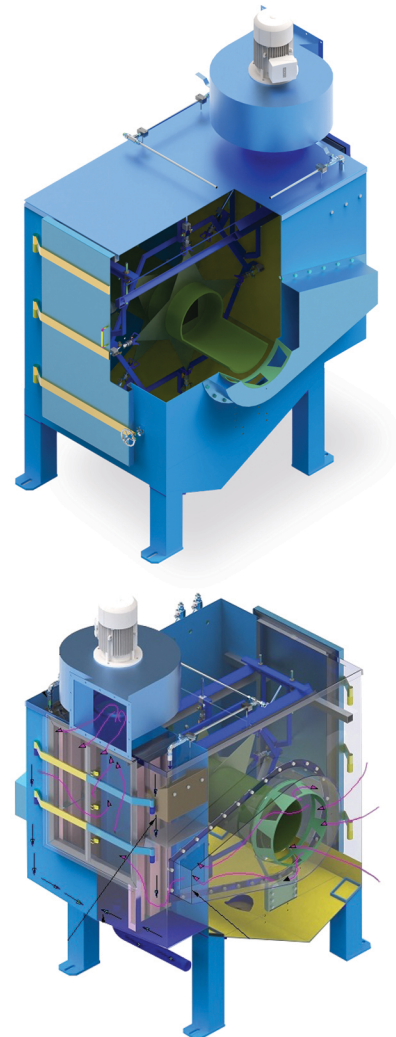

FUME COLLECTION AND FILTRATION PROCESS: -


Step -1 Fume Collected from Paint Booth (with the help of blower suction) and passes towards the Water Shower Chamber.

Step -2 In this Chamber fumes get wet and heavy wet particle dissolved and settle in Booth water tank. This particle goes towards water purification/ filtration chamber.

Step -3 Remaining particle get trapped in metal filter. After which almost 100% filtered air passes towards blower inlet.

Step -4 Blower sucks the air from metal filter and passes it through ducts to water collection tank.

Step -5 This less polluted air gets forcefully dissolved in water collection tank. In this process very fine particle also dissolve in water.

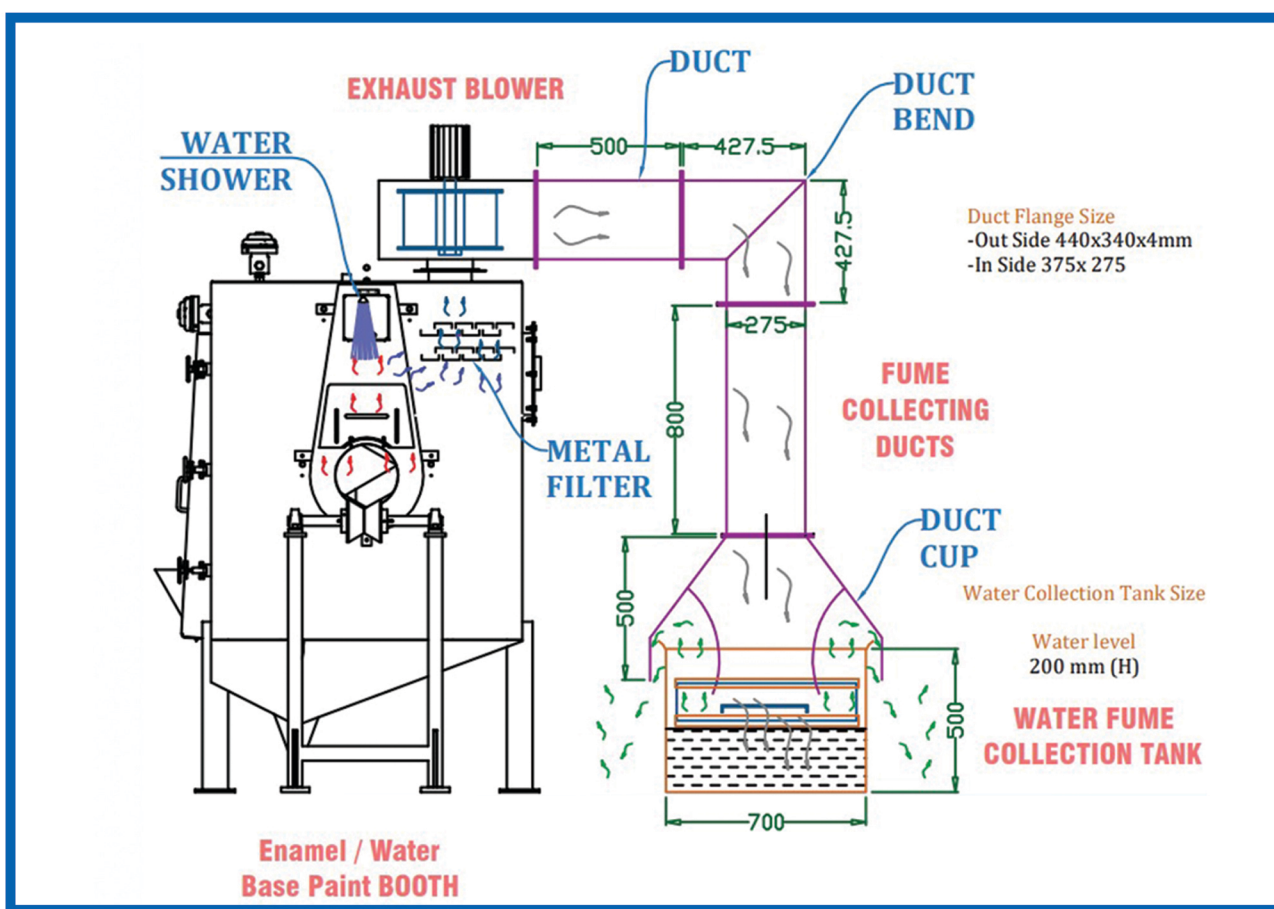


VISUAL REPRESENTATION OF FUME COLLECTION AND FILTRATION PROCESS



EXTERNAL PIPE COATING – EXTERNAL VARNISH/ENAMEL/ WATER SOLVENT BASED PIPE COATING APPLICATION



- ◆ External Pipe Coating Line Complete with Material Handling
- ◆ Suitable for Diameter ½" to 8" & Length 4mtr to 8mtr
- ◆ This system come with Single Pipe At A Time
- ◆ Single Pipe Sizes = 5" to 12"

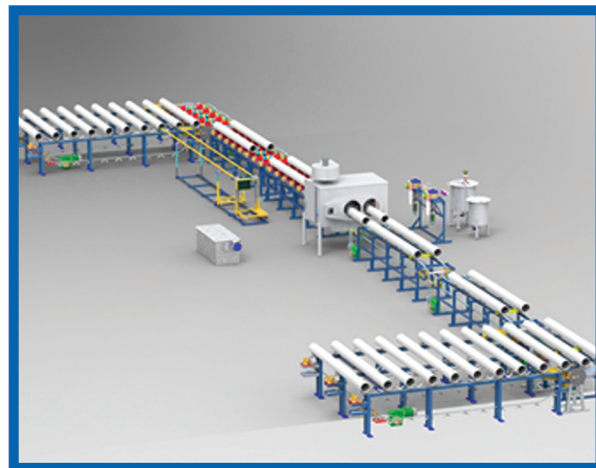

- ◆ Internal And External Pipe Coating Line Complete with Material Handling
- ◆ Suitable for Diameter ½" to 8" & Length 4mtr to 8mtr
- ◆ This system come with Single / Double Pipe At A Time
- ◆ Double Pipe Sizes = 2" to 4"
- ◆ Single Pipe Sizes = 5" to 8"

