DLS-140 USER GUIDE

DOCUMENT REVISION: 01-001
(DOC12075)

Applies to: DLS-140 (140-100-01)
Note: Access the latest revision at https://www.skytrac.ca/resources/documents/

October 21, 2025

SKYTRAC Systems Ltd.
Tel. +1 250 765-2393
Fax +1 250 765-3767
Web: www.skytrac.ca
Email: support@skytrac.ca

SKYTRAC

DOCUMENT REVISION HISTORY				
Rev	ECO	Description	Date	Author
01-000	N/A	Initial Release.	7 Dec 2024	J. Fenton
01-001	11283	Added Mod A DLS-140 and new SW.	21 Oct. 2025	J. Memmott

**** ESD Caution ****

The DLS-140 contains static sensitive circuitry that could be damaged from large electrostatic discharges directly into the connector pins. Be careful not to touch the connector pins unless properly grounded.

**** Warning ****

Changes or modifications not expressly approved by SKYTRAC Systems Ltd (SKYTRAC) could void the user's authority to operate the equipment.

Warranty Information

SKYTRAC Systems Ltd warrants this product to be free of defects in materials and workmanship, and that the product meets or exceeds approved factory acceptance test requirements. SKYTRAC reserves the right to replace any warranted product at its sole discretion during the warranty period.

The components of the DLS-140 are under warranty for one (1) year from date of shipment from SKYTRAC Systems Ltd. For failed units caused by defective parts or workmanship, contact SKYTRAC Systems for an RMA #. SKYTRAC Systems will provide the return address to ship the equipment at the time of issuing the RMA #.

Proprietary Notice

The information contained in this document is proprietary and confidential to SKYTRAC Systems Ltd. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, without express written permission from SKYTRAC Systems Ltd.

TABLE OF CONTENTS

1 GENERAL 7
1.1 Introduction 7
1.2 Contents 7
1.3 Audience 7
1.4 Printing 7
1.5 Acronym list 8
2 SYSTEM OVERVIEW 9
2.1 Manufacturer Label 9
2.2 LED Indicator 10
2.3 Connectivity Options 10
2.3.1 WI-FI 10
2.3.2 Ethernet 11
2.3.3 Cellular 11
2.3.4 Certus 100 11
3 GETTING STARTED 12
3.1 Connecting using Wi-Fi 12
3.2 Connecting Using Ethernet 13
3.3 Login 13
3.4 Default Network Settings 13
3.5 Web Interface 14
3.5.1 Navigation Tabs 14
3.5.2 Dashboard Overview 14
3.5.3 Network 15
3.5.4 Network Tab 16
3.5.5 Basic View 16
3.5.6 Advanced View 17
3.5.7 Configuration Tab 18
3.5.8 Diagnostic Tab 23
4 TECHNICAL SPECIFICATIONS 25
4.1 Cellular Frequency Bands 25

Restricted Proprietary and Confidential Information

4.2 Wi-Fi Frequency Bands 25
4.3 Power Supply Options 26
4.3.1 Direct Power 26
4.3.2 Power Over Ethernet 26
4.4 Serial AT Commands 26
4.5 FDM 26
5 CUSTOMER SUPPORT 27
APPENDIX A LEGACY SW USER GUIDE A-1

Restricted Proprietary and Confidential Information

LIST OF TABLES

Table 1: Acronym List 8
Table 2: Status LED Operation 10
Table 3: Default Network Settings 13
Table 4: Cellular Frequency Bands 25
Table 5: Wi-Fi Frequency Bands 25
Table 6: Power Requirements 26

Restricted Proprietary and Confidential Information

LIST OF FIGURES

Figure 1: Mod None DLS-140 Label Location 9
Figure 2: Mod A DLS-140 Label Location 9
Figure 3: DLS-140 LED Indicator: Left – Mod None, Right - Mod A 10
Figure 4: DLS-140 Default Wi-Fi Credentials 12
Figure 5: Dashboard Tab 14
Figure 6: Network Tab Basic View 16
Figure 7: Network Tab Advanced View 17
Figure 8: Configuration Tab 18
Figure 9: Wi-Fi Configuration 19
Figure 10: Cellular Configuration 19
Figure 11: Routing Preference Configuration 20
Figure 12: LAN Configuration 20
Figure 13: DHCP Configuration 21
Figure 14: Static DHCP Configuration 21
Figure 15: Static DHCP Discovered Devices 22
Figure 16: Edit Device Name 22
Figure 17: Factory Reset 23
Figure 18: Diagnostics Tab 23
Figure 19: Log Downloading 24

Restricted Proprietary and Confidential Information

1 GENERAL

1.1 INTRODUCTION

This document describes the features of the DLS-140 once installed and activated. For all installation information, please reference the DLS-140 Installation Manual (DOC11734) and associated STC drawings and documentation.

1.2 CONTENTS

The contents within this user guide provides procedures and other information intended for proper operation. It is divided into the sections that follow:

Section 1 — General
This section includes an introduction to this guide and acronyms that users should refer to for clarification.

Section 2 — System Overview
In this section, users will find descriptions of the system components, features, and functionality. It provides an understanding of how the system operates.

Section 3 — Getting Started
This section offers step-by-step instructions for setting up and configuring the system for the first time. It includes initial setup procedures, required tools, and tips for a smooth start.

Section 4 — Technical Specifications
This section provides a detailed overview of the support functions offered for Cellular connectivity, Wi-Fi networks, Power specifications, and FDM requirements. It explains the capabilities, integration options, and operational features ensuring seamless functionality across various systems.

Section 5 — Customer Support
In this concluding section, users will find contact information for customer support, including phone numbers, email addresses, and available support hours. This information ensures that users can reach out for assistance whenever needed.

1.3 AUDIENCE

This manual is intended for qualified aircraft avionics installation technicians (referred to as installers) and designated aircraft pilots. It requires that the installer have knowledge of the tools, materials, and techniques of wiring and computer networking required for configuring and maintaining radios, antennas, and related components into aircraft.

1.4 PRINTING

This document contains pages with color pictures. It is best printed with a color printer.

Restricted Proprietary and Confidential Information

1.5 ACRONYM LIST

Table 1: Acronym List

ACRONYM	DESCRIPTION
APN	Access Point Name
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
ESD	Electrostatic Discharge
FDM	Flight Data Monitoring
GHz	Gigahertz
GPS	Global Positioning System
IMEI	International Mobile Equipment Identity
IP	Internet Protocol
LED	Light-Emitting Diode
LTE	Long Term Evolution (4G Cellular Technology)
MAC	Media Access Control
Mbps	Megabits per second
MHz	Megahertz
OS	Operating System
PC	Personal Computer
PDOP	Position Dilution of Precision
PPP	Point-to-Point Protocol
SIM	Subscriber Identity Module
SOS	Save Our Ship (Emergency)
SSID	Service Set Identifier
VDC	Voltage-Direct Current
WCDMA	Wideband Code Division Multiple Access (3G Cellular Technology)
Wi-Fi	Wireless Fidelity (Wireless Networking)

Restricted Proprietary and Confidential Information

2 SYSTEM OVERVIEW

2.1 MANUFACTURER LABEL

The label can be found on the top-face of the DLS-140.

Figure 1: Mod None DLS-140 Label Location

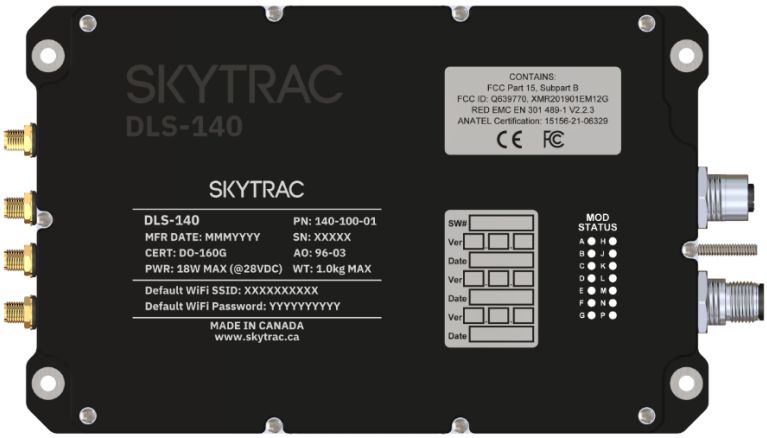

Figure 2: Mod A DLS-140 Label Location

Restricted Proprietary and Confidential Information

2.2 LED INDICATOR

The DLS-140 utilizes one status indicator LED for communicating the status of the unit. The operation of the DLS-140 status LED is shown in **Figure 3**. During a normal boot sequence, the LED will show green, followed by steady red, then blinking blue as it boots. A steady blue LED indicates that the unit is ready to use.

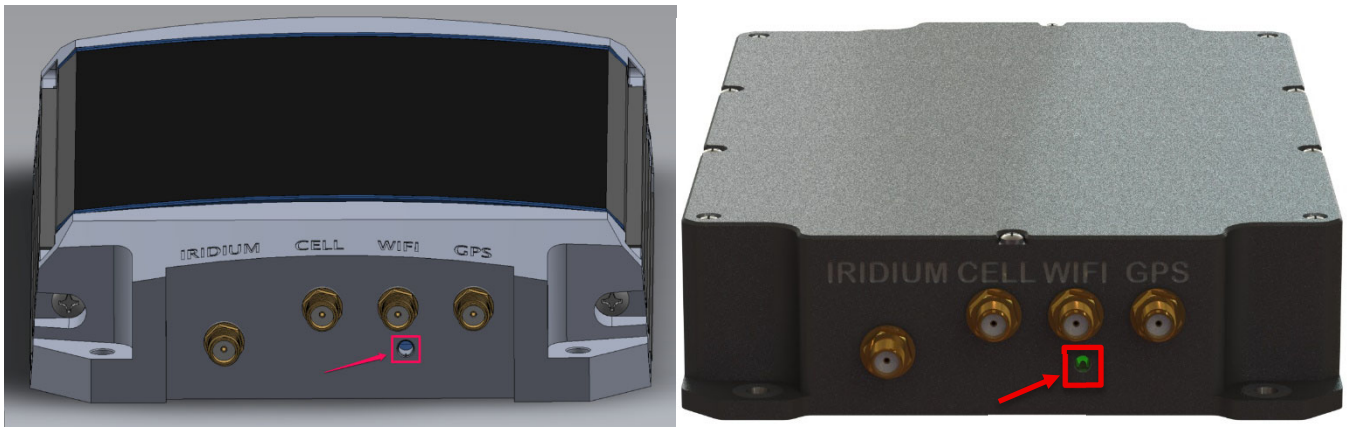

Figure 3: DLS-140 LED Indicator: Left – Mod None, Right - Mod A

Table 2: Status LED Operation

COLOR	STATUS
Green (Steady or Blinking)	Initial Power On
Red (Blinking)	Iridium Firmware Upgrade (In Progress) *
Red (Steady)	Unit in Bootloader Mode
Blue (Blinking)	OS is Booting (or DLS-140 Firmware Upgrade*)
Blue (Steady)	Device is Operational

Note: LED indicators labelled with a * are only applicable to the Legacy software.

2.3 CONNECTIVITY OPTIONS

2.3.1 WI-FI

The DLS-140 is compatible with Wi-Fi standards 802.11 ac/a/b/g/n allowing it to connect to a broad range of devices, including those using legacy protocols.

Restricted Proprietary and Confidential Information

2.3.2 ETHERNET

The DLS-140 Mod A supports two Ethernet ports with negotiation rates of 10/100 Mbps for wired connections. The Mod None version supports 1 Gigabit ethernet port with negotiation rates of 10/100/1000 Mbps for wired connections.

2.3.3 CELLULAR

The DLS-140 utilizes 3G/4G technology, allowing for high-speed mobile data. It also offers backward compatibility with 3G networks, which enhances coverage across various locations.

2.3.4 CERTUS 100

The DLS-140 uses Iridium Certus Midband to deliver reliable satellite connectivity.

Restricted Proprietary and Confidential Information

3 GETTING STARTED

****NOTE****

This guide is for SW# ESW0107. For the Legacy SW User Guide, ESW0097, please refer to Appendix A.

3.1 CONNECTING USING WI-FI

Locate on the product label the corresponding Wi-Fi SSID/Password to access via Wi-Fi.

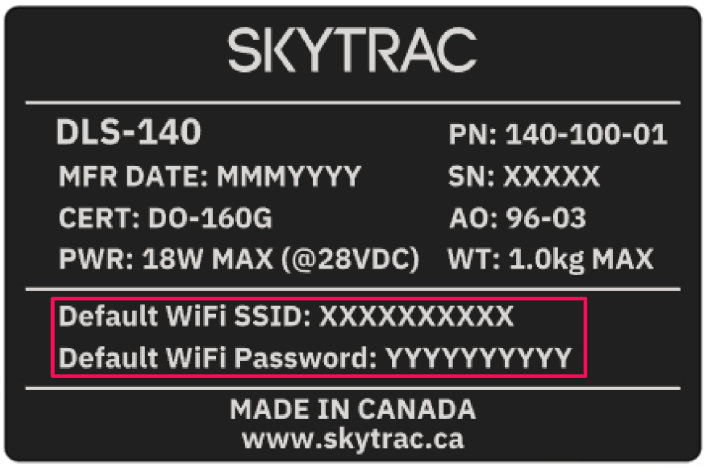

Figure 4: DLS-140 Default Wi-Fi Credentials

****NOTE****

If there are issues in accessing the label **after installation**, users must use the ethernet method below to configure the Wi-Fi settings. It is recommended that users document this label prior to installation. Contact SKYTRAC Support for further assistance.

Restricted Proprietary and Confidential Information

3.2 CONNECTING USING ETHERNET

Connect using a CAT5/5e ethernet cable and connect to an available ethernet port on the laptop or PC. Once connected, ensure DHCP is enabled.

3.3 LOGIN

To access the DLS-140 Interface, open a web browser and enter the following IP address in the address bar: 192.168.111.1, then press 'Enter'. This will take users to the DLS-140 Interface login page. Once the login page is visible, enter the credentials below to access, configure, and manage the device:

Username: skytrac
Password: skytrac

Once logged in, users will be redirected to the Dashboard screen, where they will find general system information.

3.4 DEFAULT NETWORK SETTINGS

This section provides a table of default network settings.

Table 3: Default Network Settings

NAME	DETAIL
DLS-140	192.168.111.1
Connected Devices	192.168.111.2 – 192.168.111.254
Subnet Mask	255.255.255.0 (/24)
Gateway	192.168.111.1

Restricted Proprietary and Confidential Information

3.5 WEB INTERFACE

3.5.1 NAVIGATION TABS

The interface provides a left-hand navigation menu with the following sections:

- **Dashboard** – Overview of system info, system health, GPS, and network status.
- **Network** – Displays network diagnostics, routing preferences, and connection details.
- **Configuration** – Allows device configuration and settings.
- Diagnostics – Provides advanced troubleshooting tools and system logs.

3.5.2 DASHBOARD OVERVIEW

After logging in, the Dashboard, Figure 5, provides a high-level summary of the device's status.

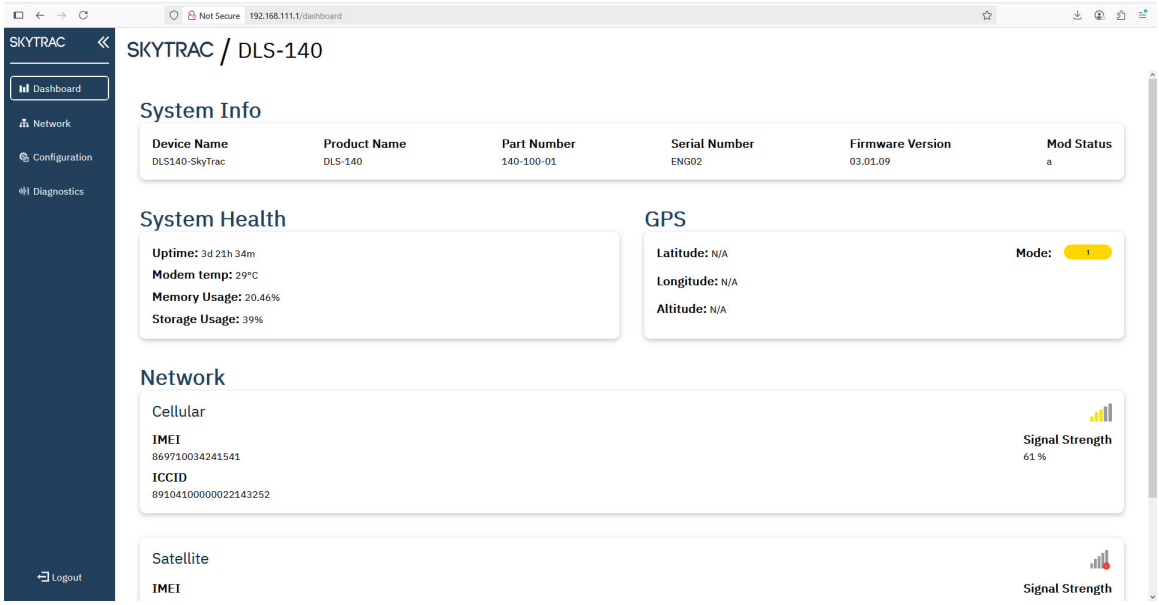

Figure 5: Dashboard Tab

The dashboard is divided into the following sections:

- **System Info** - Displays device identification details.
- **System Health** - Monitors operational parameters.
- **GPS** - Displays positional data.
- **Network** - Displays network details.

Restricted Proprietary and Confidential Information

3.5.2.1 SYSTEM INFO

Displays device identification details:

- **Device Name** – User-defined identifier for the unit.
- **Product Name** – Model name (DLS-140).
- **Part Number** – SKYTRAC part number (e.g., 140-100-01).
- **Serial Number** – Unique hardware identifier.
- **Firmware Version** – Currently installed firmware version.
- **Mod Status** – Indicates the hardware version/modification status.

3.5.2.2 SYSTEM HEALTH

Monitors operational parameters:

- **Uptime** – Time elapsed since last reboot.
- **Modem Temperature** – Temperature of the 9770 Iridium modem.
- **Memory Usage** – Current RAM utilization percentage.
- **Storage Usage** – Current internal storage usage percentage.

3.5.2.3 GPS

Displays positional data:

- **Latitude, Longitude, Altitude** – Current GPS coordinates (N/A if unavailable).
- **Mode** – Indicates GPS mode:
  - 0 = Error
  - 1 = No Fix
  - 2 = 2D Fix
  - 3 = 3D Fix

3.5.3 NETWORK

Displays network details:

- **Cellular** – Shows IMEI, ICCID, and signal strength in dBm and visual bars.
- **Satellite** – Shows IMEI, ICCID, and signal strength in dBm and visual bars.
- **Network Usage** – Displays data usage across different time frames:
  - 24h
  - 7d
  - Month

Data is separated into **Cellular Sent/Received** and **Satellite Sent/Received**.

Restricted Proprietary and Confidential Information

3.5.4 NETWORK TAB

This page is divided into **Basic** and **Advanced** tabs providing a comprehensive read-only overview of the current network status.

3.5.5 BASIC VIEW

This view displays the status of the external (WAN) connections, Figure 6.

- **Wi-Fi Section**:
  - **SSID** – Network name.
  - **Country** – Configured region.
  - **Security** – Encryption type (e.g., wpa2).
  - **Password** – Wi-Fi password (not visible if the security is set to none).
- **Cellular Section**:
  - **Signal** – A visual bar representing cellular signal strength.
  - **SIM Info** – Displays the ICCID, IMEI, and APN for the active SIM.
- **Satellite Section**:
  - **Signal** – A visual bar representing satellite signal strength.
  - **SIM Info** – Displays the ICCID and IMEI for the satellite module.
- **Routing Preference**:
  - Displays which connection is designated as the Primary (e.g., "Cellular Primary").

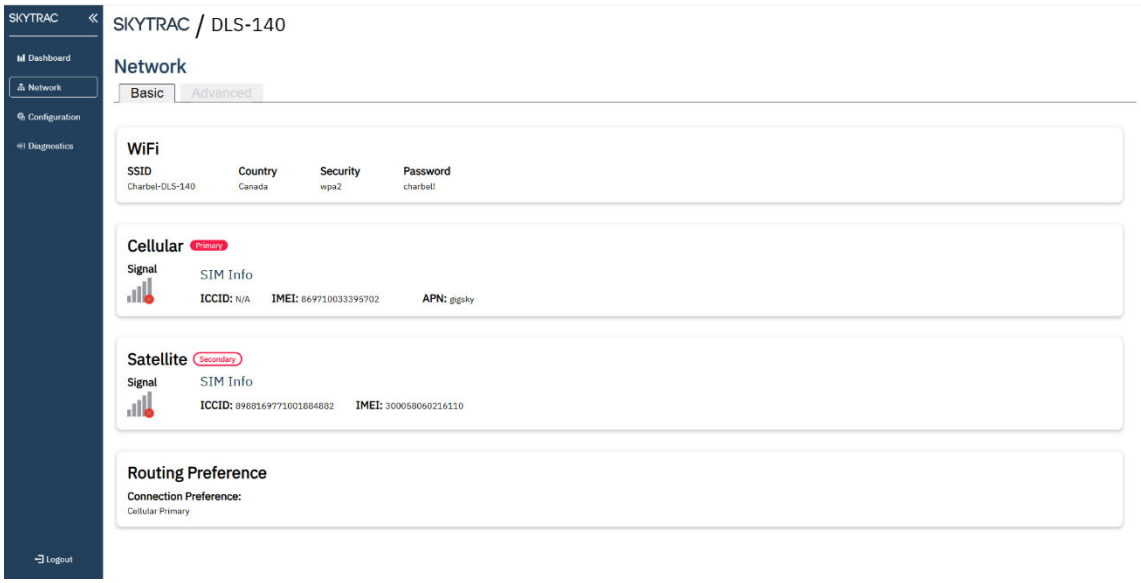

Figure 6: Network Tab Basic View

Restricted Proprietary and Confidential Information

3.5.6 ADVANCED VIEW

This view displays the advanced networking settings, Figure 7.

- **LAN Section**:
  - **IP Address** – The device's gateway IP address (192.168.111.1).
  - **Network Mask** – The subnet mask for the LAN.
  - **Primary DNS** & **Secondary DNS** – DNS servers used by the network.
- **DHCP Section**:
  - **DHCP range start** & **DHCP range end** – The pool of available IP addresses.
  - **Lease Validity** – How long an IP address assignment is valid (e.g., 24h).
- **Static DHCP Section**:
  - Lists all devices that have been assigned a permanent IP address, showing their **MAC Address**, **Hostname**, and assigned **IPv4 Address**.
- **Firewall Section**:
  - **Current Profile** – Shows the active firewall profile (e.g., unrestricted).
  - **Note**: Firewall configuration may require a device reboot to take effect.

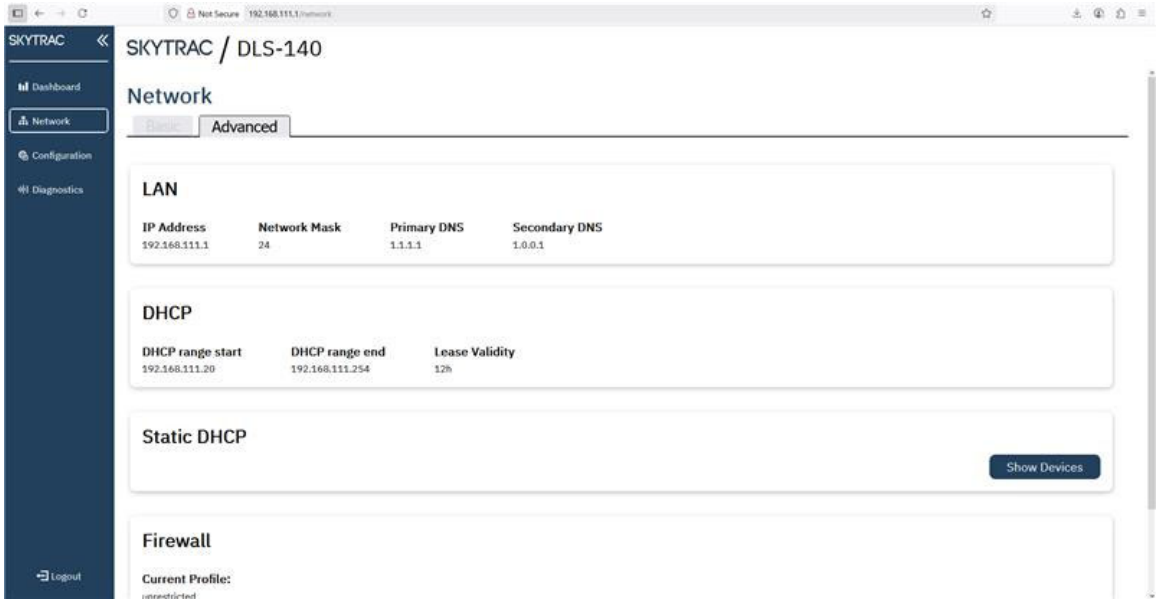

Figure 7: Network Tab Advanced View

Restricted Proprietary and Confidential Information

3.5.7 CONFIGURATION TAB

The Configuration Tab, Figure 8, allows the user to modify the DLS-140 user settings. Each section can be expanded to view and edit parameters.

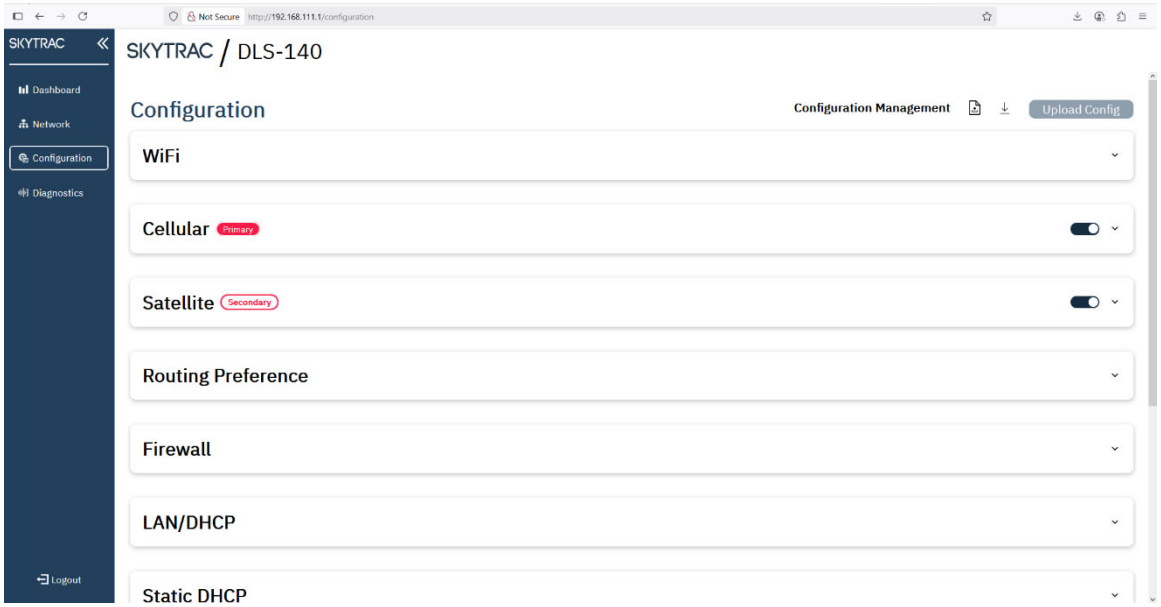

Figure 8: Configuration Tab

- **Configuration Management**: Options to download or upload a device configuration file.

Restricted Proprietary and Confidential Information

- **Wi-Fi, Figure 9**: Configure SSID, country, security, password (The length must be more than 8 and less than 63 characters, and it should only include letters, numbers and symbols such as abc, ABC, 123, and ?&!).

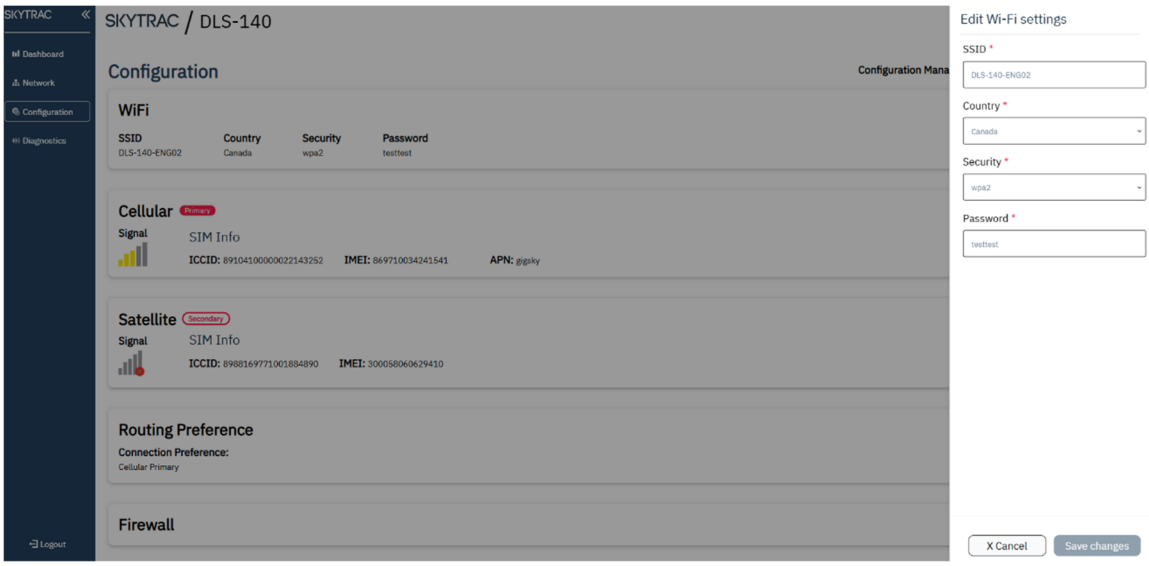

Figure 9: Wi-Fi Configuration

- **Cellular, Figure 10**: Enable/disable the cell and configure the APN.

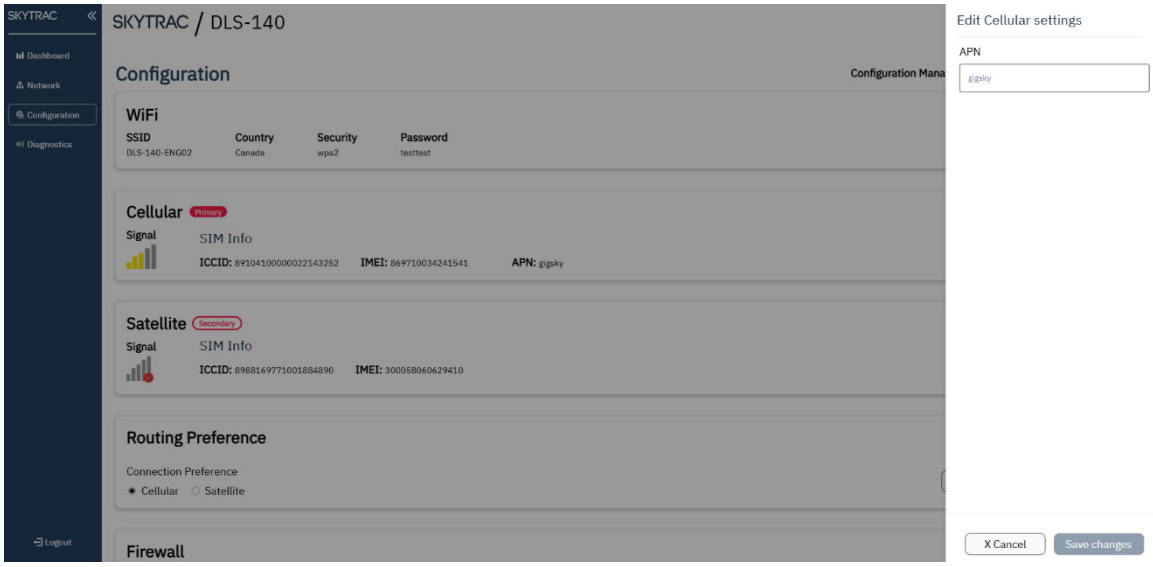

Figure 10: Cellular Configuration

Restricted Proprietary and Confidential Information

- **Satellite**: Enable/disable satellite connection.
- **Routing Preference, Figure 11**: Set the connection preference.



Figure 11: Routing Preference Configuration

- **Firewall**: Manage firewall profiles (unrestricted, nointernet, webonly).
- **LAN, Figure 12**: Configure the device's local IP address, the network mask, the primary and secondary DNS. The IP address and Network mask must be in a private range, which means that it should be one of the following:
    - 192.168/16
    - 10/8
    - 172.16/12

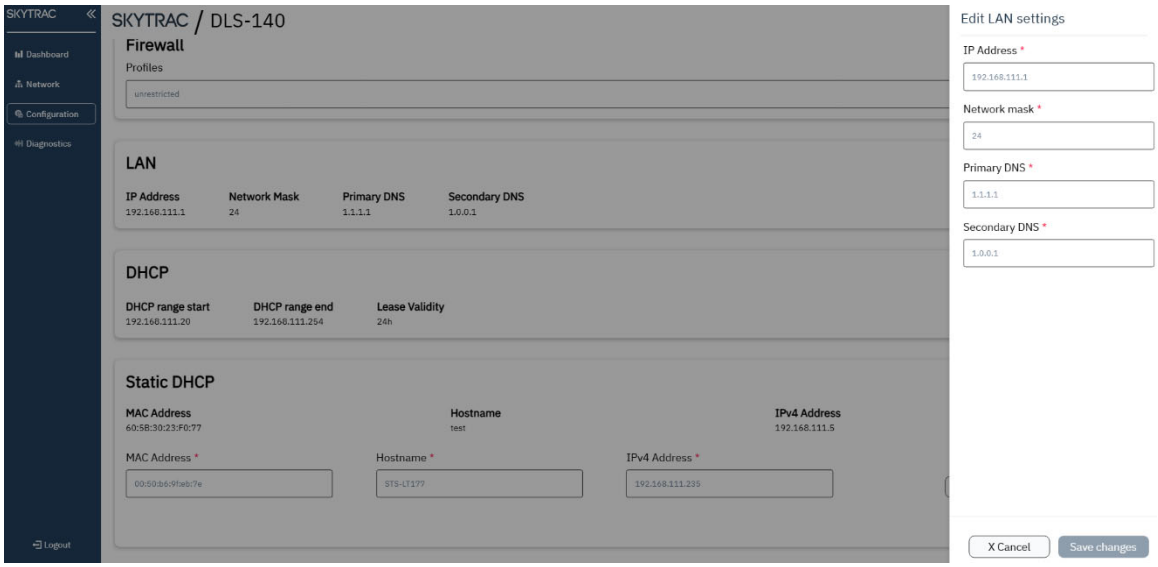

Figure 12: LAN Configuration

Restricted Proprietary and Confidential Information

- **DHCP, Figure 13**: Configure the DHCP address range start and end, and the lease validity period (hours).

Figure 13: DHCP Configuration

- **Static DHCP, Figure 14 and Figure 15**: Add or remove reservations for specific devices by entering the device's MAC address, host name, and IPv4 address.

Figure 14: Static DHCP Configuration

Restricted Proprietary and Confidential Information

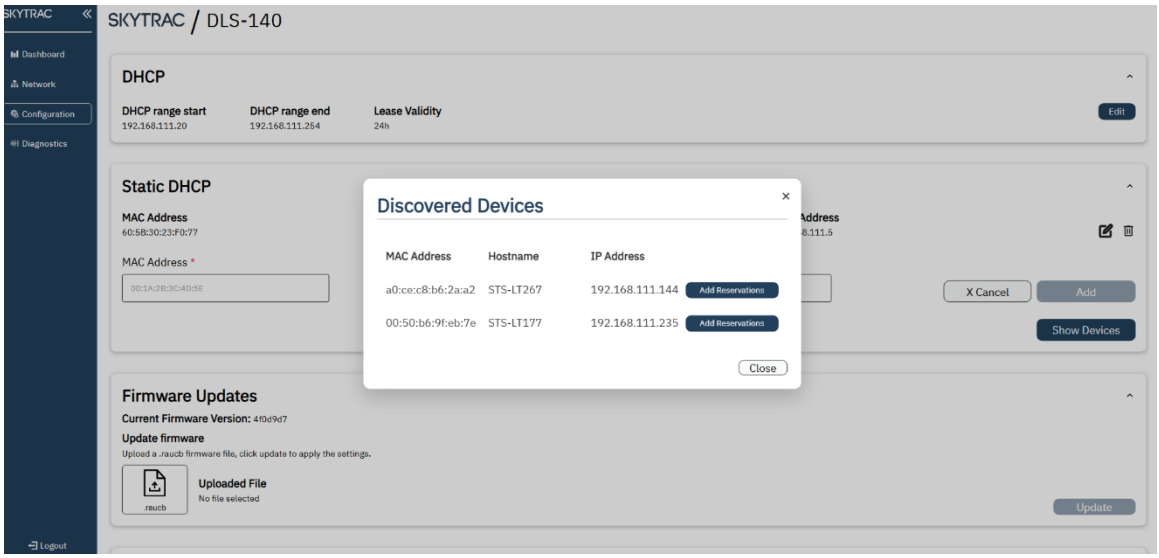

Figure 15: Static DHCP Discovered Devices

- **Firmware Updates**: Apply firmware updates to the device by uploading a .raucb file. You can also view the current firmware version.
- **Edit Device Name, Figure 16**: Change the user-defined name of the DLS-140 unit.

Figure 16: Edit Device Name

Restricted Proprietary and Confidential Information

- **Factory Reset, Figure 17:** Restore the system to its original default settings, erasing all current configurations.

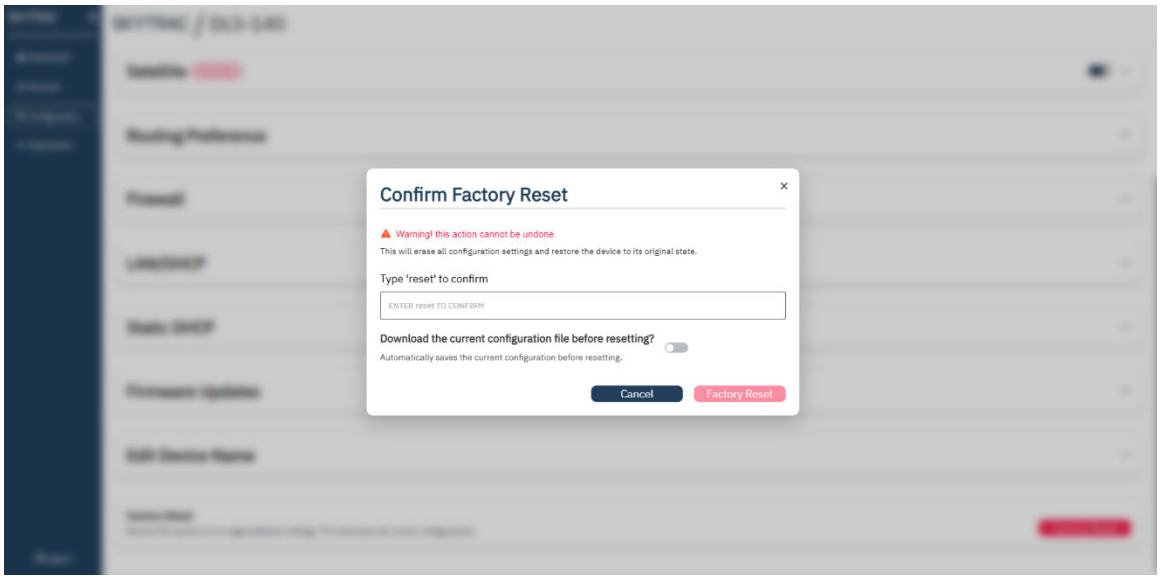

Figure 17: Factory Reset

3.5.8 DIAGNOSTIC TAB

The Diagnostic Tab, Figure 18, provides tools for network troubleshooting and access to system logs.

Figure 18: Diagnostics Tab

Restricted Proprietary and Confidential Information

3.5.8.1 NETWORK DIAGNOSTICS

Allows the user to run basic network tests from the device.

- **Operation**: The type of diagnostic to run. Currently supports ping only.
- **Network Interface**: Select which network connection (e.g., Cellular, Satellite, or any) to test from.
- **Number of Pings**: The number of test packets to send (e.g., 5).
- **Destination Address**: The IP address to ping (e.g., 8.8.8.8). Note, you can not enter a hostname, only an IP address.
- **Output**: A console window displays the results of the diagnostic test.

Note: The Run button cannot be activated until all required parameters are entered.

3.5.8.2 LOGS

Allows the user to download logs from the device for a specified time period, Figure 19.

- **Log Type**: A dropdown menu to select the type of log to download. Available types include:
  - System
  - Messages
  - GPS
  - Satellite
  - Dmesg
  - Point-to-Point Protocol (PPP)
- **Start Date/Time (UTC)** & **End Date/Time (UTC)**: Fields to specify the time range for the logs.
- **Download**: Button to initiate the log file download.

Figure 19: Log Downloading

Restricted Proprietary and Confidential Information

4 TECHNICAL SPECIFICATIONS

This section is intended to describe technical specifications and outline supportability on specific functions.

4.1 CELLULAR FREQUENCY BANDS

It is recommended that when using the DLS-140, users ensure that sufficient service is available in a specific region according to the below table.

Table 4: Cellular Frequency Bands

TECHNOLOGY	FREQUENCY BANDS	
LTE-FDD	B1, B2, B3, B4, B5, B7, B8, B9, B12, B13, B14, B17, B18, B19, B20, B21, B25, B26, B28, B29, B30, B32, B66	
LTE-TDD	B38, B39, B40, B41	
WCDMA		B1, B2, B3, B4, B5, B8, B9, B19

4.2 WI-FI FREQUENCY BANDS

It is recommended that when choosing what broadcast frequency is configured that the intended devices support such frequency bands.

Table 5: Wi-Fi Frequency Bands

WI-FI TYPE	FREQUENCY (GHZ)	CHANNELS
802.11b	2.4GHz	1-11 (North America), 1-13 (Europe, most countries), 1-14 (Japan)
802.11g	2.4 GHz	1-11 (North America), 1-13 (Europe, most countries), 1-14 (Japan)
802.11n	2.4 GHz / 5 GHz	2.4 GHz: 1-13 (worldwide), 5 GHz: 36-165 (region-dependent)

Restricted Proprietary and Confidential Information

WI-FI TYPE	FREQUENCY (GHZ)	CHANNELS
802.11ac	5 GHz	36-48, 52-64, 100-144, 149-165 (varies by region, with DFS restrictions)

4.3 POWER SUPPLY OPTIONS

4.3.1 DIRECT POWER

The DLS-140 power requirements are as shown in **Table 6**.

Table 6: Power Requirements

COMPONENT	POWER REQUIREMENTS
DLS-140	Input Voltage: 10 – 34 VDC, 28 VDC Nominal Power Consumption: 7W nominal, 18W peak.

4.4 SERIAL AT COMMANDS

Currently, serial options are not supported.

4.5 FDM

When using the DLS-140 for processing Flight Data, the following requirements must be met:

- A DLS-140 with any FW version
- An ISAT-200A with firmware 00.23.07 or later
- Accompanying ISAT-200A params.ini file

There is no other user-initiated change or settings to be performed. The above requirements ensure intended functionality.

Restricted Proprietary and Confidential Information

5 CUSTOMER SUPPORT

TELEPHONE: 1-250-765-2393

FAX: 1-250-765-3767

EMAIL: support@skytrac.ca

WEBSITE: www.skytrac.ca

Restricted Proprietary and Confidential Information

APPENDIX A LEGACY SW USER GUIDE

A.1 WEB INTERFACE

This section offers an overview of the initial screens displayed upon first logging into the web interface, including login credentials and a description of the initial status screen.

A.1.1 LOGIN

To access the DLS-140 Interface, open a web browser and enter the following IP address in the address bar: **192.168.111.1**, then press 'Enter'. This will take users to the DLS-140 Interface login page. Once the login page is visible, enter the credentials below to access, configure, and manage the device:

Username: admin
Password: admin

Once logged in, users will be redirected to the Status screen, where they will find information about the system and satellite, cellular, and internet data usage.

A.1.2 STATUS

This section is intended to provide users with a comprehensive DLS-140 system overview.

► System Information

This section provides key details about a user's DLS-140 device, such as its serial number, model number, hardware and firmware versions, and capabilities. It also displays the satellite and cellular IMEI/SIM card numbers and current operating temperatures.

► Satellite, Cellular, & Wired Internet

Here, users can view signal strength and data usage for the Iridium satellite system, cellular modem, and wired internet. Each category includes tables showing device's data usage over the past 24 hours, 7 days, and from the beginning of the month.

A.1.3 GENERAL SETTINGS

This section allows users to make configurations such as renaming the DLS-140 device, changing the Wi-Fi password, and turning satellite, cellular, and Wi-Fi capabilities on and off. Click 'Reboot' at the bottom of the screen to restart the device once changes are made.

Restricted Proprietary and Confidential Information

► SkyLink

Edit device name in the Asset Tag field and set a maximum limit for the SkyLink (DLS-140) device's daily data usage in the Max Daily Usage field.

► Satellite

Toggle the satellite control sliders on or off to enable or disable the connection settings that allow users device to establish and manage data sessions over the Iridium Certus network.

► Wi-Fi

Toggle Wi-Fi on or off and get information on the current Wi-Fi settings. These fields are intended for information only and can be changed in the Connection Manager tab.

SSID: This is the name of the Wi-Fi network. It is a public-facing name that users see when they search for available networks.

Mode: The Wi-Fi Mode refers to the frequency band used by the network. 5 GHz provides faster speeds and less interference compared to 2.4 GHz but with a shorter range.

Country: This specifies the Country of operation, which helps ensure that the device complies with the regional Wi-Fi frequency and power regulations. Ensure to select the proper country intended for operation (only applicable for 5 GHz.)

Channel: The Channel is the frequency on which the Wi-Fi signal is broadcast. When set to Auto, the DLS-140 will automatically select the best channel based on the least interference.

Security: This refers to the Security protocol used to protect the Wi-Fi network. WPA2-PSK is a strong encryption standard that requires a password to connect to the network.

Password: This is the password required to access the Wi-Fi network. It is hidden by default but clicking the eye icon reveals it. It is recommended that users document the label prior to installation.

► Cellular

Toggle Cellular on or off and get information on the current Cellular settings. These fields are intended for information only and can be changed in the General Settings tab.

APN: This is the network pathway for the cellular connection.

Username: Some networks require a username for authentication when connecting to an APN.

Password: Used in conjunction with the username for authentication when connecting to an APN.

Restricted Proprietary and Confidential Information

IMEI: The IMEI is a unique identifier for the device on cellular networks. This number is used by the network to recognize and validate the device. This is a fixed value and unable to be changed.

SIM: The SIM card number uniquely identifies the subscriber account with the cellular carrier. This field changes when a SIM card is inserted within the SIM tray. This is a fixed value and unable to be changed.

Network: This shows the current cellular network the device is connected to.

A.1.4 CONNECTION MANAGER

This section covers key aspects of network management for device communication. Users can prioritize data routing between satellite and cellular connections and manage firewall policies to manage network access.

Data Routing: Users can prioritize data routing between satellite and cellular connections.

Firewall Profile: This defines the firewall rules that manage incoming and outgoing network traffic. Users can choose from various predefined firewall profiles in the dropdown menu or create their own whitelist to customize settings according to their specific needs. It is recommended users set a Whitelist as soon as possible to eliminate any unwanted data traffic.

A.1.5 NETWORK

This section covers network configuration settings.

► LAN

IP Address: 192.168.111.1 (DLS-140)

Network Mask: 255.255.255.0

Primary/Secondary DNS: 8.8.8.8 (Google DNS) and 1.1.1.1 (Cloudflare DNS).

****CAUTION****

Any changes to LAN settings must be performed with caution. If an unwanted change is made, users may need to factory reset the DLS-140 to restore network configuration settings to default.

► DHCP Settings

DHCP automatically assigns IP addresses to devices on a network, allowing them to communicate without manual configuration.

Range: IPs from 192.168.111.50 to 192.168.111.200 are dynamically assigned to devices by default

Restricted Proprietary and Confidential Information

Lease Validity: Choose the amount of time that the IP lease is valid/renewed.

► Static DHCP Leases

A static DHCP lease assigns a fixed IP address to a device based on its MAC address, ensuring the device always receives the same IP on the network.

The "Connected Devices" button provides a list of devices currently connected to the DLS-140.

A.1.6 FIREWALL

The section allows users to configure their DLS-140 incoming and outgoing network traffic for specific applications or hosts, with two tabs — Whitelist and Port Forwarding — for managing these settings.

► Tab 1: Whitelist

****CAUTION****

It is recommended that users enable a particular whitelist. Failure in doing so may result in heavy data charges as many devices perform background downloads and tasks which may affect data usage.

The Whitelist allows traffic for specified applications or hosts by adding their IP address or hostname. Once added, all incoming and outgoing traffic from that host will be allowed. Either is necessary, both are not needed.

Host Names: Enter the specific host name (e.g., google.com) to allow communication only with that destination.

IP Addresses: Enter the specific IP addresses (e.g., 8.8.4.4 or 8.8.8.8) to allow communication only with that IP address.

► Tab 2: Port Forwarding

Forward incoming connections to devices on the local network. Use caution when creating these rules, as they may expose the network to security risks or disrupt connectivity. For help with setting custom rules, please contact SKYTRAC support.

A.1.7 REMOTE MANAGEMENT

Currently, this feature is not supported.

A.1.8 SERIAL TO IP

Currently, this feature is not supported.

Restricted Proprietary and Confidential Information

A.1.9 SNMP

This section provides details for SNMP access to configure SNMP v1/v2. MIBs are available and can be downloaded by clicking 'Download MIBs' link.

Public (Read-Only) Community: snmp_ro
Private (Read/Write) Community: snmp_rw

A.1.10 VOICE EXTENSIONS

Currently, this feature is not supported.

A.1.11 ACCESSORIES

Currently, accessories are not supported.

A.1.12 PLUGINS

Currently, plugins are not supported.

A.1.13 CALLS

Currently, call features are not supported.

A.1.14 DIAGNOSTICS

The diagnostic features provide a thorough overview of device status, connection quality, and network troubleshooting tools.

System Information allows monitoring of essential hardware status and functionality.
Satellite & Cellular Information ensures that both communication pathways are functioning properly.
Network Troubleshooting tools like Ping help quickly test and resolve connectivity issues.

Restricted Proprietary and Confidential Information