

VANTAG

Vantag User Manual

The Complete Guide to Setup, Live Monitoring, AI Detection & Alerts

Version 1.0

Covers RetailNazar / Retail-Vantag / RetailBantay / RetailJagaJaga / RetailPantau

Screenshots captured from a live Vantag account

1. Welcome to Vantag

Vantag is a DIY AI security and CCTV analytics platform for shops, malls, hospitals, post offices, police stations, small offices and homes. It turns any existing IP camera into a 24/7 AI guardian — detecting shoplifting, loitering, falls, empty shelves, intrusion, and more — without needing new hardware. This manual walks you through everything from creating your account to using every feature in the dashboard, with real screenshots and troubleshooting guidance for the most common issues.

NOTE: Keep this manual handy during your first installation. Section 15 (Troubleshooting Quick Reference) and the Appendices answer the majority of setup questions without needing to contact support.

2. Creating Your Account & Starting Your Free Trial

1. Go to your regional Vantag website (e.g. retail-vantag.com, retailnazar.com, retailbantay.com, retailjagajaga.com, or retailpantau.com) and click "Start Free Trial" / "Get Started".
2. Enter your shop/organisation name, country, city, address and phone number.
3. Verify your email using the 6-digit OTP code sent to your inbox (check spam/junk folder if it does not arrive within a minute).
4. Choose a plan (Starter, Growth, Pro, or Pro Plus) based on the number of cameras you need — you are not charged during the trial.
5. Confirm "Start Your Free Trial" — you get 3 full days of access to all features with no card required.

NOTE: The 3-day trial timer starts from the moment you complete registration, not from your first login. If you register and do not log back in for a day or two, your trial clock is still running — plan your installation visit accordingly.

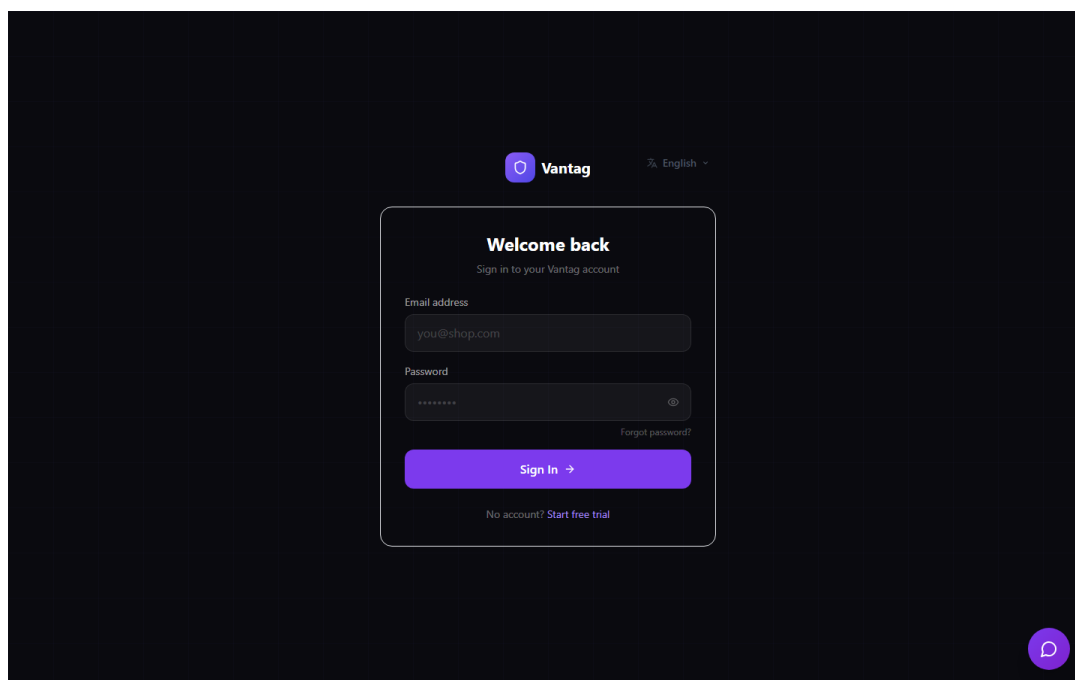


Figure 1 — Sign-in screen. Use "Forgot password?" if you ever need to reset your credentials.

3. The Onboarding Wizard (First-Time Setup)

Immediately after registration, Vantag walks you through a guided onboarding wizard. This only needs to be done once per account.

Step 1 — Shop Details

Confirm your shop name, country, city, address, phone number, and preferred dashboard language.

Step 2 — Choose Your Plan

Compare camera-count limits and included AI features side by side, then select the plan that matches your site (you can upgrade later at any time from Account settings).

Step 3 — Set Up Your Cameras

Enter each camera's IP address, a friendly name (e.g. "Front Door"), and its location/zone label. Click "Auto Detect" to let Vantag identify the brand and stream path automatically where possible.

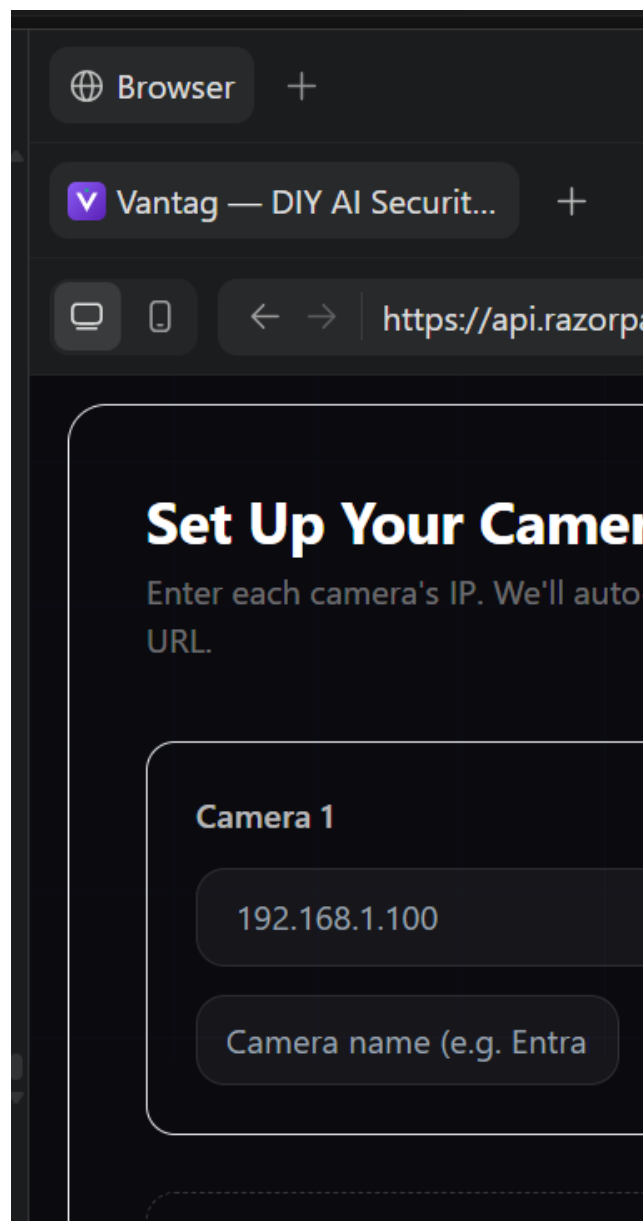


Figure 2 — Camera setup step of the onboarding wizard.

Step 4 — Install the Edge Agent

Choose your install method: Android Phone/Tablet (up to 4 cameras), Windows PC (up to 30 cameras), or a Vantag Edge Box (plug-and-play hardware). Click "Generate Install Code" to get your unique pairing QR code and install code.

NOTE: *Windows PC is the recommended option for most retail sites with 5 or more cameras — it offers the highest camera-count ceiling and the most stable long-running performance.*

4. Installing the Vantag Edge Agent

The Edge Agent is a small program that must run on a PC/tablet on the SAME local network as your cameras. It connects your cameras to the Vantag cloud dashboard, runs AI detection, and streams a compressed live view. Go to "Install Edge Agent" in the left sidebar at any time to re-download it.

Install Vantag Edge Agent

The Edge Agent runs on your local PC/tablet/Raspberry Pi and connects your LAN cameras to Vantag cloud. Choose your platform below.

The downloaded filename includes the agent version (e.g. vantag-edge-agent-windows-v1.2.0.zip) — if you already installed an older version, re-download and re-extract to update.

Windows
Windows 10/11 - 64-bit
[Download .zip](#)

Linux / Raspberry Pi
Ubuntu, Debian, Raspbian
[Download .zip](#)

macOS
Intel + Apple Silicon
[Download .zip](#)

Installation (5 minutes)

- Extract the downloaded file**
Windows / Mac: right-click → Extract. Linux: `tar -xzf vantag-agent-linux.tar.gz`
- Run the launcher**
Open the extracted folder and run the launcher for your platform:

```
# Windows: double-click
run.bat

# Linux / Mac:
chmod +x run.sh
./run.sh
```

It auto-creates a Python environment, installs dependencies, and starts the agent.
- Credentials are already filled in**
The bundled `config.json` already contains your API key, agent ID, and backend URL — no manual entry needed:

```
Vantag Cloud URL : https://retail-vantag.com
Tenant ID       : be9dc89-6b62-48fc-aa56-acb8b34d27e4
```
- Agent auto-detects your cameras**
The agent scans your local network (192.168.x.x) for IP cameras and lists them in your Vantag dashboard. You then confirm which ones belong to which zone.
- Done — cameras go live**
Back here on the dashboard, cameras will flip from Offline to Online. Risk scores, alerts, and incidents will start flowing in real time.

Frequently asked questions

- Why do I need an Edge Agent?
- Do I need a PC? Can it run on a phone?
- Is my video streamed to the cloud?
- What if I don't have a PC or tablet?

Figure 3 — Install Edge Agent page: choose Windows, Linux/Raspberry Pi, or macOS, then follow the 5-step install flow shown on screen.

Installation Steps

1. Download the .zip for your platform and extract it fully.
2. Windows: double-click run.bat. Linux/Mac: run `chmod +x run.sh && ./run.sh`.

3. The bundled config.json already contains your API key, tenant ID, and backend URL — no manual entry is needed.
4. The agent scans your local network (e.g. 192.168.x.x) and auto-detects your cameras.
5. Return to the dashboard — camera tiles will flip from "Offline" to "Online" once the agent connects.

NOTE: IMPORTANT: Wait about 2 minutes after the Edge Agent finishes starting up before checking the live feed. The agent loads AI model libraries (YOLO, face recognition, etc.) in the background on first start — this is normal and is not a fault.

NOTE: The single most common cause of cameras staying "Offline" is the Edge Agent PC being on a DIFFERENT network (e.g. office Wi-Fi) than the cameras (e.g. a dedicated camera VLAN or the router's LAN ports). Always connect the Edge Agent machine to the exact same network/switch as your cameras.

5. Dashboard Overview

The Operations Dashboard is your home screen after logging in. It gives a real-time, multi-store summary of everything happening across your cameras.

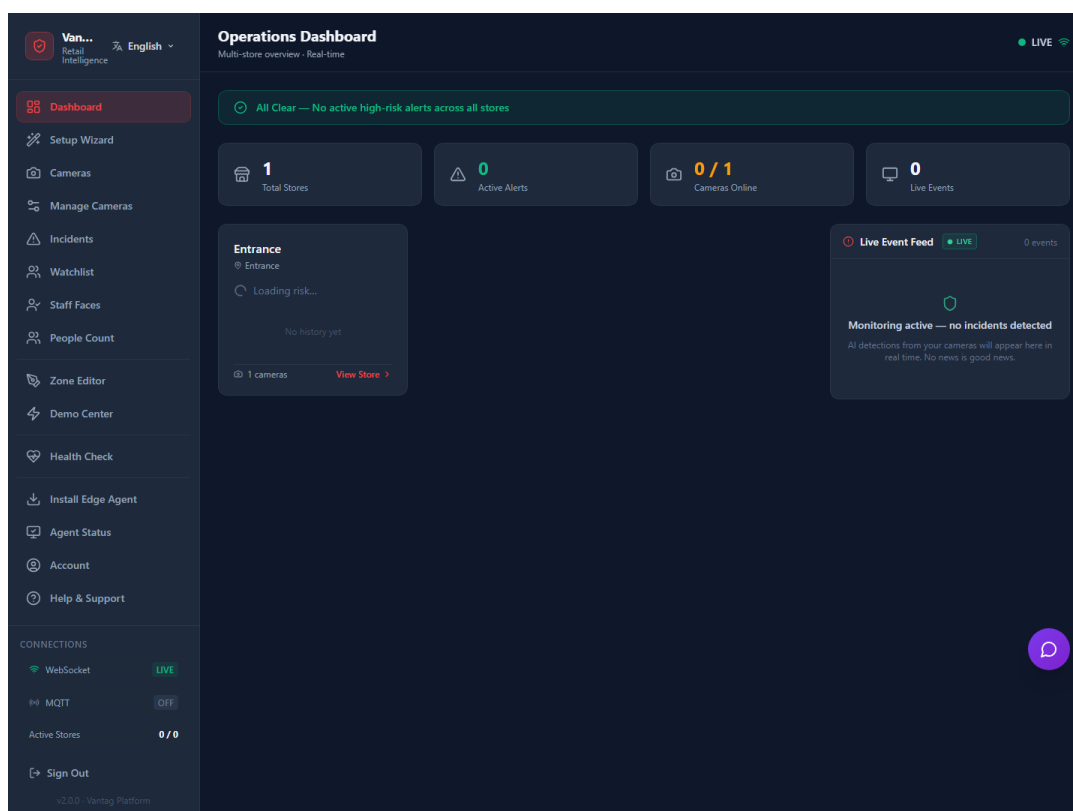


Figure 4 — Operations Dashboard: store cards, camera online count, active alerts, and the Live Event Feed panel.

Dashboard Element	What It Shows
Total Stores	Number of physical locations registered to your account.
Active Alerts	Count of currently unresolved high-risk incidents across all stores.
Cameras Online	Live count of cameras currently streaming vs. total registered (e.g. "0 / 1").

Dashboard Element	What It Shows
Live Events	Number of AI detection events received in the last few minutes.
Live Event Feed (right panel)	Real-time stream of AI detections as they happen. It is fully wired and active — if it shows "Monitoring active, no incidents detected," that means the system IS working and simply has nothing to report yet, not that the feature is broken.
Store card (e.g. "Entrance")	Per-store risk summary and a shortcut to "View Store" for that location's cameras.

NOTE: *If "Live Event Feed" always shows zero events, that is expected for a quiet store with no theft, loitering, or restricted-zone activity — it will populate automatically the moment a configured AI feature detects something.*

6. Adding & Managing Cameras (RTSP Setup Guide)

The Cameras page shows live thumbnails and online/offline status for every camera. The Manage Cameras page is where you add new cameras, either automatically or manually via RTSP.

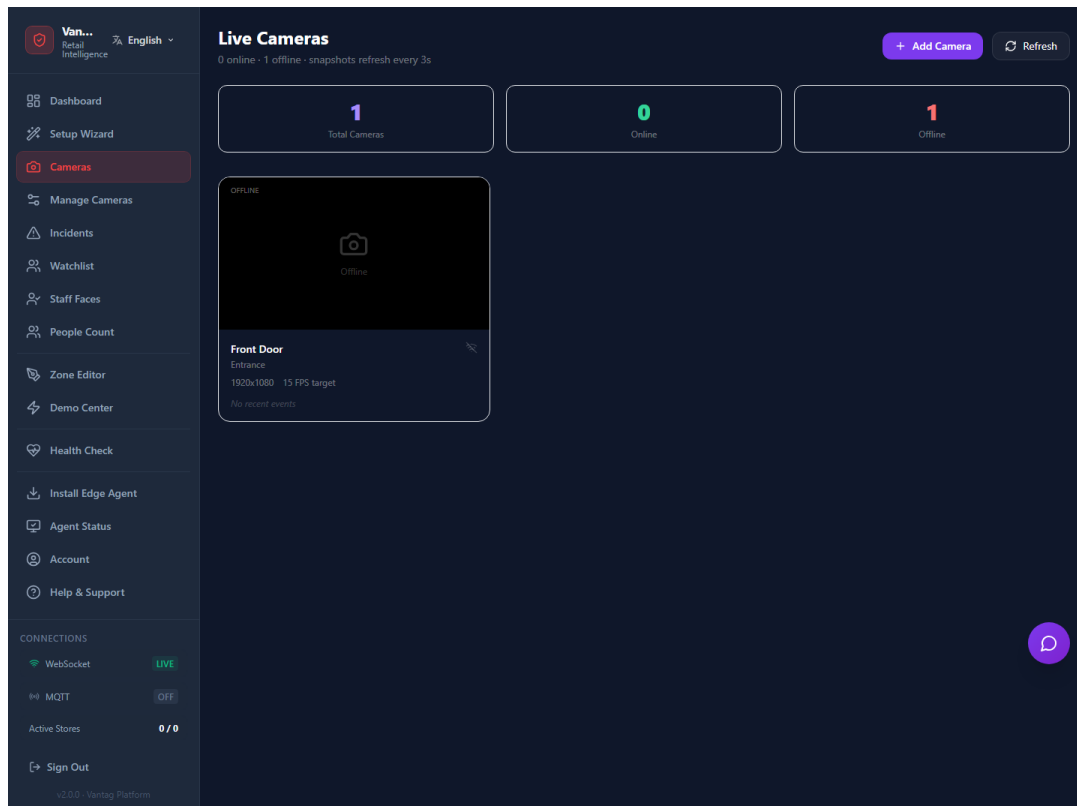


Figure 5 — Live Cameras page. Snapshots refresh every 3 seconds; a red "OFFLINE" badge means the Edge Agent cannot currently reach that camera.

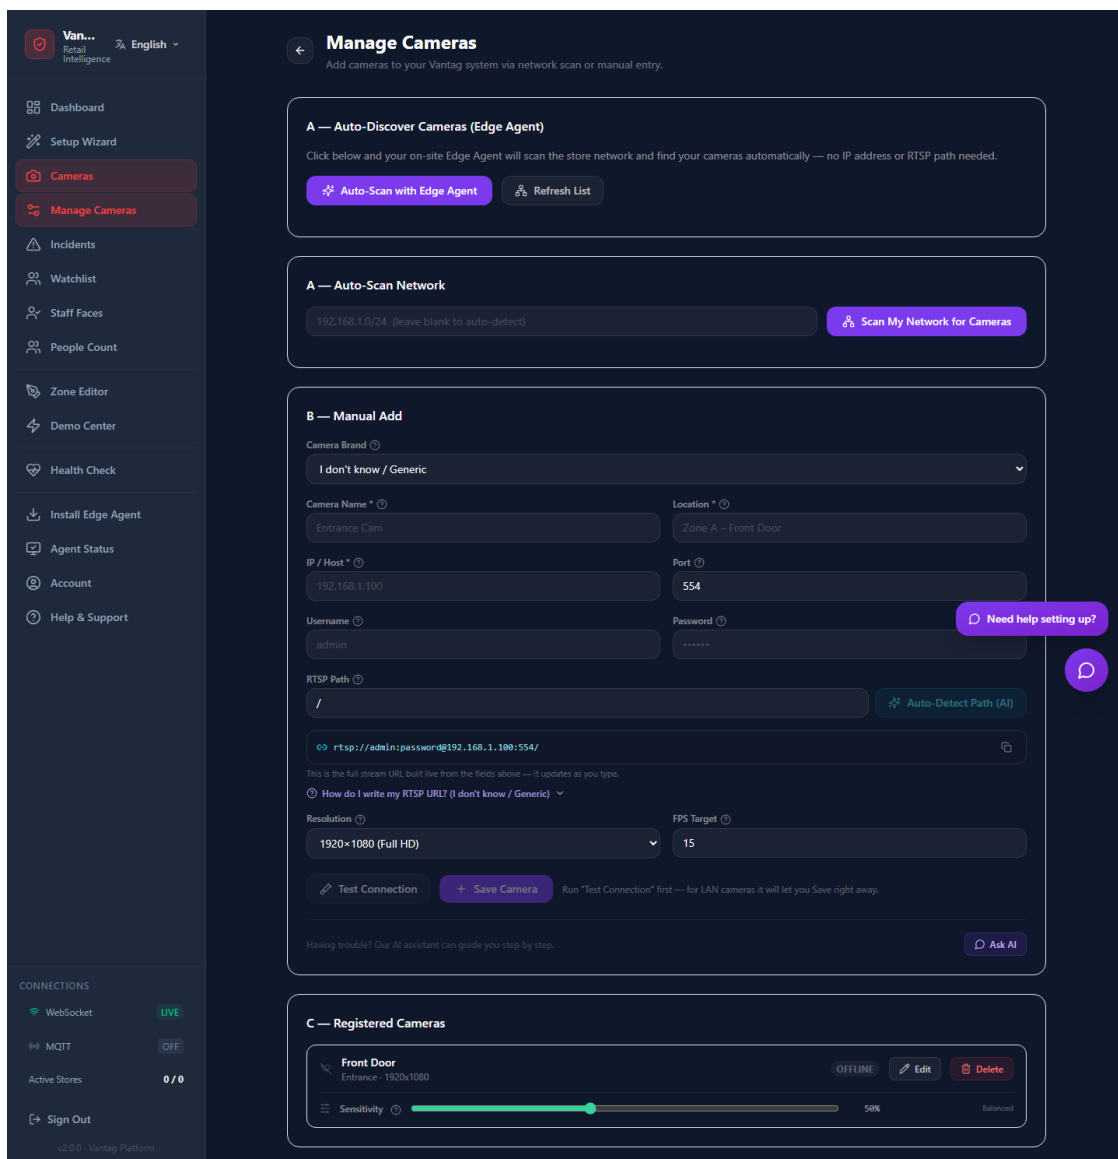


Figure 6 — Manage Cameras page: Auto-Scan (A), Manual Add with live RTSP URL preview (B), and your Registered Cameras list (C).

Recommended Order of Operations

1. Try "Auto-Scan with Edge Agent" first — it requires no IP address or RTSP path and works for most ONVIF-compatible cameras.
2. If a camera is not found automatically, use "Manual Add." Select your camera brand from the dropdown if listed, or choose "I don't know / Generic."
3. Enter the camera's IP address, port (default 554), username, and password.
4. Enter the RTSP Path for your brand — see Appendix A below for the exact format per brand. The full RTSP URL is built live as you type and shown just below the field.
5. Click "Test Connection" first. If it succeeds, click "Save Camera."

How Do I Write My RTSP URL?

An RTSP URL has this general structure:

rtsp://USERNAME:PASSWORD@CAMERA_IP:PORT/PATH

- USERNAME / PASSWORD — your camera's login (often "admin" plus a password you set during camera installation).
- CAMERA_IP — the camera's local network address, e.g. 192.168.1.100. Find it via your router's connected-devices list, the camera manufacturer's app, or an ONVIF Device Manager tool.
- PORT — almost always 554 for RTSP unless your camera's manual says otherwise.
- PATH — brand-specific (see Appendix A). This is the part people get wrong most often.

NOTE: *If your password contains special characters like # @ or : the RTSP link can fail to parse correctly. If "Test Connection" fails and your password has special characters, try temporarily setting a simple alphanumeric password on the camera itself, or contact support for help URL-encoding it.*

7. Zone Editor

The Zone Editor lets you draw exactly where each AI feature should watch, directly on top of a live camera snapshot.

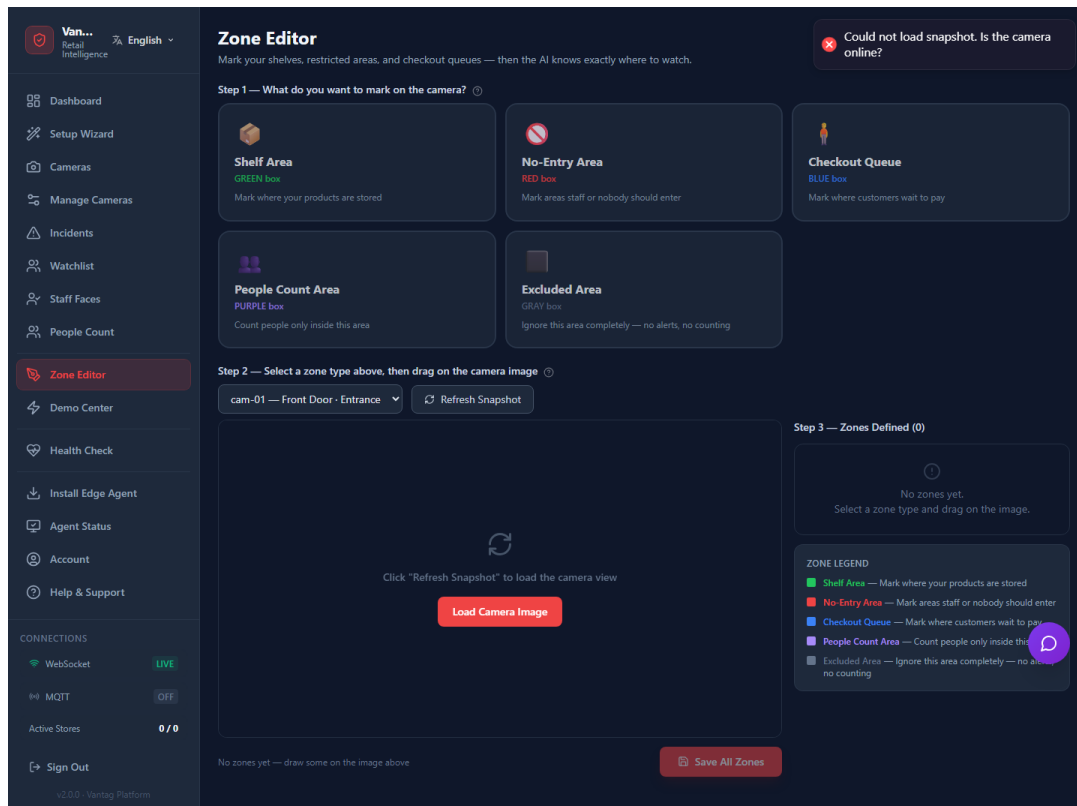


Figure 7 — Zone Editor: choose a zone type (Step 1), select the camera and draw on its snapshot (Step 2), and review saved zones (Step 3).

Zone Type	Color	Purpose
Shelf Area	Green	Mark where products are stored — used for empty-shelf and stock-level detection.
No-Entry Area	Red	Mark areas staff or nobody should enter — triggers intrusion alerts.
Checkout Queue	Blue	Mark where customers wait to pay — used for queue-length analytics.
People Count Area	Purple	Draw this to enable accurate People Counting for a specific camera — without a People Count zone, that camera will not contribute to footfall counts.
Excluded Area	Gray	Completely ignored — no alerts, no counting. Use this to mask out irrelevant areas (e.g. a public street visible in frame) to reduce false detections.

1. Select the camera you want to configure from the dropdown at the top of Step 2 — always confirm this shows the correct camera name before drawing.
2. Click "Load Camera Image" / "Refresh Snapshot" to pull the latest frame from that camera.

3. Select a zone type card, then click and drag on the snapshot to draw the zone boundary.
4. Repeat for every zone type you need on that camera, then click "Save All Zones."
5. To fix a mistake, reopen Zone Editor, select the same camera, and redraw or remove the zone before saving again.

NOTE: If the snapshot says "Could not load snapshot. Is the camera online?" — the camera must be Online (see Section 6) before you can draw zones on it. Bring the camera online first, then return to Zone Editor.

8. Incidents Log

Every AI-detected event — theft, intrusion, loitering, empty shelf, etc. — is recorded here with a timestamp, camera/store, event type, severity/risk score, and description with photo evidence.

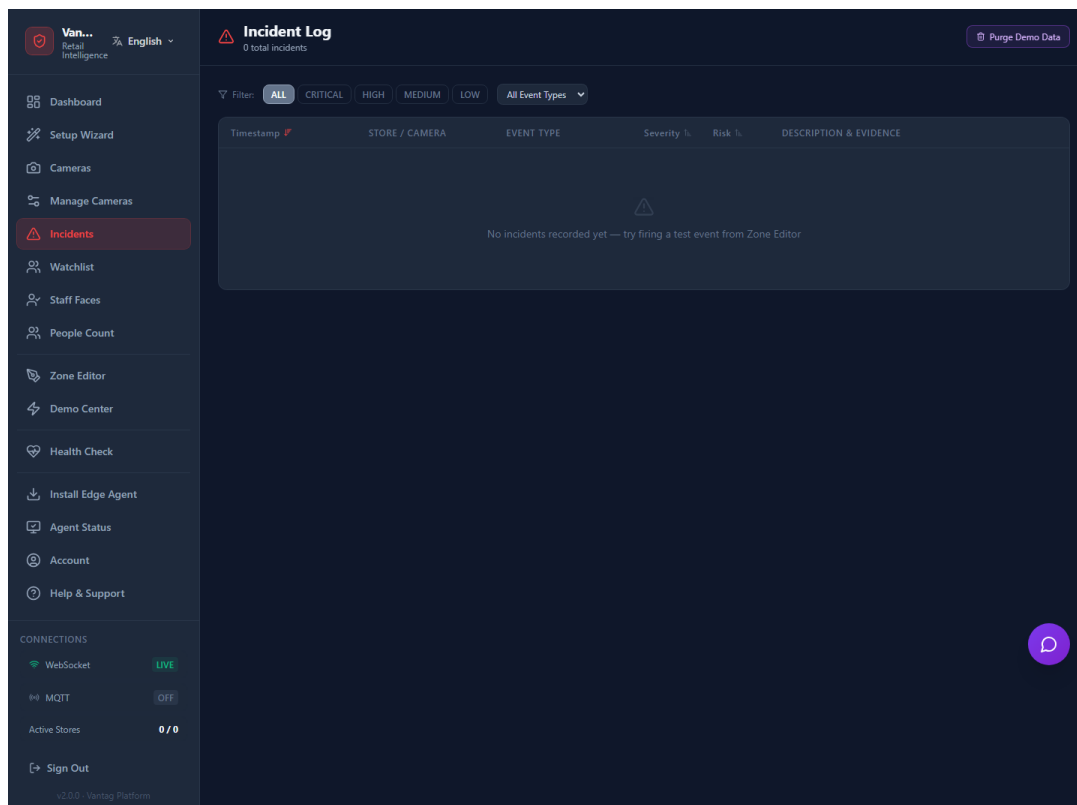


Figure 8 — Incident Log with severity filters (Critical/High/Medium/Low) and event-type filter.

- Click any row to view full evidence — description, snapshot image, and risk score.
- Use the severity and event-type filters at the top to narrow down the list during a review.
- "Purge Demo Data" removes any synthetic/demo incidents seeded for demonstration purposes — genuine incidents generated from your real cameras are never affected by this button.

NOTE: Vantag never invents incidents. Every row in this table corresponds to a real AI detection triggered by a configured zone/feature on one of your cameras. If you see an incident you do not recognize, check the timestamp and camera name — it may correspond to real activity you were not present to observe (e.g. after-hours movement).

9. People Counting

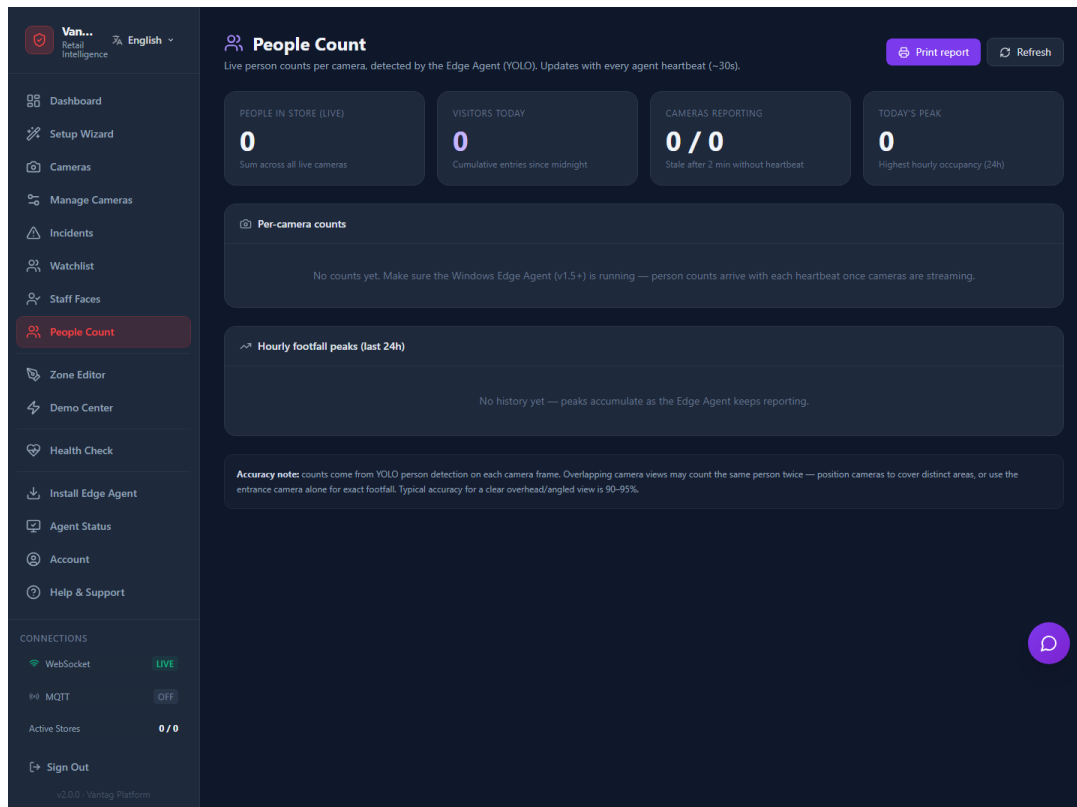


Figure 9 — People Count page: live in-store count, visitors today, cameras reporting, and today's peak.

1. Draw a "People Count Area" zone on the relevant camera in the Zone Editor (Section 7) — a camera contributes zero to the count until this zone exists.
2. Counts update with every Edge Agent heartbeat (approximately every 30 seconds), so allow at least one heartbeat cycle after enabling before expecting numbers to change.
3. Use "Print report" to generate a hard copy / PDF of counts for a shift or day.

Accuracy Notes

- Counts come from YOLO-based person detection on each camera frame. Typical accuracy for a clear overhead/angled entrance view is 90–95%.
- Overlapping camera views can double-count the same person — position cameras to cover distinct, non-overlapping areas, or rely on a single dedicated entrance camera for exact footfall.
- A camera reporting "0" is not necessarily wrong — it means no person was detected inside its People Count zone during the most recent frame(s). Confirm the zone is drawn over the actual walking path, not an empty corner of the frame.

NOTE: If People In Store stays at zero despite visible foot traffic: (1) confirm the Edge Agent is running and Online, (2) confirm a People Count zone (purple box) has been drawn and saved for that exact camera, and (3) confirm the zone covers the path people actually walk through, not just a static background area.

10. Staff Face Enrollment

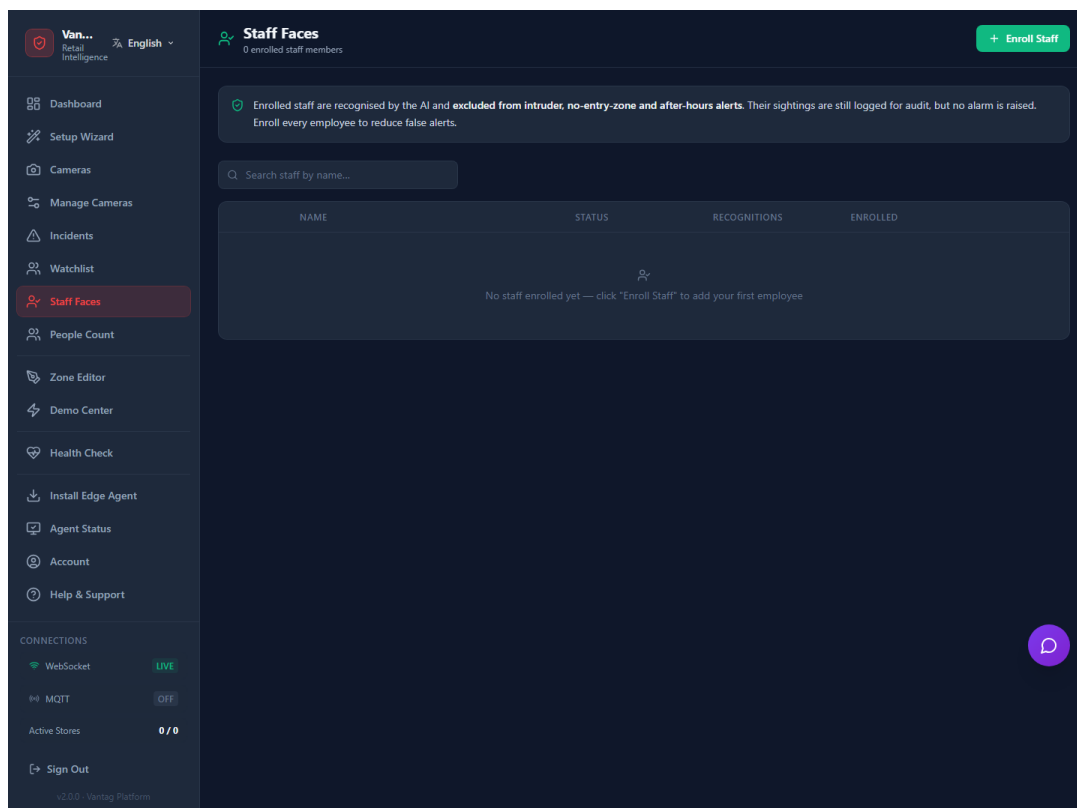


Figure 10 — Staff Faces page. Enrolled staff are excluded from intruder / no-entry / after-hours alerts; sightings are still logged for audit.

1. Click "Enroll Staff," enter the employee's name, and upload 1 or more clear photos of their face.
2. Repeat for every employee who needs access to restricted zones.

Will Just One Photo Work?

A single clear, front-facing photo is enough to enable basic matching. However, accuracy improves noticeably with 2–3 varied photos, and this matters MORE when cameras are mounted high up or at a steep angle (very common in retail ceiling installs), because the camera rarely sees a straight-on face.

- Use a well-lit, front-facing photo — avoid strong backlight or shadows.
- Avoid sunglasses, masks, or caps covering the face.
- If your cameras are mounted at height/angle, also upload a photo taken from a similar higher/angled viewpoint — this significantly improves match accuracy over a single straight ID-style photo.
- Re-enroll a staff member if their appearance changes significantly (new facial hair, glasses, etc.).

11. Watchlist

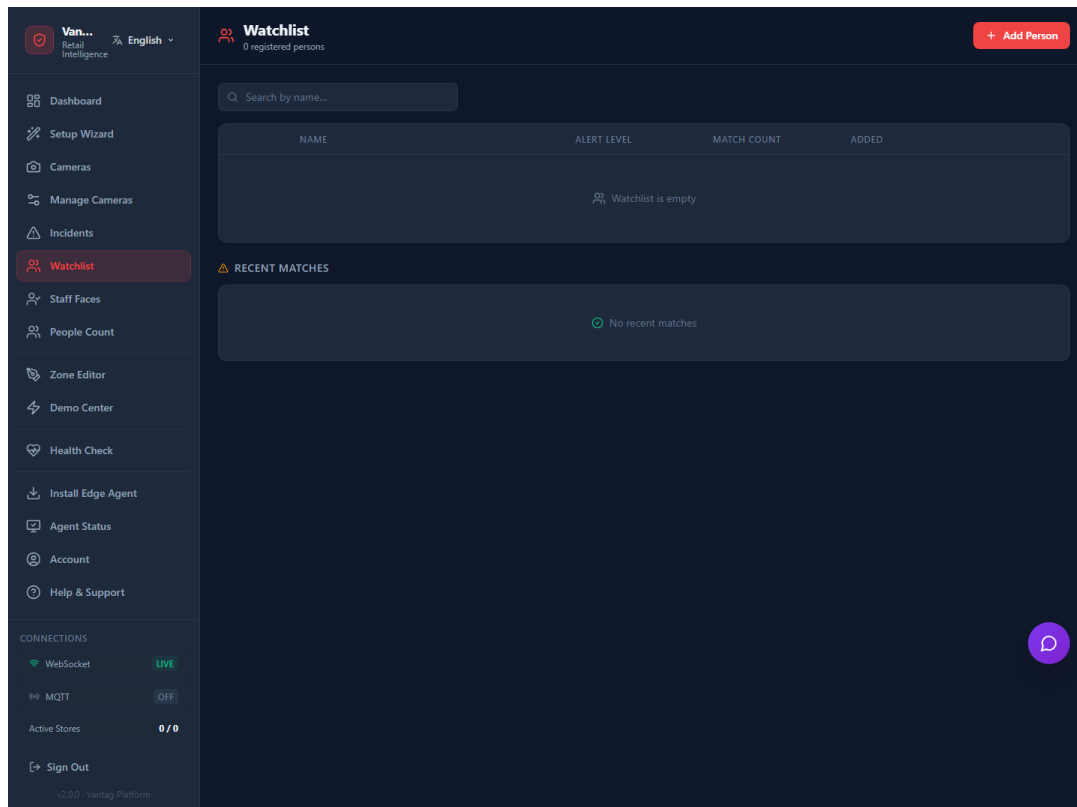


Figure 11 — Watchlist: register known persons of interest (e.g. previously identified shoplifters) so the AI can flag their return.

1. Click "Add Person," enter a name/reference and upload a clear photo.
2. Set the alert level for that person (e.g. notify immediately vs. log only).
3. Any future match is shown under "Recent Matches" with a match count and timestamp.

12. Configuring Alerts — SMS, WhatsApp & Email

Go to Account (left sidebar) to configure how you are notified the moment a theft, intrusion, or other security event is detected.

ALERT DISPATCH

Configure how you get notified when a theft, POS anomaly, or other security event is detected. Pick your SMS / WhatsApp provider (Twilio, MSG91, Textlocal, Vonage, Meta WhatsApp Cloud API, Gupshup, or your own local telecom's HTTP gateway), follow the built-in steps, then use **Send Test** to verify each channel before saving. See [Help Center → Alert Dispatch Setup](#) for a full walkthrough.

Minimum Severity to Alert

MEDIUM — skip low-confidence events

SMS Alerts

Step 1 — Choose your provider

Twilio — Global

Step 2 — Get your credentials

1. Sign up at [twilio.com](#) and buy/claim a phone number
2. Copy Account SID and Auth Token from the Twilio Console dashboard
3. Enter them below with your Twilio number as "From"

Step 3 — Enter the details

Account SID: Auth Token:

From number (Twilio): Your phone (receives alerts):

Step 4 — Send a test message

WhatsApp Alerts

Step 1 — Choose your provider

Twilio WhatsApp — Global

Step 2 — Get your credentials

1. In Twilio Console, activate the WhatsApp Sandbox (Messaging → Try it out)
2. From your phone, send the join code to the sandbox number once
3. Enter Account SID, Auth Token, and the sandbox number as "From"

Figure 12 — Alert Dispatch panel on the Account page: choose your SMS/WhatsApp provider, enter credentials, and send a test alert.

1. Set "Minimum Severity to Alert" — e.g. choose MEDIUM to skip low-confidence events and reduce alert noise.
2. Tick "Email" and enter a recipient address — this channel works immediately with no extra setup.
3. For SMS/WhatsApp, choose your provider from the dropdown. Twilio is supported globally, but you are NOT required to use Twilio — the dropdown also supports MSG91, Textlocal, Vonage, Meta WhatsApp Cloud API, Gupshup, and your own local telecom's HTTP gateway, so you can use whichever provider is common/affordable in your country.
4. Follow the on-screen Step 2 instructions for your chosen provider to get your Account SID / API credentials, then fill in Step 3.
5. Always click "Send Test SMS Alerts" / "Send Test WhatsApp Alerts" / "Test Email" BEFORE saving, to confirm delivery actually works.
6. Click "Save Alert Dispatch Settings" once every enabled channel has been tested successfully.

NOTE: If you don't want to use Twilio: pick "Your own local telecom" (or the closest matching regional provider) from the SMS/WhatsApp provider dropdown, and enter the HTTP gateway details your telecom provides. See [Help Center → "Setting Up Alerts"](#) for provider-specific walkthroughs.

13. Setup Wizard (Health Check Tool)

The Setup Wizard is a live, self-diagnosing tool — separate from the one-time onboarding wizard — that you can revisit any time to troubleshoot connectivity.

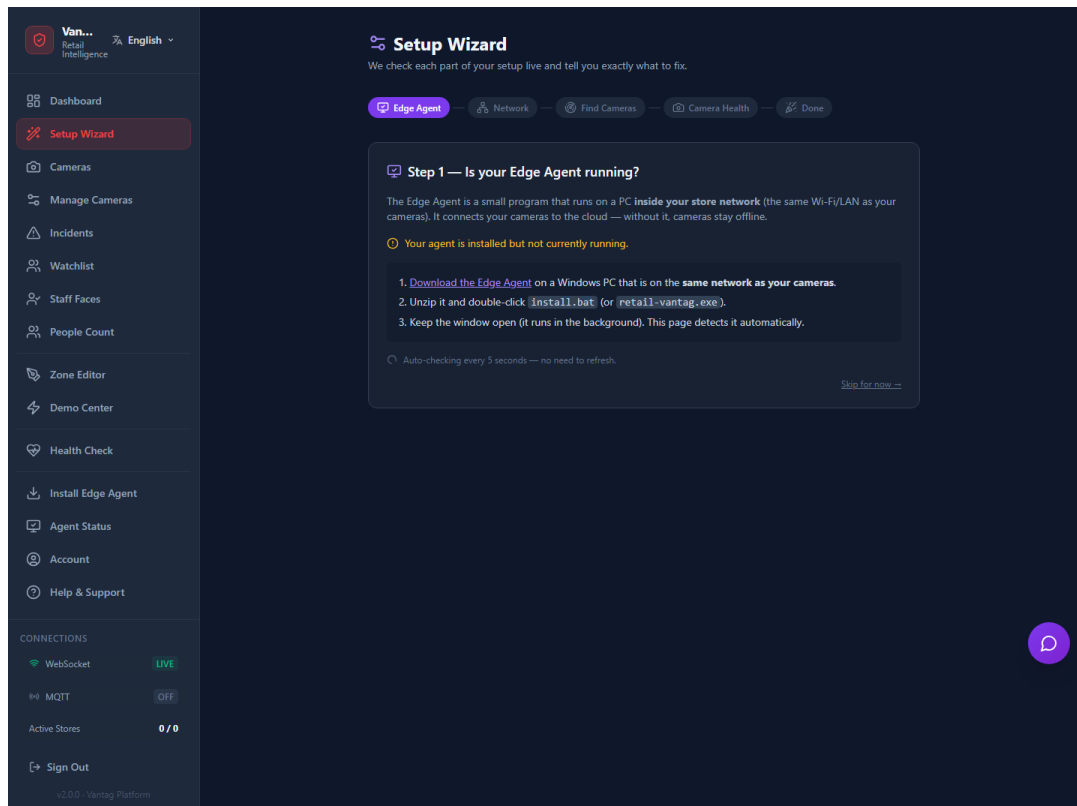


Figure 13 — Setup Wizard: a 5-stage checklist (Edge Agent → Network → Find Cameras → Camera Health → Done) that auto-checks every 5 seconds.

Use this whenever a camera will not come online — it tells you exactly which stage is failing (e.g. "Your agent is installed but not currently running") instead of leaving you to guess.

14. Help Center & AI Assistant

The Help Center (left sidebar → Help & Support) contains a categorized FAQ covering Getting Started, Camera & Network Setup, NVR/DVR Compatibility, Setting Up Alerts, Installation Mistakes to Avoid, AI Detection Accuracy, Billing, and Security & Privacy — plus a contextual AI Assistant chat that only answers based on your actual account data, never invented information.

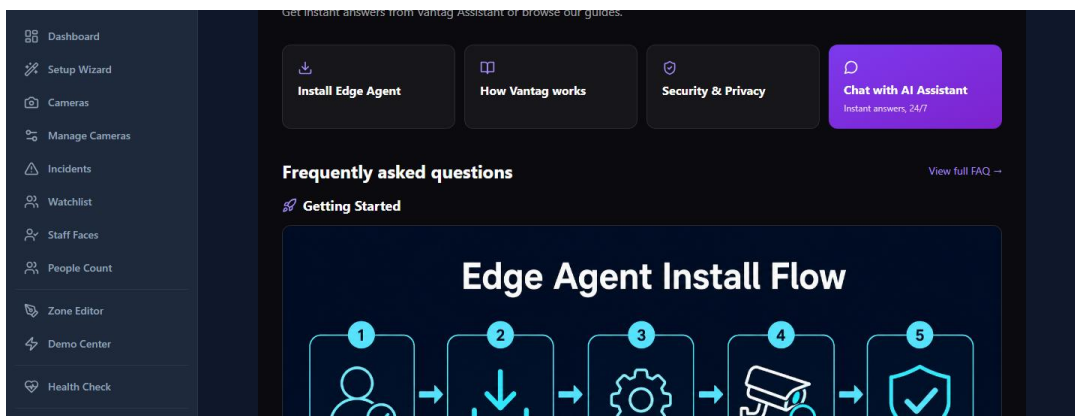


Figure 14 — Edge Agent Install Flow (from Help Center): Register & Pay → Download Edge Agent → Run Installer → Auto-Scan Cameras → Confirm Zones & Go Live.

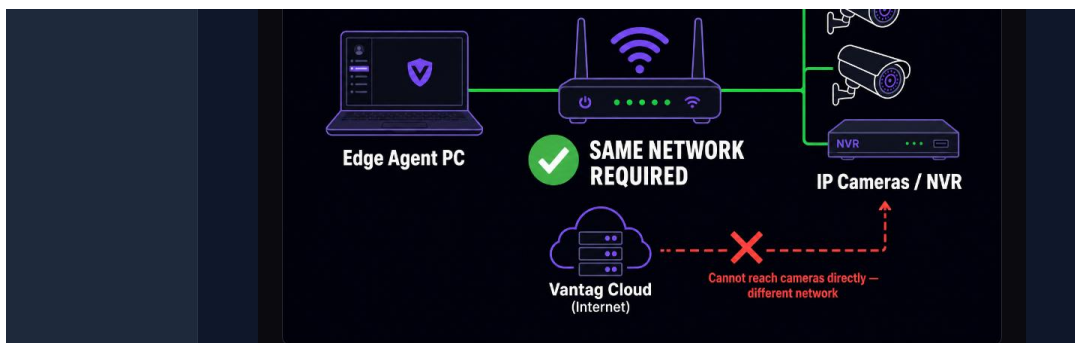


Figure 15 — Same-network requirement: the Edge Agent PC and your IP cameras/NVR must share one local network; the Vantag Cloud never reaches cameras directly.

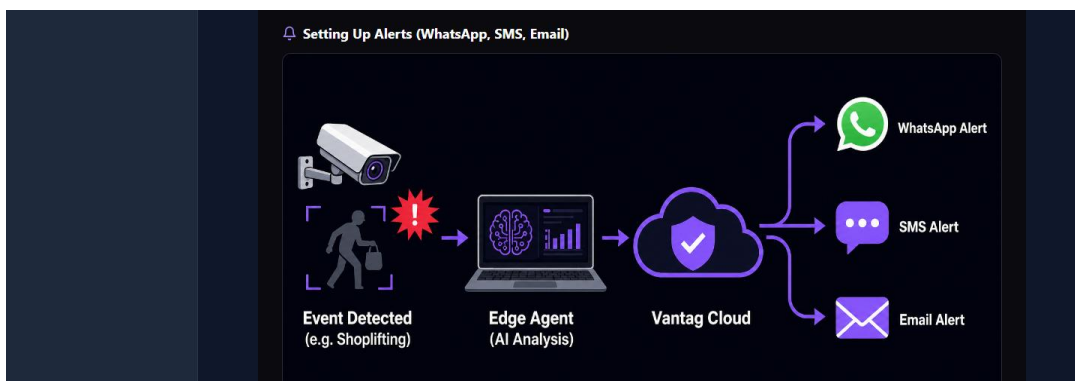


Figure 16 — Alert delivery flow: an event detected by the Edge Agent is analyzed and dispatched to WhatsApp, SMS, and/or Email within seconds.

Use "Chat with AI Assistant" for instant, 24/7 answers grounded in your specific account and camera configuration.

15. Troubleshooting Quick Reference

Symptom	Likely Cause	Fix
Camera stays "Offline"	Edge Agent PC not on the same network as the camera, or wrong RTSP credentials	Re-check network (Section 6); verify RTSP URL/credentials against Appendix A; use the Setup Wizard (Section 13)
Live feed loads then goes blank after a while	Too many concurrent camera streams for the PC/network, or an unstable Wi-Fi camera	Keep to 6–8 cameras per Edge Agent PC (Appendix B); prefer wired Ethernet over Wi-Fi
Noticeable delay (45–90s) between a real event and the dashboard updating	Expected pipeline latency (decode → AI inference → cloud sync); increases with more cameras or lower-spec hardware	Lower resolution/FPS (e.g. 640x360 @ 2 FPS) reduces load; use a higher-spec Edge Agent PC for larger sites
Trial says "subscription required" too early / on day one	Trial start-date/status edge case on the account	Confirm the trial start date under Account; contact support if it looks incorrect — do not re-register a new account, as your referral/history could be lost
Snapshot / evidence image 404s when downloading an incident report	Snapshot storage path/permission issue	Restart the Edge Agent; if the problem persists on new incidents, note the incident ID and contact support
People count shows zero despite real foot traffic	No People Count zone drawn for that camera, or the zone does not cover the walking path	Reopen Zone Editor, draw/confirm a purple People Count Area zone over the actual doorway/path, then Save All Zones
App logs you out when clicking a nav icon	Session/token edge case on navigation	Log back in; if it recurs on the same icon, note which one and report it to support
Incidents appear that were not expected	A configured zone/feature genuinely detected real activity (not synthetic data)	Check the timestamp/camera — it usually corresponds to real after-hours or off-camera-operator activity; use "Purge Demo Data" only to remove seeded demo rows, never real detections

Appendix A — RTSP URL Formats by Camera Brand

Brand	Typical RTSP URL Format (sub-stream, recommended)
Hikvision	rtsp://USER:PASS@IP:554/Streaming/Channels/102
Dahua	rtsp://USER:PASS@IP:554/cam/realmonitor?channel=1&subtype=1
CP Plus	rtsp://USER:PASS@IP:554/cam/realmonitor?channel=1&subtype=1
Generic ONVIF	rtsp://USER:PASS@IP:554/onvif1 (confirm exact path via an ONVIF Device Manager tool)
TP-Link / Tapo	rtsp://USER:PASS@IP:554/stream2

NOTE: Always prefer the "sub-stream" (lower resolution) path over the main/high-resolution stream for smoother real-time viewing and lower Edge Agent load. Channel and subtype numbering can vary by firmware version — if the URL above does not connect, confirm the exact path using your camera vendor's official app.

Appendix B — Camera Count, Resolution & Performance Guidance

- Recommended: up to 6–8 concurrent camera streams per single Edge Agent PC for stable real-time AI performance on typical retail-grade hardware.
- Beyond 8 cameras: deploy a second Edge Agent PC at the same site (each pairs independently to the same tenant account) rather than overloading one machine.
- Lower resolution/frame-rate settings (e.g. 640x360 @ 2 FPS) reduce load and improve responsiveness at a small cost to image detail — recommended once a site has 6+ cameras.
- A wired Ethernet connection for both cameras and the Edge Agent PC is strongly preferred over Wi-Fi for consistent, low-latency streaming.
- NVR/DVR channel feeds: some channels may load fine while others go blank after a minute — this is usually the NVR's own concurrent-RTSP-connection limit, not a Vantag issue. Check your NVR's maximum simultaneous RTSP client count.

Appendix C — Glossary

Term	Meaning
RTSP	Real-Time Streaming Protocol — the standard video-stream URL format cameras use.
ONVIF	An industry standard that lets cameras be auto-discovered and controlled without knowing the exact RTSP URL.
Edge Agent	The Vantag software running on a local PC/tablet that reads camera streams and runs AI detection on-site.
NVR / DVR	Network/Digital Video Recorder — existing on-site recording hardware, sometimes used as an RTSP source.
Zone Editor	The dashboard tool used to draw detection/counting zones directly on a camera's live snapshot.

Term	Meaning
Heartbeat	A periodic (~30s) status ping from the Edge Agent to the Vantag cloud confirming it is alive and reporting data.