


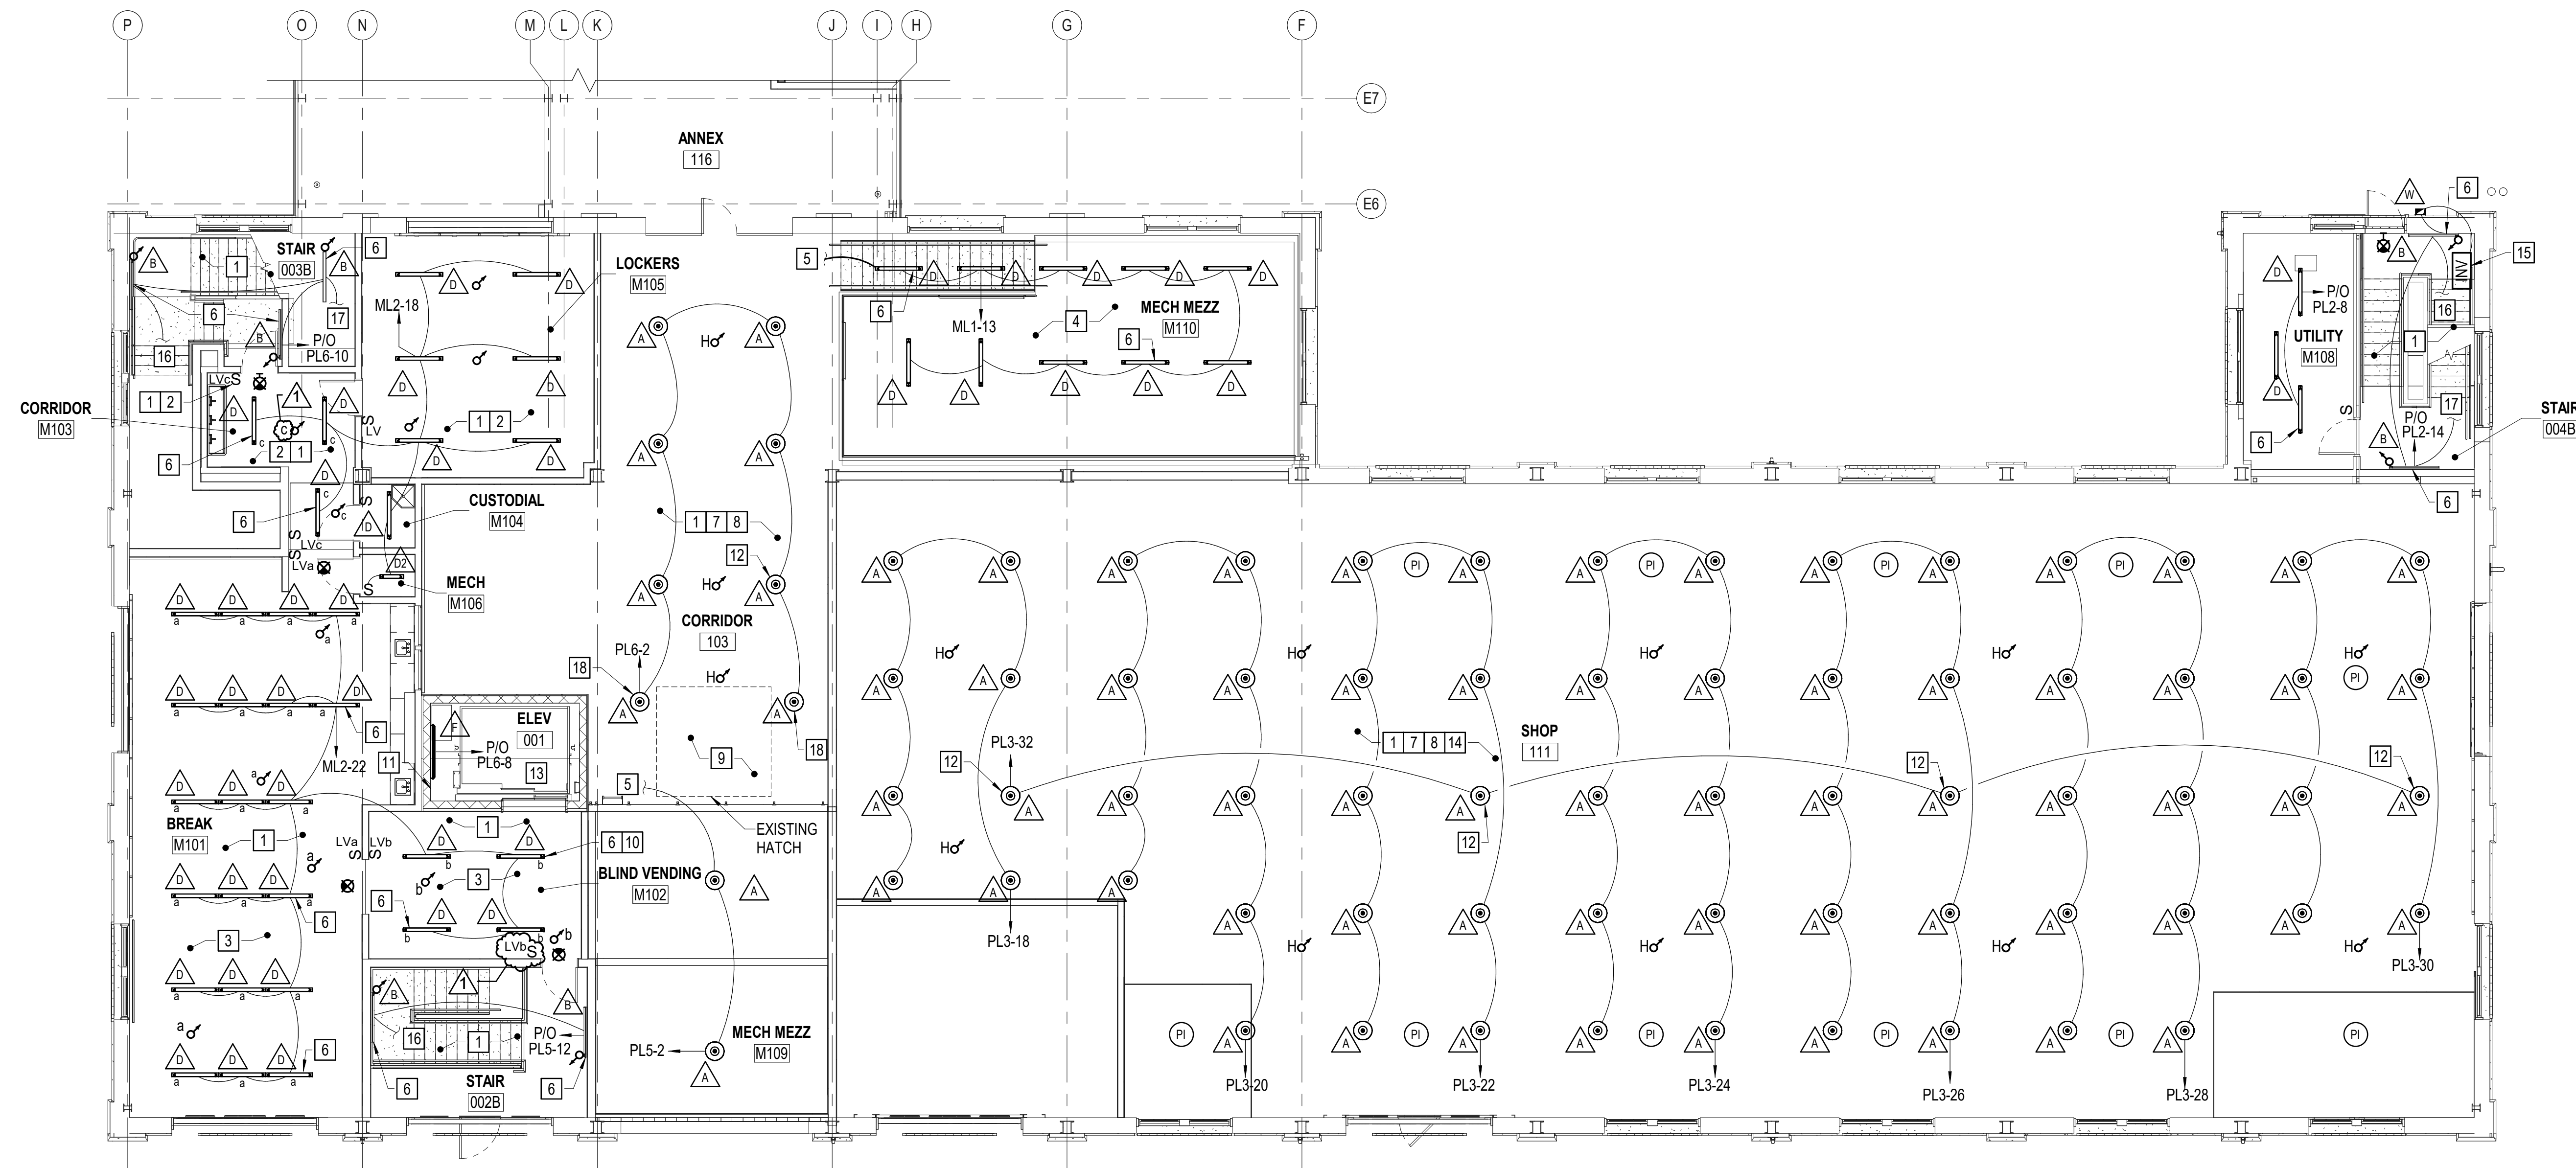

B1 **FIRST FLOOR MEZZANINE LIGHTING PART PLAN - WEST**
SCALE: 1/8" = 1'-0"


GENERAL NOTES

1. REFER TO SHEETS EL701 AND EL702 FOR LIGHTING FIXTURE SCHEDULE AND DETAILS.
2. EXPOSED CONDUIT AT EXTERIOR LIGHTING FIXTURES IS NOT PERMITTED. ROUTE CONDUIT THROUGH THE BACK OF THE FIXTURES.
3. CONNECT EMERGENCY LIGHTING AND EXIT SIGNS TO LOCAL LIGHTING BRANCH CIRCUIT AHEAD OF SWITCHES, OCCUPANCY SENSORS, AND LIGHTING CONTROLS.

KEYNOTES


- | | | | | | |
|---|---|----|--|----|---|
| 1 | PROVIDE LIGHTING BYPASS RELAY WITHIN THE PATHS OF EGRESS TO TURN LIGHTS ON UPON FIRE ALARM ACTIVATION. REFER TO DETAIL A2/EL702. | 7 | PROVIDE SUPPLEMENTAL SUPPORTS FOR LIGHTING FIXTURES. MOUNT FIXTURES AT APPROXIMATELY 20' AFF. COORDINATE WITH DUCTWORK AND THE MECHANICAL TRADE. | 14 | PROVIDE SHIELDED LOW VOLTAGE LIGHTING CONTROL CABLES IN SHOP 111. |
| 2 | MOUNT FIXTURES AT 15' AFF. PROVIDE ACCESSORIES FOR PENDANT MOUNTING AND COORDINATE WITH MECHANICAL EQUIPMENT, PIPING AND DUCTWORK. | 8 | REFER TO SHEET EL102 FOR ADDITIONAL LIGHTING CONTROLS INFORMATION. | 15 | PROVIDE EMERGENCY POWER VIA INVERTER. INSTALL WITHIN MANUFACTURERS RECOMMENDED DISTANCE. COORDINATE EXACT LOCATION IN THE FIELD. PROVIDE LABEL. |
| 3 | MOUNT FIXTURES AT 12' AFF. PROVIDE ACCESSORIES FOR PENDANT MOUNTING, AND COORDINATE WITH MECHANICAL EQUIPMENT, PIPING AND DUCTWORK. | 9 | COORDINATE EXACT LOCATION OF FIXTURES AND SENSOR TO AVOID THE CEILING HATCH. | 16 | FOR CONTINUATION, SEE SHEET EL102. |
| 4 | MOUNT FIXTURES AT 10' AFF. PROVIDE ACCESSORIES FOR PENDANT MOUNTING, AND COORDINATE WITH MECHANICAL EQUIPMENT, PIPING AND DUCTWORK. | 10 | WIRE FIXTURE AS ALWAYS ON FOR ELEVATOR LOBBY LIGHTING. | 17 | FOR CONTINUATION, SEE SHEET EL105. |
| 5 | TO SWITCH BELOW. | 11 | PROVIDE LIGHTING FIXTURES EVERY 10 FEET, VERTICALLY, UP THE HOISTWAY. COORDINATE EXACT LOCATION WITH THE ELEVATOR INSTALLER. | 18 | COORDINATE EXACT LOCATION WITH THE EXISTING HATCH. |
| 6 | PROVIDE INTEGRAL EMERGENCY DRIVER. | 12 | PROVIDE EMERGENCY POWER VIA INVERTER, INSTALL INVERTER ADJACENT TO THE LIGHTING CONTROL PANEL. SEE SHEET EL102. | | |
| | | 13 | COORDINATE EXACT LIGHTING FIXTURE LOCATION IN THE ELEVATOR SHAFT WITH THE ELEVATOR INSTALLER. REFER TO SHEET AE411. | | |

KEY PLAN

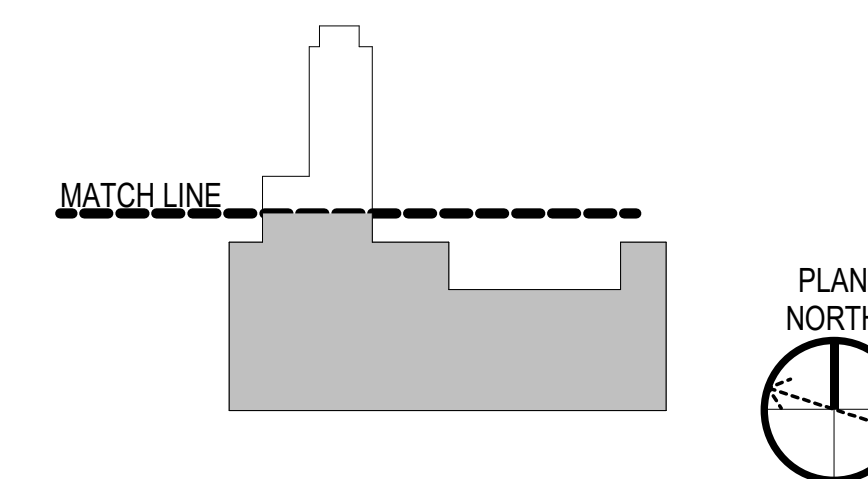

GRAPHIC SCALE(S)

1/8" = 1' - 0"



0 5' 10' 15' 30'