


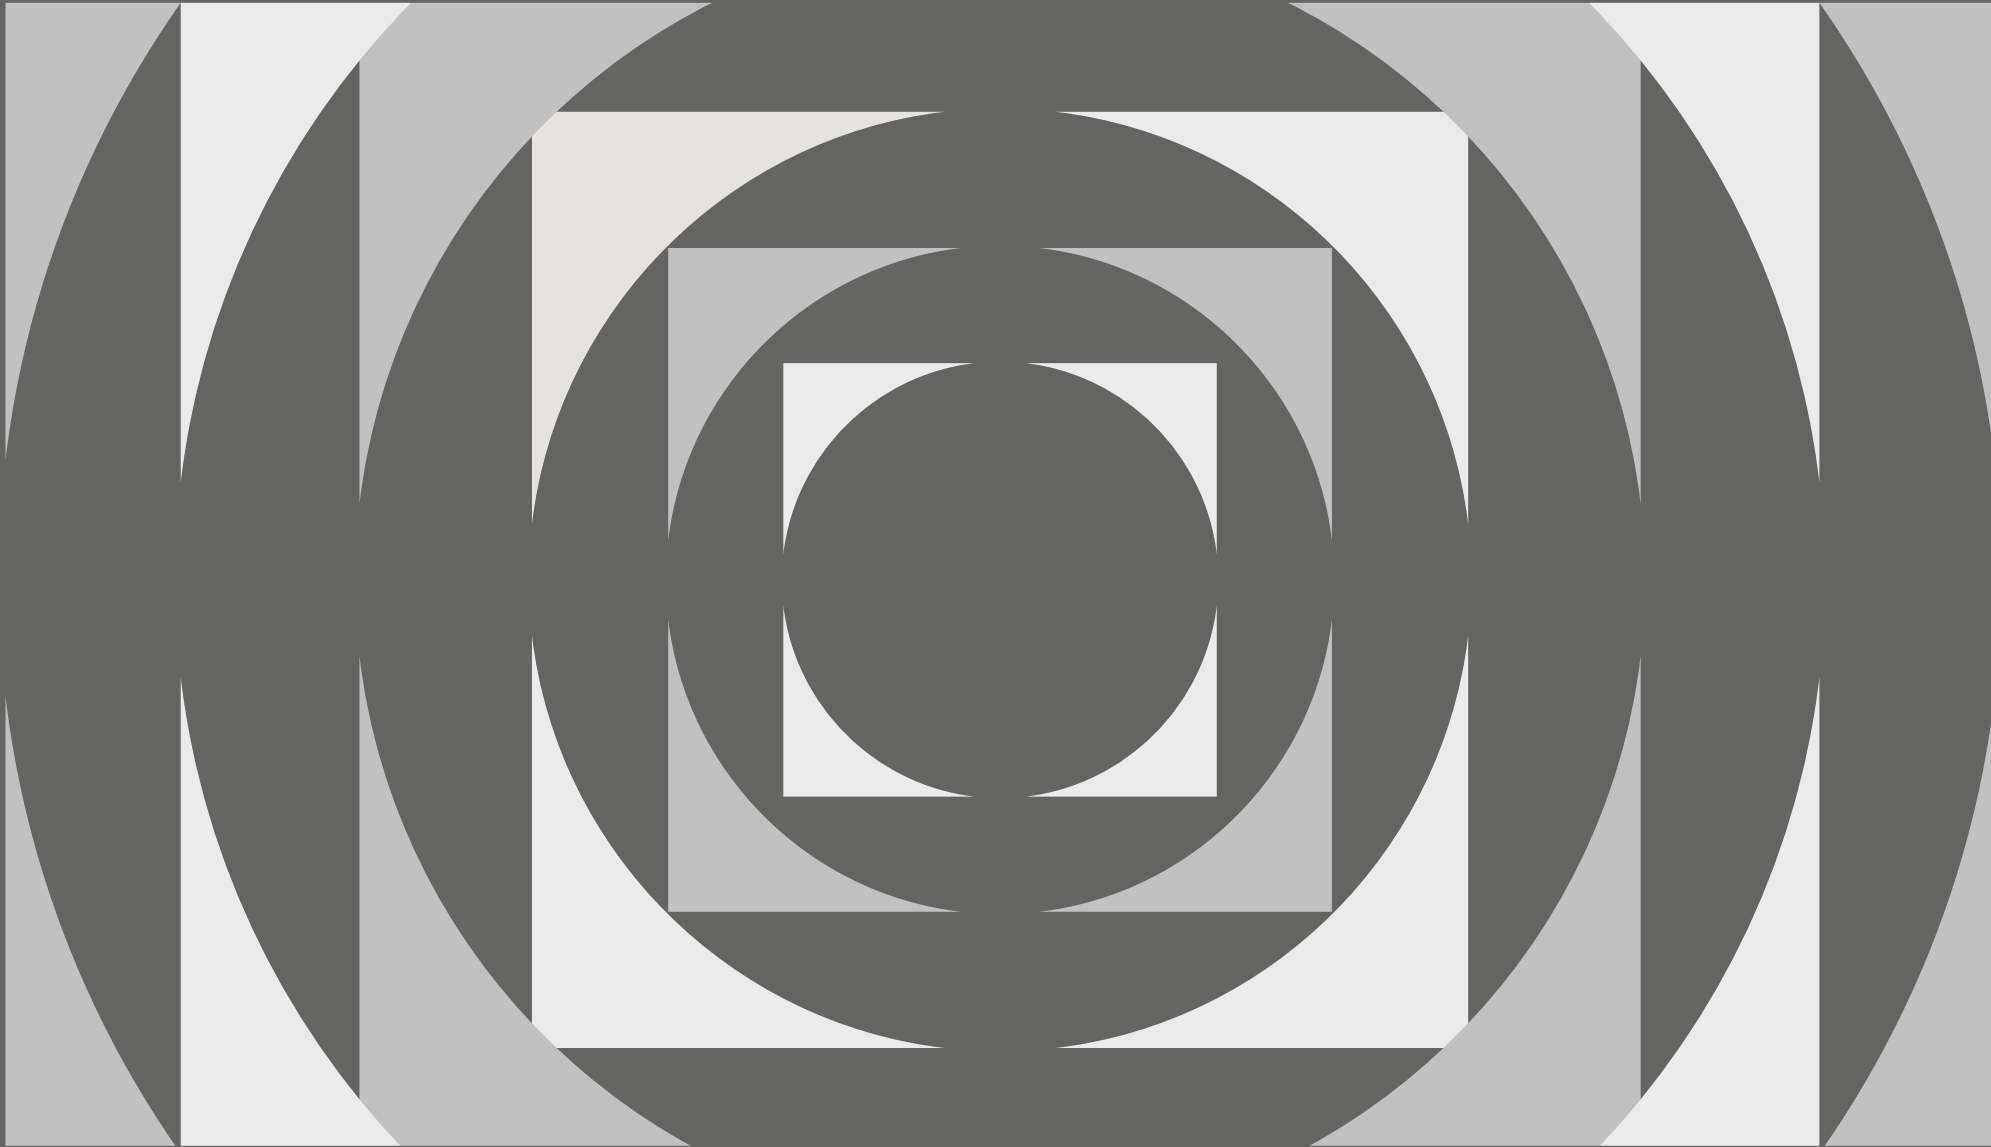

**Big Time  
MIDI Manual**



## GETTING STARTED



You can use MIDI with Big Time to control any of its parameters, sync to or send MIDI clock, and save and recall up to 127 presets.

Big Time receives MIDI through a standard 5-pin DIN cable. It is set to MIDI channel 2 by default, but it's easy to change. Simply hold down both footswitches when you power up the pedal. The pedal is now looking for the first PC or CC message it sees and it will set itself to that channel.

### USING WITH MIDI CLOCK

MIDI Clock is received in a few different ways on Big Time, depending on the Scale setting.

In **OFF** and **CHROMATIC** you will be able to move the **TIME** slider to “bend” the audio buffer, but once it stops moving it will then settle on the nearest musical subdivision of the incoming clock. This gives you a nice combination of the pedal feeling fluid and natural while still having the delay times line up in nice ways when sync'd to other devices.

In **OCT+4+5** and **OCTAVE** it will set itself to the incoming quarter note in the middle of the time slider, but will move to musical subdivisions of the tempo when moved above or below that point.

MIDI Clock can also be output from Big Time via the MIDI OUT jack. You will need to use CC#110 to turn this on (the jack will be MIDI THRU by default). The clock out has a range of 60 bpm – 240 bpm. If the **TIME** and **MODE** settings make it go outside of that range, it will automatically subdivide and output the nearest double or half of the clock output. Please note that MIDI clock is disabled for **MOD** mode.

### SAVING A PRESET VIA MIDI

Presets are both saved and recalled using Program Change (PC) messages.

You can also save using CC#27 with the value of the preset slot you want to save to. For example, sending CC#27 with a value of 15 will save to preset 15.

There are 127 total slots.

### RECALLING A PRESET VIA MIDI

To recall a preset simply send Big Time a Program Change message. If you load an empty preset a default delay gets loaded as a starting point.

Big Time comes loaded with ten factory presets that give an overview of the pedal's capabilities. These can be overwritten with your own presets. If you ever want to restore a factory preset hold down the **MOTION** and **VOICING** buttons for five seconds while on the respective preset number in the Preset Menu.

## Big Time Control Change Channels

| What:          | MIDI CC: | Value:  |
|----------------|----------|---------|
| <b>SLIDERS</b> |          |         |
| COLOR          | 14       | 0 - 127 |
| TIME           | 15       | 0 - 127 |
| CLUSTER        | 16       | 0 - 127 |
| TILT EQ        | 17       | 0 - 127 |
| FEEDBACK       | 18       | 0 - 127 |
| WET            | 19       | 0 - 127 |

| What:          | MIDI CC: | Value:                                                          |
|----------------|----------|-----------------------------------------------------------------|
| <b>BUTTONS</b> |          |                                                                 |
| SCALE          | 22       | OFF = 0<br>CHROMATIC = 1<br>OCT+4+5 = 2<br>OCTAVE = 3 OR >      |
| MOTION         | 23       | OFF = 0<br>SINE = 1<br>SQUARE = 2<br>ENV = 3 OR >               |
| MODE           | 24       | MOD = 0<br>SHORT = 1<br>LONG = 2<br>LOOP = 3 OR >               |
| VOICING        | 25       | HIFI = 0<br>FOCUS = 1<br>WARM = 2<br>ANALOG = 3 OR >            |
| STATE          | 26       | DIGITAL = 0<br>COMPRESSED = 1<br>SATURATED = 2<br>#!&% = 3 OR > |


| What:                                 | MIDI CC: | Value:                 |
|---------------------------------------|----------|------------------------|
| <b>FOOTSWITCHES</b>                   |          |                        |
| <b>DELAY MODES</b>                    |          |                        |
| BYPASS<br>(TAP RIGHT SWITCH)          | 102      | OFF = 0<br>ON = 1 OR > |
| TAP / MOD ENGAGE<br>(TAP LEFT SWITCH) | 103      | 0 - 127                |
| HOLD<br>(HOLD LEFT SWITCH)            | 106      | OFF = 0<br>ON = 1 OR > |
| <b>LOOP MODE</b>                      |          |                        |
| PLAY / STOP<br>(TAP RIGHT SWITCH)     | 102      | 0 - 127                |
| REC / PLAY / DUB<br>(TAP LEFT SWITCH) | 103      | 0 - 127                |
| RECORD                                | 104      | 0 - 127                |
| PLAY                                  | 105      | 0 - 127                |
| DELETE                                | 106      | 0 - 127                |
| STOP                                  | 107      | 0 - 127                |

## Big Time Control Change Channels

| What:        | MIDI CC: | Value:                              |
|--------------|----------|-------------------------------------|
| ALT CONTROLS |          |                                     |
| TEXTURE      | 32       | 0 - 127                             |
| RATE         | 33       | 0 - 127                             |
| DEPTH        | 34       | 0 - 127                             |
| CROSSOVER    | 35       | 0 - 127                             |
| DIFFUSION    | 36       | 0 - 127                             |
| DRY          | 37       | 0 - 127                             |
| SPREAD       | 38       | OFF = 0<br>BLUE = 1<br>RED = 2 OR > |
| 0.5X         | 39       | NORMAL = 0<br>0.5X = 1 OR >         |
| DIFFUSE TYPE | 40       | NORMAL = 0<br>DOUBLE = 1 OR >       |
| +12 dB       | 41       | NORMAL = 0<br>+12 dB = 1 OR >       |

### AUX footswitch note:

**If you are using the recommended Boss FS-6, be sure to set it to momentary and set the polarity to the right position. Otherwise any two button footswitch that uses normally open momentary footswitches will work.**

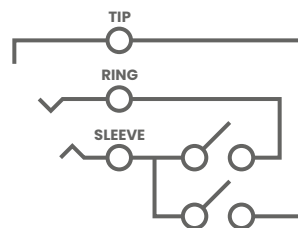

| What:                                     | MIDI CC: | Value:                                             |
|-------------------------------------------|----------|----------------------------------------------------|
| OTHER                                     |          |                                                    |
| SAVE TO SLOT                              | 27       | 0 - 127                                            |
| SAVE TO CURRENT SLOT                      | 28       | 0 - 127                                            |
| TAP SUBDIVISIONS                          | 54       | SEE TABLE ON PG 07                                 |
| EOM (EXPRESSION OVER MIDI)                | 100      | 0-127                                              |
| EOM DISENGAGE                             | 101      | 0-127                                              |
| MIDI CLOCK*<br>*NOT AVAILABLE IN MOD MODE | 110      | NO CLOCK = 0<br>CLOCK IN = 1<br>CLOCK OUT = 2 OR > |
| MIDI NOTES                                | 112      | OFF = 0<br>CHANNEL = 1<br>GLOBAL = 2 OR >          |

| What:                   | MIDI CC: | Value:                              |
|-------------------------|----------|-------------------------------------|
| OPTIONS MENU            |          |                                     |
| PLAY/DUB                | 42       | PLAY = 0, DUB = 1 OR >              |
| SCALE IGNORE            | 43       | OFF = 0, ON = 1 OR >                |
| STEP                    | 44       | OFF = 0, ON = 1 OR >                |
| TRAILS                  | 45       | OFF = 0, ON = 1 OR >                |
| DRY KILL                | 46       | OFF = 0, ON = 1 OR >                |
| DRY CLEAN               | 47       | OFF = 0, ON = 1 OR >                |
| BALANCED/<br>UNBALANCED | 48       | BALANCED = 0<br>UNBALANCED = 1 OR > |

# Big Time Control Change Channels

| What:                                                                                             | MIDI CC: | Value:  |
|---------------------------------------------------------------------------------------------------|----------|---------|
| TAP SUBDIVISIONS                                                                                  |          |         |
|  SIXTEENTH        | 54       | 0       |
|  EIGHTH TRIPLET   | 54       | 1       |
|  DOTTED SIXTEENTH | 54       | 2       |
|  EIGHTH           | 54       | 3       |
|  QUARTER TRIPLET  | 54       | 4       |
|  DOTTED EIGHTH    | 54       | 5       |
|  QUARTER          | 54       | 6       |
|  HALF TRIPLET   | 54       | 7       |
|  DOTTED QUARTER | 54       | 8       |
|  HALF           | 54       | 9       |
|  WHOLE TRIPLET  | 54       | 10      |
|  DOTTED HALF    | 54       | 11 OR > |

