





# Real-Time Bridge Monitoring Requirements Specification

Version 1.4

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

# **Revision History**

Date	Version	Description	Author
2013-11-06	1.0	Initial Version	Nikola Radisavljevic
			Miraldi Fifo
			Dzana Kujan
2013-11-07	1.1	Changed the structure of requirements definitions and edited text for requirements	Dzana Kujan
		Improved the text	
		Captions for illustrations added	
2013-11-07	1.2	Section 3 – changed requirements definition from must to should	Dzana Kujan
		Section 3.1 added abbreviations for all requirements	
		Updated Appendix	
2013-12-04	1.3	1.1. User characteristics updated	Dzana Kujan
		2.3.1 Administrator functions updated 2.3.2 Human Controller functions updated 2.3.3 Engineer functons updated 2.3.4 External User functions updated Use cases updated: 2.4.5 Historical Status 2.4.7 Change Debris Value 2.4.9 Deleted 2.4.10 Deleted 2.4.10 Added – change traffic value 2.4.11 View Users 2.4.13 View M-N domain 2.4.15 Change history range 2.5 Constraints text updated 1 Constraints text updated 1 Illustration 2 Administrator functionalities updated	Nikola Radisavljevic
		Illustration 3. Human Controller functionalities updated Illustration 4 changed Illustration 5 deleted Following requirements updated: 3.1.1 External User functionlities 3.1.2 Human Controller functionlities 3.1.3 Engineer functionlities 3.1.4 Administrator functionlities 3.1.6 Calculations 3.1.7 External Interfaces 4. Appendix updated with new parameters	
2014-01-06	1,4	Text Format and minimal fixes	Andrea Bottoli

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

# **Table Of Contents**

1.Introduction	4
1.1Purpose of this document	4
1.2Scope	
1.3Definitions and acronyms	
1.4References	
2.Description of the system	7
2.1Background	
2.2User Characteristics	
2.3Product functions	
2.4Use Cases	
2.5Constraints.	13
2.6Assumptions	
3.Requirements Description	15
3.1Functional requirements	16
3.2Non-Functional requirements	
3.3Requirements for the future	
4 Appendix	26

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

#### 1. Introduction

## 1.1 Purpose of this document

The purpose of this document is to state all gathered requirements and to explain system in more details. This document will be used to proof that development team and customer have the same view of what the system is supposed to do and how. The document will also be helpful to the developing team in the design and implementation phase in order to implement the desired functional and non-functional requirements. The requirements that are specified in this document are written in a way that makes them testable, so they will be further used in the testing phase to ensure that all the requirements have been met. Finally, the document will also be object of supervision from the supervisor of the project.

#### 1.2 Scope

The document is split into five major parts: Description of the system, Requirements description, Requirements definition, Future development and Appendix.

In the part "Description of the system", at the beginning brief recall of the background of the existing system is given. After that the functions of each actor from use case diagram is explained. The constraints and assumptions are also covered in this part.

The second part of this document is "Requirement description". All requirements, regarding Sensor data presentation, engineer functionality, administrator functionality, external user functionality and calculations are described in details in this section. Also, future development requirements are stated in this section, although they will not be considered in the further development phases of this project, for now.

The purpose of the third section, "Requirement definition", is to give a priority to each requirement described in Requirement description section. This is done by putting all the requirements in a table along with their priorities.

At the end, table of parameters used in document is given, this way it is easier to understand the document and meaning of the requirements.

#### 1.3 Definitions and acronyms

#### 1.3.1 Definitions

Keyword	Definitions
Labview Encode	Number of seconds that have elapsed since 1st January 1904, on
	the Greenwich meridian
Debris	Obstacle stuck on the pillar 30 of the bridge

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 1.3.2 Acronyms and Abbreviations

Acronym or	Doffmittions
abbreviation	Definitions
ANE1	Mean wind speed in 10 minutes
ANE2	Maximum wind speed in 10 minutes
ANE3	Mean wind direction in 10 minutes
ANE4	Direction of the maximum wind speed in 10 minutes
IDRO1	Mean water depth/water height in 10 minutes
IDRO2	Variance of the sample in 10 minutes
Data of type ①	Parsed sonar height value, with format Rxx.xx
Data of type ②	Parsed sonar height value, with format Rxx.xxE
Data of type 3	Parsed sonar height value, with format xx.xx
Data of type ④	Parsed sonar height value, with format R99.99E
	Parsed sonar height value, E1 or missing data
SONAR1	Mean value of the height of the bottom (only with data of type ① and ②), in 10 minutes
SONAR2	Variance of the sample (only with data of type ① and ②)
SONAR3	Percentage of data of type "① + ②" used compared to the 600
	elements of the sample data, in 10 minutes
	Percentage of data of type "3" there are in the sample data, in 10 minutes
SONAR5	Percentage of data of type "@" there are in the sample data, in 10
	minutes
	Percentage of data of type "S" there are in the sample data, in 10 minutes
	Percentage of data of type "2" there are, considering as sample the "1 + 2" set of data (so not all the 600 data), in 10 minutes
$S_{\mathit{Vplank}}$	The push of the wind on the planking
$S_{Vtraf}$	The push of wind on the traffic.
V EFFwind	Effective value of the wind speed
$C_{Dwi}$	Drag planking
ρ	Air density
	Planking area
$S_V(A1 traf)$	Traffic combination A1
$S_V(A2traf)$	Traffic combination A2
$S_V(A3 traf)$	Traffic combination A3
h <sub>water</sub>	IDRO1
Q	Flow rate value
$V_{water}$	Relative value of water speed
h <sub>MAXwater</sub>	Maximum water height. If $h_{water} > h_{MAXwater}$ , the river has overflowed.
PP <sub>structure</sub>	Portion of palking

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 1.4 References

It is necessary to read through the following documentation in order to fully understand the system that is being developed.

- [1] Project plan and description document of the project Real-Time Bridge Monitoring
- [2] Real-Time Assessment of Bridge Vulnerability, Gianluca C., Francesco B. et al.
- [3] Sistema di monitoraggio di Borgoforte, Francesco B., Alfredo C, Gianluca C. et al.

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 2. Description of the system

#### 2.1 Background

The bridge we are monitoring, named "Borgoforte", is situated on the Po river. On the bridge some of the piles are enforced but there is one pile which is week and needs to be monitored. On this pile there is a number of sensors measuring physical force that different sources make on bridge. Moreover, two cameras are providing pictures from both sides of the bridge. All data from sensors and pictures from cameras are stored in files and sent to the server in packages each hour.

Our goal is to make a system for storing, calculating and presenting all relevant data of the bridge. We have to extract data from .txt files and store them to a database. After that calculations have to be done according to a large number of parameters which all influence the bridge status. The calculated level of danger of the bridge is also stored in the database. Finally, both current and history data along with pictures can be presented to the user.

#### 2.2 User Characteristics

Four types of actors have been identified: the Administrator, the Human Controller, the Engineer and the External User. The way of interacting with the system depends on the type of the user. The users are presented in the following illustration.

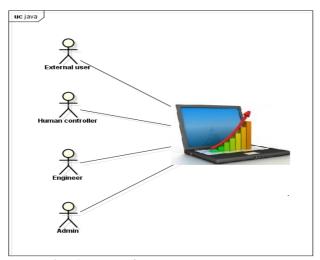


Illustration 1: Users of the system


The Administrator manages the users accounts, the human controller monitors the bridge current state and history, the Engineer is the one who has all knowledge about equations and is allowed to change the parameters, and the external user doesn't need to have any knowledge of the system since he is only allowed to see reduced set of current state of the bridge.

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 2.3 Product functions

#### 2.3.1 Administrator Functions

The Administrator can only manage the users and does not have authorization to change any system parameters. He can view all users, register a new user, edit users, delete a current user and log out. The administrator does not need to have knowledge about the calculations or how the system works at all.

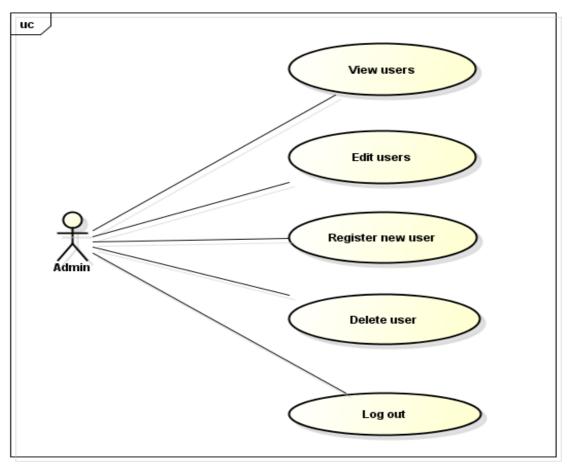

**Illustration 2: Administrator functionalities** 


Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

#### 2.3.2 Human Controller Functions

The purpose of the Human Controller is only to monitor the condition of the bridge view the historical data of the bridge. The human control can see the current status of the bridge and the historical status of the bridge. In the current state, the M-N domain is presented, with a graphical representation of each pylon and its position in this domain. This information includes also the safety factor and alarm state. The safety factor is a product of the calculations. The alarm state represents the level of current danger of bridge to collapse. It can be on or off. If the alarm is on, the human controller can decide if he wants to send an email to a person responsible for the danger state of the bridge. The Human Controller can log out and then interacts with the system as an external user.

#### 2.3.3 Engineer Functions

The Engineer has the same functions as the Human Controller and an additional one. The Engineer can change all variable parameters that are taken into account while performing the calculations. Moreover, engineer can also log out and then interacts with the system as an external user.

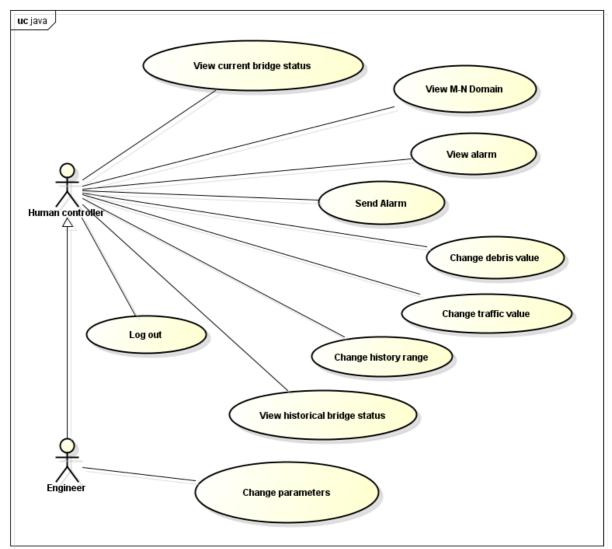


**Illustration 3: Human Controller and Engineer functionalities** 

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

#### 2.3.4 External User Functions

The External User doesn't need to have any knowledge of the calculations and historical data, since he is just a guest. The External User can see just basic information of the Bridge. This information is current status of the bridge. He can log in and then interacts with the system as a registered user.

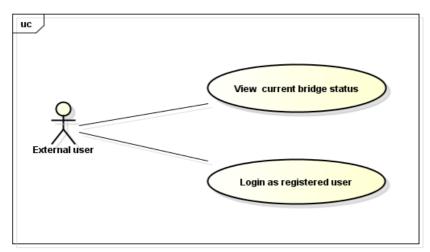

**Illustration 4: External User functionalities** 

#### 2.4 Use Cases

### 2.4.1 Register New User

**Goal**: To add a new registered user **Participating Actors**: Administrator

Related Use Cases: none

Precondition: The user must be logged in as an administrator

#### Main flow of events:

- 1. The user enters all the information of the new user
- 2. The user defines the permission level of the new user
- 3. The user clicks on "Save" button
- 4. The system checks all the entered information
- 5. The system shows the message "Added new registered user"

#### **Alternatives**

- 5. a. The system shows the message "Incorrect entered information"
  - b. Resume at 1

#### 2.4.2 Delete User

Goal: To delete a current registered user Participating Actors: Administrator Related Use Cases: Register User

Precondition: The user must be logged in as an administrator

#### Main flow of events:

- 1. The admin. selects a user
- 2. The admin. clicks on "Delete" button
- 3. The system shows a confirmation window
- The admin. clicks on "yes"
- 5. The system shows the message "xxx user is deleted" where "xxx" is the username of the user

#### Alternatives

- 4. a. The admin. clicks on "no"
  - b. The system closes the confirmation window
  - c. Resume at 1

Real-Time Bridge Monitoring	Version: 1.4	
Requirements Specification	Date: 2014-01-06	

#### 2.4.3 Log Out

Goal: To log out a registered user

Participating Actors: Administrator, Human Controller, Engineer

Related Use Cases: Log In

**Precondition**: The user must be logged in as a registered user

Main flow of events:

- 1. The user clicks on "Log Out" button
- 2. The system logs out the user
- 3. The system redirects the user to the home page

#### 2.4.4 View Current Status

Goal: To let the user see the current status of the bridge

Participating Actors: External User, Human Controller, Engineer

Related Use Cases: none Precondition: None Main flow of events:

- 1. The user clicks on "Current Status" button
- 2. The system shows the information about the current status of the bridge
- 3. The user views the information of the current status

## 2.4.5 View Historical Status

**Goal**: To let the user see the historical status of the bridge **Participating Actors**: Human Controller, Engineer

Related Use Cases: Change history range

**Precondition**: The user must be logged in as a Human Controller or as an Engineer The user must choose the period of time he wants to view the history for

#### Main flow of events:

- 1. The user clicks on "Historical Status" button
- 2. The system shows the page with information about the historical status of the bridge
- 3. The system shows the historical status of the bridge according to the chosen historical period
- 4. The user views the information of the historical status

#### 2.4.6 View Alarm

**Goal**: To let the user see the current status of alarm **Participating Actors**: Human Controller, Engineer

Related Use Cases: none

**Precondition**: The user must be logged in as a Human Controller or as an Engineer

Main flow of events:

- 1. The system shows the alarm. It can be on or off
- 2. The user views the alarm

#### 2.4.7 Change Debris Value

Goal: To let the user change the debris

Participating Actors: Human Controller, Engineer

Related Use Cases: none

**Precondition**: The user must be logged in as a Human Controller, Engineer

#### Main flow of events:

- 1. The user change the Debris Parameter by checking a check box
- 2. The system updates the M-N domain or the historical graph representation, according to the Debris parameter

Real-Time Bridge Monitoring	Version: 1.4	
Requirements Specification	Date: 2014-01-06	

#### 2.4.8 Change Parameters

Goal: To let the user change parameters that are used for calculations

Participating Actors: Engineer Related Use Cases: none

**Precondition**: The user must be logged in as an Engineer

Main flow of events:

- 1. The user changes the variable parameters
- 2. The user clicks on "Save" button
- 3. The system shows a confirmation window
- 4. The user clicks on "yes"
- 5. The system shows the message "variable parameters are updated"

#### **Alternatives**

- 4. a. The user clicks on "no"
  - b. The system closes the confirmation window

#### 2.4.9 Log In

Goal: To log in an external user Participating Actors: External User Related Use Cases: Log Out

**Precondition**: The user must be logged out

Main flow of events:

- 1. The user enters the username and password
- 2. The user clicks on "Log In" button
- 3. The system logs in the user with his predefined permission level from the administrator

#### 2.4.10 Change Traffic Value

Goal: To let the user change the traffic

Participating Actors: Human Controller, Engineer

Related Use Cases: none

Precondition: The user must be logged in as a Human Controller, Engineer

Main flow of events:

- 1. The user change the Traffic Parameter by checking a check box
- 2. The system updates the M-N domain or the historical graph representation, according to the Traffic parameter

#### 2.4.11 View Users

Goal: To view all the users that are registered in the system

Participating Actors: Administrator

Related Use Cases: none

Precondition: The user must be logged in as an Administrator

Main flow of events:

- 1. The system displays all users on the page
- 2. The administrator views the users

Real-Time Bridge Monitoring	Version: 1.4	
Requirements Specification	Date: 2014-01-06	

#### 2.4.12 Edit User

Goal: To edit a user that is registered in the system

Participating Actors: Administrator

Related Use Cases: none

**Precondition**: The user must be logged in as an Administrator

#### Main flow of events:

- 1. The admin. selects a user
- 2. The admin. clicks on "Edit" button
- 3. The system allows the administrator to edit the information of the user
- 4. The admin. clicks on "save"
- 5. The system shows the message "Are you sure you want to save the changes to the user xxx?" where "xxx" is the username of the user

#### **Alternatives**

- 4. a. The admin. clicks on "no"
  - b. The system closes the confirmation window
  - c. Resume at 1

#### 2.4.13 View M-N Domain

Goal: To view the M-N domain and the position of the pylons in that domain

Participating Actors: Human Controller, Engineer

Related Use Cases: none

**Precondition**: The user must be logged in as the Human Controller or Engineer

#### Main flow of events:

- 1. The user chooses the value of the Debris and Traffic parameters
- 2. The system displays the M-N domain according to the chosen Debris and Traffic parameters
- 3. The administrator views the M-N domain

#### 2.4.14 Send Alarm

**Goal**: To send an alarm if the bridge is in danger **Participating Actors**: Human Controller, Engineer

Related Use Cases: none

**Precondition**: The user must be logged in as the Human Controller or Engineer

#### Main flow of events:

- 1. The user clicks on the alarm button, to send an alarm to a responsible person
- 2. The system displays a view so that the user can enter the mail of the person the email is intended to
- 3. The user enters an email and clicks on 'send'
- 4. The system adds information about the pylon that is in danger and sends the mail

#### 2.4.15 Change History Range

Goal: To change the time range for historical data that will be displayed

Participating Actors: Human Controller, Engineer

Related Use Cases: none

Precondition: The user must be logged in as the Human Controller or Engineer

#### Main flow of events:

- 1. The user chooses the range of dates, or the specific day, or the specific month for the historical diagram
- 2. The system displays the historical diagrams according to the input of the user

#### 2.5 Constraints

The main constraint of this project is that there is a lot of complex calculations which are hard to understand, since they are related to a specific domain. There is documentation which explains the requirements and calculations, which is only in Italian language so it translated.

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 2.6 Assumptions

The assumption for this system is that the sensors are working as expected and producing needed .txt files with analog values every one hour. These files are further parsed by the system. There are three kind of input files: analog\*\*\*\*.txt, sonar\*\*\*\*\*.txt, picture\*\*\*\*.jpg. Also, two images are received each hour: view of the bridge from Mantova side, view of the bridge from Modena side.

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 3. Requirements Description

In this section, all the functional, non-functional and future requirements will be defined. They will be presented in tables which contain the ID of requirement, the requirement definition, the priority and the status of the requirement.

Each requirement will have a unique identification value that will also contain the information of what type of functional requirement it belongs to.

The definition of each requirement is defined in a way that makes the requirement suitable for testing. The definitions will be used as input for the testing phase.

The requirements in the tables are sorted by priority so that it can be made sure that the requirements with higher priority are more visible and fulfilled earlier in the development phase. The highest priority is 1, and lowest is 5. //**TODO** prioritize the regs in the tables

The status of each requirement will be tracked. The status can be one of the following:

- I = initial (this requirement has been identified at the beginning of the project)
- D = dropped (this requirement has been deleted from the requirement definitions)
- $H = on \ hold$  (decision to be implemented or dropped will be made later)
- A = additional (this requirement was introduced during the project course)
- F = future requirement

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 3.1 Functional requirements

The functional requirements are divided into eight sections: External User Functionalities (EU), Human Controller Functionalities (HC), Engineer Functionalities (E), Administrator Functionalities (A), Parsing (P), Calculations (C), External Interfaces (EI) and Warning Messages (WM).

## 3.1.1 External User Functionalities

The table below shows the requirements for the external user of the system.

Identity EU	Requirement Definition	Priority	Status
EU1	The external user should be able to see the stack image with each pylons, with also the flow direction.	3	I
EU2	The external user should be able to see the latest pictures of the both sides of the bridge.	1	I
EU3	The external user should be able to see the diagram showing the change of value of wind speed for the current day.	1	I
EU4	The external user should be able to see the diagram showing the change of value of wind direction for the current day.	1	I
EU5	The external user should be able to see the diagram showing the change of water level for the current day.	1	I
EU6	The external user should be able to see the diagram showing the change of depth of river bed for the current day.	1	I
EU7	The external user should be able to see the diagram showing the change of maximum wind speed for the current day.	1	I
EU8	The external user should be able to see the diagram showing the change of maximum direction value for the current day.	1	I
EU9	The external user should be able to see the current value of the flow rate.	1	I
EU10	The external user should be able to see the current value of the wind speed.	1	I
EU11	The external user should be able to see the current value of the water speed.	1	I
EU12	The external user should be able to see the current value of the Wind Direction.		I
EU13	The external user should be able to see the current value of the Water level.	1	I
EU14	The external user should be able to see the current value of the River Bed level.	1	I
EU15	The external user should be able to see a Google maps picture of the bridge with a wind rose picture.	3	I

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 3.1.2 Human Controller Functionalities

The table below shows the requirements for the human controller user of the system.

Identity HC	Requirement Definition	Priority	Status
HC1	The human controller should be able to log into the system with username and password.	4	I
НС2	The human controller should be able to see the stack image with each pylons, with also the flow direction.	2	I
НС3	The human controller should be able to see the latest pictures of the both sides of the bridge.	2	I
HC4	The human controller should be able to see the diagram showing the change of value of wind speed for the current day.	2	I
НС5	The human controller should be able to see the diagram showing the change of value of wind direction for the current day.	2	I
НС6	The human controller should be able to see the diagram showing the change of water level for the current day.	2	I
НС7	The human controller should be able to see the diagram showing the change of depth of river bed for the current day.	2	I
НС8	The human controller should be able to see the diagram showing the change of maximum wind speed for the current day.	2	I
НС9	The human controller should be able to see the diagram showing the change of maximum direction value for the current day.	2	I
HC10	The human controller should be able to see the current value of the flow rate.	2	I
HC11	The human controller should be able to see the current value of the wind speed.	2	I
HC12	The human controller should be able to see the current value of the water speed.	2	I
HC13	The human controller should be able to see the current value of the Wind Direction.	2	I
HC14	The human controller should be able to see the current value of the Water level.	2	I
HC15	The human controller should be able to see the current value of the River Bed level.	2	I
HC16	The human controller should be able to see a Google maps picture of the bridge with a wind rose picture.	4	I
HC17	The human controller should be able to change the debris value. The debris value is a boolean.	2	I
HC18	The human controller should be able to change the traffic value. The traffic value is a boolean.	2	I
HC19	The human controller should be able to see the alarm button.	1	I
HC20	The human controller should be able to send an alarm by clicking on the 'Send Alarm' button.	3	I
HC21	The human controller should be able to see the M-N Domain graph with the location of each pylon in the domain.	1	I
HC22	The human controller should see the table for CS values for each pylon, their combination label, and values N, M, Tx, Ty, Mx and My.	1	I
НС23	The human controller should be able to see the history diagram showing wind speed during chosen period of time.	1	I
HC24	The human controller should be able to see the history diagram showing wind direction during chosen period of time.	1	I
HC25	The human controller should be able to see the history diagram showing maximum wind speed during chosen period of time.	1	I
HC26	The human controller should be able to see the history diagram showing maximum wind direction during chosen period of time.	1	I

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

Identity HC	Requirement Definition	Priority	Status
HC27	The human controller should be able to view the history graph showing the water level during chosen period of time.	1	I
НС28	The human controller should be able to view the history graph showing the river bed height during chosen period of time.	1	I
НС29	The human controller should be able to view the history graph showing the safety trend during chosen period of time.	1	I
HC30	The human controller can choose a start date and end date for the historical graphs.	3	I
НС31	The human controller can choose a specific day for the historical graphs.	2	I
НС32	The human controller can choose a specific month for the historical graphs.	2	
НС33	The human controller should be able to log out of the system.	4	I

## 3.1.3 Engineer Functionalities

The table below shows the requirements for the engineer user of the system.

Identity E	Requirement Definition	Priority	Status
E1	The engineer should be able to log into the system with username and password.	4	I
E2	The engineer should be able to see the stack image with each pylons, with also the flow direction.	3	I
E3	The engineer should be able to see the latest pictures of the both sides of the bridge.	3	I
E4	The engineer should be able to see the diagram showing the change of value of wind speed for the current day.	3	I
E5	The engineer should be able to see the diagram showing the change of value of wind direction for the current day.	3	Ι
<b>E6</b>	The engineer should be able to see the diagram showing the change of water level for the current day.	3	I
E7	The engineer should be able to see the diagram showing the change of depth of river bed for the current day.	3	I
E8	The engineer should be able to see the diagram showing the change of maximum wind speed for the current day.	3	I
Е9	The engineer should be able to see the diagram showing the change of maximum direction value for the current day.	3	I
E10	The engineer should be able to see the current value of the flow rate.	3	I
E11	The engineer should be able to see the current value of the wind speed.	3	I
E12	The engineer should be able to see the current value of the water speed.	3	I
E13	The engineer should be able to see the current value of the Wind Direction.	3	I
E14	The engineer should be able to see the current value of the Water level.	3	I
E15	The engineer should be able to see the current value of the River Bed level.	3	I
E16	The engineer should be able to see a Google maps picture of the bridge with a wind rose picture.	3	I
E17	The engineer should be able to change the debris value. The debris value is a boolean.	3	I
E18	The engineer should be able to change the traffic value. The traffic value is a boolean.	3	I

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

Identity E	Requirement Definition	Priority	Status
E19	The engineer should be able to see the alarm button.	3	I
E20	The engineer should be able to send an alarm by clicking on the 'Send Alarm' button.	3	I
E21	The engineer should be able to see the M-N Domain graph with the location of each pylon in the domain.	3	I
E22	The engineer should see the table for CS values for each pylon, their combination label, and values N, M, Tx, Ty, Mx and My.	3	I
E23	The engineer should be able to see the history diagram showing wind speed during chosen period of time.	3	I
E24	The engineer should be able to see the history diagram showing wind direction during chosen period of time.	3	I
E25	The engineer should be able to see the history diagram showing maximum wind speed during chosen period of time.	3	I
E26	The engineer should be able to see the history diagram showing maximum wind direction during chosen period of time.	3	I
E27	The engineer should be able to view the history graph showing the water level during chosen period of time.	3	I
E28	The engineer should be able to view the history graph showing the river bed height during chosen period of time.	3	I
E29	The engineer should be able to view the history graph showing the safety trend during chosen period of time.	3	I
E30	The engineer can choose a start date and end date for the historical graphs.	3	I
E31	The engineer can choose a specific day for the historical graphs.	3	I
E32	The engineer can choose a specific month for the historical graphs.	3	I
E33	The engineer can view all the parameters that are stored in the database and used for calculations.	2	I
E34	The engineer can change any parameter that is stored in the database and used for calculations.	2	I
E35	The engineer controller should be able to log out of the system.	4	I

## 3.1.4 Administrator Functionalities

The table below shows the requirements for the administrator user of the system.

Identity A	Requirement Definition	Priority	Status
<b>A1</b>	The administrator should be able to log into the system with username and password.	4	I
A2	The administrator should be able to register a new user by entering information about the user: first name, last name, username, email and permission level (Engineer or Human Controller).	4	I
A3	The administrator should be able to edit any information about any user (except password).	4	I
<b>A4</b>	The administrator should be able to delete a registered user from the system.	4	I
A5	The administrator should be able to log out of the system.	4	I

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 3.1.5 Parsing

Identity P	Requirement Definition	Priority	Status
P1	Each received package should be parsed into the database in the following way. Every hour the system receives a packet in which there are an analog file, a sonar file both with 3600 lines of values and two images, one for each camera. All these values are to be converted from the parser into the db.	1	I
P2	For the analog and sonar sensors, the name of the files should be parsed in the following way. In the file names, analog*********.txt and sonar********.txt, the ID (**) represents the number of seconds that have elapsed since 1st January 1904 (using Labview encode), on the Greenwich meridian.	1	I
Р3	For the picture files, the ID of the name Modean[Mantova]******.jpg should represent the exact time and date when the picture was taken.	1	I
P4	The first column of the analog*********.txt file should be parsed in the following way. Each row in the column represents the wind speed (measured in mA). It should be converted to $[m/s]$ by using the following formula: $V[m/s] = ((V[mA] * 1000) - 4) * 3,75)$ .	1	I
P5	The second column of the analog*********.txt file should be parsed in the following way. Each row in the column represents the distance between the hydrometer and the level of water (measured in mA). The actual distance [ m ] should be parsed by using the following formula: h [ m ] = $20 + (( ( h [ mA] * 1000 ) - 4) * (-1,25))$ . The water height should be parsed by using the following formula: h <sub>water</sub> [ m ] = $29,86 - h$ [ m ].	1	I
P6	The third column of the analog********.txt file should be parsed in the following way. Each row in the column represents the wind direction (measured in mA). It should be converted to $[°]$ by using the following formula: dir $[°] = ((dir [mA] * 1000) - 4) * 22,5)$ .	1	I
P7	The fourth column of the analog********.txt file should be parsed in the following way. Each row in the timestamp of the detection of the sample (Labview encode). The decimals for the timestamp are allowed to be dropped.	1	I
P8	The first column from the sonar************txt file should be parsed in the following way. The first column is the distance between sonar and the bottom of the river (measured in meters). The height of the bottom [ m ] should be parsed by using the following formula: hBottom[ m ] = 12,3 - xx.xx [ m ].	1	I
P9	The second column from the sonar********.txt file is the timestamp of the detection of the sample and should be parsed by using the Labview encode: the number represents the number of seconds that have elapsed since 1st January 1904, on the Greenwich meridian.	1	I

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 3.1.6 Calculations

The table below shows the requirements for the calculations.

Identity C	Requirement Definition								Priority	Status
C1	All calculations should be preformed after each parse of the data.						1	I		
C2	The push of the wind on the planking should be calculated by the formula: $S_{Vplank} = \frac{1}{2} * C_{Dwi} * \rho_{air} * A_{traf} * V_{EFFwind}^2$						1	I		
С3	The push of the wind on the traffic for traffic combination A1 should be calculated by the formula: $S_{V(A1traf)} = \frac{1}{2} *C_{Dwi} *\rho_{air} *(\beta_1 *A_{traf}) *V_{EFFwind}^2$						1	I		
C4	The push of the wind on the traffic for traffic combination A2 should be calculated by the formula: $S_{V(A2traf)} = \frac{1}{2} *C_{Dwi} *\rho_{air} *(\beta_1 *A_{traf}) *V_{EFFwind}^2$						1	I		
C5	The push of the wind on the traffic for traffic combination A3 should be calculated by the formula: $S_{V(A3traf)} = \frac{1}{2} * C_{Dwi} * \rho_{air} * (\beta_2 * A_{traf}) * V_{EFFwind}^2$				1	I				
	The parameters $a_i$ , $b_i$ , $c_i$ should be calculated using the table below.  Scale of estimate flow rates with fixed section									
	Parameters	h <sub>water</sub> <17m	17m <hwater< td=""><td>&lt;22m</td><td>22m</td><td>&lt; h<sub>water</sub> &lt; h<sub>MAX</sub></td><td>Water</td><td>H<sub>MAXwater</sub>=25,3m</td><td rowspan="2">1</td><td rowspan="2">I</td></hwater<>	<22m	22m	< h <sub>water</sub> < h <sub>MAX</sub>	Water	H <sub>MAXwater</sub> =25,3m	1	I
<b>C6</b>	ai	46	60			96		96		
	b <sub>i</sub>	-902	-135	0		-2800		-2800		
	ci	4658	800	0		22500		22500		
С7	The flow rat $Q = a_i$	* $h_{water}^2$ +				nula:			1	I
	The speed of	f water shoul	d be calcul  2D analys							
			hwater [m]	Q [m <sup>3</sup>	/s]	V <sub>water</sub> [m/s]				
C8			3	51	0	0,24			1	I
			10,5	540		2,73	_			
	$V_{water} = a * h_{water}^{3} + b * h_{water}^{2} + c * h_{water}$									
С9	The area of stack should be calculated using the formula: $A_s = B_s * h_s$ with  a. if [SONAR1] < bottom_ref $\rightarrow h_s = [IDRO2] - bottom_ref$ b. if [SONAR1] > bottom_ref $\rightarrow h_s = [IDRO2] - [SONAR1]$ and  a. if $D = 0 \rightarrow B_s = B_{s0} = c$ b. if $D = 1 \rightarrow B_s = B_{s1} = 2*D_{pylon}$						1	I		

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

Identity C	Requirement Definition	Priority	Status
	The Area Stack and Swater should be calculated using the formulas:		
C10	$(D = 0)$ $A_s = B_{s\theta} * h_s$ $S_{water} = \frac{1}{2} * C_{D\theta} * \rho_{water} * A_s * V_{water}^2$	1	ī
C10	$(D=1)$ $A_s = B_{sl} * h_s$	1	1
	$S_{water} = \frac{1}{2} * C_{D1} * \rho_{water} * (A_s * \beta_A) * V_{water}^2$		
	The portion of palking should be calculated with the formula:		
C11	$PP_{structure} = P_s + [(2 * P_{pu} + 6 * P_{tp} + 2 * P_b) + 6 * (P_p * (h_{beam} - [SONAR1]))]$	1	I

To represent the risk of bridge to collapse, the "Safety factor" value is calculated. This value is a product of many forces that affect bridge. Some of the forces are: Wind speed, wind direction, water height and others. The calculation of safety is not trivial. Here are stated the requirements for the final calculations to be done. More about the meaning of formulas can be found in the Technical Documentation.

The Axial stress (N) is calculated for each pylon using following table of formulas:

	Pylon 1	Pylon 2	Pylon 3
P.P.	$N_4 = \frac{(q_{pu} + q_b) * d}{3} + q_{pylon} * L$	$N_4 = \frac{(q_{pu} + q_b) * d}{3} + q_{pylon} * L$	$N_4 = \frac{(q_{pu} + q_b) * d}{3} + q_{pylon} * L$
N	$N_4 = -\frac{N}{3}$	$N_4 = -\frac{N}{3}$	$N_4 = -\frac{N}{3}$
Ту	$N_4 = -\left[\frac{T_y}{d}\left(h_1 + \frac{L_2}{2}\right)\right]$		$N_4 = \left[ \frac{T_y}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$
Мс	$N_4 = -\frac{M_x}{3}$		$N_4 = \frac{M_x}{3}$
qy	$N_4 = -\left[\frac{H_1}{d}\left(h_1 + \frac{L_2}{2}\right)\right]$		$N_4 = \left[ \frac{H_1}{d} \left( h_1 + \frac{L_2}{2} \right) \right]$
Tx			

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

Cutting force (Tx) on Pylons is calculated by following formulas:

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту			
Мс			
qy			
Тх	$T_{xx} = \frac{Tx}{3}$	$T_{xx} = \frac{Tx}{3}$	$T_{xd} = \frac{Tx}{3}$

Cutting force (Ty) on Pylons is calculated by following formulas:

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту	$T_{y4} = \frac{Ty}{3}$	$T_{y4} = \frac{Ty}{3}$	$T_{y4} = \frac{Ty}{3}$
Мс			
qy	$T_{y4} = \frac{q_y * h_i}{3}$	$T_{yi} = \frac{q_y * h_i}{3}$	$T_{y4} = \frac{q_y * h_i}{3}$
Tx			

Blending stress of the bridge (Mx) is calculated for each pylon by formulas:

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту	$M_{x4} = \frac{T_y * L_2}{6}$	$M_{x4} = \frac{T_y * L_2}{6}$	$M_{x4} = \frac{T_y * L_2}{6}$
Мс			
qy	$M_{xt} = \frac{H_1 * L_2}{6}$	$M_{x4} = \frac{H_1 * L_2}{6}$	$M_{xd} = \frac{H_1 * L_2}{6}$
Тх			

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

Blending stress of the bridge (My) is calculated for each pylon by formulas:

	Pylon 1	Pylon 2	Pylon 3
P.P.			
N			
Ту			
Мс			
qy			
Тх	$M_{y4} = \frac{T_x * L}{3}$	$M_{y4} = \frac{T_x * L}{3}$	$M_{y4} = \frac{T_x * L}{3}$

## 3.1.7 External Interfaces

The table below shows the requirements for the external interfaces of the system.

Identity EI	Requirement Definition	Priority	Status
EI1	The alarm button should turn red if any pylon is outside the M-N domain.	1	I
EI2	A Google Earth picture of the bridge and an icon of a wind rose should be visible on each page.	5	I
EI3	A link to external webpages which show the measurements of river Po should be present on each page.	5	I
EI4	A film of the day, the week and month based on the pictures should be visible to the human controller.	5	I

## 3.1.8 Warning messages

The table below shows the requirements for the warning messages.

Identity WM	Requirement Definition	Priority	Status
WM1	A warning message "Are you sure you want to delete this user?" should appear if the administrator chooses to delete a registered user.	5	Ι
WM2	A warning message "Are you sure you want to change the range of risk factors" should appear if the engineer chooses to change ranges of risk factors.	5	I

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 3.2 Non-Functional requirements

There are five types of non-functional requirements: Performance (PE), Usability (U), Extensibility (Ex) and Security (S). They are presented in the following table.

Identity	Requirement Definition	Priority	Status
PE1	The system should parse the data from the sensors and perform calculations every one hour.	3	Ι
PE1	The loading time for each page should be less than 20 seconds.	4	I
U1	Each new user of the system should be able to learn how to operate with the system within one day of tutorial.	4	I
Ex1	It should be able to add new sensors to the system in the future.	4	I
S1	A log in is required to sign into the system and view internal data.	4	I

## 3.3 Requirements for the future

The requirements for the future will not be prioritized since no plan is made for their implementation yet. They represent possible extensions to the system that is being developed.

Identity F	Requirement Definition	Priority	Status
F1	Create an Android application of the system.	N/A	F
F2	Have a local and remote Database. Local with 'current' data (last X years). Remote with 'historical data (older than X years ago).	N/A	F

Real-Time Bridge Monitoring	Version: 1.4
Requirements Specification	Date: 2014-01-06

## 4. Appendix

GEOMETRY OF THE STACK N.30			
D <sub>pylon</sub>	1.5	m	Diameter of the pylon
Cspan	9.5	m	Distance between two line of pylon
h <sub>beam</sub>	17.5	m	Height of the lower beam
bottom_ref	10	m	Height of the reference of the bottom of the river
h1	7.3	m	Distance between the pulvino and the inferior beam
h2	7.5	m	Distance between the inferior beam and the bottom_ref
(h1)/2	3.65	m	Mean value of h1
k	0	m	Sinking of the bases over the ground
d	8.5	m	Width of the chassis
R <sub>Ipylon</sub>	0	m	Internal radius
numb_id_bar	12		Number of identical bars
$D_{bar}$	0,024	m	Bars diameter
Ccb	0,042	m	Barycentric concrete cover
Steel_class	FeB44K		Steel class
Concrete_class	C25/30		Concrete class
			WIND THRUST
α	6	0	Planimetric anticlockwise inclination of the bridge form the north
C <sub>Dwi</sub>	2	-	"Drag planking" coefficient
ρ <sub>air</sub>	1.2	Kg/m <sup>3</sup>	Air density
Astack	168	m <sup>2</sup>	Planking area exposed to the wind pressure
Atraf	177	m <sup>2</sup>	Surface of traffic exposed to the wind pressure
$\beta_1$	1	-	Coefficient of reduction for A1 and A2 traffic scenarios
$\beta_2$	0.5	-	Coefficient of reduction for A3 traffic scenario
r	2.25	m	Thrust center due to longitudinal asymmetry, only of S <sub>Vplank</sub>
<b>e</b> plank	1.91	m	"arm" for bending moment of S <sub>Vplank</sub>
e <sub>traf</sub>	3.41	m	"arm" for bending moment of S <sub>Vtraf</sub>
			HYDRODYNAMIC THRUST
$C_{D0wa}$	2.4	-	"Drag planking" coefficient (D=0)
C <sub>D1wa</sub>	2	-	"Drag planking" coefficient (D=1)
ρwater	1000	Kg/m <sup>3</sup>	Water density
$\beta_{A}$	0.5	-	Area reduction for D=1
a	-0.0014	-	Coefficient for the relation V <sub>water(</sub> [IDRO1])
b	0.0341	-	Coefficient for the relation V <sub>water(</sub> [IDRO1])
c	0.052	-	Coefficient for the relation V <sub>water(</sub> [IDRO1])

Real-Time Bridge Monitoring	Version: 1.4	
Requirements Specification	Date: 2014-01-06	

	1	1		
h <sub>water1</sub>	17	m	Height limit of the river for parameters a1,b1,c1	
a1	46	-	Coefficient for Q(h) when [IDRO1] < h <sub>water1</sub>	
b1	-902	-	Coefficient for Q(h) when [IDRO1] < h <sub>water1</sub>	
c1	4658	-	Coefficient for Q(h) when [IDRO1] < h <sub>water1</sub>	
h <sub>water2</sub>	22	m	Height limit of the river for parameters a2,b2,c2	
a2	60	-	Coefficient for Q(h) when [IDRO1] < h <sub>water2</sub>	
b2	-1350	-	Coefficient for Q(h) when [IDRO1] < h <sub>water2</sub>	
c2	8000	-	Coefficient for Q(h) when [IDRO1] < h <sub>water2</sub>	
h <sub>max</sub>	25.3	m	Max height level of river and limit for use parameter a3,b3,c3	
a3	96		Coefficient for Q(h) when $h_{water2} < [IDRO1] < h_{max}$	
b3	-2800		Coefficient for Q(h) when $h_{water2} <_{[IDRO1] < hmax}$	
сЗ	22500		Coefficient for Q(h) when $h_{water2} <_{[IDRO1] < hmax}$	
WEIGHT OF THE STACK				
Pp	10710	kN	Plank weight on the stack	
Ppu	1680	kN	Weight of single pulvino	
Ptp	1601	kN	Weight of the trunk of pylon	
Pb	1007	kN	Weight of the single beam	
Ppy	44	kN/m	Weight per meter of pylon	
Mt	9720	kNm	Moment generated by asymmetry	
MOBILE WEIGHTS				
N(A1)	4024	kN	Axial load for load combination A1	
Mxx(A1)	4368	kNm	Bending moment for load combination A1	
Myy(A1)	3908	kNm	Bending moment for load combination A1	
N(A2)	3116	kN	Axial load for load combination A2	
Mxx(A2)	8077	kNm	Bending moment for load combination A2	
Myy(A2)	3015	kNm	Bending moment for load combination A2	
N(A3)	1979	kN	Axial load for load combination A3	
Mxx(A3)	2121	kNm	Bending moment for load combination A3	
Myy(A3)	25756	kNm	Bending moment for load combination A3	
Vehicle braking				
Fr	206	kN	Value of the force due to the vehicle braking	
n	3.3	m	"arm" for the vehicle braking moment	