

Waveform Recording Firmware Registers








Register your device

Register your device to your MyCAEN+ account and get access to our customer services, such as notification for new firmware or software upgrade, tracking service procedures or open a ticket for assistance. MyCAEN+ accounts have a dedicated support service for their registered products. A set of basic information can be shared with the operator, speeding up the troubleshooting process and improving the efficiency of the support interactions.

MyCAEN+ dashboard is designed to offer you a direct access to all our after sales services. Registration is totally free, to create an account go to https://www.caen.it/become-mycaenplus-user and fill the registration form with your data.

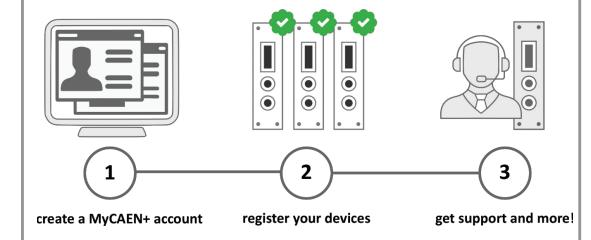



https://www.caen.it/become-mycaenplus-user/

Purpose of this Manual



The User Manual contains the full description of the Waveform Recording firmware registers for 725 and 730 digitizer families. The description is compliant with the firmware revisions **4.29_0.9** (725/730) and **4.29_0.4** (725S/730S). For future release compatibility, check in the firmware history files.

Change Document Record

Date	Revision	Changes
August 31 st , 2016	00	First release grouping 730 and 725 digitizer families
December 6 th , 2016	01	Corrected the Post Trigger formula
September 20 th , 2017	02	Updated 0x8100, 0x8170 and 0xEF04 registers. Added 0x81C4 register.
September 24 th , 2019	03	Updated 0x809C, 0x8104, 0xF030 and 0xF050 registers.
May 13 th , 2020	04	Updated 0x11n88, 0x1nA8, 0x8100, 0x8104 and 0x8114 registers. Added 0x1nEC register.
January 30 th , 2025	05	Reviewed Cover and End pages. Enumerated document sections. Updated registers 1.22 , 1.37 , 1.38 , 1.42 . Added Reference Documents, register 1.6 , Chap. 2 .

Symbols, abbreviated terms and notation

ADC Analog-to-Digital Converter
AMC ADC & Memory Controller
DAC Digital-to-Analog Converter
DC Direct Current
DPP Digital Pulse Processing
LVDS Low-Voltage Differential Signal

PLL Phase-Locked Loop
ROC ReadOut Controller
TTT Trigger Time Tag
USB Universal Serial Bus

Reference Documents

[RD1] UM2792 – V/VX1730 - V/VX1725 User Manual

[RD2] UM3148 - DT5730 - DT5725 User Manual

All documents can be downloaded at: http://www.caen.it/csite/LibrarySearch.jsp

Manufacturer Contacts



CAEN S.p.A.

Via Vetraia, 11 55049 Viareggio (LU) - ITALY Tel. +39.0584.388.398 Fax +39.0584.388.959 www.caen.it | info@caen.it ©CAEN SpA – 2025

Limitation of Responsibility

If the warnings contained in this manual are not followed, CAEN will not be responsible for damage caused by improper use of the device. The manufacturer declines all responsibility for damage resulting from failure to comply with the instructions for use of the product. The equipment must be used as described in the user manual, with particular regard to the intended use, using only accessories as specified by the manufacturer. No modification or repair can be performed.

Disclaimer

No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN SpA.

The information contained herein has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. CAEN SpA reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it.

Made in Italy

We remark that all our boards have been designed and assembled in Italy. In a challenging environment where a competitive edge is often obtained at the cost of lower wages and declining working conditions, we proudly acknowledge that all those who participated in the production and distribution process of our devices were reasonably paid and worked in a safe environment (while this is true for the boards marked "MADE IN ITALY", we cannot guarantee for third-party manufactures).





Index

Pu	rpose	of this Manual	3
Ch	ange (document record	3
Syı	nbols	, abbreviated terms and notation	3
Re	ferenc	e Documents	3
Ma	nufac	cturer Contacts	4
Lin	nitatio	on of Responsibility	4
Dis	claim	er	4
Ma	de in	Italy	4
1	Regis	sters and Data Format	7
	1.1	Reset and Clear	7
	1.2	Register Address Map	8
	1.3	Event Readout Buffer	11
	1.4	Dummy32	12
	1.5	Input Dynamic Range	13
	1.6		14
	_	Number of quartets over threshold	
	1.7	Channel n Pulse Width	15
	1.8	Channel n Trigger Threshold	16
	1.9	Couple n Self-Trigger Logic	17
	1.10	Channel n Status	18
	1.11	AMC Firmware Revision	19
	1.12	DC Offset	20
	1.13	Channel n ADC Temperature	21
		Channel Self-Trigger Rate Meter	22
			23
			24
			25
			26
		· ·	27
		·	29
		Software Trigger	31
	1.22	Global Trigger Mask	32
	1.23	Front Panel TRG-OUT (GPO) Enable Mask	33
		Post Trigger	34
		LVDS I/O Data	35
		Front Panel I/O Control	36
		Channel Enable Mask	39
		ROC FPGA Firmware Revision	40
		Event Stored	41
		Voltage Level Mode Configuration	42
	1.31	Software Clock Sync	43
	1.32	Board Info	44
	1.33	Analog Monitor Mode	45
		Event Size	46
		Fan Speed Control	47
		Memory Buffer Almost Full Level	48
	1.30	Internoty Burlet Allifost Full Level	40

		, , , , ,	49
			50
			51
	1.40	Buffer Occupancy Gain	52
	1.41	Channels Shutdown	53
	1.42	Extended Veto Delay	54
	1.43	Readout Control	55
	1.44	Readout Status	57
			58
	1.46	MCST Base Address and Control	59
	1.47	Relocation Address	60
	1.48	Interrupt Status/ID	61
	1.49	Interrupt Event Number	62
			63
	1.51	Scratch	64
	1.52	Software Reset	65
			66
	1.54	Configuration Reload	67
	1.55	Configuration ROM Checksum	68
	1.56	Configuration ROM Checksum Length BYTE 2	69
			70
	1.58	Configuration ROM Checksum Length BYTE 0	71
	1.59	Configuration ROM Constant BYTE 2	72
			73
	1.61	Configuration ROM Constant BYTE 0	74
	1.62	Configuration ROM C Code	75
			76
		=	77
		=	78
	1.66	Configuration ROM IEEE OUI BYTE 0	79
			80
	1.68	Configuration ROM Board Form Factor	81
		=	82
		=	83
			84
		=	85
			86
		=	87
		-	88
		-	89
		-	90
		<u>e</u>	91
2			92
_	• • • •	mr	

1 Registers and Data Format

All registers described in the User Manual are 32-bit wide. In case of VME access, **A24** and **A32** addressing mode can be used.

1.1 Reset and Clear

The module's registers can be set back to their default values on software reset command by writing in the Software Reset register or by system reset from backplane, in case of VME boards. In particular, the registers or buffers listed below

- Event Readout Buffer
- Buffer Occupancy
- · Event Stored
- Event Size

are also be set back to their default values (registers) or emptied (buffers) by a clear issued:

- automatically by the firmware at the start of each run;
- on software command by writing in the Software Clear register
- by hardware (VME boards only), through the LVDS interface properly configured (see the section "Front Panel LVDS I/Os" of the digitizer User Manual [RD1]).

1.2 Register Address Map

The table below reports the complete list of registers that can be accessed by the user. The register names in the first column can be clicked to be redirected to the relevant register description. The register address is reported on the second column as a hex value. The third column indicates the allowed register access mode, where:

- R **Read only**. The register can be accessed in read only mode.
- W Write only. The register can be accessed in write only mode.
- R/W **Read and write**. The register can be accessed both in read and write mode.

According to the attribute reported in the fourth column, the following choices are available:

Individual register. This kind of register has N instances, where N is the total number of channels in the board. Individual registers can be written either in single mode (individual setting) or broadcast (simultaneous write access to all channels). Read command must be individual.

Single access can be performed at address 0x1nXY, where n is the channel number, while broadcast write can be performed at the address 0x80XY. For example:

- access to address 0x1570 to read/write register 0x1n70 for channel 5 of the board;
- to write the same value for all channels in the board, access to 0x8070 (broadcast write). To read the corresponding value, access to the individual address 0x1n70.
- G Group register. In case of 725 and 730 digitizer family, some registers manages couples of channels. Group registers have N instances, where N is the total number of channels. Write access can be performed in single group mode (one couple at a time) or broadcast (simultaneous write access to all groups). Read command must be in single group mode. Single group access can be performed at address 0x1nXY, where n (even) identifies channel n and channel n+1, while broadcast write can be performed at the address 0x80XY. For example:
 - to read/write register 0x1n70 for couple 3 of the board (i.e. channel 6 and channel 7), access to address 0x1670. The same value is applied also to channel 7.
 - to write the same value for all couples in the board, access to 0x8070 (broadcast write). To read the corresponding value, access to the individual address 0x1n70.
- C Common register. Register with this attribute has a single instance, therefore read and write access can be performed at address 0x80XY only.

Register Name	Address	Mode	Attribute
Event Readout Buffer	0x0000 - 0x0FFC	R	С
Dummy32	0x1n24, 0x8024	R/W	I
Input Dynamic Range	0x1n28, 0x8028	R/W	I
Number of quartets over threshold	0x1n40, 0x8040	R/W	I
Channel n Pulse Width	0x1n70, 0x8070	R/W	I
Channel n Trigger Threshold	0x1n80, 0x8080	R/W	I
Couple n Self-Trigger Logic	0x1n84, 0x8084	R/W	G
Channel n Status	0x1n88	R	I
AMC Firmware Revision	0x1n8C	R	ı
DC Offset	0x1n98, 0x8098	R/W	ı
Channel n ADC Temperature	0x1nA8	R	ı
Channel Self-Trigger Rate Meter	0x1nEC	R	ı
Chamer Sen Thigger Nate Meter	0x8000, 0x8004 (BitSet),	",	'
Board Configuration	0x8008 (BitClear)	R/W	С
Buffer Organization	0x800C	R/W	С
Custom Size	0x8020	R/W	С
Channel ADC Calibration	0x809C	W	С
Acquisition Control	0x8100	R/W	С
· · · · · · · · · · · · · · · · · · ·		-	С
Acquisition Status	0x8104	R	_
Software Trigger	0x8108	W D //A/	С
Global Trigger Mask	0x810C	R/W	С
Front Panel TRG-OUT (GPO) Enable Mask	0x8110	R/W	С
Post Trigger	0x8114	R/W	С
LVDS I/O Data	0x8118	R/W	С
Front Panel I/O Control	0x811C	R/W	С
Channel Enable Mask	0x8120	R/W	С
ROC FPGA Firmware Revision	0x8124	R	С
Event Stored	0x812C	R	С
Voltage Level Mode Configuration	0x8138	R/W	С
Software Clock Sync	0x813C	W	С
Board Info	0x8140	R	С
Analog Monitor Mode	0x8144	R/W	С
Event Size	0x814C	R	С
Fan Speed Control	0x8168	R/W	С
Memory Buffer Almost Full Level	0x816C	R/W	С
Run/Start/Stop Delay	0x8170	R/W	С
Board Failure Status	0x8178	R	С
Front Panel LVDS I/O New Features	0x81A0	R/W	С
Buffer Occupancy Gain	0x81B4	R/W	С
Channels Shutdown	0x81C0	W	С
Extended Veto Delay	0x81C4	R/W	С
Readout Control	0xEF00	R/W	С
Readout Status	0xEF04	R	С
Board ID	0xEF08	R/W	С
MCST Base Address and Control	0xEF0C	R/W	С
Relocation Address	0xEF10	R/W	С
	0xEF14		С
Interrupt Status/ID Interrupt Event Number		R/W	
•	0xEF18	R/W	С
Max Number of Events per BLT	0xEF1C	R/W	С
Scratch	0xEF20	R/W	С
Software Reset	0xEF24	W	С
Software Clear	0xEF28	W	С
Configuration Reload	0xEF34	W	С
Configuration ROM Checksum	0xF000	R	С
Configuration ROM Checksum Length BYTE 2	0xF004	R	С
Configuration ROM Checksum Length BYTE 1	0xF008	R	С

Configuration ROM Checksum Length BYTE 0	0xF00C	R	С
Configuration ROM Constant BYTE 2	0xF010	R	С
Configuration ROM Constant BYTE 1	0xF014	R	С
Configuration ROM Constant BYTE 0	0xF018	R	С
Configuration ROM C Code	0xF01C	R	С
Configuration ROM R Code	0xF020	R	С
Configuration ROM IEEE OUI BYTE 2	0xF024	R	С
Configuration ROM IEEE OUI BYTE 1	0xF028	R	С
Configuration ROM IEEE OUI BYTE 0	0xF02C	R	С
Configuration ROM Board Version	0xF030	R	С
Configuration ROM Board Form Factor	0xF034	R	С
Configuration ROM Board ID BYTE 1	0xF038	R	С
Configuration ROM Board ID BYTE 0	0xF03C	R	С
Configuration ROM PCB Revision BYTE 3	0xF040	R	С
Configuration ROM PCB Revision BYTE 2	0xF044	R	С
Configuration ROM PCB Revision BYTE 1	0xF048	R	С
Configuration ROM PCB Revision BYTE 0	0xF04C	R	С
Configuration ROM FLASH Type	0xF050	R	С
Configuration ROM Board Serial Number BYTE 1	0xF080	R	С
Configuration ROM Board Serial Number BYTE 0	0xF084	R	С
Configuration ROM VCXO Type	0xF088	R	С

1.3 Event Readout Buffer

This is the addressing space for the event readout. The event payload is made of 32-bit words; its structure is defined in the User Manual of the board [RD1] [RD2].

Address 0x0000 - 0x0FFC

Mode R Attribute C

Bit	Description
[31:0]	32-bit word of the event.

1.4 Dummy32

Writing and reading at this register can be used for debug purposes to test the local bus.

Address 0x1n24, 0x8024

Bit	Description
[31:0]	Dummy32 value (default value is 0).

1.5 Input Dynamic Range

This register sets the input dynamic range of each channel individually.

Address 0x1n28, 0x8028

Bit	Description
[0]	Input Dynamic Range.
	Options are:
	0 = 2 Vpp (default);
	1 = 0.5 Vpp.
[31:1]	Reserved.

1.6 Number of quartets over threshold

Operating in self-trigger mode, this register allows to generate a trigger pulse only when the signal sent to channel "n" contains a specific number of sample quartets over threshold within a single trigger clock pulse.

Address 0x1n40, 0x8040

Bit	Description
[7:0]	Number of quartets over threshold. Options are: 0 = the feature is disabled, one sample over threshold is sufficient to generate a trigger pulse; From 1 to FF = set the number of sample quartets over threshold to generate a trigger pulse. NOTE: When setting the value of this register, it must be considered that this feature does not have fine precision, as it is particularly thought to avoid spurious triggers due to very noisy signals at low trigger thresholds, or signals with a very slow and noisy falling time. As an example, setting the register value to 1 ensures that a trigger pulse always occurs only with at least 7 samples above the threshold. It will never occur for less than 4 samples above the threshold, while it may occur or not for a number of samples between 4 and 7.
[31:8]	Reserved.

1.7 Channel n Pulse Width

This register sets the width of the pulse generated when the input signal on the channel crosses the threshold.

NOTE: this setting is meaninful if bit[2] = 0 in the Self-Trigger Logic register.

NOTE: this register is implemented only from AMC FPGA firmware revision 0.2 on.

Address 0x1n70, 0x8070

Bit	Description
[7:0]	Pulse width value in units of the Trigger Clock (8 ns for 730 and 16 ns for 725). Default value is 0x02.
[31:8]	Reserved.

1.8 Channel n Trigger Threshold

The channel is able to generate a self-trigger signal when the digitized input pulse exceeds a configurable threshold Vth. This register allows to set Vth individually for each channel.

Address 0x1n80, 0x8080

Bit	Description
	Vth = Trigger Threshold Value expressed in LSB (default value is 0).
[13:0]	1 LSB = Input Dynamic Range/2 ^{14 bit} .
[31:14]	Reserved.

1.9 Couple n Self-Trigger Logic

For a couple of channels of adjacent channels, this register sets the logic to generate the trigger request signal upon the self-triggers from the two channels of the couple. Please, refer to the digitizer User Manual (Self-Trigger section) for complete description.

In case of DT, NIM and 8-channel VME boards: n = 0 (CH0-CH1), 2 (CH2-CH3), 4 (CH4-CH5), 6 (CH6- Ch7). In case of 16-channel VME boards, also n = 8 (CH8-CH9), n = A (CH10-CH11), n = C (CH12- CH13), n = E (CH14-CH15) are admitted.

Address 0x1n84, 0x8084

Bit	Description
	Self-Trigger Logic.
	Options are:
[1:0]	00 = AND;
[1.0]	01 = ONLY CH(n);
	10 = ONLY CH(n+1);
	11 = OR (default).
	This bit sets the kind of signal to be generated when the input pulse crosses the programmed
	digital threshold.
	Options are:
[2]	0 = a pulse of programmable width is generated (configured by the Channel n Pulse Width
[2]	register, 0x1n70, Sec. 1.7);
	1 = an over/under-threshold signal is generated, that is active (i.e. 1) as long as the input
	pulse is over the threshold or under the threshold (set through register 0x8000, Sec. 1.15).
	Default value is 0.
[31:3]	Reserved.

1.10 Channel n Status

This register contains the status information of channel n.

Address 0x1n88 Mode R Attribute I

Bit	Description		
[0]	Memory Full.		
[1]	Memory Empty.		
	Channel n DAC Busy.		
[2]	Options are:		
[2]	0 = DC offset updated;		
	1 = Busy.		
	ADC Calibration Status.		
	Options are:		
[3]	0 = Calibration not done;		
' '	1 = Calibration done.		
	NOTE: this bit is meaningless in case on 725S and 730S.		
[7:4]	Reserved.		
	ADC Power Down.		
[8]	When set to 1, it means that the ADC of channel n has been shut down due to an		
	over-temperature condition.		
[31:9]	Reserved.		

1.11 AMC Firmware Revision

This register contains the channel FPGA (AMC) revision information. The complete format is:

Firmware Revision = X.Y (16 lower bits)

Firmware Revision Date = Y/M/DD (16 higher bits)

EXAMPLE 1: revision 1.03, November 12th, 2007 is 0x7B120103.

EXAMPLE 2: revision 2.09, March 7th, 2016 is 0x03070209.

NOTE: the nibble code for the year makes this information to roll over each 16 years.

Address 0x1n8C Mode R Attribute I

Bit	Description	
[7:0]	AMC Firmware Minor Revision Number (Y).	
[15:8]	AMC Firmware Major Revision Number (X).	
[31:16]	AMC Firmware Revision Date (Y/M/DD).	

1.12 DC Offset

This register allows to adjust the baseline position (i.e. the 0 Volt) of the input signal on the ADC scale. The ADC scale ranges from 0 to 2^{NBit} - 1, where NBit is the number of bits of the on-board ADC. The DAC controlling the DC Offset has 16 bits, i.e. it goes from 0 to 65535 independently from the NBit value and the board type.

Typically a DC Offset value of 32K (DAC mid-scale) corresponds to about the ADC mid-scale. Increasing values of DC Offset make the baseline decrease. The range of the DAC is about 5% (typ.) larger than the ADC range, hence DAC settings close to 0 and 64K correspond to ADC respectively over and under range.

WARNING: before writing this register, it is necessary to check that bit[2] = 0 at 0x1n88 (see Sec. **1.10**), otherwise the writing process will not run properly! After writing, the user is recommended to wait for few seconds before a new RUN to let the DAC output (i.e. the new programmed DC offset) get stabilized.

Address 0x1n98, 0x8098

Bit	Description	
[15:0]	DC Offset value in DAC LSB unit	
[31:16]	Reserved	

1.13 Channel n ADC Temperature

This register monitors the temperature of the ADC chips.

NOTE: if the temperature varies significantly during the digitizer operation, the user is recommended to perform a new channel calibration procedure (see register 0x809C, Sec. **1.18**) to restore the board performance. This is not true in case of 725S and 730S as these models do not require any calibration.

Address 0x1nA8 Mode R Attribute I

Bit	Description	
[7:0]	ADC Chip Temperature (expressed in °C). Values are signed, ranging from -64°C to 127°C.	
[31:8]	Reserved.	

1.14 Channel Self-Trigger Rate Meter

This register indicates how many times per second the input pulse crossed the programmed threshold of the channel n digital discriminator.

NOTE: this register is meaninful only for 725S and 730S models and implemented from ROC FPGA fw revision 4.22 on.

Address 0x1nEC Mode R Attribute I

Bit	Description	
[31:0]	Counter value in cps (counts per second). This value is updated every second; the value that is	
[51.0]	read out actually refers to one second before.	

1.15 Board Configuration

This register contains general settings for the board configuration.

Address 0x8000, 0x8004 (BitSet), 0x8008 (BitClear)

Bit	Description	
[0]	Reserved: must be 0.	
[1]	Trigger Overlap Setting (default value is 0). When two acquisition windows are overlapped, the second trigger can be either accepted or rejected. Options are: 0 = Trigger Overlapping Not Allowed (no trigger is accepted until the current acquisition window is finished); 1 = Trigger Overlapping Allowed (the current acquisition window is prematurely closed by the arrival of a new trigger).	
[2]	Reserved: must be 0.	
[3]	Test Pattern Enable (default value is 0). This bit enables a triangular (0<->3FFF) test wave to be provided at the ADCs input for debug purposes. Options are: 0 = disabled; 1 = enabled.	
[4]	Reserved: must be 1.	
[5]	Reserved: must be 0.	
[6]	Self-trigger Polarity (default value is 0). Options are: 0 = Positive (the self-trigger is generated upon the input pulse over-threshold); 1 = Negative (the self-trigger is generated upon the input pulse under-threshold).	
[8:7]	Reserved: must be 0.	
[9]	Reserved.	
[10]	Reserved: must be 0.	
[22:11]	Reserved.	
[23]	Reserved: must be 0.	
[31:24]	Reserved.	

1.16 Buffer Organization

Sets the number of buffers in which the channel memory can be divided. A write access to this register causes a software clear.

According to the BUFFER_CODE value written in the register, the number of buffers Nb is given by $2^{\text{BUFFER_CODE}}$:

Register value	Nr. Buffers	Size of one Buffer/channel	
BUFFER_CODE	(Nb)	SRAM 1.25 MB (640kS)/ch	SRAM 10.24 MB (5.12 MS)/ch
0x0	1	1.25 MB - 20 B (640 kS - 10 S)	10.24 MB - 20 MB (5.12 MS - 10 S)
0x1	2	640 kB - 20 B (320 kS - 10 S)	5.12 MB - 20 B (2.56 MS - 10 S)
0x2	4	320 kB - 20 B (160 kS - 10 S)	2.56 MB - 20 B (1.28 MS - 10 S)
0x3	8	160 kB - 20 B (80 kS - 10 S)	1.28 MB - 20 B (0.64 MS - 10 S)
0x4	16	80 kB - 20 B (40 kS - 10 S)	0.64 MB - 20B (0.32 MS - 10 S)
0x5	32	40 kB - 20 B (20 kS - 10 S)	0.32 MB - 20 B (0.16 MS - 10 S)
0x6	64	20 kB - 20 B (10 kS - 10 S)	0.16 MB - 20 B (0.08 MS - 10 S)
0x7	128	10 kB - 20 B (5 kS - 10 S)	0.08 MB - 20 B (0.04 MS - 10 S)
0x8	256	5 kB - 20 B (2.5 kS - 10 S)	0.04 MB - 20 B (0.02 MS - 10 B)
0x9	512	2.5 kB - 20 B (1.25 kS - 10 S)	0.02 MB - 20 B (0.01 MS - 10 S)
0xA	1024	1.25 kB - 20 B (640 S - 10 S)	0.01 MB - 20 B (5.12 kS - 10 S)

To obtain a number of samples per buffer (referring to one channel) different from the table above, it is necessary to use the register address 0x8020 (see Sec. 1.17). In this case, the BUFFER_CODE must be set to have the closest buffer size with a number of samples per buffer larger than the one set by 0x8020 (see Sec. 1.17).

EXAMPLE: to have a desired number of samples per buffer of 900 (set through the Custom Size register), the BUFFER_CODE must be 0x9 in case of 640-kS/ch memory or 0xA if 5.12-MS/ch one.

IMPORTANT: For AMC FPGA firmware release < 0.2, the Size of one Buffer related to each Buffer Number is the number of the samples in the table without decreasing by 10 samples (20 bytes).

Address 0x800C Mode R/W Attribute C

Bit	Description
[3:0]	BUFFER_CODE.
[31:4]	Reserved.

1.17 Custom Size

Writing the number of memory locations per event (N_LOC) in this register, the user can set the record length, which is the number of samples (Ns) of the digitized waveform in the acquisition window.

WARNING: this register must not be written while acquisition is running.

Address	0x8020
Mode	R/W
Attribute	С

Bit	Description
	Number of Memory Locations per Event (N_LOC).
	Options are:
[31:0]	0 = Custom Size disabled (record length is given by the register address 0x800C, see Sec. 1.16); N_LOC = the number of samples of the record length is this given by the formula:
	Ns = N_LOC * 10.
	EXAMPLE : to have 900 samples per buffer, the value to write is N_LOC = 0x05A.

1.18 Channel ADC Calibration

This register is meaningless for x725S and x730S digitizers as they do not require channel calibration; writing to this register does not generate any error (BERR) but simply has no effect.

Other x725 and x730 digitizers require a channel calibration to achieve the best performances. A calibration of the ADCs is automatically performed by the firmware at the power-on, but the user is recommended to manually execute the calibration after the ADCs have stabilized their operating temperature (see register 0x1nA8, Sec. 1.13). The calibration will not need to be repeated at each acquisition run, unless the operating temperature varies significantly, or clock settings are modified (e.g. switching from internal to external clock).

WARNING: before writing this register, it is necessary to check that bit[2] = 0 of register 0x1n88 (see Sec. **1.10**), otherwise the writing process cannot run properly.

WARNING: It is normally not required to calibrate after a board reset but, if a Reset command is intentionally issued to the digitizer (write access at 0xEF24, Sec. **1.52**) to be directly followed by a calibration procedure, it is recommended to wait for the board to reach stable conditions (indicatively 100 ms) before to start the calibration.

WARNING: at power-on, a Sync command is issued by the firmware to the ADCs to synchronize all of them to the board's clock. In the standard operating, this command is not required to be repeated by the user. If a Sync command is intentionally issued (see register 0x813C, Sec. **1.31**), the user must consider that a new calibration procedure is needed for a correct board operating.

Address	0x809C
Mode	W
Attribute	С

Bit	Description	
[31:0]	Write any value to start the automatic simultaneous calibration of the ADC for all channels of the board. Bit[3] of register 0x1n88 (see Sec. 1.10) will be set to 0. Poll this bit until it returns to 1.	

1.19 Acquisition Control

This register manages the acquisition settings.

Address 0x8100 Mode R/W Attribute C

Bit	Description
	Start/Stop Mode Selection (default value is 00).
	Options are:
	00 = SW CONTROLLED. Start/stop of the run takes place on software command by
	setting/resetting bit[2] of this register;
	01 = S-IN/GPI CONTROLLED (S-IN for VME, GPI for Desktop/NIM). Acquisition must be armed
	by setting bit[2] = 1, then the run can optionally START/STOP ON LEVEL or START ON EDGE
	according to bit[11] (NOTE: the START ON EDGE option is implemented from ROC FPGA fw
[1:0]	revision 4.22 on);
' '	10 = FIRST TRIGGER CONTROLLED. If the acquisition is armed (i.e. bit[2] = 1), then the run
	starts on the first trigger pulse (rising edge on TRG-IN); this pulse is not used as input trigger,
	while actual triggers start from the second pulse. The stop of Run must be SW controlled (i.e.
	bit[2] = 0);
	11 = LVDS CONTROLLED (VME only). It is like option 01 but using LVDS (RUN) instead of S-IN.
	The LVDS can be set using registers 0x811C and 0x81A0 (see respectively Sec. 1.26 and Sec.
	1.39).
	Acquisition Start/Arm (default value is 0).
	When bits[1:0] = 00, this bit acts as a Run Start/Stop. When bits[1:0] = 01, 10, 11, this bit
[2]	arms the acquisition and the actual Start/Stop is controlled by an external signal.
[2]	Options are:
	0 = Acquisition STOP (if bits[1:0]=00); Acquisition DISARMED (others);
	1 = Acquisition RUN (if bits[1:0]=00); Acquisition ARMED (others).
	Trigger Counting Mode Selection.
[3]	Options are:
	0 = only accepted triggers are counted (default);
[4]	1 = all triggers are counted.
[4]	Reserved. Memory Full Mode Selection (default value is 0).
	Options are:
[5]	0 = NORMAL. The board is full whenever all buffers are full;
[2]	1 = ONE BUFFER FREE. The board is full whenever Nb-1 buffers are full, where Nb is the
	overall number of buffers in which the channel memory is divided.
	PLL Reference Clock Source (Desktop/NIM only). Default value is 0.
	Options are:
[E]	0 = internal oscillator (50 MHz);
[6]	1 = external clock from front panel CLK-IN connector.
	NOTE: this bit is reserved in case of VME boards.
[7]	Reserved.
[8]	LVDS I/O Busy-In Enable (VME only). Default value is 0.
	This bit must be enabled to let the board accept the Busy signal as input on the LVDS I/Os.
	Options are:
	0 = disabled;
	1 = enabled.
	NOTE : this bit is supported only by VME boards and meaningful only if the LVDS new features
	are enabled (bit[8]=1 of register 0x811C, see Sec. 1.26), the LVDS I/O mode is set to
	nBusy/nVeto (see register 0x81AO, Sec. 1.39), and the LVDS I/Os are set as inputs (see register
	0x811C, Sec. 1.26).
	0x011c, 5cc. 1.20j.

[9]	LVDS I/O Veto Enable (VME only). Default value is 0. The LVDS I/Os can be programmed to accept a Veto signal as input, or to transfer it as output. Options are: 0 = disabled (default); 1 = enabled.
	NOTE : this bit is supported only by VME boards and meaningful only if the LVDS new features are enabled (bit[8]=1 of register 0x811C, see Sec. 1.26). Register 0x81A0 (see Sec. 1.39) should also be configured for nBusy/nVeto.
[10]	Reserved.
[11]	LVDS I/O RunIn Enable Mode (VME only) and START ON EDGE Enable for S-IN/GPI CONTROLLED Mode. - If LVDS CONTROLLED MODE is set (bit[1:0] = 0b11) and acquisition is armed (bit[2] = 1), this bit let the LVDS I/Os be set to accept a RunIn signal to control the acquisition upon two options. One is start/stop on level, where the start of the RUN is given at RunIn signal level high and the stop at RunIn signal level low. The other is start on edge, where the start of the RUN is given on the rising edge of the RunIn signal, while the Stop must be only on software command: 0 = starts on RunIn level (default); 1 = starts on RunIn rising edge. NOTE: this bit is meaningful only if the LVDS new features are enabled (bit[8]=1 of register 0x811C, see Sec. 1.26). Register 0x81AO (see Sec. 1.39) must also be configured for nBusy/nVeto. NOTE: this register is valid from ROC FPGA fw revision 4.16 on. - If S-IN/GPI CONTROLLED Mode is set (bit[1:0] = 0b01) and acquisition is armed (bit[2] = 1): 0 = Start/Stop run on S-IN/GPI level (default); 1 = Start run on S-IN/GPI rising edge (stop must be by software command: bit[2] = 0). NOTE: options bit[11] = 1 is valid from ROC FPGA fw revision 4.22 on.
[12]	VetoIn as veto for TRG-OUT (VME boards only). When the LVDS VetoIn signal is enabled (bit[9] = 1 in the 0x8100 register), this bit permits to use VetoIn to inhibit the triggers on TRG-OUT connector. The duration of the veto signal on TRG-OUT can be optionally extended by a time value set in the 0x81C4 register (see Sec. 1.42). Such function is useful in particular cases of synchronization of a multi-board system. Options are: 0 = VetoIn not used (default) 1 = VetoIn used for TRG-OUT inhibit NOTE: this bit is reserved in case of Desktop and NIM digitizers or ROC FPGA firmware rel. < 4.16.
[31:13]	Reserved.
[]	

1.20 Acquisition Status

This register monitors a set of conditions related to the acquisition status.

Address 0x8104 Mode R Attribute C

Bit	Description
[1:0]	Reserved.
[2]	Acquisition Status. It reflects the status of the acquisition and drivers the front panel 'RUN' LED. Options are: 0 = acquisition is stopped ('RUN' is off);
[3]	 1 = acquisition is running ('RUN' lits). Event Ready. Indicates if any events are available for readout. Options are: 0 = no event is available for readout; 1 = at least one event is available for readout. NOTE: the status of this bit must be considered when managing the readout from the digitizer.
[4]	Event Full. Indicates if the board memory has reached the FULL condition (i.e. maximum number of storable events). Options are: 0 = the board is not FULL; 1 = the board is FULL.
[5]	Clock Source. Indicates the clock source status. Options are: 0 = internal (PLL uses the internal 50 MHz oscillator as reference); 1 = external (PLL uses the external clock on CLK-IN connector as reference).
[6]	Reserved.
[7]	PLL Unlock Detect. This bit flags a PLL unlock condition. Options are: 0 = PLL has had an unlock condition since the last register read access; 1 = PLL has not had any unlock condition since the last register read access. NOTE: flag can be restored to 1 via read access to register 0xEF04 (see Sec. 1.44).
[8]	Board Ready. This flag indicates if the board is ready for acquisition (PLL and ADCs are correctly synchronized). Options are: 0 = board is not ready to start the acquisition; 1 = board is ready to start the acquisition. NOTE: this bit should be checked after software reset to ensure that the board will enter immediately in run mode after the RUN mode setting; otherwise, a latency between RUN mode setting and Acquisition start might occur.
[14:9]	Reserved.
[15]	S-IN (VME boards) or GPI (DT/NIM boards) Status. Reads the logical level on S-IN (GPI) front panel connector.
[16]	TRG-IN Status. Reads the logical level on TRG-IN front panel connector.
[18:17]	Reserved.
[19]	Channels Shutdown Status. This bit monitors the shutdown of the channels according to bit[8] of register 0x1n88 (see Sec. 1.10) and the procedure described at 0x81C0 register (see Sec. 1.41). Options are: 0 = channels are ON; 1 = channels are in shutdown.

	Bits[23:20] (bits[21:20] in case of DT, NIM and 8-channel VME versions) monitor the
	temperature status of the board channels. Each bit refers to a 4-channel mezzanine, i.e.
	bit[20] refers to channels 3-0, bit[21] to channels 7-4, and so on. When at least one of the
	channels in the mezzanine exceeds the 70°C limit (85°C in case of x725S/x730S models), the
	relevant bit is set automatically to 1. As soon as at least one of these bits becomes 1, the
	board enters the temperature protection condition which causes the automatic channel
	turn-off and the acquisition RUN stop (if it was on):
	1. Bit[19] becomes 1.
[23:20]	2. Bit[2] of register 0x8100 (see Sec. 1.19) is automatically set to 0. Data possibly stored at
	the moment can be readout in any case.
	When all the bits[23:20] (bits[21:20]) become 0, the board exits the temperature protection
	condition. This means that the channel temperature reached at least 61°C (74°C in case of
	x725S/x730S models). The user has then to turn on the board channels and the acquisition
	RUN (if necessary):
	1. Bit[0] of register 0x81C0 (see Sec. 1.41) must be set to 0 (bit[19] of register 0x8104
	becomes 0).
	2. Bit[2] of register 0x8100 (see Sec. 1.19) must be set to 1.
[[[]]	Reserved.
[31:24]	NOTE: in case of DT, NIM and 8-channel VME boards, bits[31:22] are reserved.
	NOTE: IT case of 51, Milit and 5 chainer vivie sounds, bits[51:22] are reserved.

1.21 Software Trigger

Writing this register causes a software trigger generation which is propagated to all the enabled channels of the board.

Address 0x8108 Mode W Attribute C

Bit	Description
[31:0]	Write whatever value to generate a software trigger.

1.22 Global Trigger Mask

This register sets which signal can contribute to the global trigger generation.

Address 0x810C Mode R/W Attribute C

Bit	Description
[7:0]	Bit n corresponds to the trigger request from couple n that participates to the global trigger generation (n = 0,,3 for DT, NIM and 8-channel VME boards; n = 0,,7 for 16-channel VME boards). Options are: 0 = trigger request does not participate to the global trigger generation; 1 = trigger request participates to the global trigger generation. Couple n corresponds to the two consecutive channels 2n and 2n+1: couple 0 is channel 0 and channel 1, couple 1 is channel 2 and channel 3, and so on. The trigger request from the couple can be programmed through register 0x1n84 (see Sec. 1.9) to be the AND/OR/one of the channels.
	NOTE : in case of DT, NIM and 8-channel VME boards, only bits[3:0] are meaningful, while bits[7:4] are reserved.
[19:8]	Reserved. NOTE: in case of DT, NIM and 8-channel VME Boards, bits[19:4] are reserved.
[23:20]	Majority Coincidence Window. Sets the time window for the majority coincidence in units of the Trigger Clock (8 ns for 730 and 725). Majority level must be set different from 0 through bits[26:24].
[26:24]	Majority Level. Sets the majority level for the global trigger generation. For a level m, the trigger fires when at least m+1 of the enabled trigger requests (bits[7:0] or [3:0]) are over-threshold inside the majority coincidence window (bits[23:20]).
	NOTE : The majority level must be smaller than the number of channel enabled via bits[7:0] mask (or [3:0]).
[27]	TRG-IN used as gate. When enabled the TRG-IN is in logic AND with the channel self-trigger, which acquire when TRG-IN is high. Options are: 0 = TRG-IN in logic OR with the enabled channels and SW trigger (default); 1 = TRG-IN in logic AND the enabled channels. NOTE: this bit must be used in conjuction with bit[10] of register 0x811C (see Sec. 1.26). NOTE: this bit is reserved for ROC FPGA firmware release less than 4.9.
[28]	Reserved.
[29]	LVDS Trigger (VME boards only). When enabled, the trigger from LVDS I/O participates to the global trigger generation (in logic OR). Options are: 0 = disabled; 1 = enabled.
[30]	External Trigger (default value is 1). When enabled, the external trigger on TRG-IN participates to the global trigger generation in logic OR with the other enabled signals. Options are: 0 = disabled; 1 = enabled.
[31]	Software Trigger (default value is 1). When enabled, the software trigger participates to the global trigger signal generation in logic OR with the other enabled signals. Options are: 0 = disabled; 1 = enabled.

1.23 Front Panel TRG-OUT (GPO) Enable Mask

This register sets which signal can contribute to generate the signal on the front panel TRG-OUT LEMO connector (GPO in case of DT and NIM boards).

Address 0x8110 Mode R/W Attribute C

Bit	Description
[7:0]	This mask sets the trigger requests participating in the TRG-OUT (GPO) signal. Bit n corresponds to the trigger request from couple n (n=0,,3 in case of DT, NIM and 8-channel VME boards; n = 0,, 7 in case of 16-channel VME boards). Options are: 0 = Trigger request does not participate to the TRG-OUT (GPO) signal; 1 = Trigger request participates to the TRG-OUT (GPO) signal. Couple n corresponds to the two consecutive channels 2n and 2n+1: couple 0 is channel 0 and channel 1, couple 1 is channel 2 and channel 3, and so on. The trigger request from the couple can be programmed through register 0x1n84 (see Sec. 1.9) to be the AND/OR/one of the two channels. NOTE: In case of DT, NIM and 8-channels VME boards, only bits[3:0] are meaningful while
[9:8]	bis[7:4] are reserved. TRG-OUT (GPO) Generation Logic. The enabled trigger requests (bits [7:0] or [3:0]) can be combined to generate the TRG-OUT (GPO) signal. Options are: 00 = OR; 01 = AND; 10 = Majority; 11 = Reserved.
[12:10]	Majority Level. Sets the majority level for the TRG-OUT (GPO) signal generation. Allowed level values are between 0 and 7 for VME boards, while between 0 and 3 for DT, NIM and 8-channel VME boards. For a level m, the trigger fires when at least m+1 of the trigger requests are generated by the enabled couples of channels (bits [7:0] or [3:0]).
[28:13]	Reserved.
[29]	LVDS Trigger Enable (VME boards only). LVDS connectors programmed as inputs (according to registers 0x811C and 0x81A0, see respectively Sec. 1.26 and Sec. 1.39) can participate in the TRG-OUT (GPO) signal generation, in logic OR with the other enabled signals. Options are: 0 = disabled; 1 = enabled.
[30]	External Trigger (default value is 1). When enabled, the external trigger on TRG-IN can participate in the TRG-OUT (GPO) signal generation in logic OR with the other enabled signals. Options are: 0 = disabled; 1 = enabled.
[31]	Software Trigger (default value is 1). When enabled, the software trigger can participate in the TRG-OUT (GPO) signal generation in logic OR with the other enabled signals. Options are: 0 = disabled; 1 = enabled.

1.24 Post Trigger

The value of this register is used to set the number of post-trigger samples, that is the number of further samples that are written by the FPGA in the channel memory, when a trigger occurs, before to freeze the buffer. The number of post trigger samples is:

Npost = PostTriggerValue * N + ConstantLatency

where:

Npost = number of post trigger samples.

PostTriggerValue = content of this register.

N = coefficient to be multiplied by the PostTriggerValue (N = 8 for 730 and N = 4 for 725).

ConstantLatency = constant number of samples added due to the latency associated to the trigger processing logic in the ROC FPGA. The value of this constant depends on the trigger source used and can change between different firmware revisions.

Address 0x8114 Mode R/W Attribute C

Bit	Description
[31:0]	PostTriggerValue.

1.25 LVDS I/O Data

This register allows to read out the logic level of the LVDS I/Os if the LVDS pins are configured as outputs, and to set the logic level of the LVDS I/Os if the pins are configured as inputs.

NOTE: this register is supported by VME boards only.

Address 0x8118 Mode R/W Attribute C

Bit	Description
[15:0]	LVDS I/O Data (VME boards only). It is the logic level of the corresponding nth LVDS I/O to read out or write, according to its direction (0x811C, bit[5:2], see Sec. 1.26). A write operation sets the corresponding pin logic state if configured as output, while a read operation returns the logic state of the corresponding pin if configured as input. In case of Old LVDS I/O Features (0x811C, bit[8] = 0, see Sec. 1.26), the general purpose I/O option must be set (0x811C, bit[7:6] = 00, see Sec. 1.26). In case of New LVDS I/O Features (0x811C, bit[8] = 1, see Sec. 1.26), REGISTER mode must be set (0000 option in the 0x81AO register, see Sec. 1.39).
[31:16]	Reserved.

1.26 Front Panel I/O Control

This register manages the front panel I/O connectors. Default value is 0x000000.

Address 0x811C Mode R/W Attribute C

Bit	Description
[0]	LEMO I/Os Electrical Level. This bit sets the electrical level of the front panel LEMO connectors: TRG-IN, TRG-OUT (GPO in case of DT and NIM boards), S-IN (GPI in case of DT and NIM boards). Options are: 0 = NIM I/O levels; 1 = TTL I/O levels.
[1]	TRG-OUT Enable (VME boards only). Enables the TRG-OUT LEMO front panel connector. Options are: 0 = enabled (default); 1 = high impedance.
[2]	NOTE: this bit is reserved in case of DT and NIM boards. LVDS I/O [3:0] Direction (VME boards only). Sets the direction of the signals on the first 4-pin group of the LVDS I/O connector. Options are: 0 = input; 1 = output. NOTE: this bit is reserved in case of DT and NIM boards.
[3]	LVDS I/O [7:4] Direction (VME boards only). Sets the direction of the second 4-pin group of the LVDS I/O connector. Options are: 0 = input; 1 = output.
[4]	NOTE: this bit is reserved in case of DT and NIM boards. LVDS I/O [11:8] Direction (VME boards only). Sets the direction of the third 4-pin group of the LVDS I/O connector. Options are: 0 = input; 1 = output.
	NOTE: this bit is reserved in case of DT and NIM boards. LVDS I/O [15:12] Direction (VME boards only). Sets the direction of the fourth 4-pin group of
[5]	the LVDS I/O connector. Options are: 0 = input; 1 = output.
[7:6]	NOTE: this bit is reserved in case of DT and NIM boards. LVDS I/O Signal Configuration (VME boards only). Valid for old LVDS I/O features only (0x811C, bit[8] = 0, see Sec. 1.26). Options are: 00 = general purpose I/Os: LVDS I/Os work as register; I/O direction is configured through bit[5:2]; the logic level is read out or set in the 0x8118 register (see Sec. 1.25). 01 = programmed I/Os: direction and function of the LVDS signals are fixed (see the tabled signal pinout in the digitizer User Manual [RD1]). 10 = pattern mode: LVDS signals are inputs and their value is written into the header PATTERN field of the event (see the digitizer User Manual [RD1]); 11 = reserved. NOTE: these bits are reserved in case of DT and NIM boards.

	LVDS I/O New Features Selection (VME boards only).
	Options are:
	0 = LVDS old features;
	1 = LVDS new features.
[8]	The new features options can be configured through register 0x81A0. Please, refer to the
	User Manual for all details [RD1].
	NOTE IVIDE I/O New Feet was setting to call if from weath ordered from the call in 2.0 and
	NOTE : LVDS I/O New Features option is valid from motherboard firmware revision 3.8 on.
	NOTE : this bit is reserved in case of DT and NIM boards.
	LVDS I/Os Pattern Latch Mode (VME boards only).
	Options are:
	0 = Pattern (i.e. 16-pin LVDS status) is latched when the (internal) global trigger is sent to
[9]	channels, in consequence of an external trigger. It accounts for post-trigger settings and input
[-]	latching delays;
	1 = Pattern (i.e. 16-pin LVDS status) is latched when an external trigger arrives.
	NOTE: this bit is reserved in case of DT and NIM boards.
	TRG-IN control. The board trigger logic can be synchronized either with the edge of the
	TRG-IN signal, or with its whole duration.
[10]	NOTE : this bit must be used in conjunction with bit[11] = 0.
[10]	Outhorn
	Options are:
	0 = trigger is synchronized with the edge of the TRG-IN signal;
	1 = trigger is synchronized with the whole duration of the TRG-IN signal.
	TRG-IN to Mezzanines (channels).
	Options are:
[11]	0 = the TRG-IN signal is processed by the motherboard and sent to mezzanine (default). The
[11]	trigger logic is then synchronized with TRG-IN;
	1 = TRG-IN is directly sent to the mezzanines with no mother board processing nor delay.
	NOTE: if this bit is set to 1, then bit[10] is ignored.
[13:12]	NOTE: if this bit is set to 1, then bit[10] is ignored. Reserved.
[13:12]	· · · · · · · · ·
[13:12]	Reserved.
[13:12]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test
	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1.
	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are:
	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0;
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1.
	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode.
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are:
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]);
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1= TRG-OUT (GPO) is a test logic level set via bit[14].
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection.
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are:
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 0 = Trigger: TRG-OUT/GPO propagates the internal trigger sources according to register
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23);
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 0 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 0 = Trigger: TRG-OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18];
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation.
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 0 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe);
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG-OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO). Options are:
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG-OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO).
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO). Options are: 00 = RUN/delayedRUN: this is the RUN in case of ROC FPGA firmware rel. less than 4.12. This probe can be selected according to bit[20].
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO). Options are: 00 = RUN/delayedRUN: this is the RUN in case of ROC FPGA firmware rel. less than 4.12. This probe can be selected according to bit[20]. 01 = CLKOUT: this clock is synchronous with the sampling clock of the ADC and this option can
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 0 = Trigger: TRG-OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO). Options are: 00 = RUN/delayedRUN: this is the RUN in case of ROC FPGA firmware rel. less than 4.12. This probe can be selected according to bit[20]. 01 = CLKOUT: this clock is synchronous with the sampling clock of the ADC and this option can be used to align the phase of the clocks in different boards;
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG- OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 00 = Trigger: TRG- OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO). Options are: 00 = RUN/delayedRUN: this is the RUN in case of ROC FPGA firmware rel. less than 4.12. This probe can be selected according to bit[20]. 01 = CLKOUT: this clock is synchronous with the sampling clock of the ADC and this option can
[14]	Reserved. Force TRG-OUT (GPO). This bit can force TRG-OUT (GPO in case of DT and NIM boards) test logical level if bit[15] = 1. Options are: 0 = Force TRG-OUT (GPO) to 0; 1 = Force TRG-OUT (GPO) to 1. TRG-OUT (GPO) Mode. Options are: 0 = TRG-OUT (GPO) is an internal signal (according to bits[17:16]); 1 = TRG-OUT (GPO) is a test logic level set via bit[14]. TRG-OUT (GPO) Mode Selection. Options are: 0 = Trigger: TRG-OUT/GPO propagates the internal trigger sources according to register 0x8110 (see Sec. 1.23); 01 = Motherboard Probes: TRG-OUT/GPO is used to propagate signals of the motherboards according to bits[19:18]; 10 = Channel Probes: TRG-OUT/GPO is used to propagate signals of the mezzanines (Channel Signal Virtual Probe); 11 = S-IN (GPI) propagation. Motherboard Virtual Probe Selection (to be propagated on TRG-OUT/GPO). Options are: 00 = RUN/delayedRUN: this is the RUN in case of ROC FPGA firmware rel. less than 4.12. This probe can be selected according to bit[20]. 01 = CLKOUT: this clock is synchronous with the sampling clock of the ADC and this option can be used to align the phase of the clocks in different boards;

[20]	According to bits[19:18], this bit selects the probe to be propagated on TRG-OUT. If bits[19:18] = 00, then bit[20] options are: 0 = RUN, the signal is active when the acquisition is running and it is synchronized with the start run. This option must be used to synchronize the start/stop of the acquisition through the TRG-OUT->TR-IN or TRG-OUT->S-IN (GPI) daisy chain. 1 = delayedRUN. This option can be used to debug the synchronization when the start/stop is propagated through the LVDS I/O (VME boards). If bits[19:18] = 11, then bit[20] options are: 0 = Board BUSY; 1 = PLL Lock Loss. NOTE: this bit is reserved in case of ROC FPGA firmware rel. 4.5 or lower.
	NOTE : this bit corresponds to BUSY/UNLOCK for ROC FPGA firmware rel. less than 4.12.
	Pattern Configuration. Configures the information given by the 16-bit PATTERN field in the header of the event format (TRG OPTIONS field in case of DT and NIM boards). Option are: 00 = PATTERN: 16-bit pattern latched on the 16 LVDS signals as one trigger arrives (default); NOTE: 00 is meaningless in case of DT and NIM boards.
[22:21]	01 = EVENT TRIGGER SOURCE: 16-bit PATTERN/TRG OPTIONS indicates the trigger source causing the event acquisition; 10 = EXTENDED TRIGGER TIME TAG: enables the Trigger Time Tag information over 48 bits. The 16 most significant bits are given by the 16-bit PATTERN/TRG OPTIONS field, while the remaining 32 ones are given by the TRIGGER TIME TAG information in the header of the event format (roll-over bit is not managed). 11 = NOT USED: if configured, it acts like 00 setting.
	NOTE : Refer to the Event Structure section of the digitizer User Manual for a complete information [RD1] [RD2].
[31:23]	Reserved.
[31:23]	Reserved.

1.27 Channel Enable Mask

This register enables/disables selected channels to participate in the event readout. Disabled channels are not operative.

WARNING: this register must not be modified while the acquisition is running.

Address 0x8120 Mode R/W Attribute C

Bit	Description
[15:0]	Channel Enable Mask. Bit n can enable/disable channel n to participate in the event readout. Options are: 0 = disabled; 1 = enabled. NOTE: bits[15:8] are reserved in case of DT, NIM and 8-channel VME boards.
[31:16]	Reserved.

1.28 ROC FPGA Firmware Revision

This register contains the motherboard FPGA (ROC) firmware revision information. The complete format is:

Firmware Revision = X.Y (16 lower bits)

Firmware Revision Date = Y/M/DD (16 higher bits)

EXAMPLE 1: revision 3.08, November 12th, 2007 is 0x7B120308.

EXAMPLE 2: revision 4.09, March 7th, 2016 is 0x03070409.

NOTE: the nibble code for the year makes this information to roll over each 16 years.

Address 0x8124 Mode R Attribute C

Bit	Description
[7:0]	ROC Firmware Minor Revision Number (Y).
[15:8]	ROC Firmware Major Revision Number (X).
[31:16]	ROC Firmware Revision Date (Y/M/DD).

1.29 Event Stored

This register contains the number of events currently stored in the Output Buffer.

NOTE: the value of this register cannot exceed the maximum number of available buffers according to the register address 0x800C (see Sec. **1.16**).

Address 0x812C Mode R Attribute C

Bit	Description
[31:0]	Number of the current events stored in the Output Buffer.

1.30 Voltage Level Mode Configuration

When the Voltage Level Mode is enabled (bit[2:0] = 100 (bin) of register 0x8144, see Sec. **1.33**), this register sets the DAC value to be provided on the front panel MON/Sigma output LEMO connector: 1 LSB = 0.244 mV, terminated on 50 Ohm.

NOTE: this register is supported by VME boards only.

Address 0x8138 Mode R/W Attribute C

Bit	Description
[11:0]	DAC Voltage Setting (VME boards only). The corresponding output value is multiplied by 0.244 mV.
[31:12]	Reserved

1.31 Software Clock Sync

At power-on, a Sync command is issued by the firmware to the ADCs to synchronize all of them to the clock of the board. In the standard operating, this command is not required to be repeated by the user.

A write access to this register (any value) forces the PLL to re-align all the clock outputs with the reference clock.

EXAMPLE: in case of Daisy chain clock distribution among VME boards, during the initialization and configuration, the reference clocks along the Daisy chain can be unstable and a temporary loss of lock may occur in the PLLs; although the lock is automatically recovered once the reference clocks return stable, it is not guaranteed that the phase shift returns to a known state. This command allows the board to restore the correct phase shift between the CLK-IN and the internal clocks.

NOTE: this register is supported by VME boards only.

NOTE: the command must be issued starting from the first to the last board in the clock chain.

NOTE: if a Sync command is intentionally issued, the user must consider that a new channels calibration procedure is needed for a correct board operating (see 0x809C, Sec. **1.18**).

Address 0x813C Mode W Attribute C

Bit	Description
[31:0]	Write whatever value to generate a Sync command.

1.32 Board Info

This register contains the specific information of the board, such as the digitizer family, the channel memory size and the channel density.

Address 0x8140 Mode R Attribute C

Bit	Description
	Digitizer Family Code.
[7:0]	Options are:
[7.0]	0x0E = 725 digitizer family;
	0x0B = 730 digitizer family.
	Channel Memory Size Code.
[15:8]	Options are:
[15.6]	0x01 = 640 kS acquisition memory per channel;
	0x08 = 5.12 MS acquisition memory per channel.
	Equipped Channels Number.
	Options are:
	0x10 = 16 channels (VME boards);
[23:16]	0x08 = 8 channels (DT, NIM and 8-channel VME boards).
	NOTE : if this number is lower than the physical channels number, there could be a
	communication problem with some of the mezzanines.
[31:24]	Reserved.

1.33 Analog Monitor Mode

This register selects which output mode is provided on the MON/Sigma front panel LEMO connector.

NOTE: this register is supported by VME boards only.

Address 0x8144 Mode R/W Attribute C

Bit	Description
	Analog Monitor Mode (VME boards only).
	Options are:
	000 = Trigger Majority mode;
	001 = Test mode;
[2:0]	010 = reserved;
	011 = Buffer Occupancy mode;
	100 = Voltage Level mode;
	Others = reserved.
	Please, refer to the digitizer User Manual for a detailed description [RD1].
[31:3]	Reserved.

1.34 Event Size

This register contains the current available event size in 32-bit words. The value is updated after a complete readout of each event.

Address 0x814C Mode R Attribute C

Bit	Description
[31:0]	Event Size (32-bit words).

1.35 Fan Speed Control

This register manages the on-board fan speed in order to guarantee an appropriate cooling according to the internal temperature variations.

NOTE: from revision 4 of the motherboard PCB (register 0xF04C of the Configuration ROM, see Sec. **1.74**), the automatic fan speed control has been implemented, and it is supported by ROC FPGA firmware revision greater than 4.4 (see register 0x8124, Sec. **1.28**).

Independently of the revision, the user can set the fan speed high by setting bit[3] = 1. Setting bit[3] = 0 will restore the automatic control for revision 4 or higher, or the low fan speed in case of revisions lower than 4.

NOTE: this register is supported by Desktop (DT) boards only.

Address 0x8168 Mode R/W Attribute C

Bit	Description
[2:0]	Reserved: Must be 0.
	Fan Speed Mode.
[3]	Options are:
[5]	0 = slow speed or automatic speed tuning;
	1 = high speed.
[5:4]	Reserved: Must be 1.
[31:6]	Reserved: Must be 0.

1.36 Memory Buffer Almost Full Level

This register allows to set the level for the Almost Full generation. The written value (ALMOST FULL LEVEL) represents the number of buffers that must be full of data before to assert the BUSY signal. This register takes part in the BUSY propagation among multiple boards.

NOTE: if this register is set to 0, the ALMOST FULL is a FULL.

For the Almost Full description, please refer to the Acquisition Synchronization section of the digitizer User Manual [RD1] [RD2].

Address	0x816C
Mode	R/W
Attribute	С

Bit	Description
[10:0]	ALMOST FULL LEVEL.
[31:11]	Reserved.

1.37 Run/Start/Stop Delay

This register sets the delay in the Start Run of the board either the command is issued by software, or by hardware through a single-ended (via S-IN/GPI or TRG-IN connectors) or differential (via LVDS I/O connector) input signal. This delay especially occurs in the daisy chain propagation of the run signal in a multi-board system. The latency, mainly due to the cable length and the board's internal circuitry, can be compensated by properly delaying the start of run for each board in the chain. The delay value to set is usually zero for the last board and rises going backwards along the chain.

Address 0x8170 Mode R/W Attribute C

Bit	Description
[7:0]	Delay value in steps of 8 ns for 730 and 725.
[31:8]	Reserved.

1.38 Board Failure Status

This register informs on the cause of a board fail. In event of a failure, bit[26] in the second word of the event format header is set to 1 during data readout (refer to the event structure description in the User Manual of the digitizer [RD1] [RD2]). Reading at this register checks which kind of error occurred.

NOTE: in case of problems with the board, the user is recommended to contact CAEN for support.

Address 0x8178 Mode R Attribute C

Bit	Description
[3:0]	Reserved.
	PLL Lock Loss.
[4]	Options are:
[4]	0 = no error;
	1 = PLL Lock Loss occurred.
	Temperature Failure.
[5]	Options are:
[5]	0 = no error;
	1 = Temperature Failure occurred (i.e. at least one channel is in over-temperature condition).
	ADC Power Down.
	Options are:
[6]	0 = no error;
	1 =ADC Power Down occurred (i.e. at least one channel is in power down mode due to an
	automatic over-temperature protection).
[31:7]	Reserved.

1.39 Front Panel LVDS I/O New Features

If the LVDS I/O new features are enabled (bit[8] = 1 of 0x811C, see Sec. 1.26), this register programs the functions of the front panel LVDS I/O 16-pin connector. It is possible to configure the LVDS I/O pins by group of four (4). Options are:

1) 0000 = REGISTER, where the four LVDS I/O pins act as register (read/write according to the configured input/output option);

2) 0001 = TRIGGER, where each group of four LVDS I/O pins can be configured to receive an input trigger for each channel (DPP Firmware only), or to propagate out the trigger request;

3) 0010 = nBUSY/nVETO, where each group of four LVDS I/O pins can be configured as inputs (0 = nBusyIn, 1 = nVetoIn, 2 = nTrigger In, 3 = nRun In) or as outputs (0 = nBusy, 1 = nVeto, 2 = nTrigger Out, 3 = nRun I);

4) 0011 = LEGACY, that is to say according to the old LVDS I/O configuration (i.e. ROC FPGA firmware revisions lower than 3.8), where the LVDS can be configured as 0 = nclear TTT, and 1 = 2 = 3 = reserved in case of input LVDS setting, while they can be configured as 0 = Busy, 1 = Data ready, 2 = Trigger, 3 = Run in case of output LVDS setting. Please refer to the Front Panel LVDS I/Os section of the digitizer User Manual for detailed description [RD1].

NOTE: LVDS I/O new features are supported from ROC FPGA firmware revision 3.8 on.

NOTE: this register is supported by VME boards only.

Address 0x81A0 Mode R/W Attribute C

Bit	Description
[3:0]	LVDS I/O pins[3:0] Configuration.
[7:4]	LVDS I/O pins[7:4] Configuration.
[11:8]	LVDS I/O pins[11:8] Configuration
[15:12]	LVDS I/O pins[15:12] Configuration.
[16]	This bit permits selecting whether the nTrigger signal, when configured as output (in nBusy/nVeto LVDS I/O mode), is a copy of the signal sent on the TRG-OUT connector or a copy of the acquisition common trigger. Options are: 0 = nTrigger output is a copy of TRG-OUT signal 1 = nTrigger output is a copy of the acquisition common trigger. NOTE: this bit is reserved for ROC FPGA firmware revisions less than 4.9.
[31:17]	Reserved.

1.40 Buffer Occupancy Gain

If the Buffer Occupancy Mode is selected (bit[2:0] = 011 of 0x8144, see Sec. **1.33**), the LEMO MON/Sigma output connector provides a voltage level whose amplitude increases in fixed steps exactly with the number of events in the event buffer. Each step of the output voltage level is 0.976 mV. A gain can be applied to the step by this register. Allowed values are in the range [0:A]. The default value, 0, means no gain applied while writing 0xn means that the fixed step is 0.976*2ⁿ mV.

NOTE: this register is supported from ROC FPGA firmware revision 4.9 on.

NOTE: this register is supported by VME boards only.

Address 0x81B4 Mode R/W Attribute C

Bit	Description
[3:0]	Buffer Occupancy Gain.
[31:4]	Reserved.

1.41 Channels Shutdown

This register allows to switch on all the channels of the board after they have been switched off by the automatic shutdown procedure. Channels must be switched on only once the board exits the temperature protection condition.

NOTE: bit[0] is forced to 1 while the board remains in the temperature protection condition.

NOTE: it is not recommended to use this register to shutdown the channels (bit[0] = 1) when the board is out of the temperature protection condition.

Address 0x81C0 Mode W Attribute C

Bit	Description
	Channels Shutdown.
[0]	Options are:
[ن]	0 = no shutdown command is issued;
	1 = a shutdown command is issued.
[31:1]	Reserved.

1.42 Extended Veto Delay

This register is valid for VME boards only and set the duration of the Extended VetoIn signal for trigger inhibit on TRG-OUT when bit[12]=1 of 0x8100 register (see Sec. **1.19**). Such function is useful in particular cases of synchronization of a multi-board system.

NOTE: This register is valid from ROC FPGA fw revision 4.16 on.

Address 0x81C4 Mode R/W Attribute C

Bit	Description
[15:0]	Extended VetoIn duration value in units of Trigger Clock (8 ns for 730 and 725).
[31:16]	Reserved.

1.43 Readout Control

This register is mainly intended for VME boards, anyway some bits are applicable also for DT and NIM boards.

Address 0xEF00 Mode R/W Attribute C

Bit	Description
	VME Interrupt Level (VME boards only).
	Options are:
[2:0]	0 = VME interrupts are disabled;
	1,,7 = sets the VME interrupt level.
	NOTE: these bits are reserved in case of DT and NIM boards.
	Optical Link Interrupt Enable.
[3]	Options are:
[0]	0 = Optical Link interrupts are disabled;
	1 = Optical Link interrupts are enabled.
	VME Bus Error / Event Aligned Readout Enable (VME boards only).
	Options are:
	0 = VME Bus Error / Event Aligned Readout disabled (the module sends a DTACK signal until
[4]	the CPU inquires the module);
	1 = VME Bus Error / Event Aligned Readout enabled (the module is enabled either to generate a Bus Error to finish a block transfer or during the empty buffer readout in D32).
	a bus error to milish a block transfer of during the empty burier readout in 052).
	NOTE : this bit is reserved (must be 1) in case of DT and NIM boards.
	VME Align64 Mode (VME boards only).
	Options are:
[5]	0 = 64-bit aligned readout mode disabled;
	1 = 64-bit aligned readout mode enabled.
	NOTE: this bit is reserved (must be 0) in case of DT and NIM boards.
	VME Base Address Relocation (VME boards only).
	Options are:
[6]	0 = Address Relocation disabled (VME Base Address is set by the on-board rotary switches);
	1 = Address Relocation enabled (VME Base Address is set by register 0xEFOC, see Sec. 1.46).
	NOTE: this bit is reserved (must be 0) in case of DT and NIM boards.
	Interrupt Release mode (VME boards only).
	Options are:
	0 = Release On Register Access (RORA): this is the default mode, where interrupts are
	removed by disabling them either by setting VME Interrupt Level to 0 (VME Interrupts) or by
	setting Optical Link Interrupt Enable to 0;
[7]	1 = Release On Acknowledge (ROAK). Interrupts are automatically disabled at the end of a
	VME interrupt acknowledge cycle (INTACK cycle).
	NOTE: ROAK mode is supported only for VME interrupts. ROAK mode is not supported on
	interrupts generated over Optical Link.
	NOTE: this bit is reserved (must be 0) in case of DT and NIM boards.
	•

[8]	Extended Block Transfer Enable (VME boards only). Selects the memory interval allocated for block transfers. Options are: 0 = Extended Block Transfer Space is disabled, and the block transfer region is a 4kB in the 0x0000 - 0x0FFC interval; 1 = Extended Block Transfer Space is enabled, and the block transfer is a 16 MB in the 0x00000000 - 0xFFFFFFFC interval. NOTE: in Extended mode, the board VME Base Address is only set via the on-board [31:28] rotary switches or bits[31:28] of register 0xEF10 (see Sec. 1.47). NOTE: this register is reserved in case of DT and NIM boards.
[31:9]	Reserved.

1.44 Readout Status

This register contains information related to the readout.

Address 0xEF04 Mode R Attribute C

Bit	Description
[0]	Event Ready. Indicates if there are events stored ready for readout. Options are: 0 = no data ready; 1 = event ready.
[1]	Reserved.
[2]	Bus Error (VME boards) / Slave-Terminated (DT/NIM boards) Flag. Options are: 0 = no Bus Error occurred (VME boards) or no terminated transfer (DT/NIM boards); 1 = a Bus Error occurred (VME boards) or one transfer has been terminated by the digitizer in consequence of an unsupported register access or block transfer prematurely terminated in event aligned readout (DT/NIM). NOTE: this bit is reset after register readout at 0xEF04.
[3]	VME FIFO Flag. Options are: 0 = VME FIFO not empty; 1 = VME FIFO is empty.
[31:4]	Reserved.

1.45 Board ID

The meaning of this register depends on which VME crate it is inserted in.

In case of VME64X crate versions, this register can be accessed in read mode only and it contains the GEO address of the module picked from the backplane connectors; when CBLT is performed, the GEO address will be contained in the Board ID field of the Event header (see the User Manual for further details [RD1]).

In case of other crate versions, this register can be accessed both in read and write mode, and it allows to write the correct GEO address (default setting = 0) of the module before CBLT operation. GEO address will be contained in the Board ID field of the Event header (see the User Manual for further details [RD1]).

NOTE: this register is supported by VME boards only.

Address 0xEF08 Mode R/W Attribute C

Bit	Description
[4:0]	GEO Address (VME boards only).
[31:5]	Reserved.

1.46 MCST Base Address and Control

This register configures the board for the VME Multicast Cycles.

NOTE: this register is supported by VME boards only.

Address OxEFOC Mode R/W Attribute C

Bit	Description
[7:0]	These bits contain the most significant bits of the MCST/CBLT address of the module set via
[7.0]	VME, that is the address used in MCST/CBLT operations.
	Board Position in Daisy chain.
	Options are:
[0.0]	00 = board disabled;
[9:8]	01 = last board;
	10 = first board;
	11 = intermediate board.
[31:10]	Reserved.

1.47 Relocation Address

If address relocation is enabled through register 0xEF00 (bit[6] = 1, see Sec. 1.43), this register sets the VME Base Address of the module.

NOTE: this register is supported by VME boards only.

Address 0xEF10 Mode R/W Attribute C

Bit	Description
[15:0]	These bits contain the A31A16 bits of the address of the module. If bit[6] = 1 of 0xEF00 (see
	Sec. 1.43), they set the VME Base Address of the module.
[31:16]	Reserved.

1.48 Interrupt Status/ID

This register contains the STATUS/ID that the module places on the VME data bus during the Interrupt Acknowledge cycle.

NOTE: this register is supported by VME boards only.

Address 0xEF14 Mode R/W Attribute C

Bit	Description
[31:0]	STATUS/ID (VME boards only).

1.49 Interrupt Event Number

This register sets the number of events that causes an interrupt request. If interrupts are enabled, the module generates a request whenever it has stored in memory a Number of Events > INTERRUPT EVENT NUMBER.

Address 0xEF18 Mode R/W Attribute C

Bit	Description
[9:0]	INTERRUPT EVENT NUMBER.
[31:10]	Reserved.

1.50 Max Number of Events per BLT

This register sets the maximum number of complete events which has to be transferred for each block transfer (via VME BLT/CBLT cycles, or block readout through USB or Optical Link).

Address OxEF1C Mode R/W Attribute C

Bit	Description
[9:0]	MAX NUM EVENT PER BLT.
[31:10]	Reserved.

1.51 Scratch

This register can be used to write/read words for test purposes.

Address 0xEF20 Mode R/W Attribute C

Bit	Description
[31:0]	SCRATCH.

1.52 Software Reset

All the digitizer registers can be set back to their default values on software reset command by writing any value at this register, or by system reset from backplane in case of VME boards.

Address 0xEF24 Mode W Attribute C

Bit	Description
[31:0]	Whatever value written at this location issues a software reset. All registers are set to their
	default values (actual settings are lost).

1.53 Software Clear

All the digitizer internal memories are cleared:

- automatically by the firmware at the start of each run;
- on software command by writing at this register;
- by hardware (VME boards only) through the LVDS interface properly configured.

A clear command does not change the registers actual value, except for resetting the following registers:

- Event Stored;
- Event Size;
- Channel / Group n Buffer Occupancy.

This register resets also the trigger time stamp.

Address 0xEF28 Mode W Attribute C

Bit	Description
[31:0]	Whatever value written at this location generates a software clear.

1.54 Configuration Reload

A write access of any value at this location causes a software reset, a reload of Configuration ROM parameters and a PLL reconfiguration.

Address 0xEF34 Mode W Attribute C

Bit	Description
[31:0]	Write whatever value to perform a software reset, a reload of Configuration ROM parameters
	and a PLL reconfiguration.

1.55 Configuration ROM Checksum

This register contains information on 8-bit checksum of Configuration ROM space.

Address 0xF000 Mode R Attribute C

Bit	Description
[7:0]	Checksum.
[31:8]	Reserved.

1.56 Configuration ROM Checksum Length BYTE 2

This register contains information on the third byte of the 3-byte checksum length (i.e. the number of bytes in Configuration ROM to checksum).

Address 0xF004 Mode R Attribute C

Bit	Description
[7:0]	Checksum Length: bits[23:16].
[31:8]	Reserved.

1.57 Configuration ROM Checksum Length BYTE 1

This register contains information on the second byte of the 3-byte checksum length (i.e. the number of bytes in Configuration ROM to checksum).

Address 0xF008 Mode R Attribute C

Bit	Description
[7:0]	Checksum Length: bits[15:8].
[31:8]	Reserved.

1.58 Configuration ROM Checksum Length BYTE 0

This register contains information on the first byte of the 3-byte checksum length (i.e. the number of bytes in Configuration ROM to checksum).

Address 0xF00C Mode R Attribute C

Bit	Description
[7:0]	Checksum Length: bits[7:0].
[31:8]	Reserved.

1.59 Configuration ROM Constant BYTE 2

This register contains the third byte of the 3-byte constant.

Address 0xF010 Mode R Attribute C

Bit	Description
[7:0]	Constant: bits[23:16] = 0x83.
[31:8]	Reserved.

1.60 Configuration ROM Constant BYTE 1

This register contains the second byte of the 3-byte constant.

Address 0xF014 Mode R Attribute C

Bit	Description
[7:0]	Constant: bits[15:8] = 0x84.
[31:8]	Reserved.

1.61 Configuration ROM Constant BYTE 0

This register contains the first byte of the 3-byte constant.

Address 0xF018 Mode R Attribute C

Bit	Description
[7:0]	Constant: bits[7:0] = 0x01.
[31:8]	Reserved.

1.62 Configuration ROM C Code

This register contains the ASCII C character code (identifies this as CR space).

Address 0xF01C Mode R Attribute C

Bit	Description
[7:0]	ASCII 'C' Character Code.
[31:8]	Reserved.

1.63 Configuration ROM R Code

This register contains the ASCII R character code (identifies this as CR space).

Address 0xF020 Mode R Attribute C

Bit	Description
[7:0]	ASCII 'R' Character Code.
[31:8]	Reserved.

1.64 Configuration ROM IEEE OUI BYTE 2

This register contains information on the third byte of the 3-byte IEEE Organizationally Unique Identifier (OUI).

Address 0xF024 Mode R Attribute C

Bit	Description
[7:0]	IEEE OUI: bits[23:16].
[31:8]	Reserved.

1.65 Configuration ROM IEEE OUI BYTE 1

This register contains information on the second byte of the 3-byte IEEE Organizationally Unique Identifier (OUI).

Address 0xF028 Mode R Attribute C

Bit	Description
[7:0]	IEEE OUI: bits[15:8].
[31:8]	Reserved.

1.66 Configuration ROM IEEE OUI BYTE 0

This register contains information on the first byte of the 3-byte IEEE Organizationally Unique Identifier (OUI).

Address 0xF02C Mode R Attribute C

	Bit	Description
	[7:0]	IEEE OUI: bits[7:0].
Γ	[31:8]	Reserved.

1.67 Configuration ROM Board Version

This register contains the board version information.

Address 0xF030 Mode R Attribute C

Bit	Description
	Board Version Code.
	Options are:
	0xF0 = V1725/VX1725/DT5725/N6725;
	0xF1 = V1725B/VX1725B/DT5725B/N6725B;
	0xF2 = V1725C/VX1725C;
	0xF3 = V1725D/VX1725D;
	0xF4 = V1725S/VX1725S/DT5725S/N6725S;
	0xF5 = V1725BS/VX1725BS/DT5725BS/N6725BS;
[7:0]	0xF6 = V1725CS/VX1725CS;
[7.0]	0xF7 = V1725DS/VX1725DS;
	0xC0 = V1730/VX1730/DT5730/N6730;
	0xC1 = V1730B/VX1730B/DT5730B/N6730B;
	0xC2 = V1730C/VX1730C;
	0xC3 = V1730D/VX1730D;
	0xC4 = V1730S/VX1730S/DT5730S/N6730S;
	0xC5 = V1730BS/VX1730BS/DT5730BS/N6730BS;
	0xC6 = V1730CS/VX1730CS;
	0xC7 = V1730DS/VX1730DS.
[31:8]	Reserved.

1.68 Configuration ROM Board Form Factor

This register contains the information of the board form factor.

Address 0xF034 Mode R Attribute C

Bit	Description
	Board Form Factor CAEN Code.
	Options are:
[7.0]	0x00 = VME64;
[7:0]	0x01 = VME64X;
	0x02 = Desktop;
	0x03 = NIM.
[31:8]	Reserved.

1.69 Configuration ROM Board ID BYTE 1

This register contains the MSB of the 2-byte board identifier.

Address 0xF038 Mode R Attribute C

Bit	Description
[7:0]	Board Number ID: bits[15:8].
[31:8]	Reserved.

1.70 Configuration ROM Board ID BYTE 0

This register contains the LSB information of the 2-byte board identifier.

Address 0xF03C Mode R Attribute C

Bit	Description
[7:0]	Board Number ID: bits[7:0].
[31:8]	Reserved.

1.71 Configuration ROM PCB Revision BYTE 3

This register contains information on the fourth byte of the 4-byte hardware revision.

Address 0xF040 Mode R Attribute C

	Bit	Description
Γ	[7:0]	PCB Revision: bits[31:24].
Γ	[31:8]	Reserved.

1.72 Configuration ROM PCB Revision BYTE 2

This register contains information on the third byte of the 4-byte hardware revision.

Address 0xF044 Mode R Attribute C

Bit	Description
[7:0]	PCB Revision: bits[23:16].
[31:8]	Reserved.

1.73 Configuration ROM PCB Revision BYTE 1

This register contains information on the second byte of the 4-byte hardware revision.

Address 0xF048 Mode R Attribute C

Bit	Description
[7:0]	PCB Revision: bits[15:8].
[31:8]	Reserved.

1.74 Configuration ROM PCB Revision BYTE 0

This register contains information on the first byte of the 4-byte hardware revision.

Address 0xF04C Mode R Attribute C

Bit	Description
[7:0]	PCB Revision: bits[7:0].
[31:8]	Reserved.

1.75 Configuration ROM FLASH Type

This register contains information on which FLASH type (storing the FPGA firmware) is present on-board.

Address 0xF050 Mode R Attribute C

Bit	Description
[7:0]	FLASH Type. Options are: 0x00 = 8 Mb FLASH; 0x01 = 32 Mb FLASH; 0x02 = 64 Mb FLASH. NOTE: for x730 and x725 digitizers, this byte must be 0x01; for x730S and x725S models, it
	must be 0x02.
[31:8]	Reserved.

1.76 Configuration ROM Board Serial Number BYTE 1

This register contains information on the MSB of the board serial number.

Address 0xF080 Mode R Attribute C

Bit	Description
[7:0]	Board Serial Number: bits[15:8].
[31:8]	Reserved.

1.77 Configuration ROM Board Serial Number BYTE 0

This register contains information on the LSB of the board serial number.

Address 0xF084 Mode R Attribute C

Bit	Description
[7:0]	Board Serial Number: bits[7:0].
[31:8]	Reserved.

1.78 Configuration ROM VCXO Type

This register contains information on which type of VCXO is present on-board.

Address 0xF088 Mode R Attribute C


Bit	Description
	VCXO Type Code.
	Options for VME Digitizers are:
	0 = AD9510 with 1 GHz;
[31:0]	1 = AD9510 with 500 MHz (not programmable);
	2 = AD9510 with 500 MHz (programmable).
	Options for Desktop/NIM Digitizers are:
	Reserved (value = 0).

2 Technical Support

To contact CAEN specialists for requests on the software, hardware, and board return and repair, it is necessary a MyCAEN+ account on www.caen.it:

https://www.caen.it/support-services/getting-started-with-mycaen-portal/

All the instructions for use the Support platform are in the document:

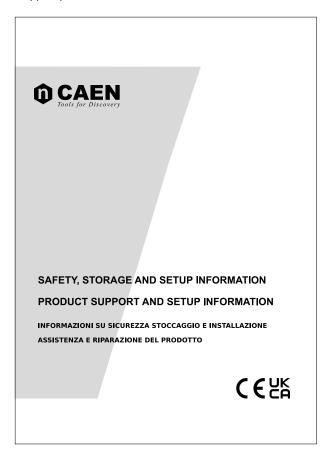

A paper copy of the document is delivered with CAEN boards. The document is downloadable for free in PDF digital format at:

https:/www.caen.it/safety-information-product-support





CAEN S.p.A.

Via Vetraia 11 55049 - Viareggio Italy Phone +39 0584 388 398 Fax +39 0584 388 959 info@caen.it www.caen.it



CAEN GmbH

Brunnenweg 9
64331 Weiterstadt
Germany
Phone +49 212 254 40 77
Fax +49 212 254 40 79
info@caen-de.com
www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101 Staten Island, NY 10305 USA

Phone: +1 (718) 981-0401 Fax: +1 (718) 556-9185 info@caentechnologies.com www.caentechnologies.com

CAENspa INDIA Private Limited

B205, BLDG42, B Wing, Azad Nagar Sangam CHS, Mhada Layout, Azad Nagar, Andheri (W) Mumbai, Mumbai City, Maharashtra, India, 400053 info@caen-india.in www.caen-india.in



UMS118 - 725-730 Families - Waveform Recording Firmware Registers rev. 5 - January 30th, 2025 00108/12:730REG.MUTX/03

Copyright ©CAEN SpA. All rights reserved. Information in this publication supersedes all earlier versions. Specifications subject to change without notice.

