


PRODUCT SPECIFICATION

ZDK-01 Elevator Brake Power Controller

Adjustable brake-coil power controller

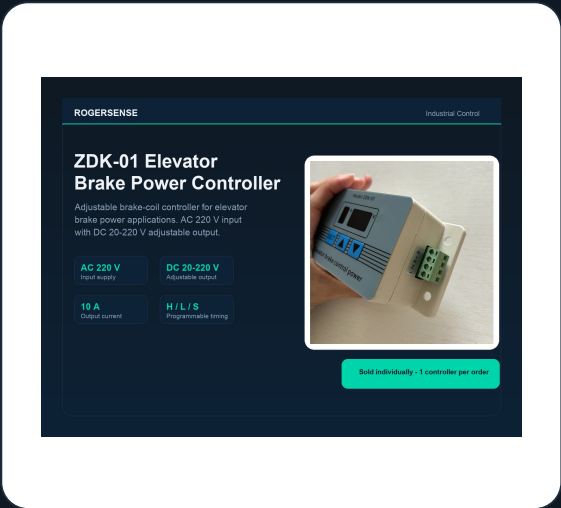


Input	AC 220 V
Output voltage	DC 20-220 V adjustable
Output current	10 A
Controls	SET, Up, Down; H / L / S parameter modes
Sales unit	1 controller per order
Use case	Elevator brake / electromagnetic brake coil control

OVERVIEW

Adjustable brake power control

The ZDK-01 Elevator Brake Power Controller is an AC-input brake power module for elevator brake and electromagnetic brake coil applications. It provides adjustable DC output and separate excitation / holding parameters so the brake coil can be energized strongly, then held at a lower voltage after the configured transfer delay.

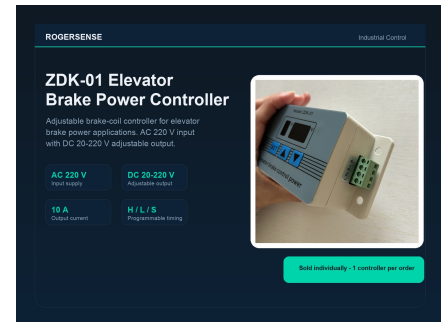

● AC 220 V input

Standard line-input brake power wiring.

● DC 20-220 V output

Adjustable output range for brake coil tuning.

● 10 A output current

Controller output current reference from supplier details.

● H / L / S setup

Excitation voltage, holding voltage, and transfer delay.

Application note

This product is an integration component for qualified elevator or industrial-control personnel. It is not a substitute for required safety circuits, certified emergency systems, or code-required inspection procedures.

SPECIFICATIONS

Electrical and interface data

Product name	Elevator brake power controller
Model	ZDK-01
Replacement note	Listing references EMK-BZ127AJ-class replacement compatibility; verify exact wiring and parameters before installation.
Input supply	AC 220 V input
Input terminals	L and N
Output terminals	B+ and B- to brake coil
Output voltage	DC 20-220 V adjustable
Output current	10 A reference from supplied listing image
Control parameters	H: excitation voltage; L: holding voltage; S: transfer interval from excitation to holding voltage
Controls	SET key for mode selection and confirmation; Up / Down keys for parameter adjustment
Example setup	Supplier manual example: H = 110 V, L = 80 V, then set S delay and save
Load during adjustment	Use a connected load while adjusting output. Manual suggests a 100 W lamp as a temporary load before connecting the brake coil.
Document source	Based on supplied product images and ZDK-01 Chinese user manual, 2024-11 edition.

WIRING

Terminal definition

Terminal map



Before wiring	Confirm input power is fully disconnected.
L / N	Connect AC 220 V input. Do not touch terminals while energized.
B+ / B-	Connect to the brake coil after output parameters are adjusted with a temporary load.
Do not mix terminals	Confusing input L/N and output B+/B- can damage the controller.
Debris control	Prevent screws, washers, wire strands, and other metal objects from entering the controller.

Qualified personnel only

Debugging, repair, inspection, and installation should be performed only by professionally qualified personnel. Always follow local elevator, electrical, and workplace-safety rules.

OPERATION

Basic H / L / S setup sequence

1

Connect power and load

Connect AC input and a suitable load. The manual suggests using a 100 W lamp during adjustment.

2

Set H excitation voltage

Press SET once until H flashes, then use Up / Down to adjust the required excitation voltage.

3

Set L holding voltage

Press SET again until L flashes, then adjust the required holding voltage.

4

Set S transfer interval

Press SET again until S flashes, then adjust the delay from excitation voltage to holding voltage.

5

Save and test

Press SET again. The controller saves the parameters and automatically runs one cycle using the saved settings.

Adjustment caution

Set and verify excitation voltage and holding voltage before connecting the final brake coil. Incorrect voltage or timing can cause overheating, weak braking release, or equipment faults.

NOTES

Integration and compliance

- **Professional installation required.** Elevator brake circuits are safety-critical. This controller must be selected, wired, configured, and inspected by qualified personnel.
- Disconnect input power completely before wiring, inspection, or maintenance.
- Verify brake-coil voltage, current, timing, heat rise, and release/hold behavior in the actual installation before service use.
- Do not use this document as a market certification, safety approval, or elevator-code approval.
- Final compliance, labeling, user instructions, inspection, and local approval remain the responsibility of the system integrator or installer.

Ordering item	ZDK-01 Elevator Brake Power Controller
Sales unit	One controller per order quantity
Online price	USD 149.00
Included resources	English product specification PDF; original product images available on request
Support	Rogersense can help review wiring, documentation, and product localization requirements.
Website	www.rogersense.com

Preliminary data note

This English specification is redrawn from supplied Chinese product references and user manual text. Confirm final production batch, supplier revision, and installation requirements before regulated-market shipment.