



SKPOP Card Dispenser & Vending Machine Mini Ver. - REMIX



MatchstickMan

[VIEW IN BROWSER](#)

updated 21. 10. 2025 | published 21. 10. 2025

Summary

Remix of sakupop's k-pop photocard vending machine.

[Hobby & Makers](#) > [Music](#)

Tags: [organizer](#) [holder](#) [card](#) [container](#) [pokemon](#) [dispenser](#) [nba](#) [vendingmachine](#) [kpop](#) [sleeved](#) [trading](#) [mlb](#) [unsleeved](#) [collect](#) [photocard](#) [luckydraw](#)

Updates

These are the changes I made to the instructions:

1. I changed the part numbering to match the part splits.
2. I added some steps for the new parts needing glued together and pushing out the deliberate support in the mouth of the body.

Pictured prints used these settings:

- 10% infill
- 0.20mm layer height

- Scarf seams on the gears, and cylindrical parts
 - Or at least random, to keep gears from binding
- Variable layer height on the Lid to keep the top nice and smooth
- NO generated supports needed

Here are the otherwise same instructions from the original post on Makerworld:

Description

The **SKPOP Card Dispenser** is designed as a k-pop photocard vending machine. The dispenser reliably dispenses 1 card at a time with the turn of a knob. Use it as your own “lucky draw” machine, or simply a playing card dispenser!

- Works for 55x85mm cards and standard sleeves (for size limit, see tray dimensions below)
- Adjustable to work with sleeved/unsleeved cards of various thicknesses
- **Larger original version here:** <https://makerworld.com/en/models/1882883-original-skpop-photocard-vending-machine#profileId-2016286>

Measurements

Overall Dimensions: 116 mm Height * 128 mm Depth * 97 mm Width
Card tray internal dimensions: 62 mm Width * 95 mm Length

Components Required

You will need the following non-printed components:

- 6x M3 screws, length between 6 and 12 mm (Alternatively, use superglue)
- 1x rubber strip, length = 115 mm (for 36mm diameter roller drum), width ~ 15 mm, thickness ~ 2 mm;
Example: <https://a.co/d/czWigbg> (Alternatively, use rubber band)

Assembly Instructions

Link to instructions with images: <https://sakupop.notion.site/Photocard-Dispenser-Mini-Assembly-Instructions-26edb1b586338023a395f527ab29e310>


1. Insert main gear [10] through the case
2. Glue [7] front roller peg into [6] front roller (it's a tight fit).

3. Install knob [5] onto the gear axle from the outside of the case, then secure with a M3 screw.
4. Insert roller gear [9] through roller gear mount [8] into roller drum [4], then secure with a M3 screw.
5. Install the roller assembly to the bottom of the card tray [3], then secure with a M3 screw.
6. Pull the support out of the mouth on the [2] case.
7. Snap front roller [6] into card tray [3]. The front roller should not rotate freely. Make sure the two notches are pointing up.
8. Install the card tray assembly into case [2], then secure with 3x M3 screws.
9. Slide on lid [1] and dispense!

Adjustment for different card types

- To use with unsleeved cards, or if multiple cards come out at once, adjust by rotating the front roller [6] 90° so that the notches point sideways. This decreases the dispensing gap to accommodate thinner cards. Rotate more (up to 180°) if needed.


This remix is based on

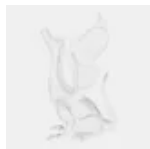

None

Model files

	STLs	10 files
	1_lid.stl	
	2_case.stl	



3_card_tray.stl




4_roller_drum.stl



5_knob.stl



6_front_roller.stl



7_front_roller_peg.stl



8_roller_gear_mount.stl



9_roller_gear.stl




10_main_gear.stl



Step files

10 files



1_lid.step



3_card_tray.step



2_case.step



4_roller_drum.step



5_knob.step



6_front_roller.step



7_front_roller_peg.step



8_roller_gear_mount.step



9_roller_gear.step



10_main_gear.step



carddispenser-remix.3mf

License

This work is licensed under a
Creative Commons (4.0 International License)



Attribution—Noncommercial—Share Alike

- ✗ | Sharing without ATTRIBUTION
- ✓ | Remix Culture allowed
- ✗ | Commercial Use
- ✗ | Free Cultural Works
- ✗ | Meets Open Definition