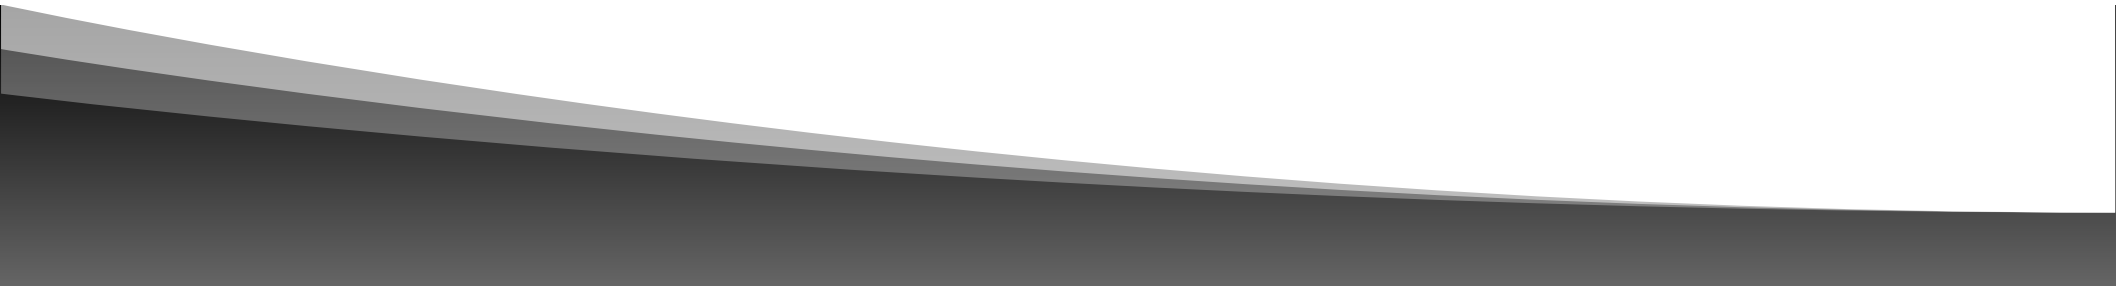# Introduction to Linux kernel driver programming + i2c drivers

e-ale

Introduction to Linux kernel driver programming: i2c drivers

The Linux kernel device model

e-ale

Authors and license

- Authors

  – Michael Opdenacker
  Founder of Bootlin (formerly Free Electrons),
  kernel and embedded Linux engineering company
  https://bootlin.com/company/staff/michael-opdenacker

- License

  – Creative Commons Attribution – Share Alike 4.0
  https://creativecommons.org/licenses/by-sa/4.0/

bootlin   e-ale

Need for a device model

- For the same device, need to use the **same device driver** on multiple CPU architectures (x86, ARM…), even though the hardware controllers are different.

- Need for a single driver to **support multiple devices** of the same kind.

- This requires a clean organization of the code, with the *device drivers* separated from the *controller drivers*, the hardware description separated from the drivers themselves, etc.

bootlin   *e-ale*

Driver: between bus infrastructure and framework

In Linux, a driver is always interfacing with:

- a *framework* that allows the driver to expose the hardware features in a generic way.

- a *bus infrastructure*, part of the device model, to detect/communicate with the hardware.

Let's focus on the bus infrastructure for now
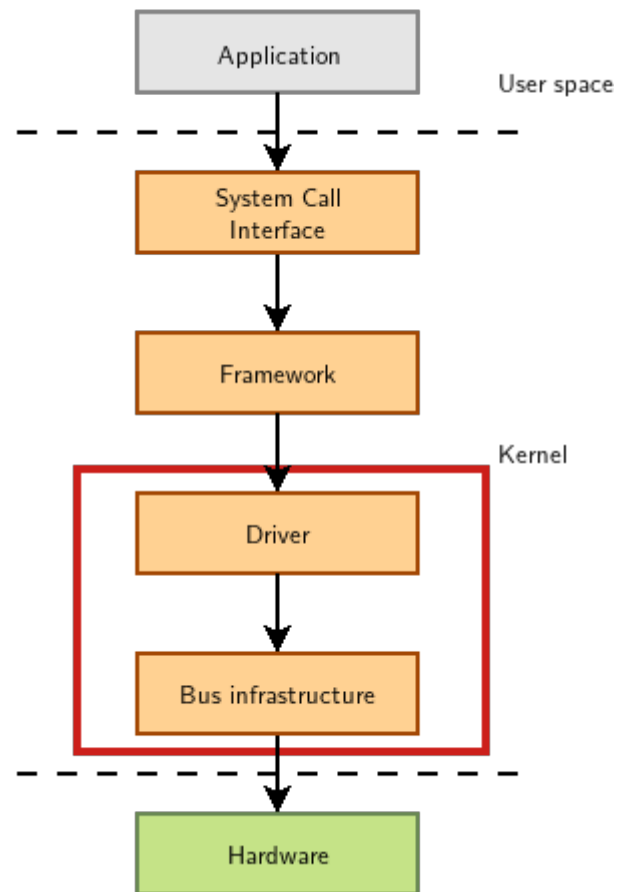
Device model data structures

The device model is organized around three main data structures:

- The `struct bus_type` structure, which represent one type of

  bus (USB, PCI, I2C, etc.)

- The `struct device_driver` structure, which represents one driver
  capable of handling certain devices on a certain bus.

- The `struct device` structure, which represents one device connected to a
  bus

The kernel uses inheritance to create more specialized versions of `struct device_driver` and `struct device` for each bus subsystem.

The bus driver

- Example: USB. Implemented in `drivers/usb/core/`

- Creates and registers the `bus_type` structure

- Provides an API to register and implement adapter drivers (here USB controllers), able to detect the connected devices and allowing to communicate with them.

- Provides an API to register and implement device drivers (here USB device drivers)

- Matches the device drivers against the devices detected by the adapter drivers.

- Defines driver and device specific structures, here mainly `struct usb_driver` and `struct usb_interface`

USB bus example
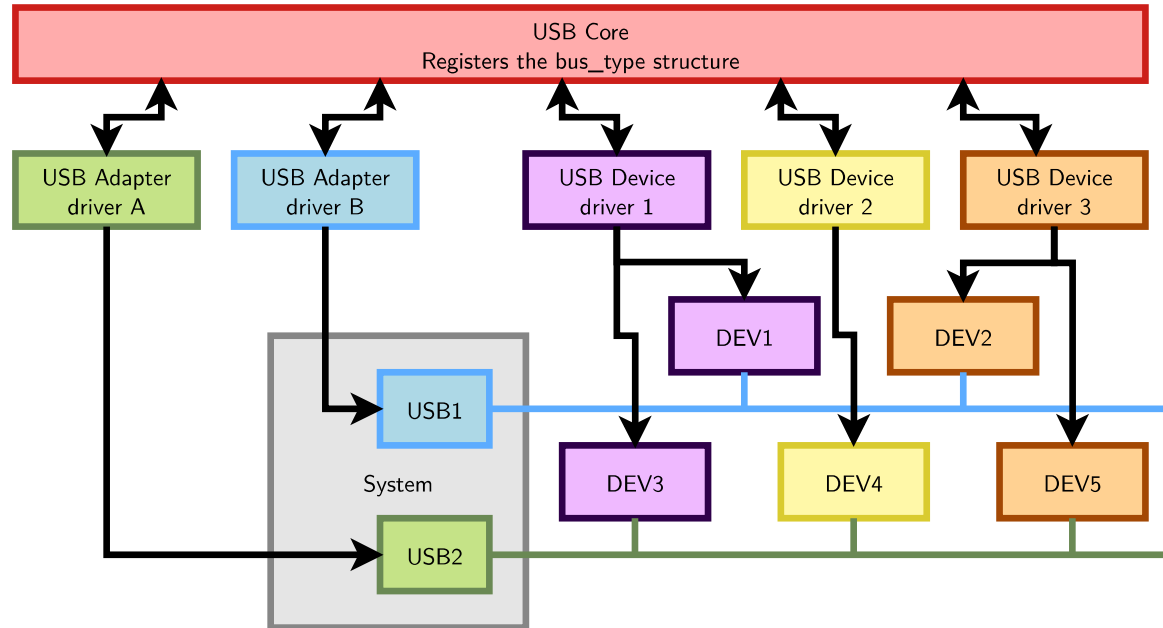
A single driver for compatible devices, though connected to buses with different controllers.

Device drivers (1)

Need to **register supported devices** to the bus core.

Example: `drivers/net/usb/rtl8150.c`

```
static struct usb_device_id rtl8150_table[] =
{{ USB_DEVICE(VENDOR_ID_REALTEK, PRODUCT_ID_RTL8150) },
{ USB_DEVICE(VENDOR_ID_MELCO, PRODUCT_ID_LUAKTX) },
{ USB_DEVICE(VENDOR_ID_MICRONET, PRODUCT_ID_SP128AR) },
{ USB_DEVICE(VENDOR_ID_LONGSHINE, PRODUCT_ID_LCS8138TX) },[…]
{}
};
MODULE_DEVICE_TABLE(usb, rtl8150_table);
```

Device drivers (2)

Need to register **hooks to manage devices** (newly detected or removed ones), as well as to react to power management events (suspend and resume)

```
static struct usb_driver rtl8150_driver = {
.name = "rtl8150",
.probe = rtl8150_probe,
.disconnect = rtl8150_disconnect,
.id_table = rtl8150_table,
.suspend = rtl8150_suspend,
.resume = rtl8150_resume
};
```

Device drivers (3)

The last step is to **register the driver structure to the bus core**.

```
static int __init usb_rtl8150_init(void)
{
return usb_register(&rtl8150_driver);
}
static void __exit usb_rtl8150_exit(void)
{
usb_deregister(&rtl8150_driver);
}
module_init(usb_rtl8150_init);
module_exit(usb_rtl8150_exit);
```

Note: this code has now been replaced by a shorter `module_usb_driver()` macro.

Now the bus driver knows the association between the devices and the device driver.

bootlin   e-ale

Work in the probe() function

`probe()` is called for each newly matched device

- Initialize the device

- Prepare driver work: allocate a structure for a suitable framework, allocate memory, map I/O memory, register interrupts…

- When everything is ready, register the new device to the framework.
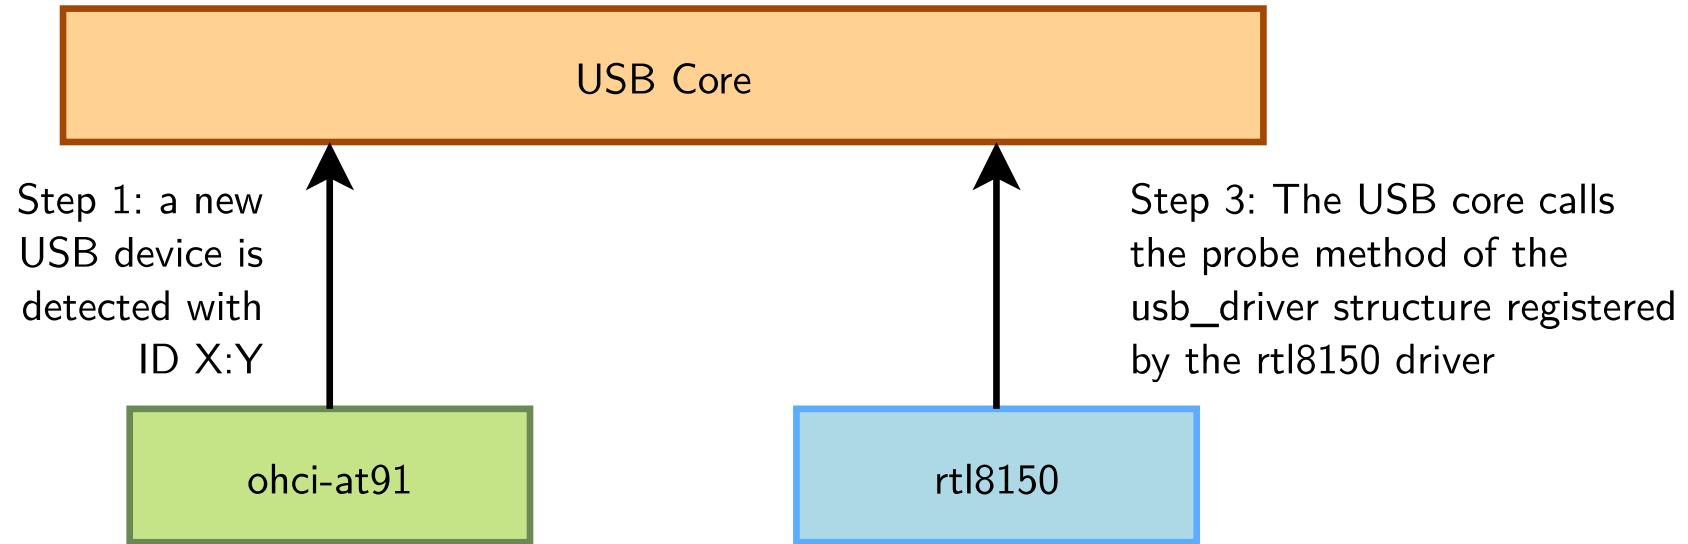
bootlin   *e-ale*

At driver loading time

- The USB adapter driver that corresponds to the USB controller registers itself to the USB core

- The `rtl8150` USB device driver registers itself to the USB core

- The USB core now knows the association between the vendor/product IDs of `rtl8150` and the `struct usb_driver` structure of this driver
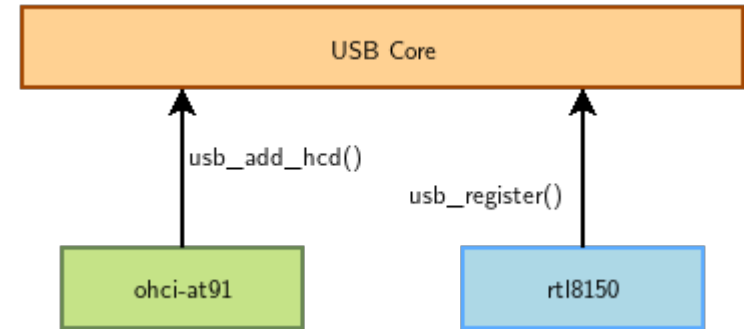
When a device is detected

Step 2: USB core looks
up the registered IDs, and
finds the matching driver

USB Core

Step 1: a new
USB device is
detected with
ID X:Y

Step 3: The USB core calls
the probe method of the
usb_driver structure registered
by the rtl8150 driver

ohci-at91

rtl8150

bootlin

e-ale

The model is recursive
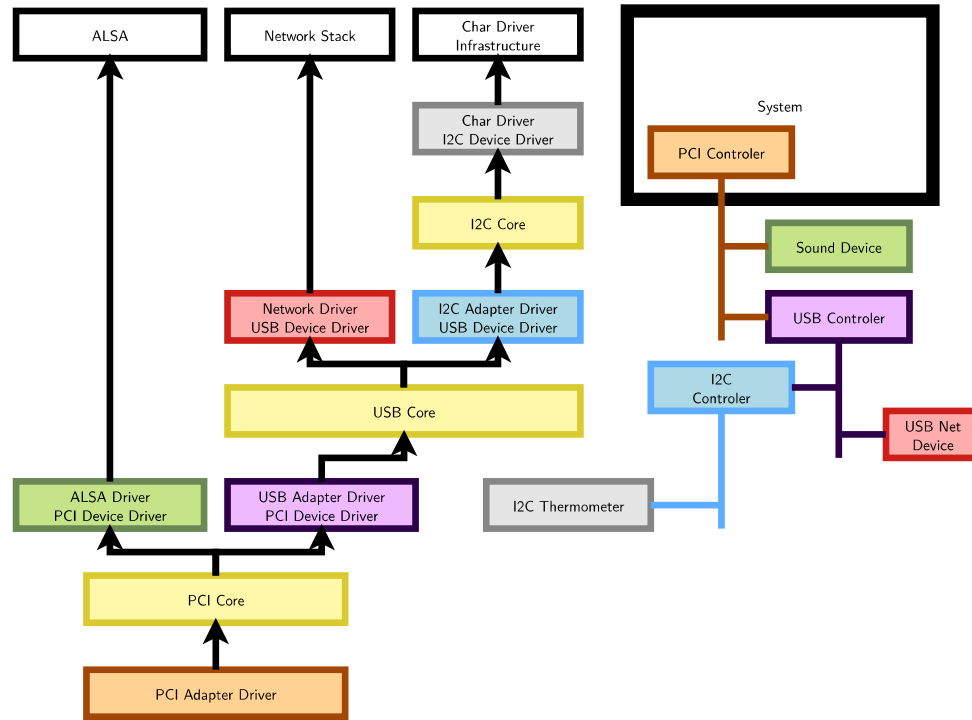
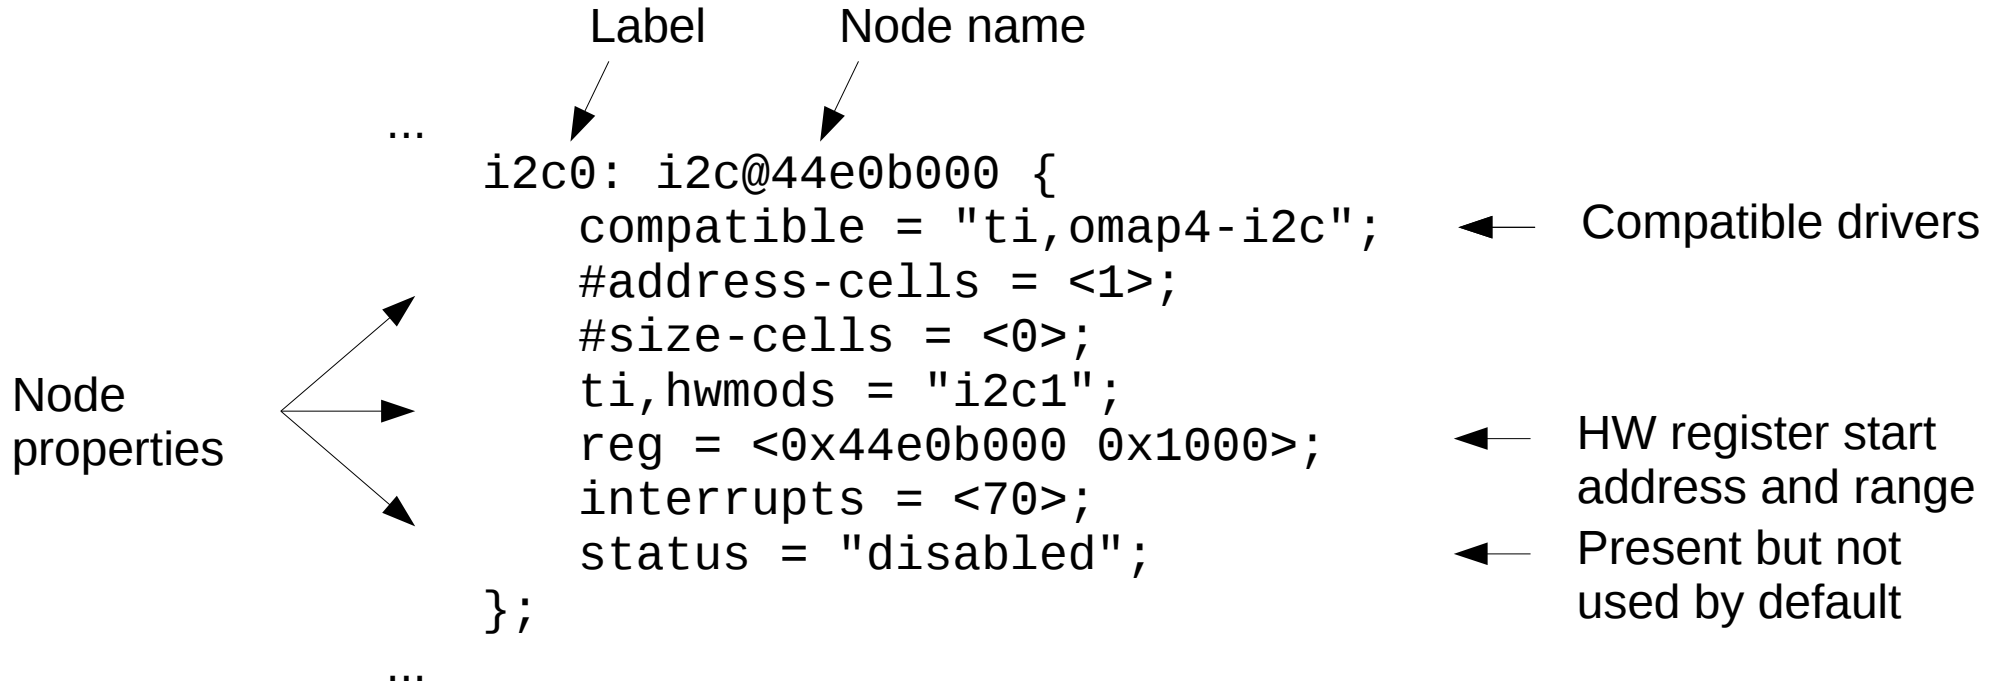Adapter drivers are device drivers too!

Platform devices and drivers

- Want to use the Device Model for devices that are not on buses that can auto-detect devices (very frequent in embedded systems)

- Examples: UARTs, flash memory, LEDs, GPIOs, MMC/SD, Ethernet…

- Solution:

1) Provide a description of devices

2) Manage them through a fake bus: the `platform` bus.

3) Drive the platform devices

Describing non-detectable devices

- Description through a Device Tree (on ARM, PowerPC, ARC…)

- In `arch/arm/boot/dts/` on ARM

- Two parts:
  - Device Tree Source (`.dts`)
    One per board to support in the Linux kernel
    Advantage: no need to write kernel code to support a new board
    (if all devices are supported).

  - Device Tree Source Includes (`.dtsi`)
    Typically to describe devices on a particular SoC,
    or devices shared between similar SoCs or boards

- Other method for describing non-detectable devices: ACPI
  (on x86 platforms). Not covered here.

bootlin   e-ale

Declaring a device: .dtsi example

Label   Node name

...

```
i2c0: i2c@44e0b000 {
    compatible = "ti,omap4-i2c";      ←   Compatible drivers
    #address-cells = <1>;
    #size-cells = <0>;
    ti,hwmods = "i2c1";
    reg = <0x44e0b000 0x1000>;        ←   HW register start
    interrupts = <70>;                    address and range
    status = "disabled";              ←   Present but not
};                                        used by default
```

Node
properties

...

From arch/arm/boot/dts/am33xx.dtsi

bootlin   e-ale

Instantiating a device: .dts example

Phandle
(reference
to label)

```
&i2c0 {
        pinctrl-names = "default";
        pinctrl-0 = <&i2c0_pins>;

        status = "okay";
        clock-frequency = <400000>;

        tps: tps@24 {
                reg = <0x24>;
        };

        baseboard_eeprom: baseboard_eeprom@50 {
                compatible = "at,24c256";
                reg = <0x50>;

                #address-cells = <1>;
                #size-cells = <1>;
                baseboard_data: baseboard_data@0 {
                        reg = <0 0x100>;
                };
        };
};
```

← Pin muxing configuration
(routing to external package pins)

← Enabling this device, otherwise ignored
← Node property: frequency

← List of devices on i2c0

← I2C bus identifier

From arch/arm/boot/dts/am335x-boneblue.dts

bootlin   e-ale

Pin multiplexing

- Modern SoCs have too many hardware blocks compared to physical pins exposed on the chip package.

- Therefore, pins have to be multiplexed

- Pin configurations are defined in the Device Tree

- Correct pin multiplexing is mandatory to make a device work from an electronic point of view.
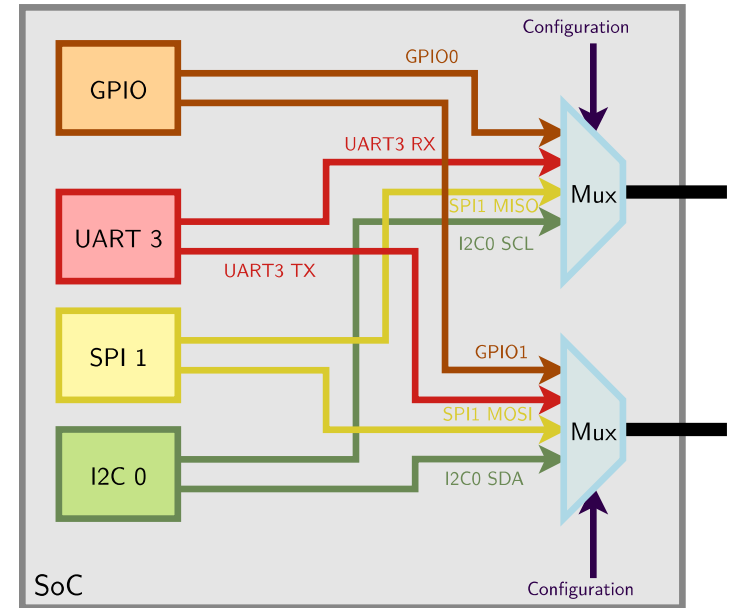
DT pin definitions

```
&am33xx_pinmux {
    ...
    i2c0_pins: pinmux_i2c0_pins {
        pinctrl-single,pins = <
            AM33XX_IOPAD(0x988, PIN_INPUT_PULLUP | MUX_MODE0)      /* (C17) I2C0_SDA.I2C0_SDA */
            AM33XX_IOPAD(0x98c, PIN_INPUT_PULLUP | MUX_MODE0)      /* (C16) I2C0_SCL.I2C0_SCL */
        >;
    };

    ...
};

...

&i2c0 {
    pinctrl-names = "default";
    pinctrl-0 = <&i2c0_pins>;

    status = "okay";
    clock-frequency = <400000>;
    ...
};
```

From arch/arm/boot/dts/am335x-boneblue.dts

bootlin   e-ale

DT: matching devices and drivers

Platform drivers are matched with platform devices that have the same `compatible` property.

```
static const struct of_device_id omap_i2c_of_match[] = {
        {
                .compatible = "ti,omap4-i2c",
                .data = &omap4_pdata,
        },
        {
…
};
…
static struct platform_driver omap_i2c_driver = {
        .probe          = omap_i2c_probe,
        .remove         = omap_i2c_remove,
        .driver         = {
                .name   = "omap_i2c",
                .pm     = OMAP_I2C_PM_OPS,
                .of_match_table = of_match_ptr(omap_i2c_of_match),
        },
};
```

From drivers/i2c/busses/i2c-omap.c

bootlin   e-ale

Usage of the platform bus

Like for physical buses, the platform bus is used by the driver to retrieve information about each device

```
static int omap_i2c_probe(struct platform_device *pdev)
{
    ...
    struct device_node      *node = pdev→dev.of_node;
    struct omap_i2c_dev     *omap;
    ...
    irq = platform_get_irq(pdev, 0);

    ...
    omap = devm_kzalloc(&pdev->dev, sizeof(struct omap_i2c_dev), GFP_KERNEL);
    ...
    mem = platform_get_resource(pdev, IORESOURCE_MEM, 0);
    omap->base = devm_ioremap_resource(&pdev->dev, mem);
    u32 freq = 100000; /* default to 100000 Hz */

    ...
    of_property_read_u32(node, "clock-frequency", &freq);

    ...
    return 0;
}
```

From drivers/i2c/busses/i2c-omap.c

bootlin   e-ale
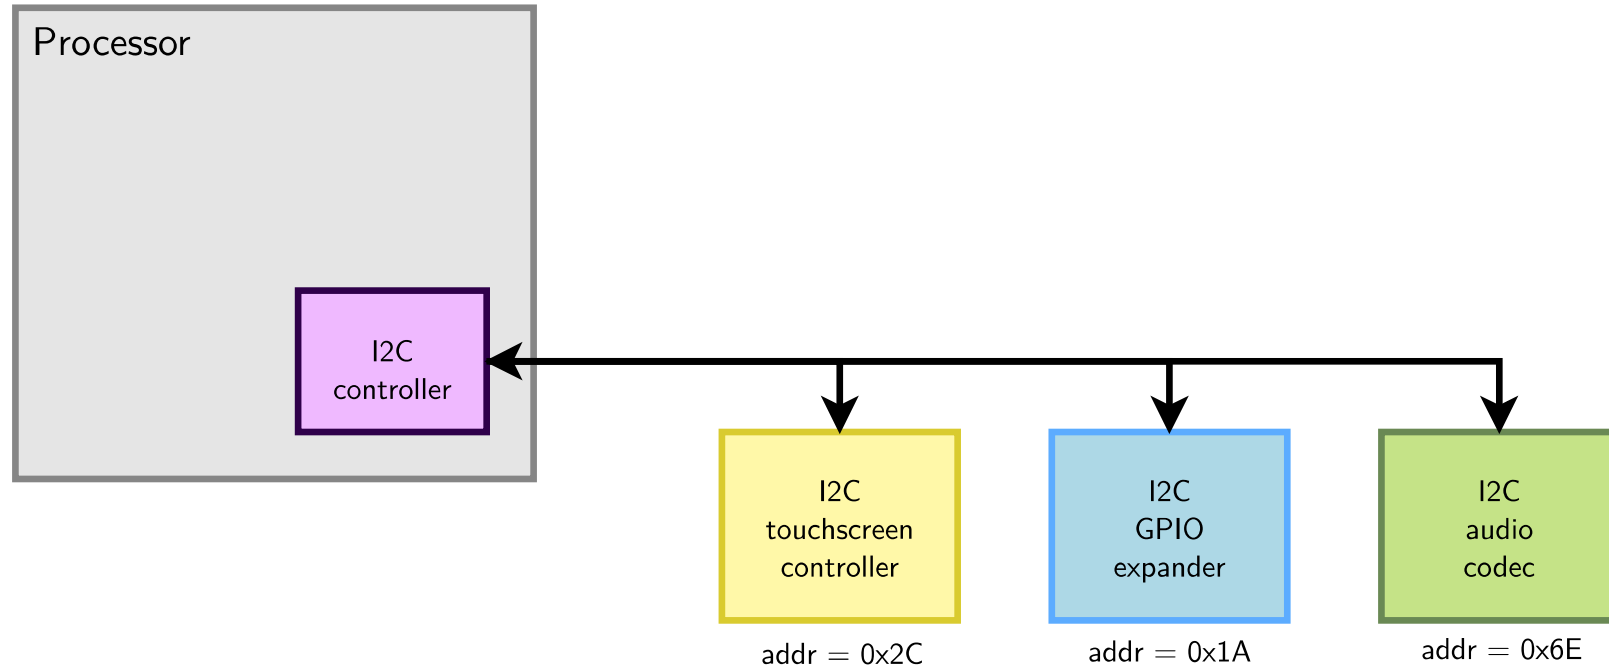
Device tree bindings

- *Device tree bindings* provide a specification of properties that a driver expects in a DT

- Bindings are available in `Documentation/devicetree/bindings` in kernel sources.

- To know how to set device properties, look for a binding for the same compatible string:

```
$ git grep "ti,omap4-i2c" Documentation/devicetree/bindings/
```

The I2C bus

- A very commonly used low-speed bus to connect on-board and external devices to the processor.

- Uses only two wires: SDA for the data, SCL for the clock.

- It is a master/slave bus: only the master can initiate transactions, and slaves can only reply to transactions initiated by masters.

- In a Linux system, the I2C controller embedded in the processor is typically the master, controlling the bus.

- Each slave device is identified by a unique I2C address. Each transaction initiated by the master contains this address, which allows the relevant slave to recognize that it should reply to this particular transaction.

bootlin   e-ale

I2C bus example

Processor

I2C
controller

I2C
touchscreen
controller

addr = 0x2C

I2C
GPIO
expander

addr = 0x1A

I2C
audio
codec

addr = 0x6E

bootlin

e-ale

I2C drivers: probe() function

```c
static int mma7660_probe(struct i2c_client *client,
                         const struct i2c_device_id *id)
{
        int ret;
        struct iio_dev *indio_dev;
        struct mma7660_data *data;

        indio_dev = devm_iio_device_alloc(&client->dev, sizeof(*data));
        if (!indio_dev) {
                dev_err(&client->dev, "iio allocation failed!\n");
                return -ENOMEM;
        }

        data = iio_priv(indio_dev);
        data->client = client;
        i2c_set_clientdata(client, indio_dev);
        mutex_init(&data->lock);
        data->mode = MMA7660_MODE_STANDBY;

        indio_dev->dev.parent = &client->dev;
        indio_dev->info = &mma7660_info;
        indio_dev->name = MMA7660_DRIVER_NAME;
        indio_dev->modes = INDIO_DIRECT_MODE;
        indio_dev->channels = mma7660_channels;
        indio_dev->num_channels = ARRAY_SIZE(mma7660_channels);

        ret = mma7660_set_mode(data, MMA7660_MODE_ACTIVE);
        if (ret < 0)
                return ret;

        ret = iio_device_register(indio_dev);
        if (ret < 0) {
                dev_err(&client->dev, "device_register failed\n");
                mma7660_set_mode(data, MMA7660_MODE_STANDBY);
        }

        return ret;
}
```

`device` structure for the i2c bus
needed to communicate with the device

Framework (here iio) structure for each device

Per device structure. Used by the driver
to store references to bus and framework structures,
plus its own data (locks, wait queues, etc.)

Allocation of the framework, structure. This structure
also contains the per device structure (`data`)

Reference to the bus structure stored in the
framework structure.

Reference to the framework structure stored in the
bus structure.

Enabling the device (i2c reading and writing)

Register a new framework device when everything is
ready (device now accessible in user-space)

Disabling the device in case of failure

From drivers/iio/accel/mma7660.c

bootlin

e-ale

I2C drivers: remove() function

```
sstatic int mma7660_remove(struct i2c_client *client)
{
        struct iio_dev *indio_dev = i2c_get_clientdata(client);

        iio_device_unregister(indio_dev);

        return mma7660_set_mode(iio_priv(indio_dev),
                MMA7660_MODE_STANDBY);
}
```

Same i2c device structure as in probe()

Get back the framework structure. Needed to unregister the framework device from the system

Unregister the framework device from the system

Now that user-space can't access the device any more, disable the device.

From drivers/iio/accel/mma7660.c

bootlin

e-ale

I2C driver registration

```
static const struct i2c_device_id mma7660_i2c_id[] = {
        {"mma7660", 0},
        {}
};
MODULE_DEVICE_TABLE(i2c, mma7660_i2c_id);

static const struct of_device_id mma7660_of_match[] = {
        { .compatible = "fsl,mma7660" },
        { }
};
MODULE_DEVICE_TABLE(of, mma7660_of_match);

static const struct acpi_device_id mma7660_acpi_id[] = {
        {"MMA7660", 0},
        {}
};

MODULE_DEVICE_TABLE(acpi, mma7660_acpi_id);

static struct i2c_driver mma7660_driver = {
        .driver = {
                .name = "mma7660",
                .pm = MMA7660_PM_OPS,
                .of_match_table = mma7660_of_match,
                .acpi_match_table = ACPI_PTR(mma7660_acpi_id),
        },
        .probe          = mma7660_probe,
        .remove         = mma7660_remove,
        .id_table       = mma7660_i2c_id,
};

module_i2c_driver(mma7660_driver);
```

Matching by name (mandatory for I2C)

Matching by compatible property (for DT)

Matching by ACPI ID (for ACPI systems - x86)

From drivers/iio/accel/mma7660.c

bootlin

e-ale

Raw API for I2C communication

The most basic API to communicate with the I2C device provides functions to either send or receive data:

- ```
  int i2c_master_send(struct i2c_client *client, const
  char *buf, int count);
  ```
  Sends the contents of buf to the client (slave).

- ```
  int i2c_master_recv(struct i2c_client *client, char
  *buf, int count);
  ```
  Receives count bytes from the client (slave), and store them into buf.

This API is sufficient for simple needs

bootlin   e-ale

smbus API for I2C communication

SMBus is roughly a subset of I2C. Best to use its Linux API so that I2C drivers will work on controllers supporting only SMBus.

```
s32 i2c_smbus_write_byte_data(const struct i2c_client *client, u8 command, u8 value);
s32 i2c_smbus_read_byte_data(const struct i2c_client *client, u8 command);
s32 i2c_smbus_read_block_data(const struct i2c_client *client, u8 command, u8 *values);
```

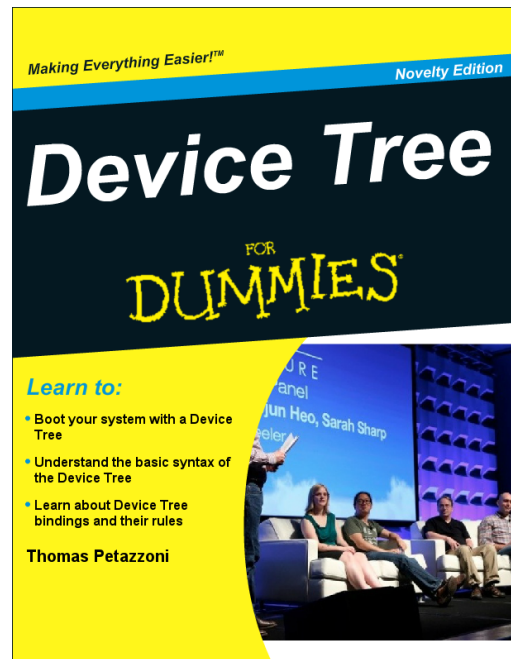More details in real world drivers and in kernel documentation:
https://www.kernel.org/doc/html/latest/driver-api/i2c.html#c.i2c_smbus_read_byte_data

bootlin   e-ale

Driver development advise

- Look for code for devices similar to yours

- Read the code.
  You can use Elixir (https://elixir.bootlin.com/)

- Always read code from the bottom up. You see the big picture first, and then progressively how the details are implemented.

Further reading

- Bootlin's kernel and driver development training materials for full details
  https://bootlin.com/training/kernel/

- Device Tree for Dummies presentation Thomas Petazzoni (Apr. 2014)
  http://j.mp/1jQU6NR

- Kernel documentation on I2C
  https://www.kernel.org/doc/html/latest/driver-api/i2c.html

Questions?

Thank you!