CHAPTER 32 LANDING GEAR



CHAPTER 32 LANDING GEAR

CH-SC-SI	J Schem	Page	Sheet	Date		CH-SC-SU	Schem	Page	Sheet	Date
32-EFFECTIVE	PAGES					32-09-12				
		thru 2		Jun 21/2016				101	1	Mar 14/2016
32-CONTENTS	8								2	Mar 14/2016
R		1		Jun 21/2016					3	Mar 14/2016
R		2		Jun 21/2016	R			102	1	Jun 21/2016
R		3		Jun 21/2016	R				2	Jun 21/2016
		4		BLANK	R				3	Jun 21/2016
32-ALPHABET	TICAL INDEX					32-30-00			Ü	0411 2 17 20 10
		1		Aug 31/2015	R	02 00 00		101	1	Jun 21/2016
		2		BLANK	R			101	2	Jun 21/2016
32-00-00						32-35-11			۷	Juli 21/2010
R	-	101	1	Jun 21/2016	R	02-00-11		101		lum 01/0016
R			2	Jun 21/2016		32-40-00		101		Jun 21/2016
32-09-11						32-40-00		404		
	-	101	1	Aug 15/2013	R	00 44 44		101		Jun 21/2016
			2	Aug 15/2013		32-41-11				
			3	Aug 15/2013	R			101	1	Jun 21/2016
	-	102	1	Mar 14/2016	R				2	Jun 21/2016
			2	Mar 14/2016		32-42-11				
			3	Mar 14/2016	R			101	1	Jun 21/2016
R	-	103	1	Jun 21/2016	R				2	Jun 21/2016
R			2	Jun 21/2016	R				3	Jun 21/2016
R			3	Jun 21/2016		32-44-11				
			3	Juli 2 1/2010				101		May 15/2015
					R			102		Jun 21/2016

A = Added, R = Revised, D = Deleted, O = Overflow

32-EFFECTIVE PAGES

D280A451

Page 1 Jun 21/2016



CHAPTER 32 LANDING GEAR

	CH-SC-SU	Schem	Page	Sheet	Date	CH-SC-SU	Schem	Page	Sheet	Date
	32-51-11									
R			101		Jun 21/2016					
	32-61-11									
			101		May 15/2015					
R			102		Jun 21/2016					
	32-61-12									
R			101		Jun 21/2016					
	32-61-21									
R			101	1	Jun 21/2016					
R				2	Jun 21/2016					
R				3	Jun 21/2016					
R				4	Jun 21/2016					

A = Added, R = Revised, D = Deleted, O = Overflow

32-EFFECTIVE PAGES



CHAPTER 32 LANDING GEAR

Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
LANDING GEAR						
LANDING GEAR SYSTEMS- SIMPLIFIED	32-00-00		101	1	Jun 21/2016	ALL
				2	Jun 21/2016	ALL
AIR/GROUND SYSTEM						
AIR/GND SYSTEM 1 & LEVER LATCH	32-09-11		101	1	Aug 15/2013	YT101-YT103
				2	Aug 15/2013	YT101-YT103
				3	Aug 15/2013	YT101-YT103
			102	1	Mar 14/2016	YT104-YT120
				2	Mar 14/2016	YT104-YT120
				3	Mar 14/2016	YT104-YT120
			103	1	Jun 21/2016	YT126-YT133
				2	Jun 21/2016	YT126-YT133
				3	Jun 21/2016	YT126-YT133
AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS	32-09-12		101	1	Mar 14/2016	YT101-YT120
				2	Mar 14/2016	YT101-YT120
				3	Mar 14/2016	YT101-YT120
			102	1	Jun 21/2016	YT126-YT133
				2	Jun 21/2016	YT126-YT133
				3	Jun 21/2016	YT126-YT133
EXTENSION AND RETRACTION						
LANDING GEAR EXTENSION AND RETRACTION	32-30-00		101	1	Jun 21/2016	ALL
				2	Jun 21/2016	ALL

32-CONTENTS

D280A451

Page 1 Jun 21/2016





CHAPTER 32 LANDING GEAR

	Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
	ALTERNATE EXTENSION						
ı	ALTERNATE LANDING GEAR EXTENSION SYSTEM	32-35-11		101		Jun 21/2016	ALL
	WHEELS AND BRAKES						
I	BRAKE SYSTEM	32-40-00		101		Jun 21/2016	ALL
	ANTISKID BRAKE SYSTEM						
I	ANTISKID SYSTEM	32-41-11		101	1	Jun 21/2016	ALL
I					2	Jun 21/2016	ALL
	AUTOBRAKE SYSTEM						
ı	AUTOBRAKE SYSTEM	32-42-11		101	1	Jun 21/2016	ALL
ı					2	Jun 21/2016	ALL
ı					3	Jun 21/2016	ALL
	PARKING BRAKE SYSTEM						
	PARKING BRAKE SYSTEM	32-44-11		101		May 15/2015	YT101-YT112 YT126-YT130
ı				102		Jun 21/2016	YT113-YT120 YT131-YT133
	NOSE WHEEL STEERING SYSTEM						
ı	NOSE GEAR STEERING	32-51-11		101		Jun 21/2016	ALL
	LANDING GEAR POSITION INDICATING AND WARNING	SYSTEM					
	LANDING GEAR POSITION INDICATION SYSTEM 1	32-61-11		101		May 15/2015	YT101-YT112 YT126-YT130
ı				102		Jun 21/2016	YT113-YT120 YT131-YT133
ı	LANDING GEAR POSITION INDICATION SYSTEM 2	32-61-12		101		Jun 21/2016	ALL
ı	LANDING GEAR WARNING	32-61-21		101	1	Jun 21/2016	ALL
ı					2	Jun 21/2016	ALL
ı					3	Jun 21/2016	ALL

32-CONTENTS



CHAPTER 32 LANDING GEAR

	Title	CH-SC-SU	Schem	Page	Sheet	Date	Effectivity
•	LANDING GEAR WARNING (cont.)	32-61-21			4	Jun 21/2016	ALL

32-CONTENTS



CHAPTER 32 LANDING GEAR

CH-SC-SU	Title
32-09-11	AIR/GND SYSTEM 1 & LEVER LATCH
32-09-12	AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS
32-35-11	ALTERNATE LANDING GEAR EXTENSION SYSTEM
32-41-11	ANTISKID SYSTEM
32-42-11	AUTOBRAKE SYSTEM
32-40-00	BRAKE SYSTEM
32-30-00	LANDING GEAR EXTENSION AND RETRACTION
32-61-11	LANDING GEAR POSITION INDICATION SYSTEM 1
32-61-12	LANDING GEAR POSITION INDICATION SYSTEM 2
32-00-00	LANDING GEAR SYSTEMS- SIMPLIFIED
32-61-21	LANDING GEAR WARNING
32-51-11	NOSE GEAR STEERING
32-44-11	PARKING BRAKE SYSTEM

CH-SC-SU	Title	 	


32-ALPHABETICAL INDEX



DEING 737-800 SYSTEM SCHEMATIC MANUAL LEVER IN DOWN POSITION LANDING GEAR SELECTOR/BYPASS VALVE 32-30-00 HYDRAULIC SYSTEM 29-00-00 NG UP/DN LG LEVER IN DOWN POSITION MANUAL RELEASE NG LOCK LEFT GEAR UP RIGHT GEAR UP LEFT GEAR DOWN RIGHT GEAR DOWN NOSE GEAR ON GROUND LEFT GEAR ON GROUND RIGHT GEAR ON GROUND 0 GROUND SENSING (SH 2) AIR/GROUND FUNCTIONS 32-09-11, 12 NOSE GEAR STEERING 32-51-11 RIGHT GEAR UP/DN

MANUAL EXTENSION HANDLES 32-30-00

MANUAL EXTENSION ACCESS DOOR SWITCH 32-35-11



PRESSURE

{○ ○ ○} RETURN

32-00-00

31-26-00

M315 AURAL WARNING UNIT

Page 101 Sheet 1 Jun 21/2016

LANDING GEAR

STATUS FUNCTIONS

32-61-11

WARNING HORN

M-02061 PSEU


LEFT GEAR UP/DN

NOSE GEAR UP/DN


LDG GEAR LEVER POSITION

THROTTLE POSITION STATUS

T.E. FLAP POSITION STATUS

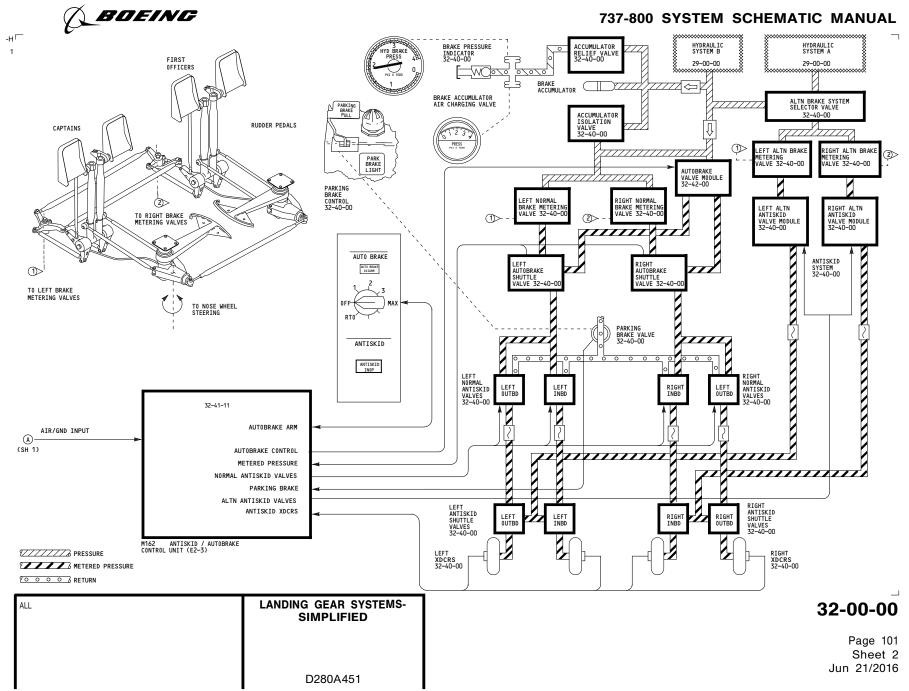




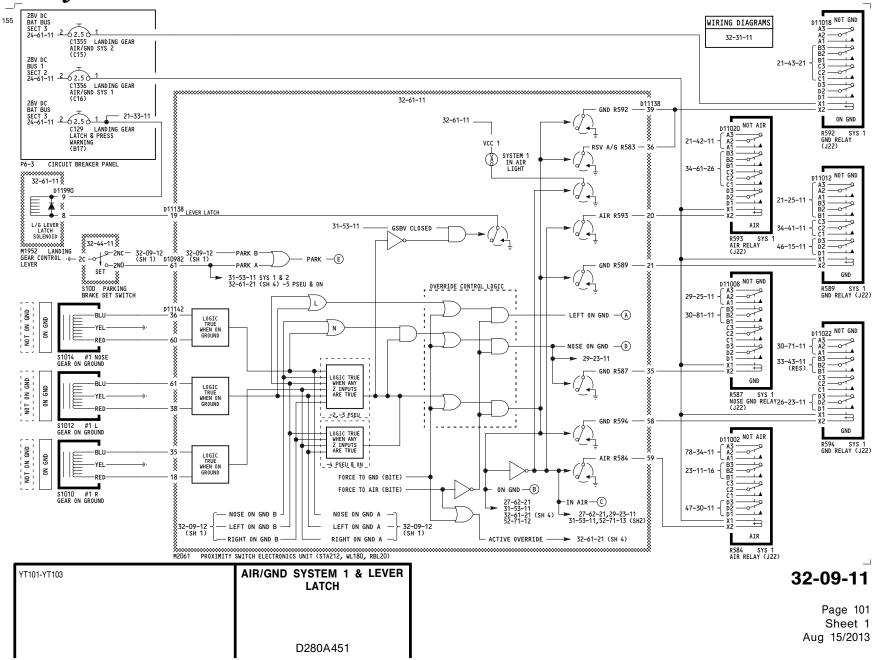

BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



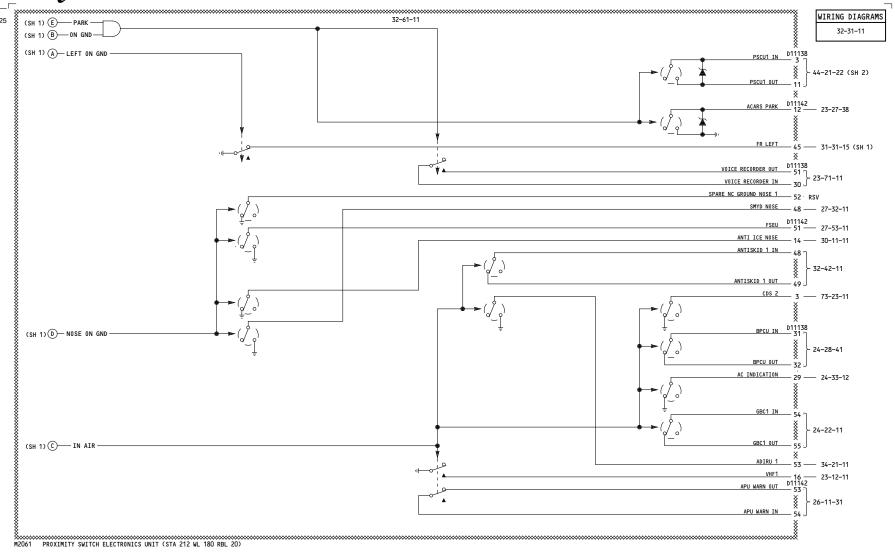


YT101-YT103	AIR/GND SYSTEM 1 & LEVER LATCH
	D280A451

32-09-11


Page 101 Sheet 2 Aug 15/2013



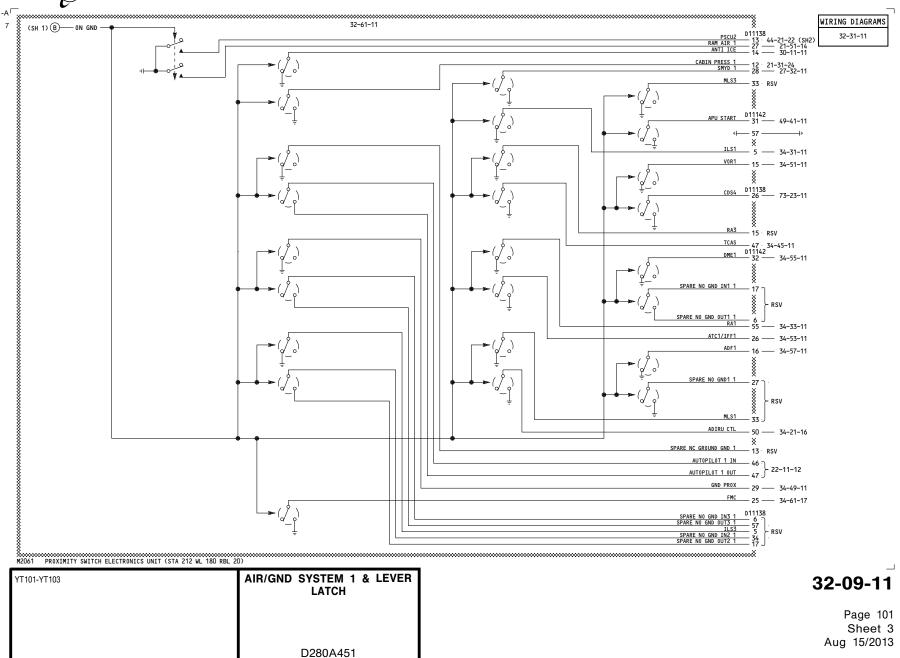






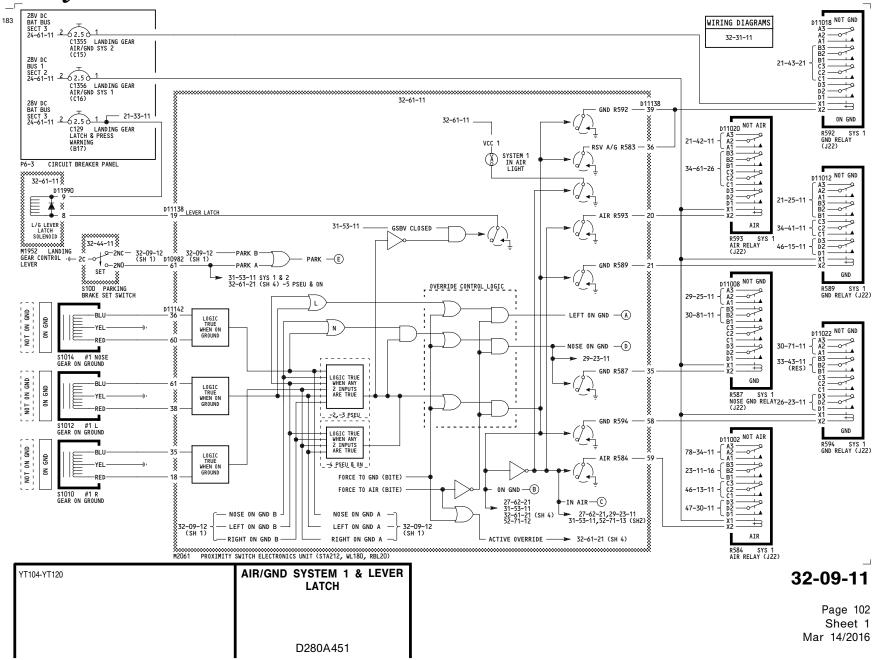

BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



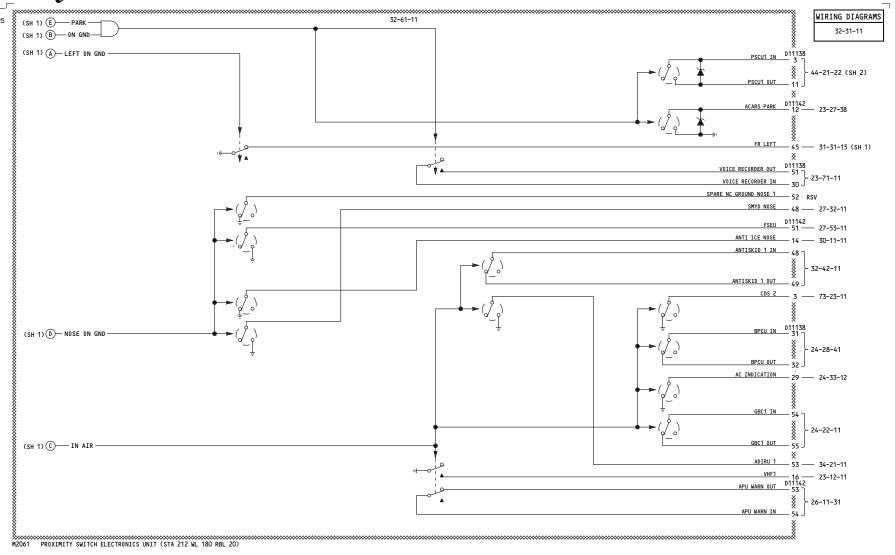

YT104-YT120


AIR/GND SYSTEM 1 & LEVER LATCH

D280A451

32-09-11


Page 102 Sheet 2 Mar 14/2016



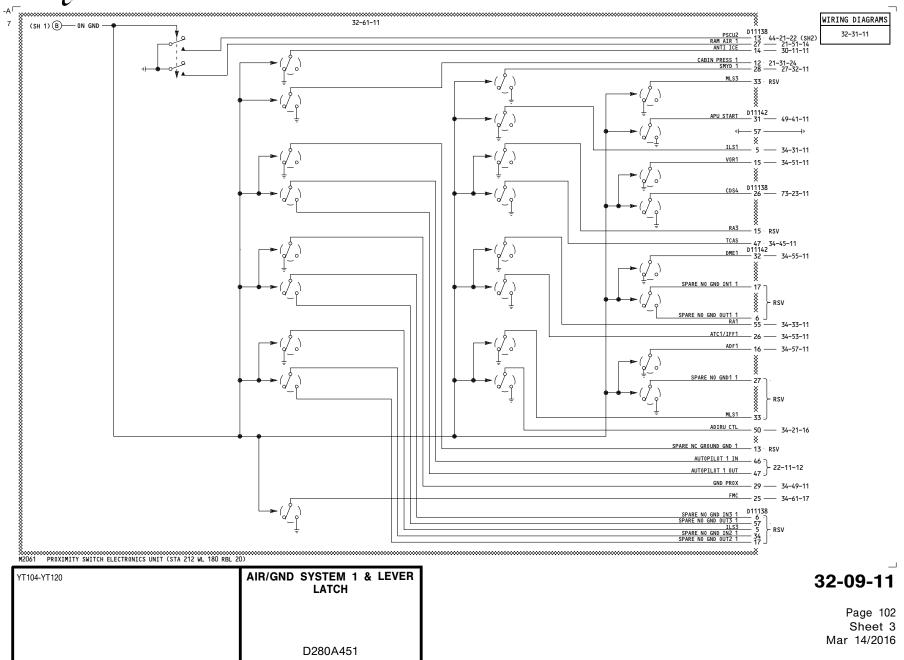






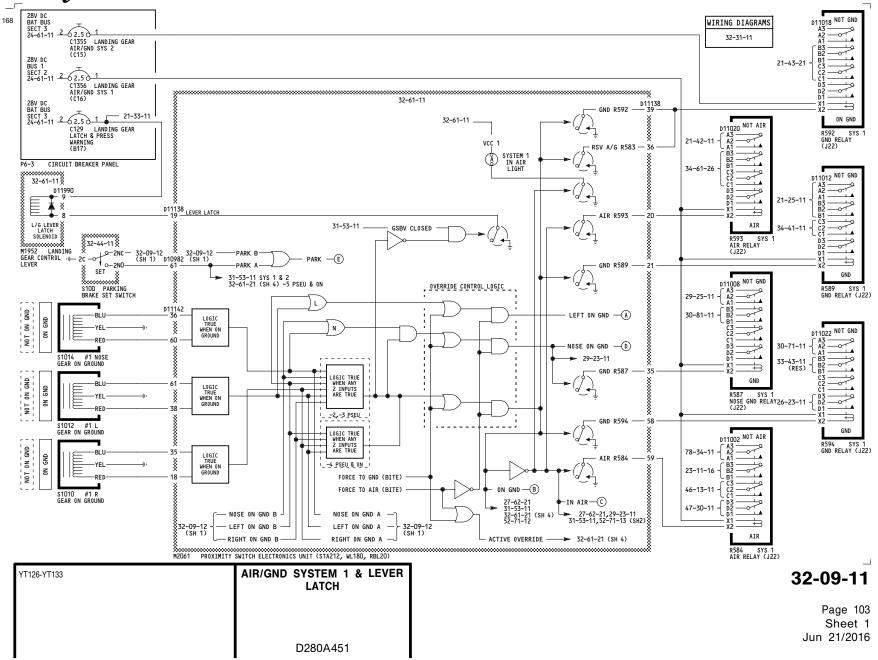

BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



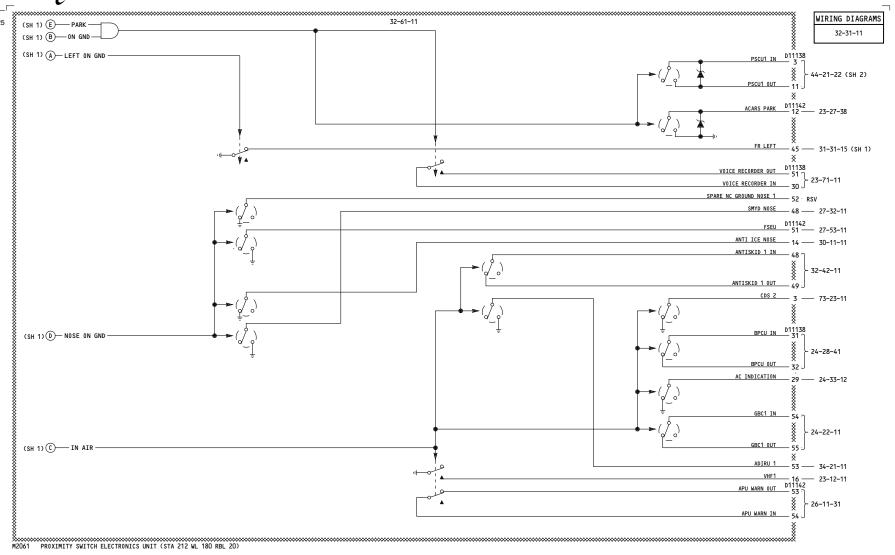


YT126-YT133	AIR/GND SYSTEM 1 & LEVER LATCH
	D280A451

32-09-11


Page 103 Sheet 2 Jun 21/2016



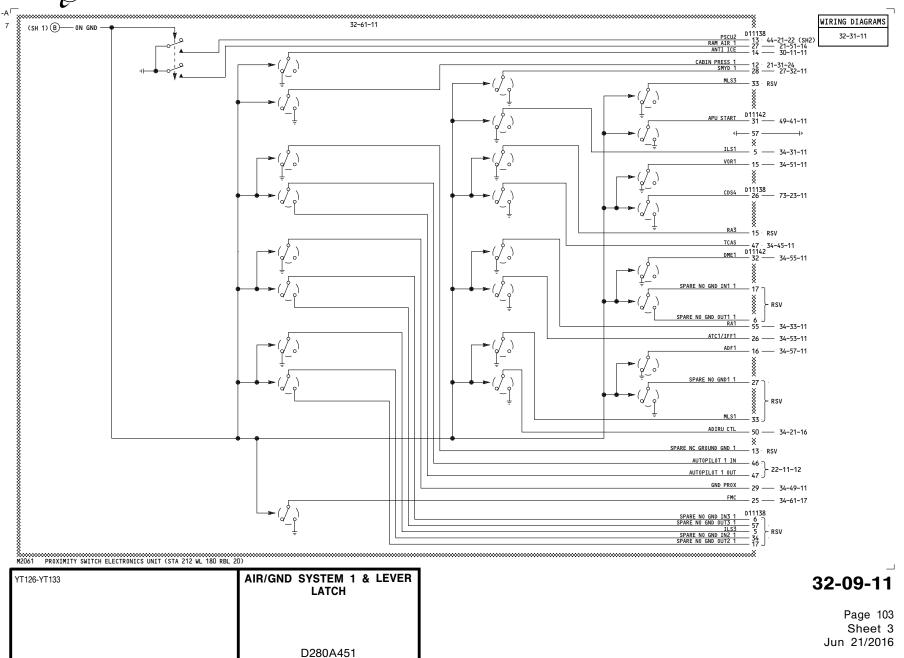






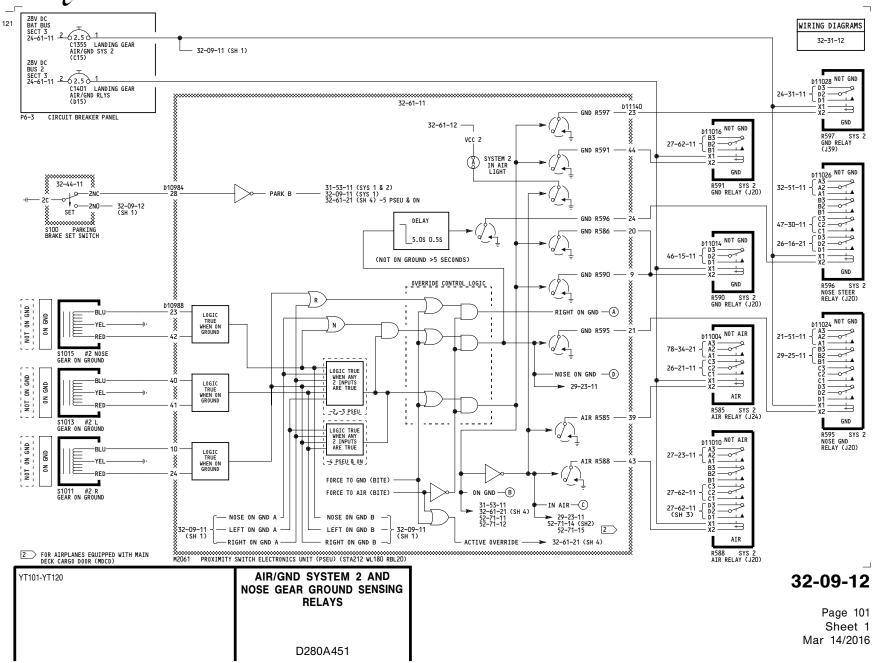



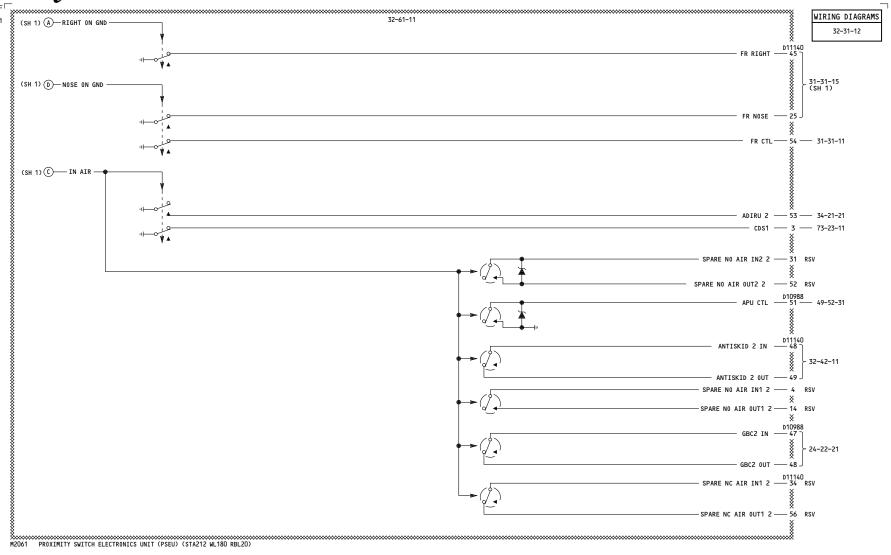


YT101-YT120	AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS
	D280A451

32-09-12


Page 101 Sheet 2 Mar 14/2016

(BOEING

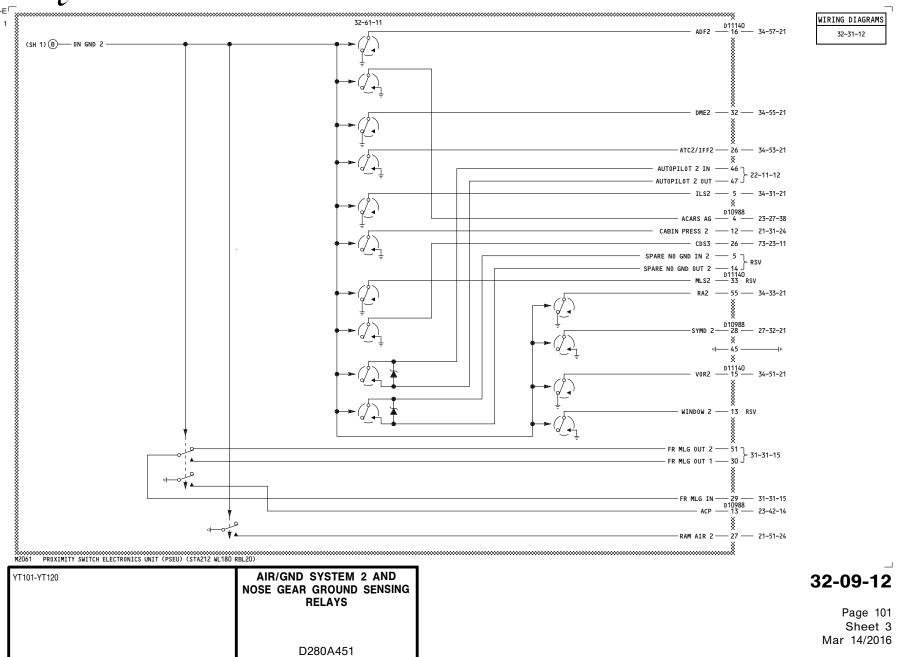






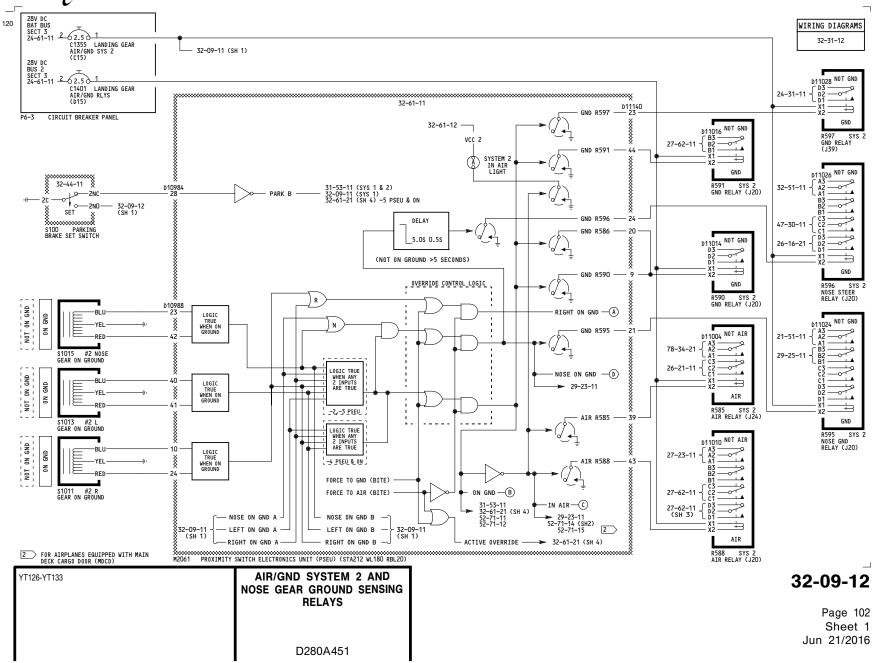



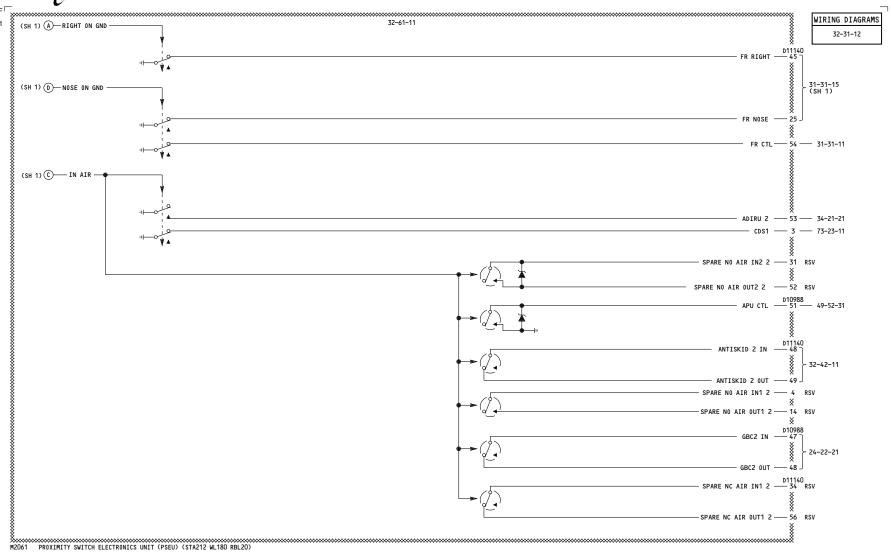


YT126-YT133	AIR/GND SYSTEM 2 AND NOSE GEAR GROUND SENSING RELAYS
	D280A451


32-09-12

Page 102 Sheet 2 Jun 21/2016


DEING

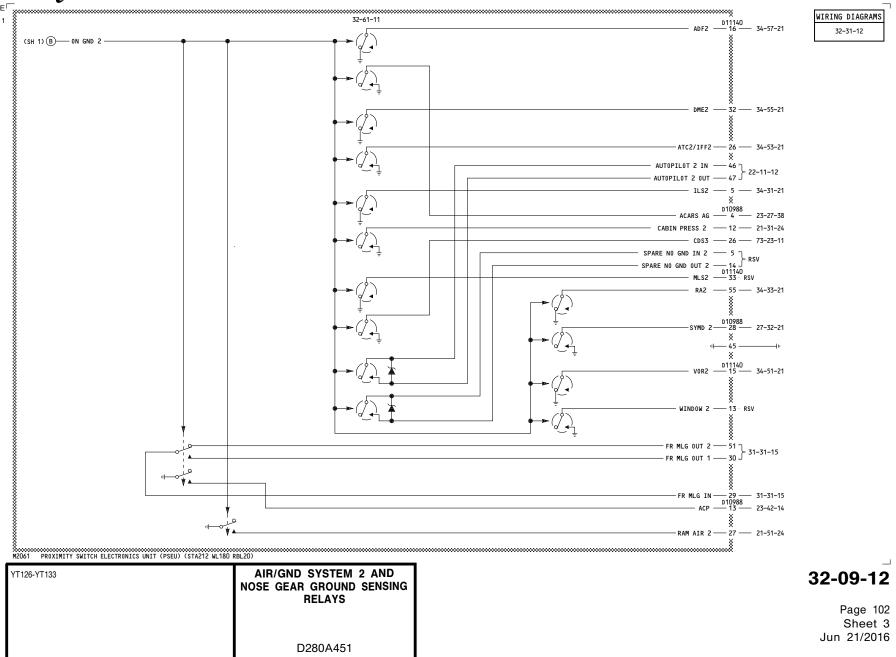



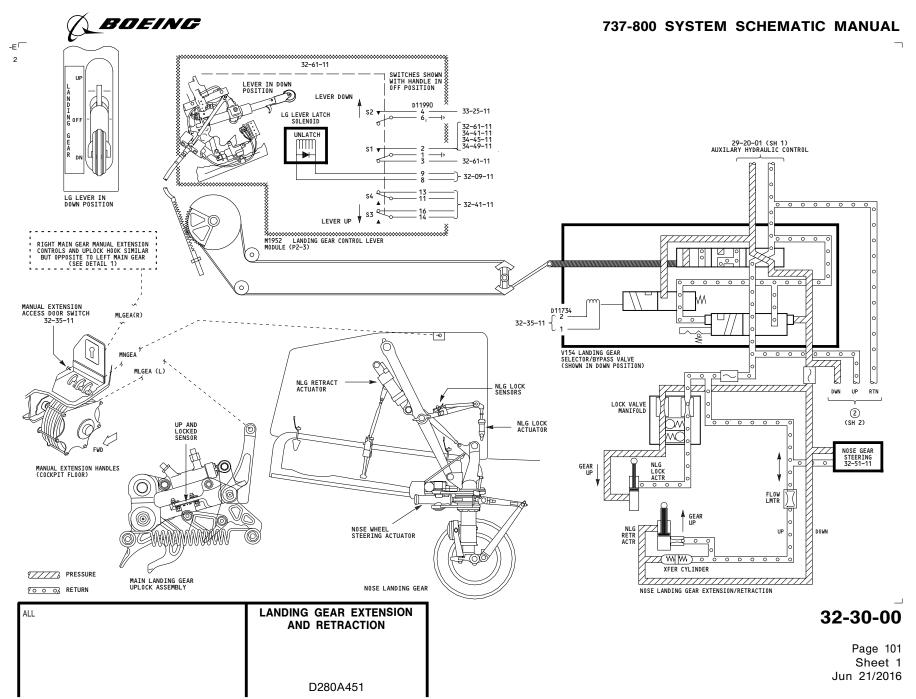




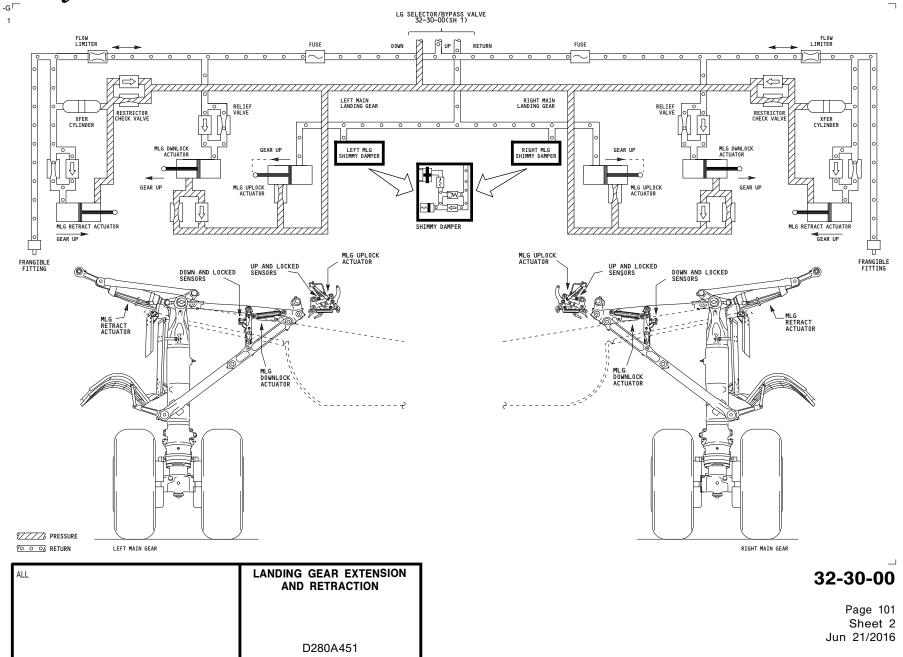


BOEING PROPRIETARY - Copyright \odot - Unpublished Work - See title page for details.



-Ar

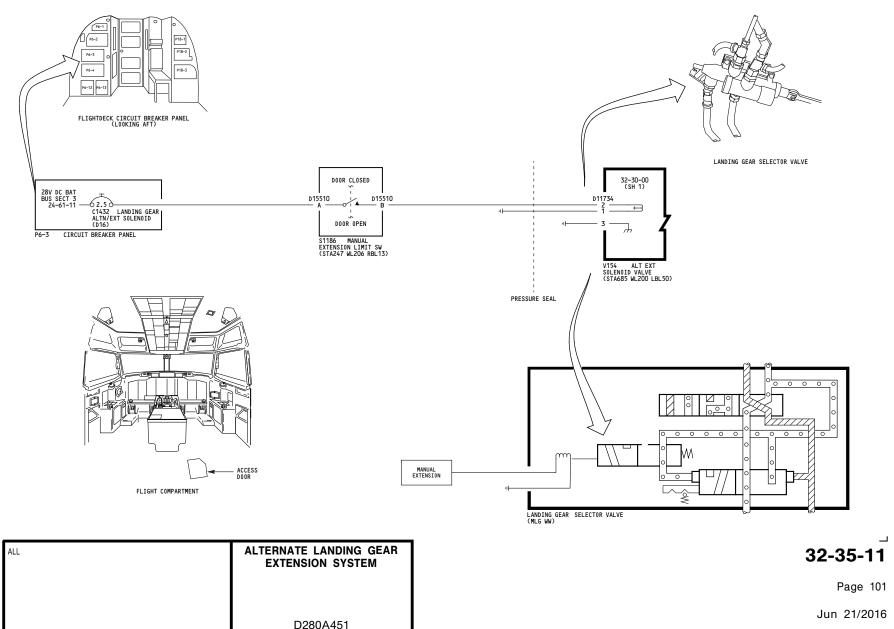





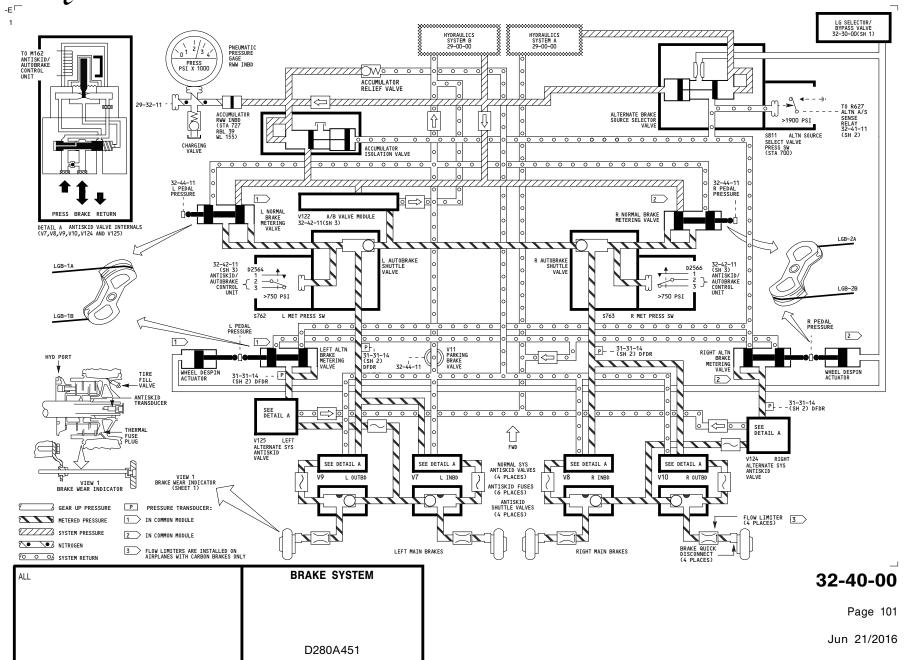


BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.


BOEING

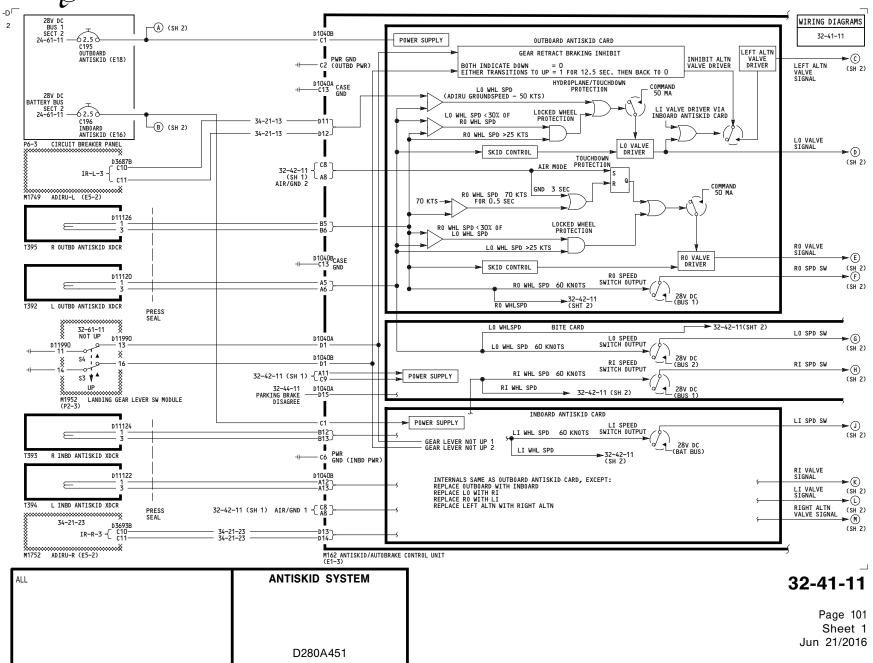


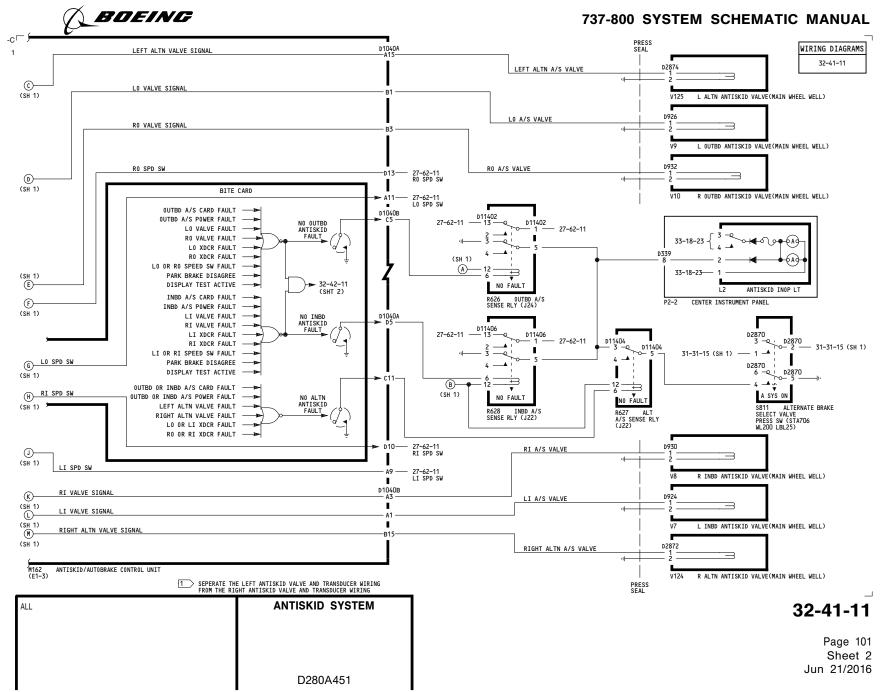

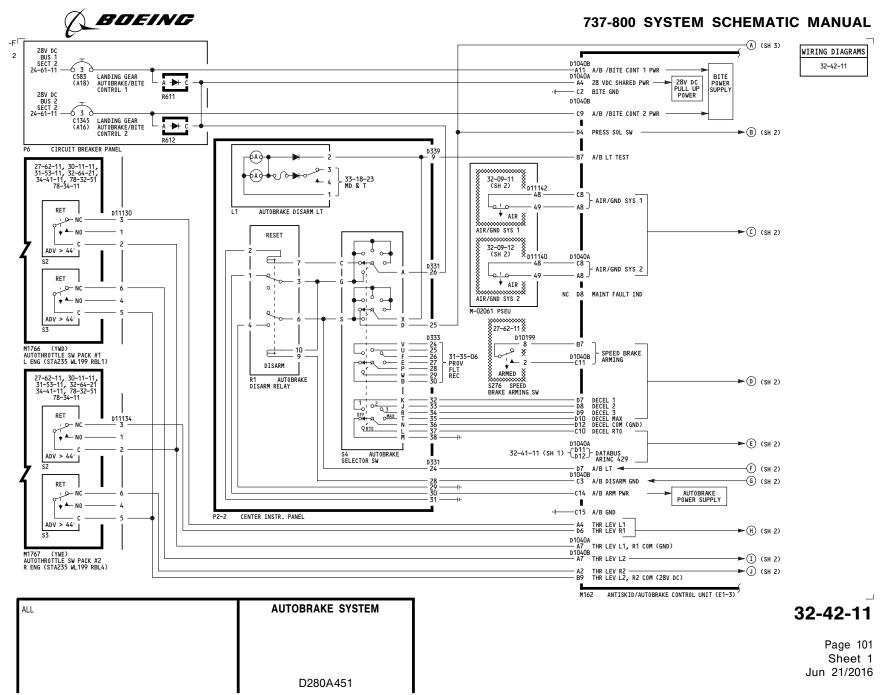




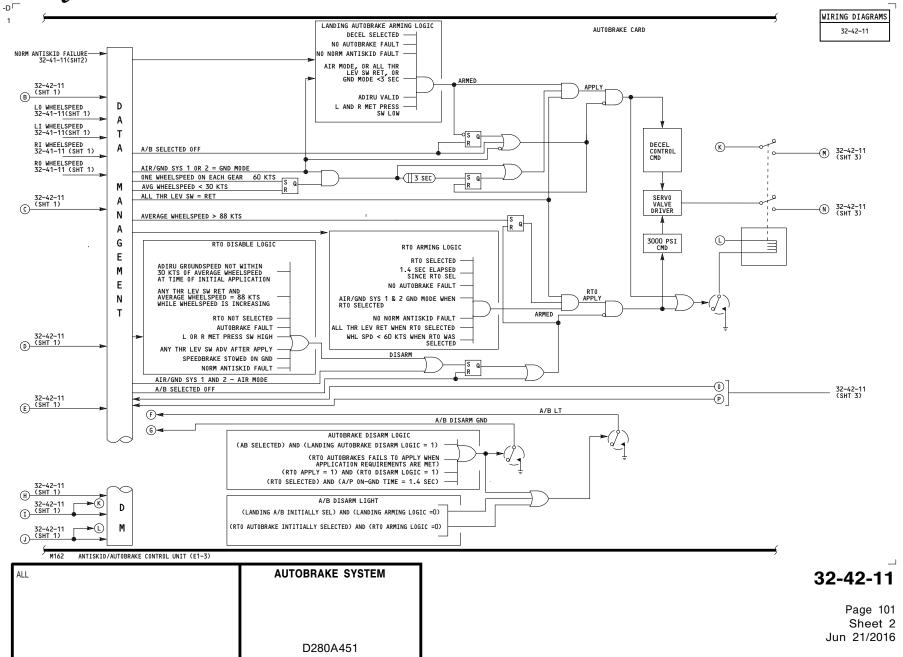

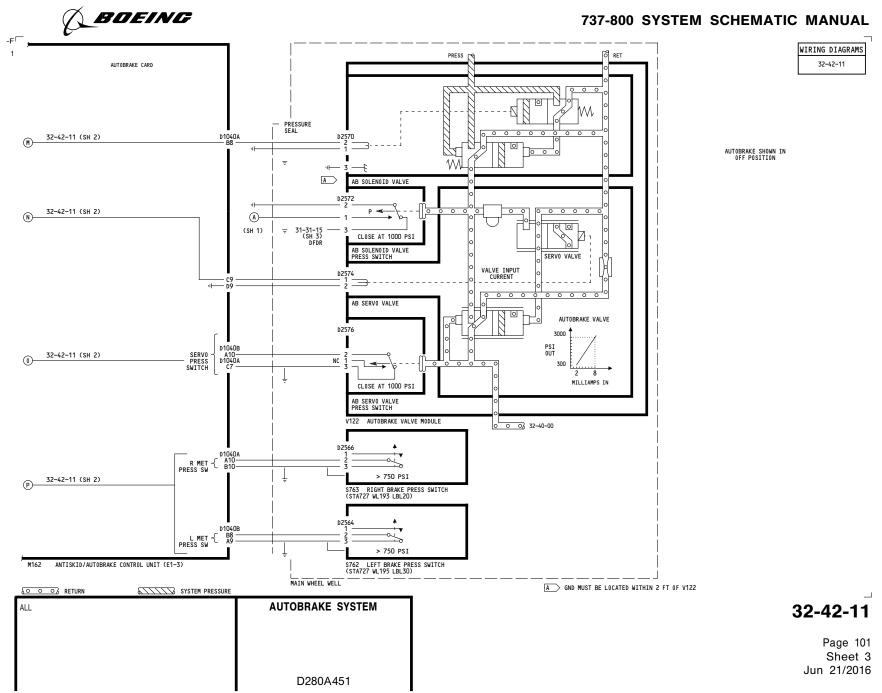




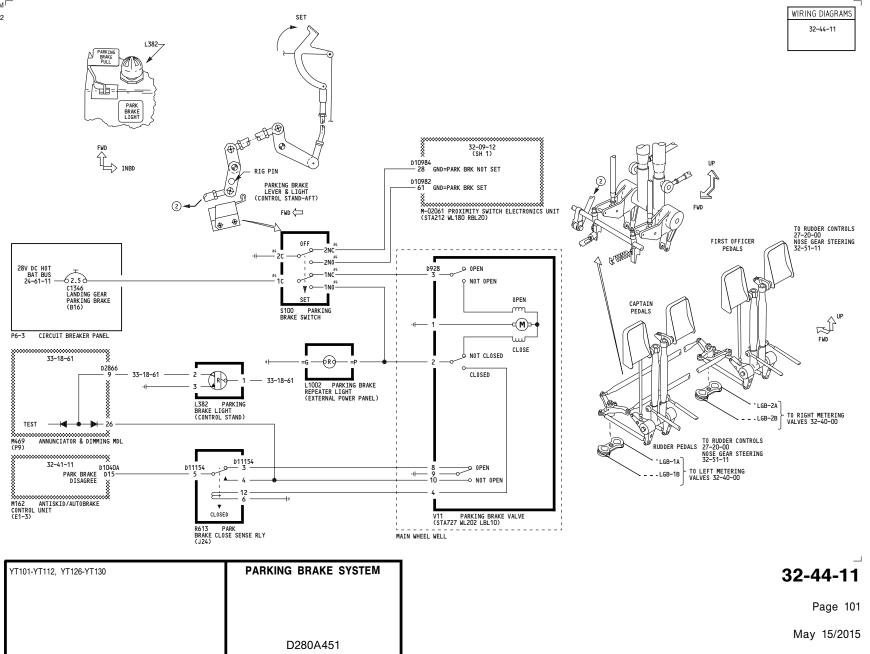





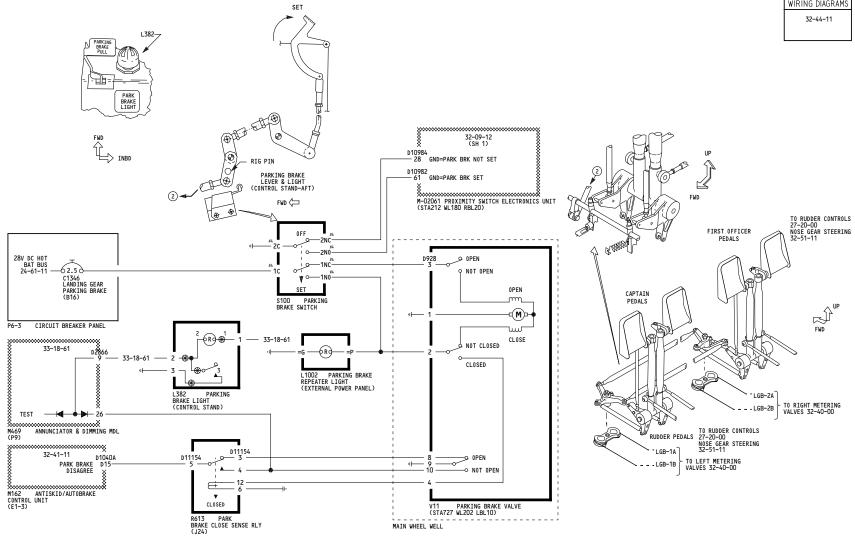


YT113-YT120, YT131-YT133 PARKING BRAKE SYSTEM D280A451


32-44-11

Page 102

Jun 21/2016

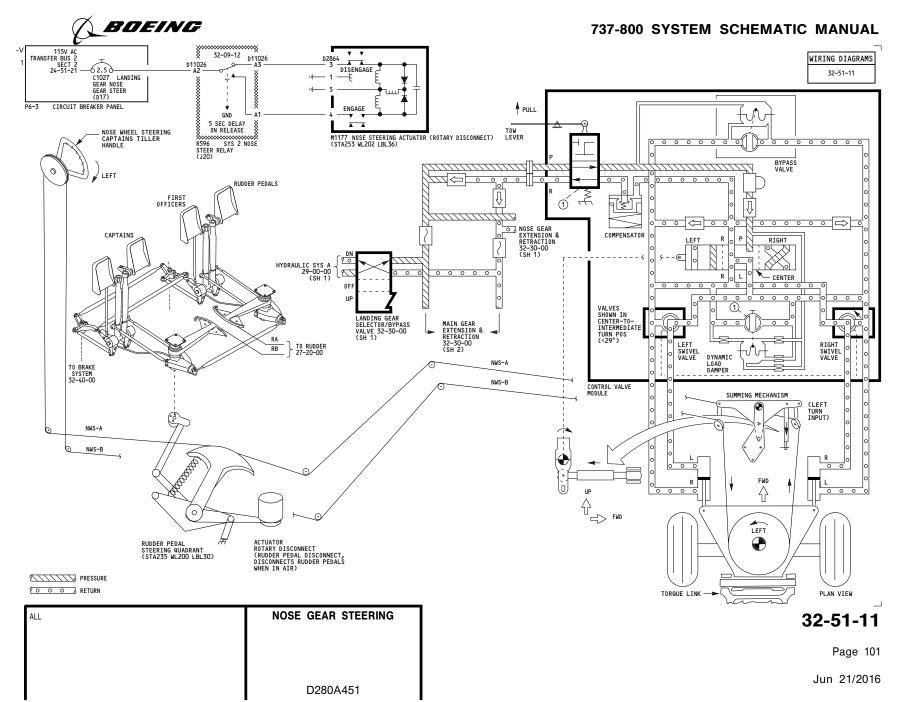




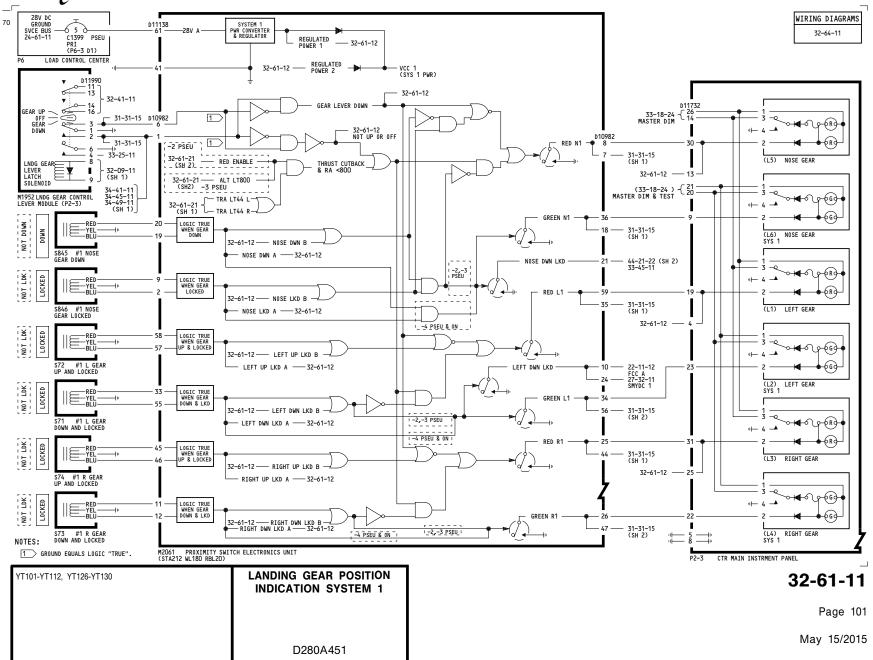


BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



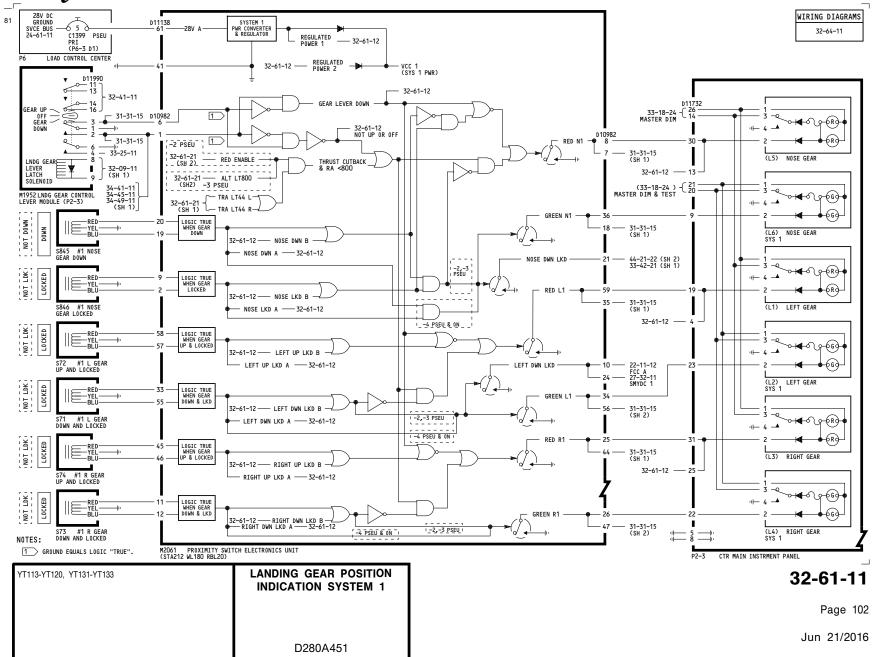


() BOEING

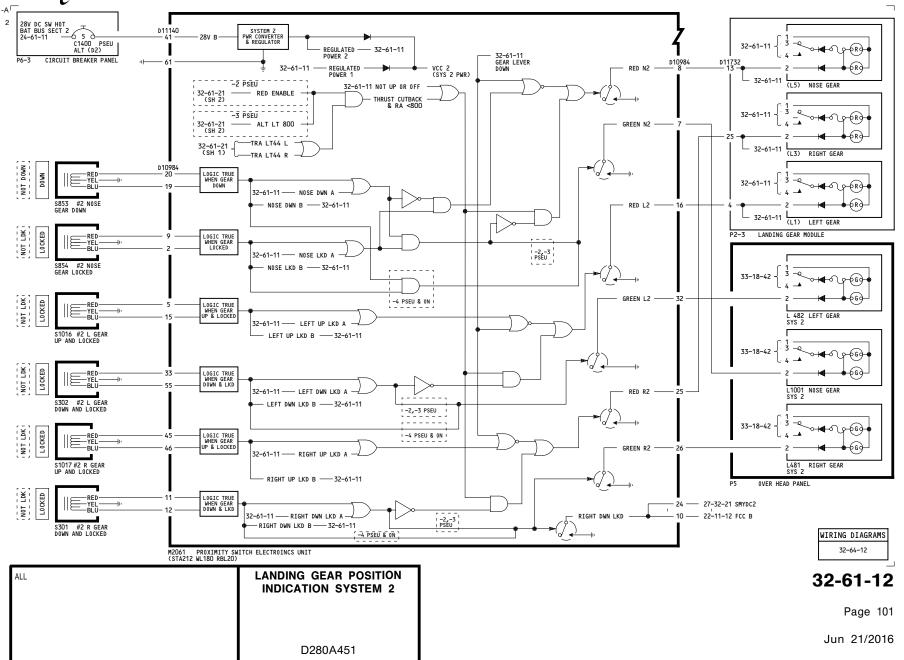






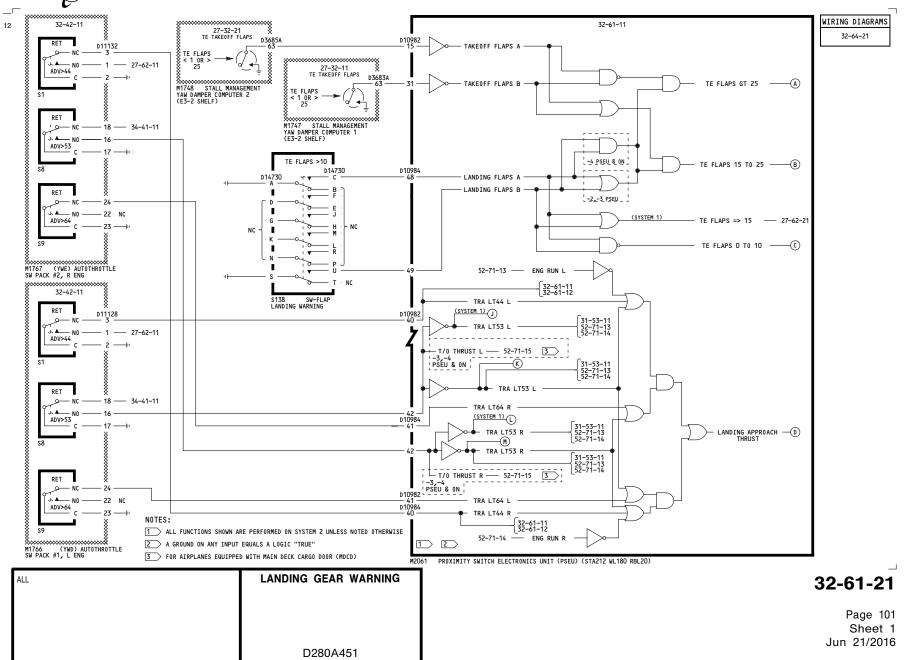

BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



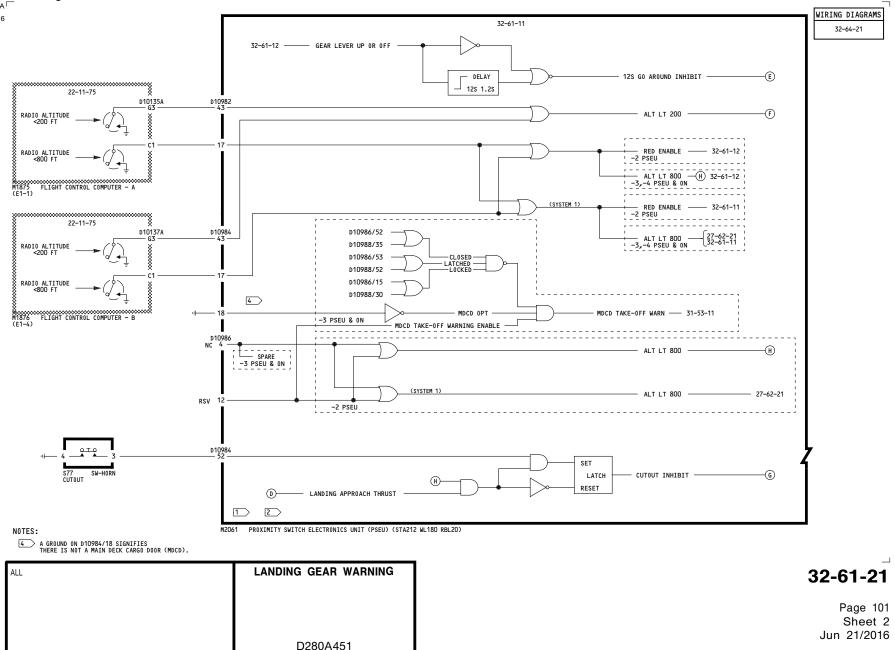

BOEING PROPRIETARY - Copyright () - Unpublished Work - See title page for details.



